

## CASABLANCA PRIME TOUCH-- RE-SET PROCEDURES (W-505 HANDHELD REMOTE)

Applies to Casablanca fans that have a number ending in the letter "H" and one of the following:

- The handheld remote no longer operates neither the fan nor light.
- Your handheld remote is accidentally controlling two or more fans.
- Recently replaced the battery in handheld remote.

**If you have not recently changed the battery, do so before re-set!**

You will only have to change the dip switch settings in the remote.

To Re-set:

1. At the circuit breaker or fuse box, turn the power off for the fan you want to change.
2. Open the battery door of the Versa-Touch control and remove the batteries.
3. Change the dip switch settings, assuring that they are different from the previously installed prime touch fan.
4. Re-install the batteries and the battery door on the control.
5. At the circuit breaker or fuse box, turn the power back on for the fan whose frequency you are changing.
6. Within 20 seconds of restoring power, push the HIGH, MED, and LOW buttons (in that order).



**Part # 9001620  
RECEIVER  
W-505  
(NO Dip Switches)**



**Part # 9001610  
W-505 (Transmitter)**



**Note:** All fans leave the factory set to "0000."