

## CASABLANCA VERSA TOUCH 2-- RE-SET PROCEDURES (W-72 and W-73 HANDHELD REMOTES)

Applies to Casablanca fans that have a number ending in the letter "M" and one of the following:

- The handheld remote no longer operates neither the fan nor light.
- Your handheld remote is accidentally controlling two or more fans.
- Replaced the battery.


*If you have not recently changed the battery, do so before re-set!*

To Re-set:

1. At the circuit breaker, fuse box, or wall light switch, turn the power off for the fan you want to re-set.
2. Open the battery door of its Versa Touch control and remove the batteries.
3. Change the dip switch settings, assuring that they are different from any other Casablanca fan.
4. Re-install the batteries and the battery door on the control.
5. At the circuit breaker, fuse box, or wall switch, turn the power back on for the fan whose frequency you are changing.
6. Within 20 seconds of restoring power, push the Hi, Med, and Lo buttons (in that order).

**WARNING:** Do not turn the power off at the circuit breaker, then back on, for the previously installed Versa Touch 2 fan(s), as you may inadvertently change the frequency settings for it as well.

**Note:** You may want to label your controls to assure you do not mix them up.

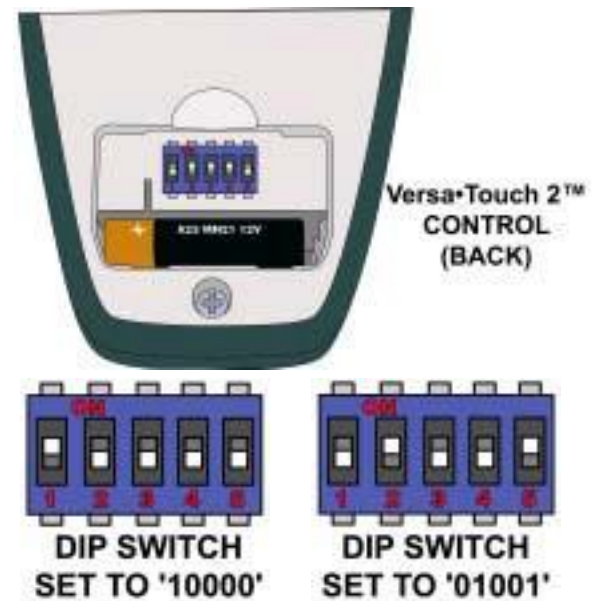

Note: All fans are factory set to '00000'.

WITHIN 20 SECONDS OF TURNING THE FAN ON, PRESS IN THIS ORDER TO SET NEW FREQUENCY:

1. HI
2. MED
3. LO

