



M



Versa•Touch2™
W-72 AND W-73



For W-72 and W-73 Operation See Page XX
For Wiring Diagrams See Page

Versa•Touch2™

The refined Versa•Touch2 includes all of the standard features of the Versa•Touch, in a new design that is compatible with a greater number of Casablanca fan models than before. The Versa•Touch2 hand-held remote provides three forward or reverse fan speeds, full spectrum light dimming and memory, and has an optional wall plate bracket. Versa•Touch2 may be used alone to control several fans or with extra controls to operate a single fan from different locations.

This convenient remote, included with all Versa•Touch models, appeals to the purist who is seeking high quality performance.

- Wireless remote operation uses one 12 volt battery
- Operates separate fan & light functions within a 35 foot radius
- 32 programmable transmission channels eliminates interference
- One control may operate many fans or several controls can operate one fan
- Additional controls available to provide added convenience

VERSA•TOUCH 2 OPERATION

Fan Control

To start the fan, press the selected speed button to run the fan at the desired speed.

LO=Low speed **MED**=Medium speed **HI**=High speed

To turn off the fan. Press the **FAN OFF** button.

Airflow Direction


To reverse the airflow press the **REVERSE** button. Reverse operates at any speed whether fan is on or off. The fan returns to its set speed after reversing.

Light Control

Turn the light on or off independently from the fan by pressing the **LIGHT** button. Hold the button in excess of 0.7 seconds, it becomes a dimmer. The light varies from 'bright' to 'dim' over approximately 8 seconds. This sequence will reverse the light when it reaches the brightest or dimmest level if you continue to hold the **LIGHT** button. Release the button when the desired level is reached.

Auto Resume

Quickly pressing (less than 0.7 seconds) on/off operation of the **LIGHT** button maintains the desired brightness level set previously.

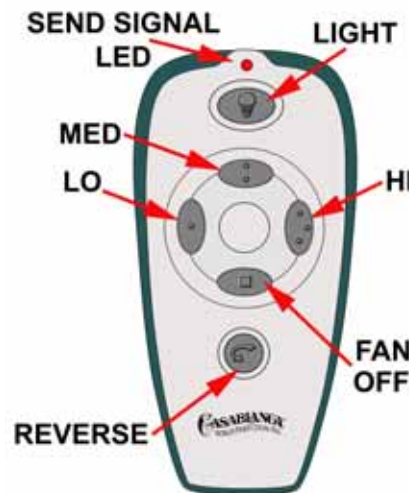

Versa•Touch2 Wall Controls - CONTINUED



Versa•Touch 2™ (W-72 and W-73)

The refined Versa•Touch 2™ includes all of the standard features of the Versa•Touch, in a new design that is compatible with a greater number of Casablanca fan Models than ever before. The Versa•Touch 2™ hand-held remote provides three forward or reverse fan speeds, full spectrum light dimming with up light down light or both and memory and has an optional wall plate bracket. Versa•Touch 2™ may be used alone to control several fans or with extra controls to operate a single fan from different locations.



W-72
(Transmitter)



W-73
(Transmitter)

VERSA•TOUCH 2 © INSTALLATION



W-72
CONTROL
(TRANSMITTER)



W-72
CONTROL
HOLDER



12V BATTERY



DRYWALL
ANCHOR
6-32 (2)



WOOD SCREW
1'' (2)



SCREW
6-32 X 1'' (2)



SCREW
6-32 X 3/8'' (2)

VERSA•TOUCH 2 © CONTROL BRACKET INSTALLATION


CAUTION! Do not use with wall dimmer or Rocker Switch.



Rocker
Switch



Toggle Switch

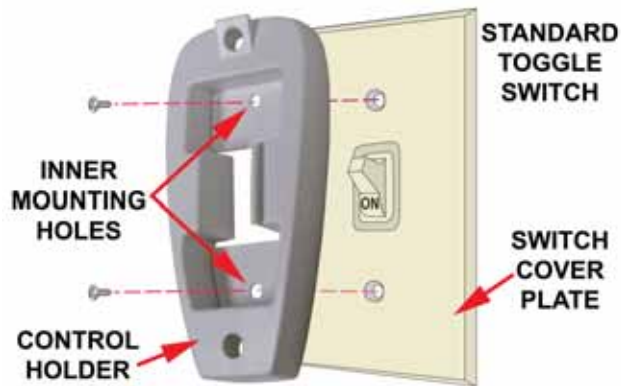

Standard Light Switch

Step A. Remove the two screws holding the switch cover plate. Do not remove the cover plate.

Step B. Orient the control bracket as shown and line up the two inner mounting holes with those on the switch PLATE.

Step C. Install and tighten screws by **hand** only.

NOTE: -If a **ROCKER SWITCH** is installed at the fan power location, it must be changed to a **TOGGLE SWITCH** as shown.

Versa-Touch2 Wall Controls - **CONTINUED**



VERSA•TOUCH 2 © CONTROL BRACKET INSTALLATION

Wall Installation


Step A. Locate a 2x4 wall stud in a convenient location.

Step B. Orient the control bracket as shown over the 2x4 stud.

Step C. Use the 1" wood screws in either the inner or outer mounting holes. Install and tighten screws by **hand** only.



DRYWALL ANCHOR

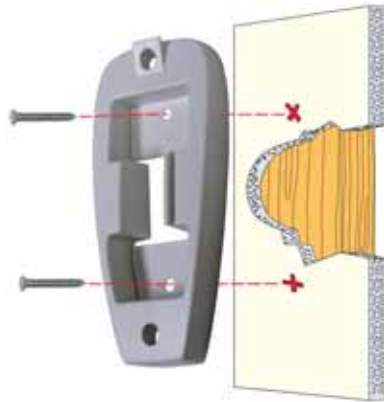

Note: The wall anchors and 6-32 x 1" screws may be used in situations where mounting to a stud is not possible. Use the inner mounting holes. After securing the anchor, discard the anchor's pointed screws and use the 6-32 decor ovalhead screws supplied.



DECOR OVALHEAD SCREWS

Changes or modifications not expressly approved in writing by Casablanca Fan Co. may void the users authority to operate this equipment.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

VERSA•TOUCH © BATTERY INSTALLATION

Remove Battery Door

Turn control on its front. Twist a coin or use your finger to unsnap the door **A**. Lift door away from control **B**.



Install Battery

Press battery into control aligned as shown. Observe proper polarity. Replace the battery door.



12V BATTERY



Changes or modifications not expressly approved in writing by Casablanca Fan Co. may void the users authority to operate this equipment.

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Versa-Touch2 Wall Controls - **CONTINUED**



VERSA•TOUCH 2 © PLACING CONTROL INTO THE HOLDER

Control Storage

Angle control in top first until the unit can be gently pushed back and snapped into place.

TOP GOES IN FIRST



Removing Control

Gently Pull the lower edge of the control out from the holder.


VERSA•TOUCH 2 © (W-72) IF FAN DOES NOT WORK

If the fan is not functioning after installation:

- Step 1. Check to make sure that batteries are installed correctly in the control.
- Step 2. Turn the power off to the fan (from the circuit breaker) for at least 5 seconds.
- Step 3. Turn the power back on (at the circuit breaker) and push the Hi, Med, and Low buttons—in that order—within 20 seconds.
- Step 4. The fan should now function properly.



CIRCUIT BREAKER OR FUSE BOX

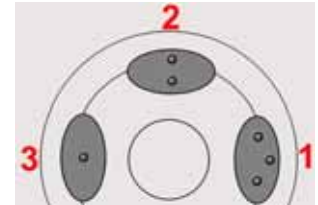

**PRESS IN THIS ORDER TO SET NEW FREQUENCY:
1. HI 2. MED 3. LO**

VERSA•TOUCH 2 © (W-73) IF FAN DOES NOT WORK

If the fan is not functioning after installation:

- Step 1. Check to make sure that batteries are installed correctly in the control.
- Step 2. Turn the power off to the fan (from the circuit breaker) for at least 5 seconds.
- Step 3. Turn the power back on (at the circuit breaker) and push the Hi, Med, and Low buttons—in that order—within 20 seconds.
- Step 4. The fan should now function properly.



CIRCUIT BREAKER OR FUSE BOX



**PRESS IN THIS ORDER TO SET NEW FREQUENCY:
1. HI 2. MED 3. LO**



VERSA•TOUCH 2 (W-72) OPERATION

Fan Control

To start the fan, press the selected speed button to run the fan at the desired speed.

LO=Low speed **MED**=Medium speed **HI**=High speed

To turn off the fan, press the **FAN OFF** button.

Airflow Direction


To reverse the airflow press the **REVERSE** button. Reverse operates at any speed whether fan is on or off. The fan returns to its set speed after reversing.

Light Control

Turn the light on or off independently from the fan by pressing the **LIGHT** button. Hold the button in excess of 0.7 seconds, it becomes a dimmer. The light varies from 'bright' to 'dim' over approximately 8 seconds. This sequence will reverse the light when it reaches the brightest or dimmest level if you continue to hold the **LIGHT** button. Release the button when the desired level is reached.

Auto Resume

Quick pressing (less than 0.7 seconds) on/off operation of the **LIGHT** button maintains the desired brightness level set previously.

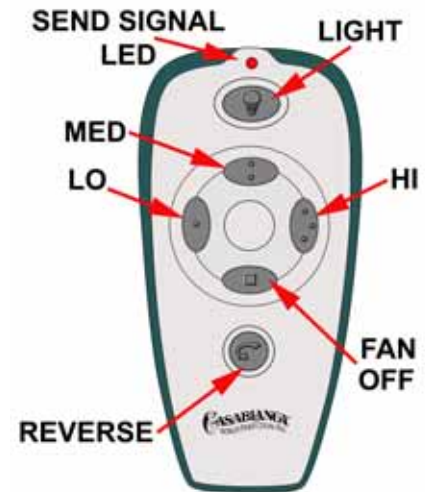

VERSA•TOUCH 2 (W-73) OPERATION

Fan Control

To start the fan, press the selected speed button to run the fan at the desired speed.

1=Low speed 2=Medium speed 3=High speed

To turn off the fan. Press the **FAN OFF** button.

Airflow Direction


To reverse the airflow press the **REVERSE** button. Reverse operates at any speed whether fan is on or off. The fan returns to its set speed after reversing.

Light Control

Turn the light on or off independently from the fan by pressing the **UP LIGHT/DOWN LIGHT OR BOTH** button. (This is a rocker switch. Press the left side for the Up Light, right side for the Down light, and the middle for both.) Hold the button in excess of 0.7 seconds, it becomes a dimmer. The light varies from 'bright' to 'dim' over approximately 8 seconds. This sequence will reverse the light when it reaches the brightest or dimmest level if you continue to hold the **LIGHT** button. Release the button when the desired level is reached.

Auto Resume

Quick pressing (less than 0.7 seconds) on/off operation of the **LIGHT** button maintains the desired brightness level set previously.

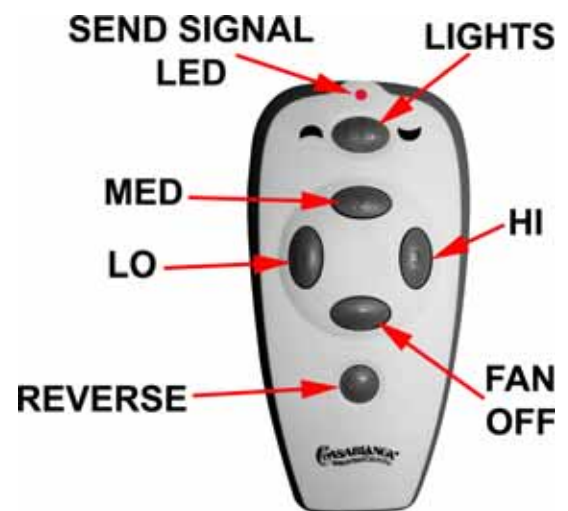

Versa-Touch2 Wall Controls - **CONTINUED**



VERSA•TOUCH 2 © CHANGING FREQUENCY SETTING

Note: All fans leave the factory set to '00000'.

You will only have to change the dip switch settings in the remote if you are using more than one fan in the same area and want to control them separately.

Step 1. At the circuit breaker or fuse box, turn the power off for the fan you want to change.



Step 2. Open the battery door of the Versa•Touch control and remove the batteries.

Step 3. Change the dip switch settings, assuring that they are different from the previously installed Versa•Touch fan.

Step 4. Re-install the batteries and the battery door on the control.

Step 5. At the circuit breaker or fuse box, turn the power back on for the fan whose frequency you are changing.


Step 6. Within 20 seconds of restoring power, push the Hi, Med, and Lo buttons (in that order).

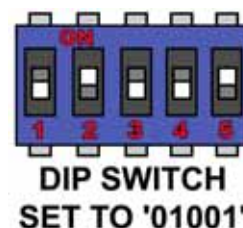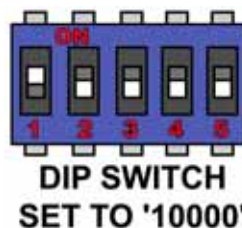

WARNING: Do not turn the power off at the circuit breaker, then back on, for the previously installed Versa•Touch 2 fan(s), as you may inadvertently change the frequency settings for it as well.

Note: You may want to label your controls to assure you do not mix them up.

W-72 (Transmitter)

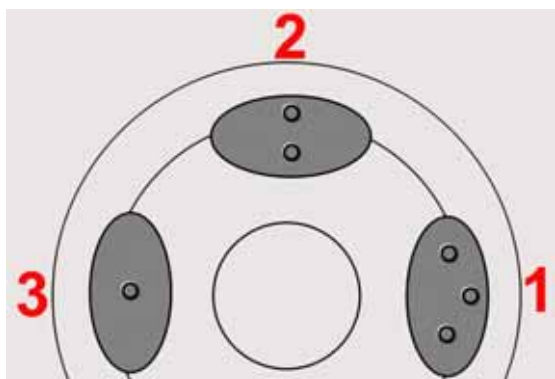

WITHIN 20 SECONDS OF TURNING THE POWER ON, PRESS IN THIS ORDER TO SET NEW FREQUENCY:

- 1. HI
- 2. MED
- 3. LO

W-73 (Transmitter)



WITHIN 20 SECONDS OF TURNING THE POWER ON, PRESS IN THIS ORDER TO SET NEW FREQUENCY:

- 1. HI
- 2. MED
- 3. LO



TROUBLESHOOTING

VERSA•TOUCH 2

POSSIBLE REMEDIES

PROBLEM

Before Requesting Service: Please follow this troubleshooting guide before contacting your dealer for assistance.

- | | |
|--|---|
| FAN WILL NOT START | <ul style="list-style-type: none"> •Check main circuit fuses, circuit breakers, or wall switch position. Check all wire connections, making sure the power is turned off during this inspection. •Pin connectors are not making good contact. Check the connections in the switch housing and under the top cover. •Battery weak - install fresh Alkaline battery. •Fan receiver defective - replace. •Check the frequency setting: Turn power off, at the circuit breaker, only for the fan not functioning for at least 5 seconds; turn the power back on; within 20 seconds press the Hi, Med, and Lo buttons (in that order) to set the frequency of the fan to the control. |
| FAN WOBBLER OR SHAKES EXCESSIVELY | <ul style="list-style-type: none"> •Be sure canopy pin is properly set into the slot on the ball. •Check that bladeholders have not been bent during installation and blades are balanced. •Hanger bracket and/or ceiling outlet are loosely attached: Make sure that the hanger bracket is tightly attached to the ceiling outlet box. Make sure that the downrod assembly is secured firmly. •Downrod is loosely attached to downrod base: Make sure that all screws are securely tightened . |
| FAN NOISY DURING OPERATION | <ul style="list-style-type: none"> •Check and tighten light fixture retaining screws, glass shade screws and/or the light bulb(s). •Tighten canopy screws and mounting plate assembly. Check that the wire nuts inside the canopy and switch housing are not touching the metal parts or have fallen off the wire splices. Tighten as necessary. •Tighten blade holders to flywheel (or direct drive motor) and blade to bladeholder screws. •Make sure all screws in the motor housing are snug, but not overly tight. Defective bulb: Replace bulb. |
| DOES NOT RUN ON LOW SPEED | <ul style="list-style-type: none"> •If new, "break-in" may be required - run at higher speed for several days. |
| BATTERY LIFE SEEMS SHORT | <ul style="list-style-type: none"> •Not using Alkaline batteries: Replace with Alkaline batteries. |
- **LIGHT O.K., NO FAN:** Pin connectors are not making good contact, check 9 pin connector under top cover.
 - **FAN O.K., NO LIGHT;** Defective receiver; Replace receiver. Defective motor; Replace motor. Broken socket; Replace socket.
 - **FAN AND LIGHT ON FULL, NO CONTROL;** Defective receiver; Replace Receiver.
 - **MISSING ONE SPEED:** Defective receiver; Replace Receiver.
 - **FAN DOESN'T CHANGE SPEED, LIGHT O.K.:** Replace receiver.
 - **FAN O.K., LIGHT NOT DIM:** Defective receiver; Replace Receiver.
 - **NO REVERSE:** Defective receiver; Replace Receiver.
 - **FAN OPERATES ONLY WHEN TRANSMITTER IS CLOSED:** Check antenna wire is not touching metal plate.
 - **FAN STARTS WORKING BY ITSELF:** Frequency interference; Change frequency as described on Page 2.

1.This device complies with Part 15 of the FCC Rules.Operation is subject to the following two conditions: (1) this device may not cause harmful interference,and (2) this device must accept any interference received,including interference that may cause undesired operation.


2.This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates,uses and can radiate radio frequency energy and,if not installed and used in accordance with the instructions,may cause harmful interference to radio communications. However,there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception,which can be determined by turning the equipment off and on,the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna, Increase the separation between the equipment and receiver, Connect the equipment into an outlet on a circuit different from that to which the receiver is connected, Consult the dealer or an experienced radio/TV technician for help. Note: Any changes or modifications to the transmitter or receiver not expressly approved by Casablanca Fan Company may void one's authority to operate this remote control.



VERSA-TOUCH 2™ SERIES REPAIR



WIRING DIAGRAMS

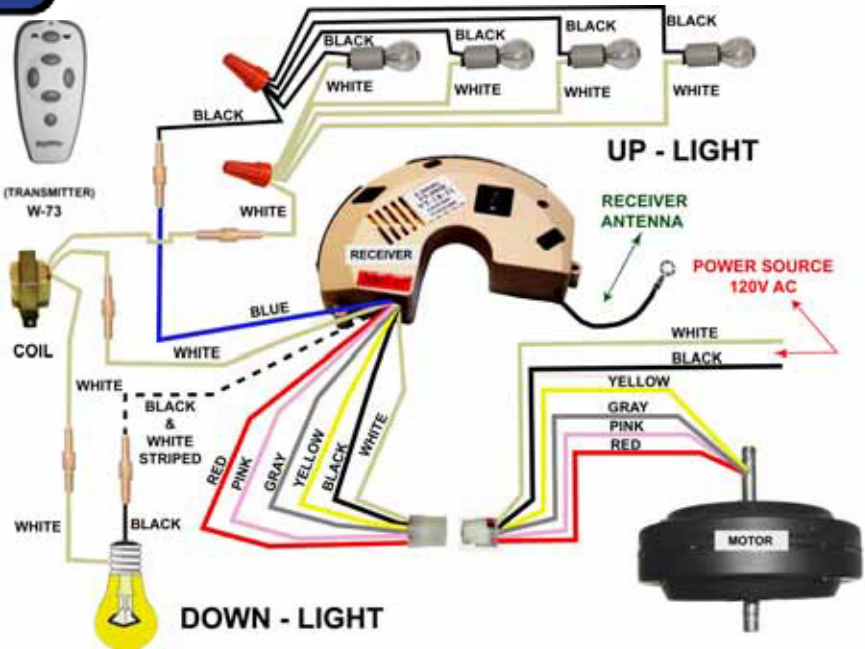

Receiver PC Board:
Part #: 7801350 (OLD)
7801760 (NEW)
Standard W/Coil

MOTOR:
Part #: Call The Factory


WALL CONTROL: W-73
Part #: 7854210

WIRING DIAGRAMS

Wilderness (86U89M) - Wiring Diagram



(TRANSMITTER) W-73

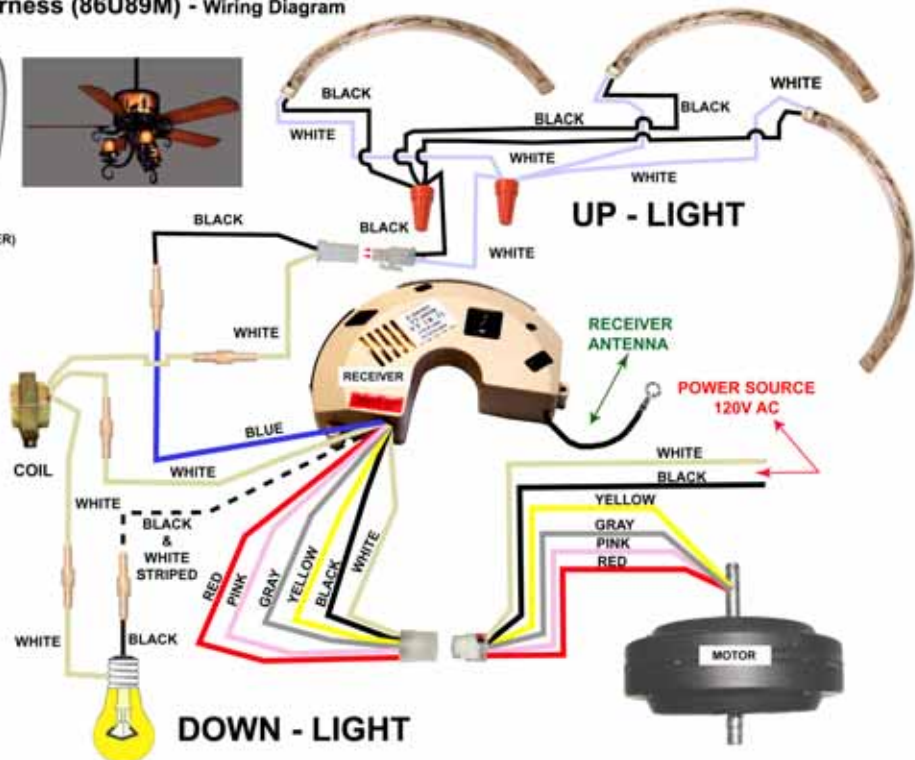


Receiver PC Board:
Part #: 7801760 (NEW)
Standard W/Coil

MOTOR:
Part #: Call The Factory

WALL CONTROL: W-73
Part #: 7854210



WIRING DIAGRAMS

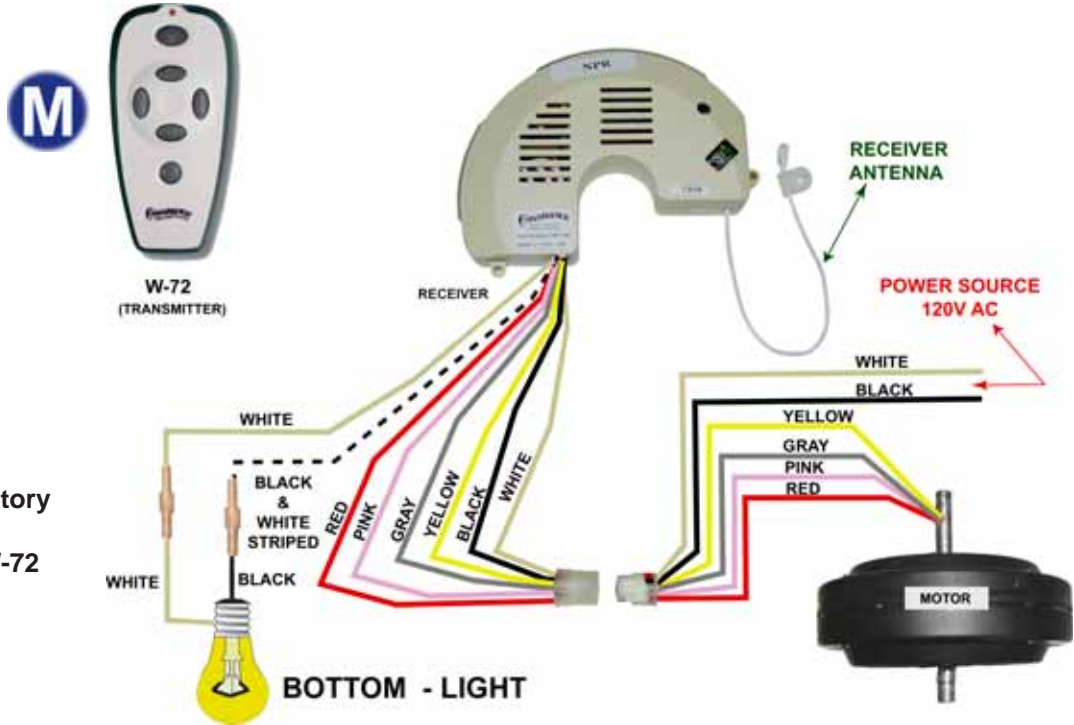


Receiver PC Board:
Part #: 7801750
Standard W/O Coil

MOTOR:
Part #: Call The Factory

WALL CONTROL: W-72
Part #: 7854200

WIRING DIAGRAMS

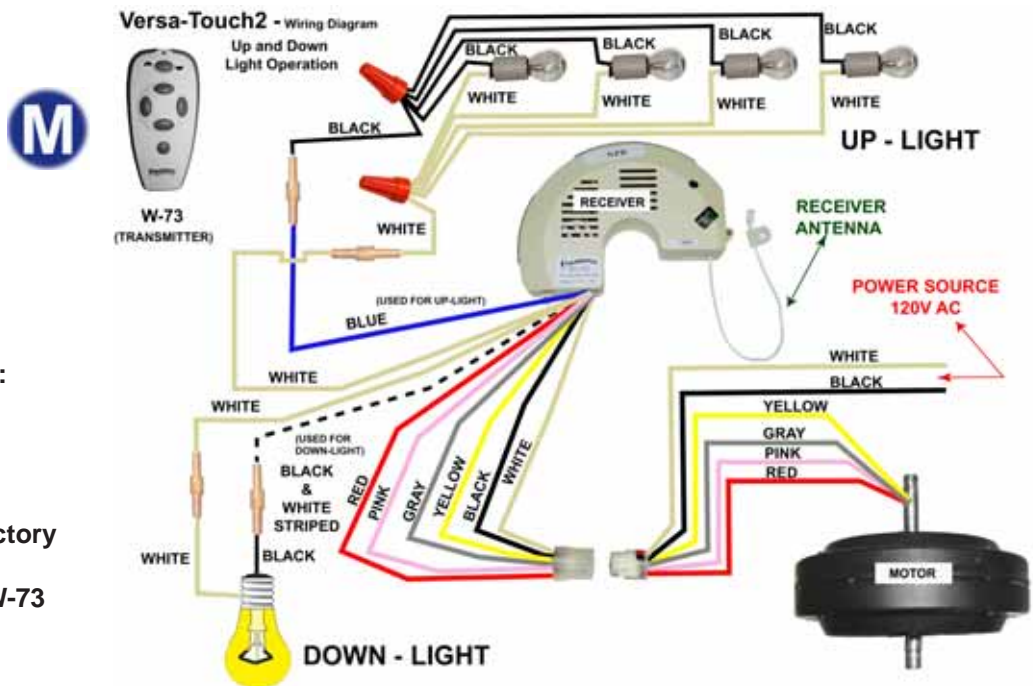

FANS:
Bella
Mykonos
Santorini


Receiver PC Board:
Part #: 7801760
Standard W/O Coil

MOTOR:
Part #: Call The Factory

WALL CONTROL: W-73
Part #: 7854210



WIRING DIAGRAMS

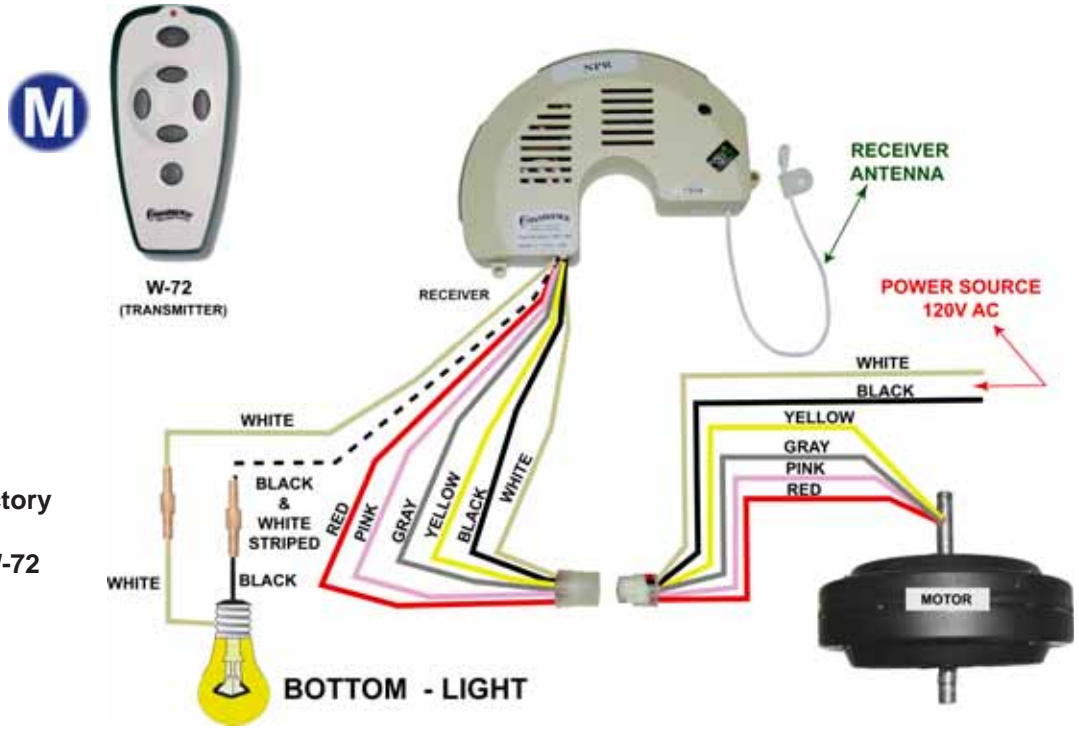


Receiver PC Board:
Part #: 7801750
Standard W/O Coil

MOTOR:
Part #: Call The Factory

WALL CONTROL: W-72
Part #: 7801750

WIRING DIAGRAMS

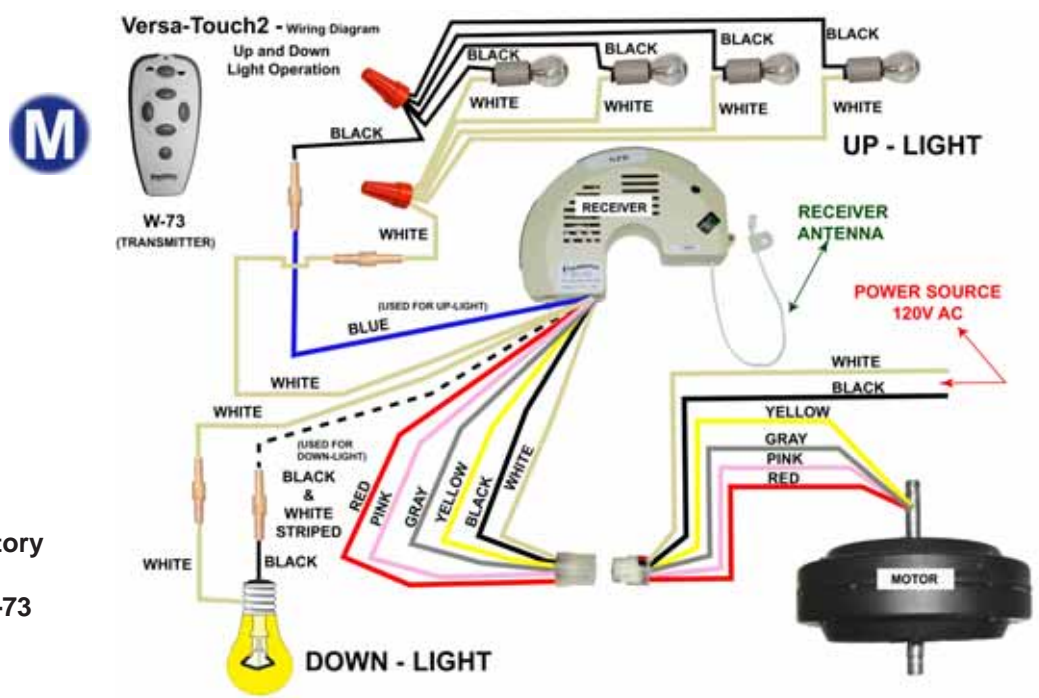

FANS:
Bella
Mykonos
Santorini

Receiver PC Board:
Part #: 7801760
Standard W/O Coil

MOTOR:
Part #: Call The Factory

WALL CONTROL: W-73
Part #: 7854210



SCANDIA Wiring Diagram



W-73

