


MAINTENANCE

Inspect and tighten all parts of the BODYGLIDE regularly.

The BODYGLIDE should be oiled every six months in the locations shown at the right. Apply a few drops of light multi-purpose oil between each of the indicated dome caps and the frame. Be sure to apply oil to each side of the BODYGLIDE.

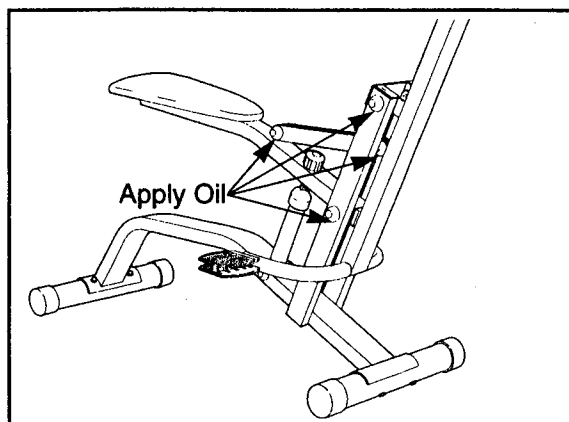

PART LIST—Model No. WLCR88851

R0895A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	2	Handlebar Foam Grip	18	10	1/2" Dome Cap
2	1	1 1/2" x 2" Plate	19	6	1/2" Bronze Bushing
3	1	Seat	20	2	1/2" Plastic Bushing
4	2	Link Arm	21	2	1/2" x 5 3/4" Pivot Rod
5	1	Seat Tube	22	1	3 3/4" Rod
6	1	Frame	23	6	1/2" Push Nut
7	1	Pedal Frame	24	2	1/2" x 1 3/4" Rod
8	4	Large Round Cap	25	1	Eyebolt
9	1	Spring Cover	26	1	Resistance Knob
10	2	1 1/4" Round Cap	27	1	1 1/2" x 2" Outer Cap
11	2	1 1/2" x 2" Inner Cap	28	1	Front Stabilizer
12	2	Pedal	29	1	Rear Stabilizer
13	2	1" x 2" Inner Cap	30	4	5/16" x 2 7/8" Bolt
14	1	Inner Spring Sleeve	31	4	5/16" Nylon Locknut
15	1	Spring	32	4	5/16" Washer
16	1	Spring Cover Cap	#	1	3/4" x 1" Pedal Tool
17	2	1/4" x 2" Screw	#	1	User's Manual

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts.

EXPLODED DRAWING—Model No. WLCR88851

R0895A

