


# FREEMOTION<sup>®</sup> Squat

Model No. F705.0

Serial No. \_\_\_\_\_

Write the serial number in the space above for reference.

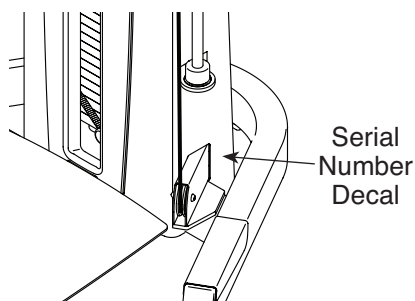


## OWNER'S MANUAL

### QUESTIONS?

If you have questions, or if parts are damaged or missing, please see **HOW TO CONTACT CUSTOMER CARE** on the back cover of this manual.

### CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.

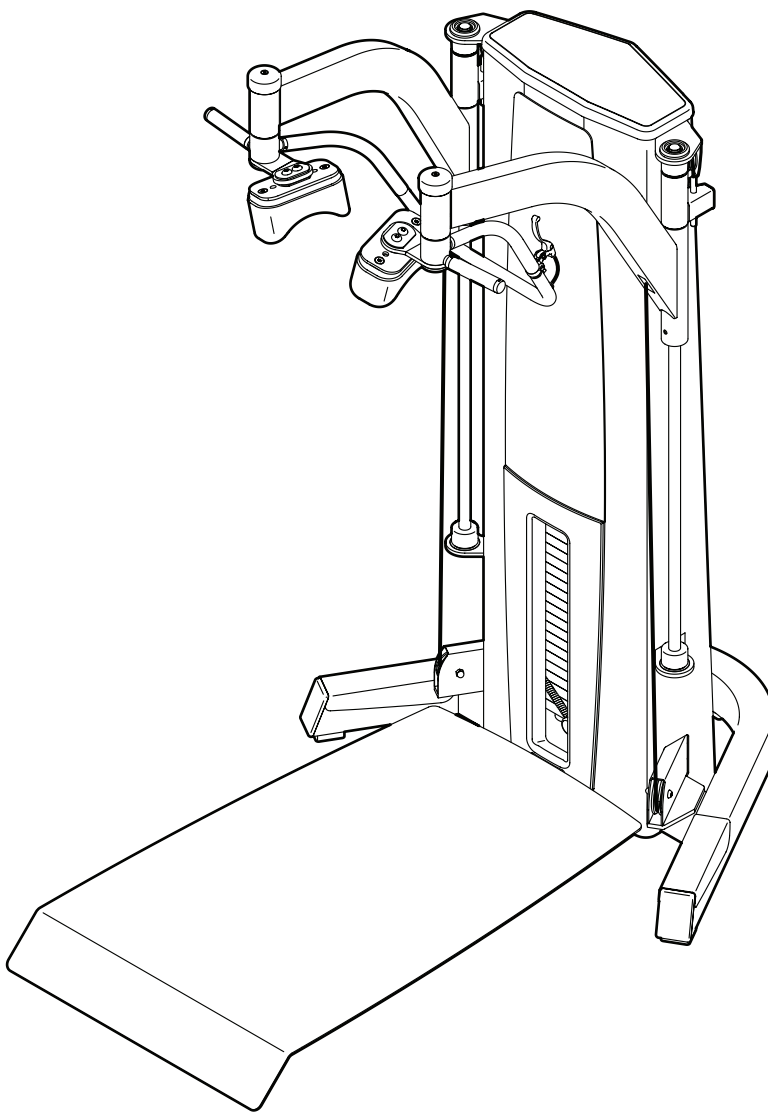

---

# TABLE OF CONTENTS

|                                      |            |
|--------------------------------------|------------|
| IMPORTANT PRECAUTIONS.....           | 3          |
| WARNING DECAL PLACEMENT .....        | 4          |
| BEFORE YOU BEGIN.....                | 5          |
| MAINTENANCE AND TROUBLESHOOTING..... | 6          |
| CABLE DIAGRAM.....                   | 10         |
| PART LIST .....                      | 12         |
| EXPLODED DRAWING.....                | 14         |
| HOW TO CONTACT CUSTOMER CARE.....    | Back Cover |
| LIMITED WARRANTY.....                | Back Cover |

FREEMOTION is a registered trademark of ICON Health & Fitness, Inc.  
Teflon is a registered trademark of E. I. du Pont de Nemours and Company.  
The name Lubriplate® is a registered trademark owned by Lubriplate Lubricants Company.  
Dynalife is a registered trademark of ConocoPhillips Company or its subsidiaries.  
Super Lube is a registered trademark of Synco Chemical Corporation.


# IMPORTANT PRECAUTIONS

**⚠️WARNING:** To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on your strength equipment before using your strength equipment. FreeMotion Fitness assumes no responsibility for personal injury or property damage sustained by or through the use of this product.


1. It is the responsibility of the owner to ensure that all users of the strength equipment are adequately informed of all precautions, have read and understood all warning and caution labels, and are informed of how to use the strength equipment properly.
2. All users of the strength equipment should be instructed to report any injury or strength equipment irregularity to facility staff immediately.
3. Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.
4. Use the strength equipment only as described in this manual.
5. Use the strength equipment only on a level surface. Cover the floor beneath the strength equipment to protect the floor.
6. It is the responsibility of the owner to ensure that there is enough space around the strength equipment for the intended exercise.
7. Using the anchor holes (see page 5), anchor the strength equipment to the floor to provide maximum stability.
8. The strength equipment is designed to support a maximum user weight of 400 lbs. (181 kg).
9. Keep children under age 12 and pets away from the strength equipment at all times.
10. Always wear athletic shoes for foot protection while exercising.
11. Keep hands and feet away from moving parts. Do not lean on or rest your hands on the strength equipment while it is in use.
12. Make sure that the weight pin is completely inserted into one of the weights.
13. Check all cables, cable connections, and pulleys before each use of the strength equipment. Make sure that all parts are properly tightened. Replace any worn parts immediately.
14. Make sure that the cables remain on the pulleys at all times. If a cable binds while you are exercising, stop immediately and make sure that the cable is on the pulleys and that nothing is interfering with the cable or the pulleys.
15. Over exercising may result in serious injury or death. If you feel faint, if you become short of breath, or if you experience pain while exercising, stop immediately and cool down.

# WARNING DECAL PLACEMENT

This drawing shows the location(s) of the warning decal(s). If a decal is missing or illegible, see the back cover of this manual and request a free replacement decal. Apply the decal in the location shown. Note: The decal(s) may not be shown at actual size.

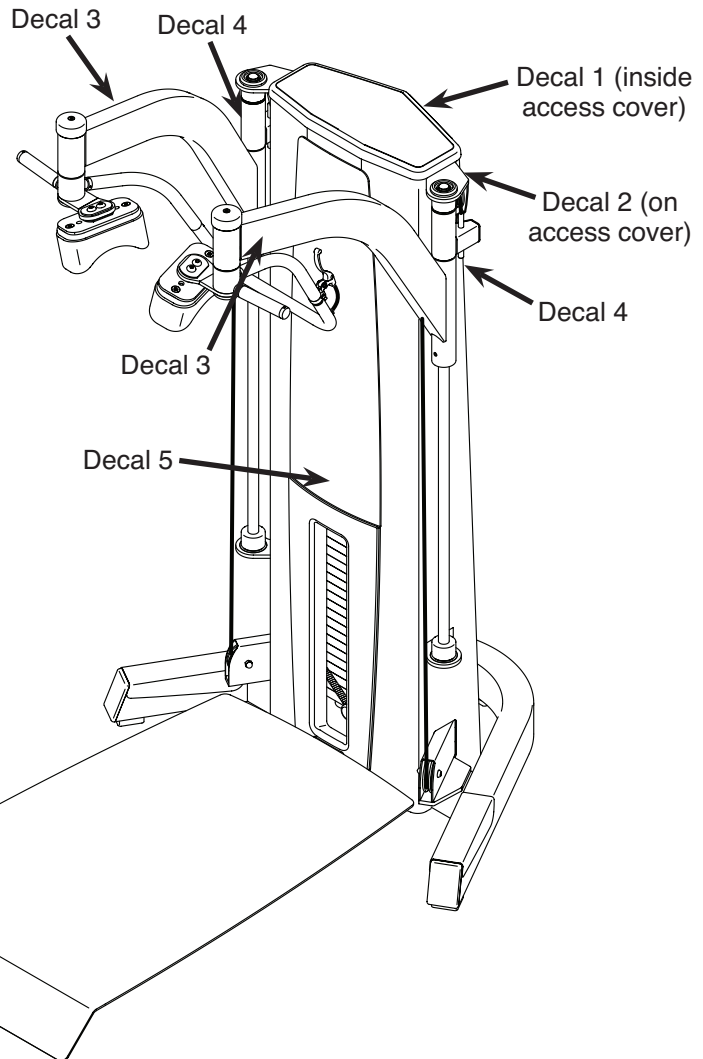

Decal 1

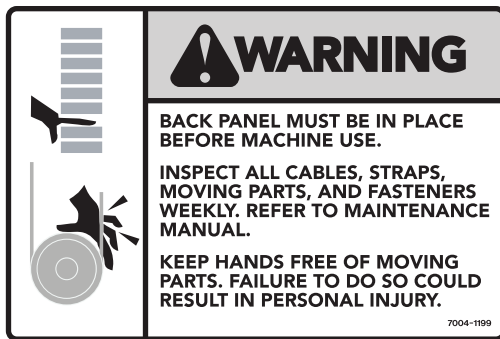


Decal 2



Decal 3



Decal 4

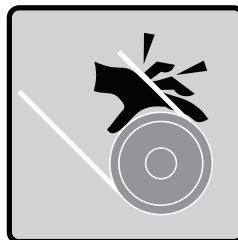

Decal 5 (Part of the instruction placard)




# BEFORE YOU BEGIN

Thank you for selecting the innovative FREEMOTION® SQUAT strength equipment. With unrestricted motion, you can work your body's muscle groups together—the same way you do naturally—to train more effectively.

**For your benefit, read this manual carefully before using the strength equipment.** If you have questions after reading this manual, please see the back cover

of this manual. To help us assist you, note the product model number and serial number before contacting us. The model number and the location of the serial number decal are shown on the front cover of this manual.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

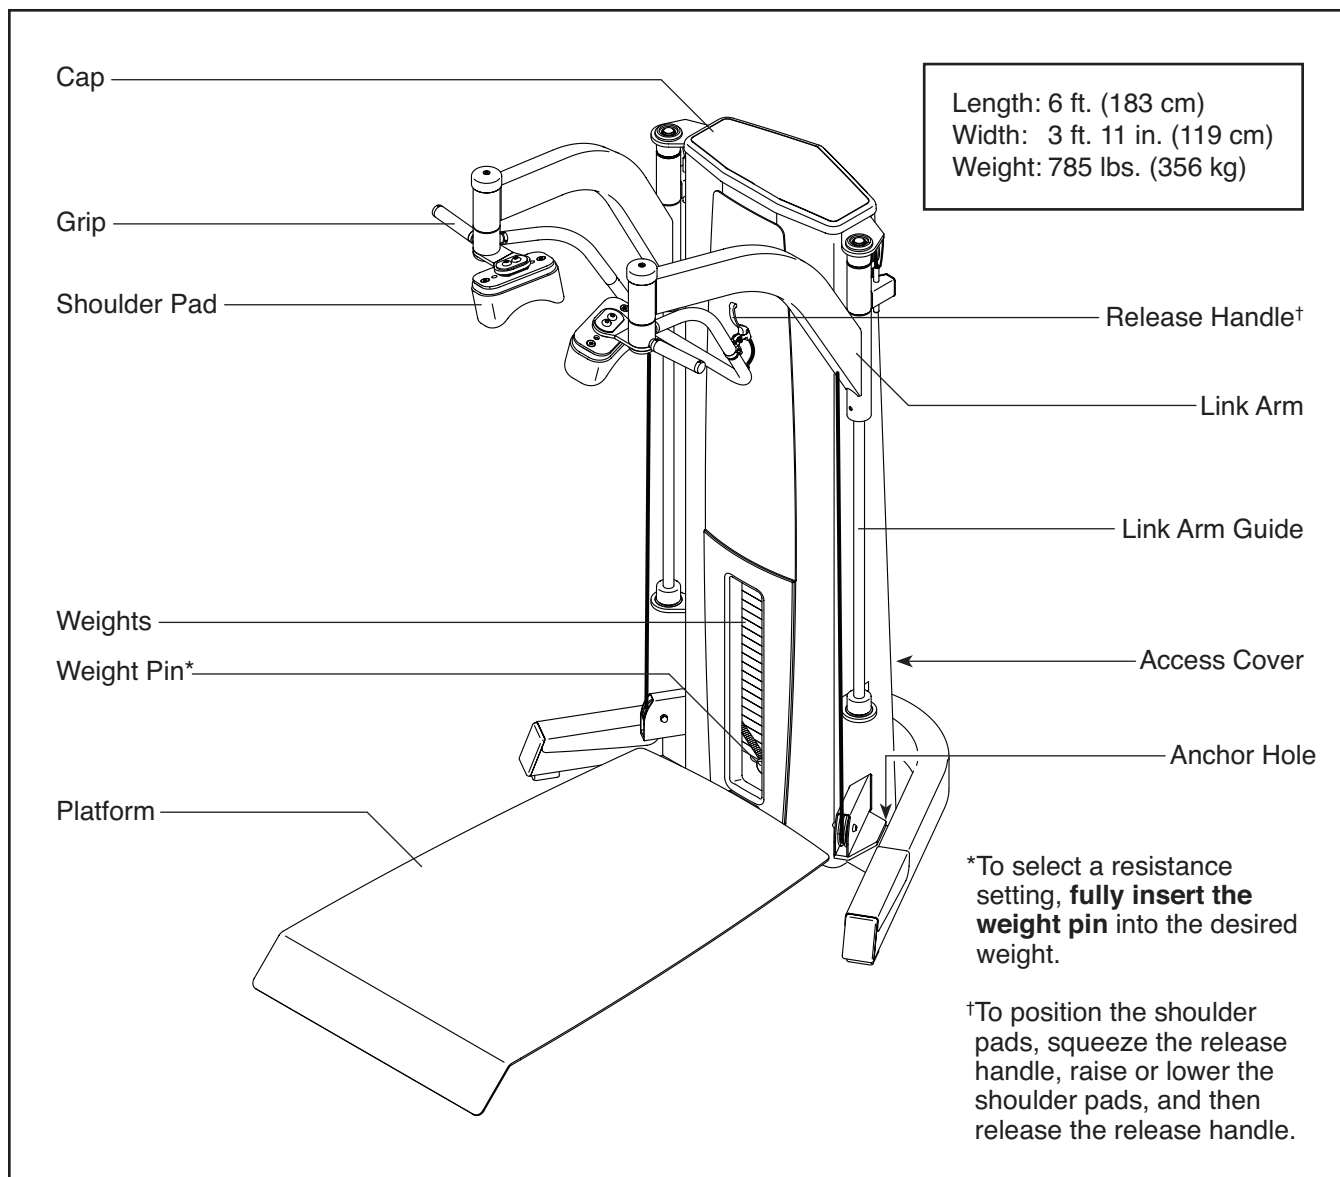

# MAINTENANCE AND TROUBLESHOOTING

For optimal performance of the strength equipment and to reduce the chances of injury to users, you must perform preventive maintenance on a regular basis. Instruct all personnel to perform the procedures described in this section. Personnel must also record and report any accident. To maintain the strength equipment's warranty, use only FREEMOTION parts for repair or replacement. If there are any questions or concerns, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual.

## DAILY MAINTENANCE

### General Cleaning

Clean the strength equipment using a soft cloth dampened with mild soap and warm water. If necessary, use a soft bristle brush with the cleaning solution.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

### Difficult Stains

Spray the stain with a non-abrasive household cleaner such as FORMULA 409®, SIMPLE GREEN®, or a similar product. Rub the stained area gently and then let the cleaning solution sit for a few minutes.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

If necessary, repeat these steps using a soft bristle brush.

### Optional Method for Difficult Stains

Rub the stained area gently using a soft cloth dampened with rubbing alcohol.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

**CAUTION:** Follow the directions and the safety precautions of the manufacturer of each cleaning product used. FreeMotion Fitness and its vendors cannot be held liable for injuries or damage resulting from the use or misuse of cleaning products. **IMPORTANT:** When using any cleaning product, try it first in a hidden place to ensure that there is no damage to the material. Do not use abrasive cleaners; strong cleaners; or solvents such as lacquer thinner, kerosene, gasoline, or similar liquids. Such substances may scratch the strength equipment, damage plastic parts and decals, or cause other damage.

## WEEKLY MAINTENANCE

### Hardware


Check all nuts, bolts, and screws, and tighten them if necessary. Replace any worn parts immediately.

**IMPORTANT:** All cushions have dense plywood supports with tee-nuts that are used to attach the cushions to the strength equipment. Because the tee-nuts are held by the plywood, they will not withstand the torque that standard nuts will. When tightening the bolts or screws securing a cushion, turn them only until they are snug and the cushion does not move or feel loose. Overtightening may strip the tee-nuts from the plywood and make it impossible to remove the cushion in the future. Note: Your strength equipment may not have cushions.

### Cable Inspection


Check the entire length of each cable by slowly performing one repetition on the strength equipment. Inspect the cable on the exterior of the strength equipment and the cable on the interior. Run your fingers along the cable, paying close attention at the bends and attachment points. Watch for the following conditions, which may indicate a worn cable that should be replaced:

- A. a torn or split sheath that exposes the cable
- B. a kinked or severely bent cable
- C. a curled or twisted sheath
- D. a stretched sheath with a thinning cross-section

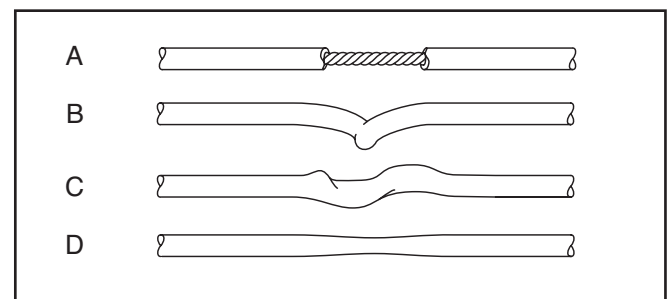

### Cable Traps

Check the cable traps to ensure that they are not rubbing against the cables and that they are holding the cables in the grooves of the pulleys. If a cable trap is not correctly aligned, loosen the locknut slightly, readjust the cable trap as necessary, and then retighten the locknut.

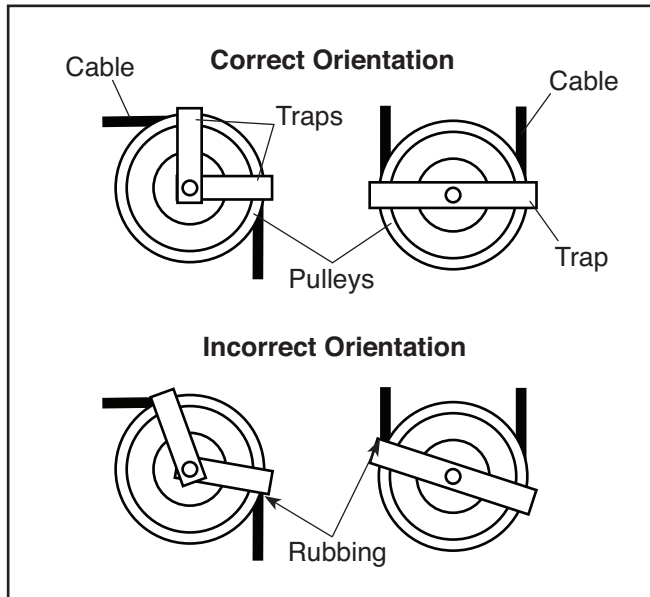

## MONTHLY MAINTENANCE

### Grips

Check the grips and replace them if needed.  
Note: Your strength equipment may not have grips.


### Weight Guide Lubrication

Clean and lubricate each weight guide inside the tower by wiping it with a soft cloth containing 10W-40 or 10W-30 lightweight motor oil. Apply only a light coating over the entire length of the weight guide. **Do not use TEFLON®-based lubricants.**

### Linear Bearing Lubrication

To purchase grease for the linear bearings, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual. Approved alternatives are Lubriplate® MAG-00, Dynalife® L-EP 000, Castrol® HD Lithium 000, and Super Lube® 00/000 grease. **IMPORTANT: To avoid permanently damaging the linear bearings, do not use any other type of grease.**

1. Using a soft cloth, clean one of the link arm guides; make sure to remove the accumulated grease and debris from the ends of the link arm guide.

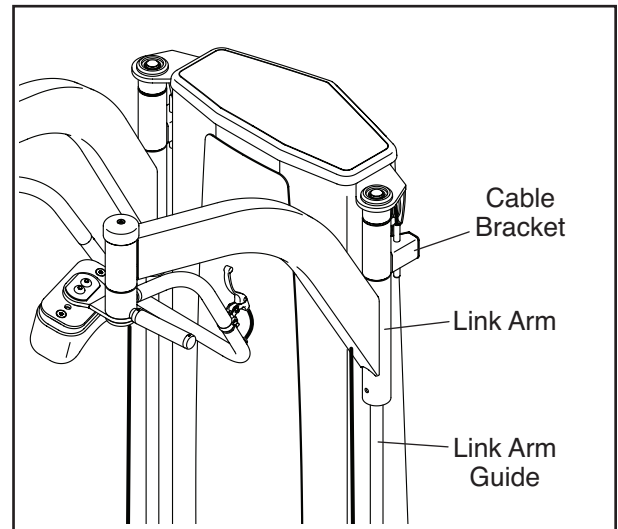

2. Insert the weight pin into the weight stack, and have a second person move the link arms until the cable bracket is in the center of the link arm guide.
3. Apply drops of the specified grease all around the link arm guide above and below the cable bracket.
4. Have the second person move the link arms repeatedly so that the cable bracket moves along the entire length of the link arm guide several times.
5. Repeat steps 3 and 4 once or twice more until the grease begins to accumulate near the ends of the link arm guide. Then, wipe off the accumulated grease.
6. Repeat steps 1–5 for the other link arm guide.

## CABLE ADJUSTMENT


For the strength equipment to function correctly, the cables must be tensioned correctly. To check the tension of the cables, first insert the weight pin into the weight carriage. Next, slowly raise and lower the weight carriage by performing one repetition. The weight carriage should come to rest just on top of the next weight when the repetition is completed.

If there is too much tension on the cables, the weight carriage will not rest on the next weight, and it may be difficult to insert the weight pin into the weights.

If there is not enough tension on the cables, the weight carriage will not be lifted immediately when the repetition is begun. Ideally, the cable should not move more than 1/2 in. (1.3 cm) from the resting position before the weight carriage is lifted.


If there is too much tension or not enough tension on the cables, follow the steps below to adjust the cables.

### Tower Cable Adjustment

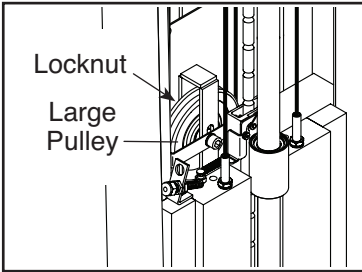1. Lift the cap off the tower. Next, remove the access cover from the back of the tower by pulling it free at the bottom and then sliding it upward until the tabs release.
2. Loosen the locknut attaching the large pulley to the weight carriage.  
A line drawing of a weight carriage assembly. A large pulley is mounted on a vertical shaft. A locknut is shown being loosened from the shaft. Labels with arrows point to the 'Locknut' and the 'Large Pulley'.
3. To tighten the cables, move the large pulley downward. To loosen the cables, move the large pulley upward.
4. Make sure that the cable trap is properly oriented (see CABLE TRAPS on page 7), and retighten the locknut.
5. Check the tension of the cables as described above. Readjust the large pulley if necessary.

6. Slowly perform a repetition using a light load, and have someone make sure that the cables are not derailed from a pulley or rubbing against a cable trap.
7. Reattach the access cover and the cap.

### Link Arm Cable Adjustment

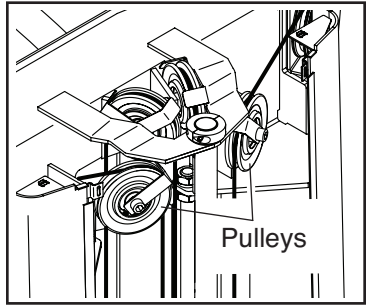1. Lift the cap off the tower. Next, remove the access cover from the back of the tower by pulling it free at the bottom and then sliding it upward until the tabs release.
2. Locate the two indicated pulleys attached to the upper end of the tower. Loosen the locknut (not shown) attaching each pulley.  
A line drawing of the upper part of a tower. Two pulleys are shown at the top, each with a cable passing over it. A label 'Pulleys' with an arrow points to the two pulleys.

3. To tighten the cables, move each pulley upward. To loosen the cables, move each pulley downward.


Note: The pulley on the left side of the tower will adjust the left link arm cable and the pulley on the right side of the tower will adjust the right link arm cable. You can adjust the left and right link arm cables independently if necessary.

4. Make sure that the cable traps are properly oriented (see CABLE TRAPS on page 7), and retighten the locknuts.
5. Check the tension of the cables as described above. Readjust the pulleys as necessary.
6. Slowly perform a repetition using a light load, and have someone make sure that the cables are not derailed from a pulley or rubbing against a cable trap.
7. Reattach the access cover and the cap.

## WEIGHT STACK SERVICING

Servicing the weight stack involves replacing the bushings in the weight carriage. To order these parts, see **HOW TO CONTACT CUSTOMER CARE** on the back cover of this manual.


1. Lift the cap off the tower. Next, remove the access cover by pulling it free at the bottom and then sliding it upward until the tabs release.
2. Remove the nuts and washers from the upper ends of the weight guides, and let the weight guides slide down to the floor.
3. Slide the weight carriage upward off the upper ends of the weight guides. Note: Pull the weight guides toward the back of the strength equipment for increased clearance.
4. Unscrew and remove the two existing weight guide bushings from the weight carriage. Discard the weight guide bushings.

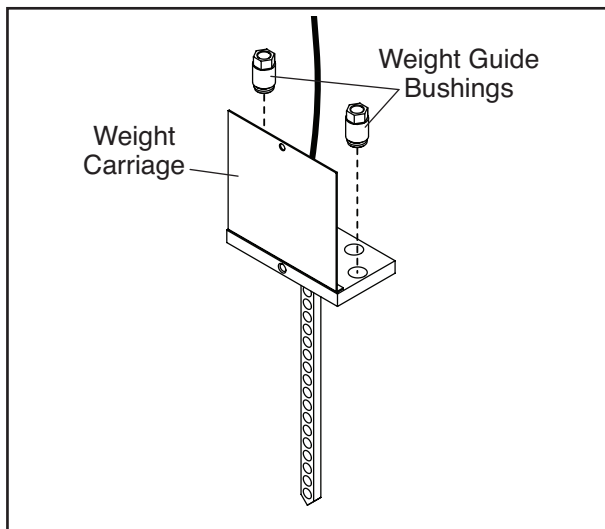

5. Tighten two new weight guide bushings into the weight carriage.
6. Clean and lubricate the weight guides by wiping them with a soft cloth containing 10W-40 or 10W-30 lightweight motor oil. Apply only a light coating over the entire length. **Do not use TEFLON®-based lubricants.**
7. Replace the weight carriage on the weight guides.
8. Reattach the weight guides to the top of the tower.
9. Insert the weight pin into the weight carriage. Lift the link arms, lifting the weight carriage all the way to the top. Slowly return the link arms to the resting position.  
  
If the weight carriage sticks, loosen the nuts on the upper end of one of the weight guides. Lift the weight carriage to the top again. Retighten the nuts. Check the full travel again and readjust the weight guides as necessary.
10. Slowly perform a repetition and have someone make sure that the cables are not derailed from a pulley or rubbing against a cable trap.
11. Reattach the access cover and the cap.

# CABLE DIAGRAM

The diagram below shows the proper routes of the cables. The numbers show the correct route of each cable. Use the diagram to make sure that the cables and the cable traps are assembled correctly. If a cable is not correctly routed, the strength equipment will not function properly and damage may occur. **Make sure that the cable traps do not touch or bind the cable.**

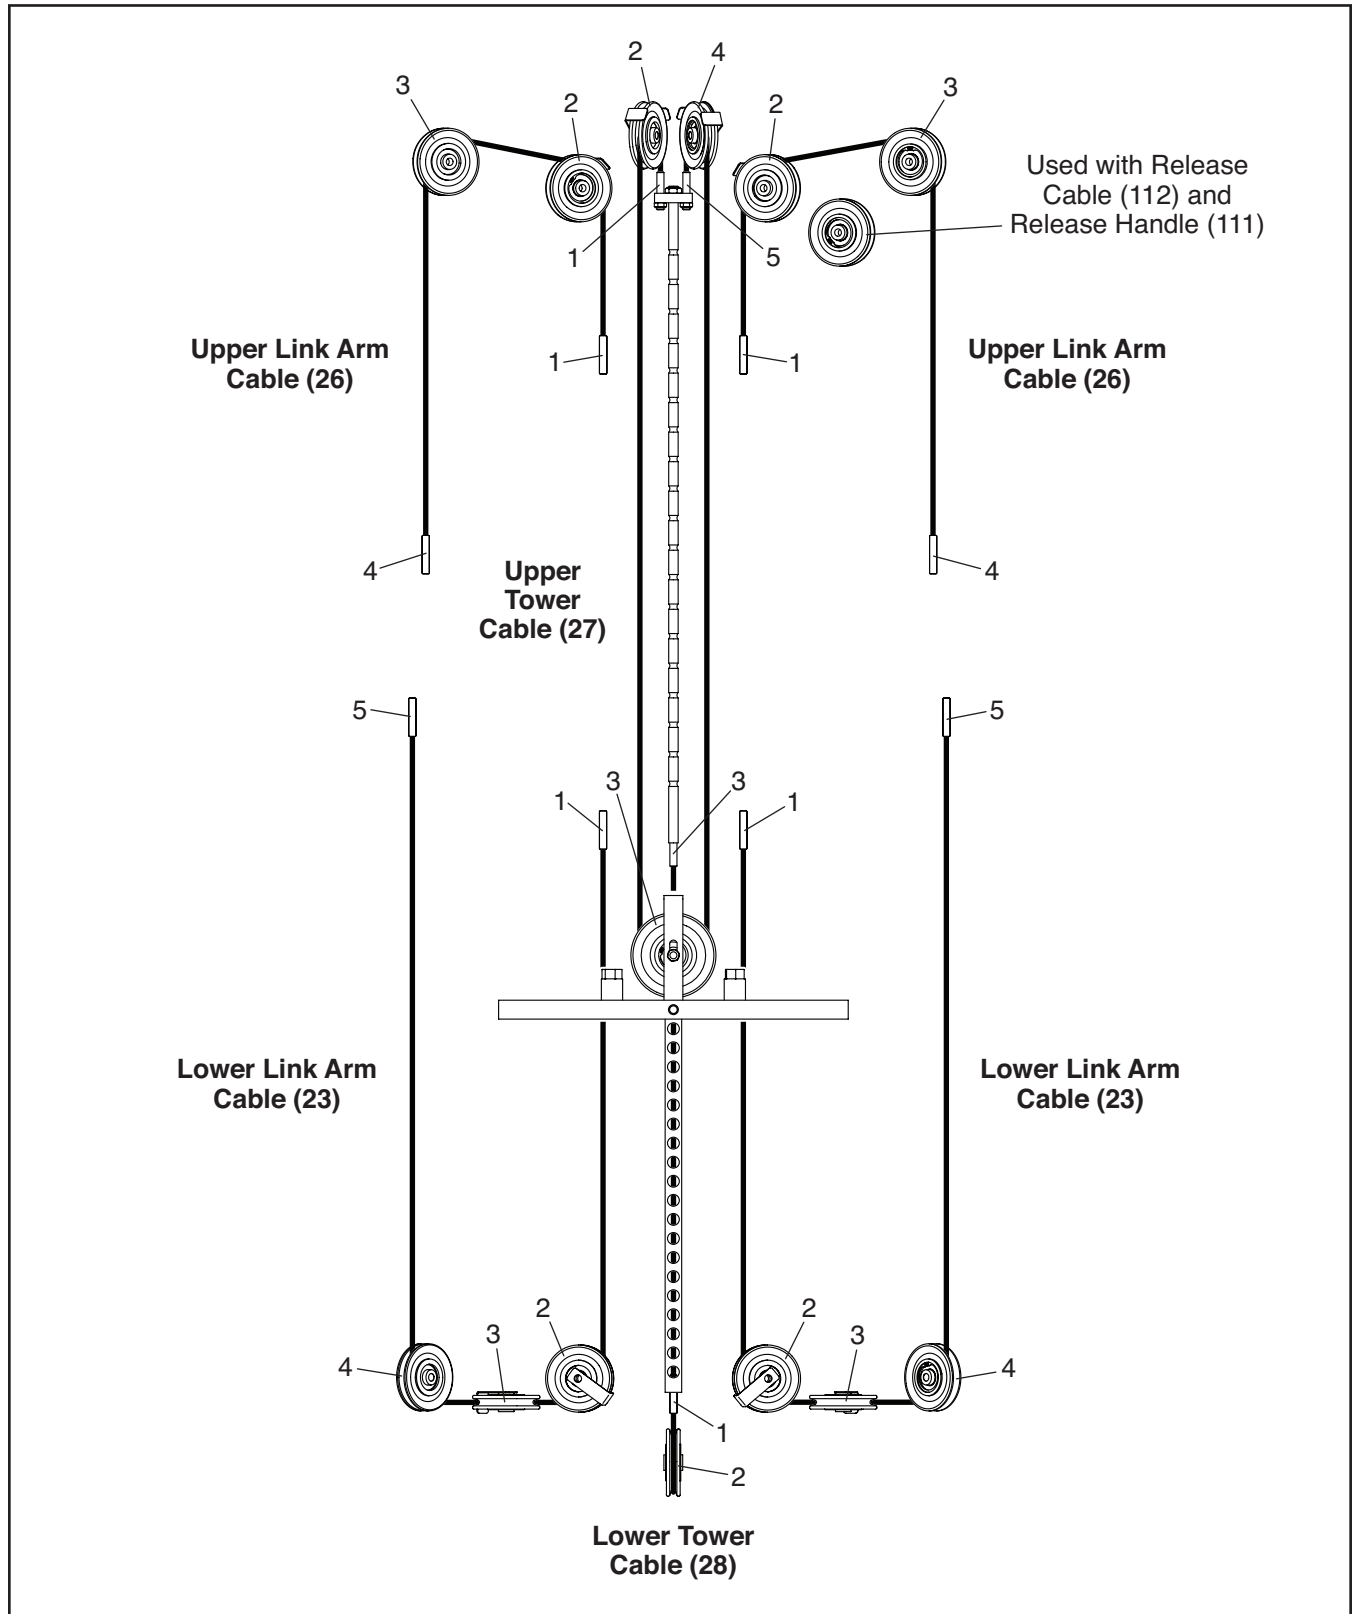

---

## NOTES

# PART LIST

Model No. F705.0 R0915A


| Key No. | Qty. | Description                 | Key No. | Qty. | Description              |
|---------|------|-----------------------------|---------|------|--------------------------|
| 1       | 1    | Tower                       | 51      | 4    | 3/8" x 2" Bolt           |
| 2       | 1    | Upper Cover                 | 52      | 9    | 3/8" Locknut             |
| 3       | 1    | Lower Cover                 | 53      | 1    | Left Shoulder Pivot      |
| 4       | 1    | Cap                         | 54      | 4    | 5/8" Split Washer        |
| 5       | 2    | Long Magnet Strip           | 55      | 4    | 5/8" Jam Nut             |
| 6       | 2    | Short Magnet Strip          | 56      | 11   | 1/4" x 3/8" Screw        |
| 7       | 1    | Tower Base                  | 57      | 23   | 3/8" Serrated Washer     |
| 8       | 1    | Platform                    | 58      | 4    | 3/8" x 1 1/2" Bolt       |
| 9       | 2    | Link Arm Guide              | 59      | 4    | 3/8" Acorn Nut           |
| 10      | 2    | Weight Guide                | 60      | 1    | 3/8" x 1 1/2" Bolt       |
| 11      | 1    | Weight Carriage             | 61      | 5    | 3/8" 1 3/4" Bolt         |
| 12      | 19   | Weight                      | 62      | 4    | 1/2" x 4" Screw          |
| 13      | 1    | Weight Pin                  | 63      | 1    | Right Cable Bracket      |
| 14      | 4    | Foot                        | 64      | 1    | Access Cover             |
| 15      | 2    | Weight Guide Bushing        | 65      | 4    | Cap Fastener             |
| 16      | 14   | Small Pulley                | 66      | 4    | Grip Collar              |
| 17      | 1    | Large Pulley                | 67      | 2    | Grip Cap                 |
| 18      | 11   | Cable Trap                  | 68      | 4    | 3/8" x 5 1/2" Bolt       |
| 19      | 1    | Large Dual Cable Trap       | 69      | 12   | #10 x 1/8" Set Screw     |
| 20      | 1    | Left Link Arm               | 70      | 1    | Selector Plate           |
| 21      | 2    | Weight Bumper               | 71      | 4    | #8 x 3/8" Screw          |
| 22      | 1    | Release Cable Housing       | 72      | 1    | Cable Housing End        |
| 23      | 2    | Lower Link Arm Cable        | 73      | 6    | 3/8" Jam Locknut         |
| 24      | 6    | 1 9/16" Retainer Ring       | 74      | 5    | 3/8" Jam Nut             |
| 25      | 1    | Right Link Arm              | 75      | 2    | Cable Strain Relief      |
| 26      | 2    | Upper Link Arm Cable        | 76      | 1    | 1/2" Thin Locknut        |
| 27      | 1    | Upper Tower Cable           | 77      | 6    | 3/8" Thin Locknut        |
| 28      | 1    | Lower Tower Cable           | 78      | 2    | Strain Relief Nut        |
| 29      | 2    | Flange Bushing              | 79      | 2    | Latch Dowel Pin          |
| 30      | 4    | Linear Bearing              | 80      | 2    | Spring Dowel Pin         |
| 31      | 4    | Pulley Bracket Bumper       | 81      | 1    | Short Latch Pin          |
| 32      | 6    | Clamp                       | 82      | 1    | Medium Latch Pin         |
| 33      | 8    | Large Bearing               | 83      | 1    | Long Latch Pin           |
| 34      | 2    | Short Grip                  | 84      | 1    | #8 x 1/8" Shoulder Screw |
| 35      | 1    | Small Dual Cable Trap       | 85      | 6    | 3/16" Snap Ring          |
| 36      | 6    | Bumper Washer               | 86      | 1    | Latch Bracket            |
| 37      | 2    | 1 3/8" Snap Ring            | 87      | 2    | Selector Spring          |
| 38      | 4    | Small Bearing               | 88      | 2    | Selector Latch           |
| 39      | 2    | Counterweight Guide Bearing | 89      | 2    | Link Plate               |
| 40      | 2    | Nylon Washer                | 90      | 1    | M5 Nut                   |
| 41      | 4    | 5/16" Washer                | 91      | 1    | Lock Spacer              |
| 42      | 1    | Left Cable Bracket          | 92      | 1    | Cable Lock Bolt          |
| 43      | 2    | 1" Snap Ring                | 93      | 1    | Slack Spring             |
| 44      | 1    | Left Torsion Spring         | 94      | 1    | Return Spring            |
| 45      | 2    | Spring Ring                 | 95      | 1    | Platform Base            |
| 46      | 1    | Right Shoulder Pivot        | 96      | 2    | 3/8" Washer              |
| 47      | 2    | 1/2" x 1" Screw             | 97      | 1    | 5/16" x 1" Screw         |
| 48      | 8    | 3/8" x 1/2" Screw           | 98      | 1    | Wheel                    |
| 49      | 2    | Bearing Spacer              | 99      | 1    | Right Torsion Spring     |
| 50      | 1    | 3/8" x 2 1/4" Bolt          | 100     | 2    | Pad Plate                |

| Key No. | Qty. | Description                  | Key No. | Qty. | Description            |
|---------|------|------------------------------|---------|------|------------------------|
| 101     | 4    | Slide Plate                  | 110     | 2    | Base Cover             |
| 102     | 4    | 3/8" x 1 1/4" Screw          | 111     | 1    | Release Handle         |
| 103     | 4    | Slide Spacer                 | 112     | 1    | Release Cable          |
| 104     | 2    | Shoulder Pad                 | 113     | 1    | Counterweight Selector |
| 105     | 1    | Handlebar                    | 114     | 1    | Counterweight Guide    |
| 106     | 4    | 3/8" x 1" Flat Head Screw    | 115     | 2    | Long Grip              |
| 107     | 4    | 1/4" x 9/16" Flat Head Screw | 116     | 2    | Cable Bracket Cap      |
| 108     | 2    | Top Pivot Cap                | 117     | 1    | Counterweight          |
| 109     | 2    | Bottom Pivot Cap             | *       | —    | Owner's Manual         |

Note: Specifications are subject to change without notice. For information about ordering replacement parts, see the back cover of this manual. \*These parts are not illustrated.


# EXPLODED DRAWING A

Model No. F705.0 R0915A

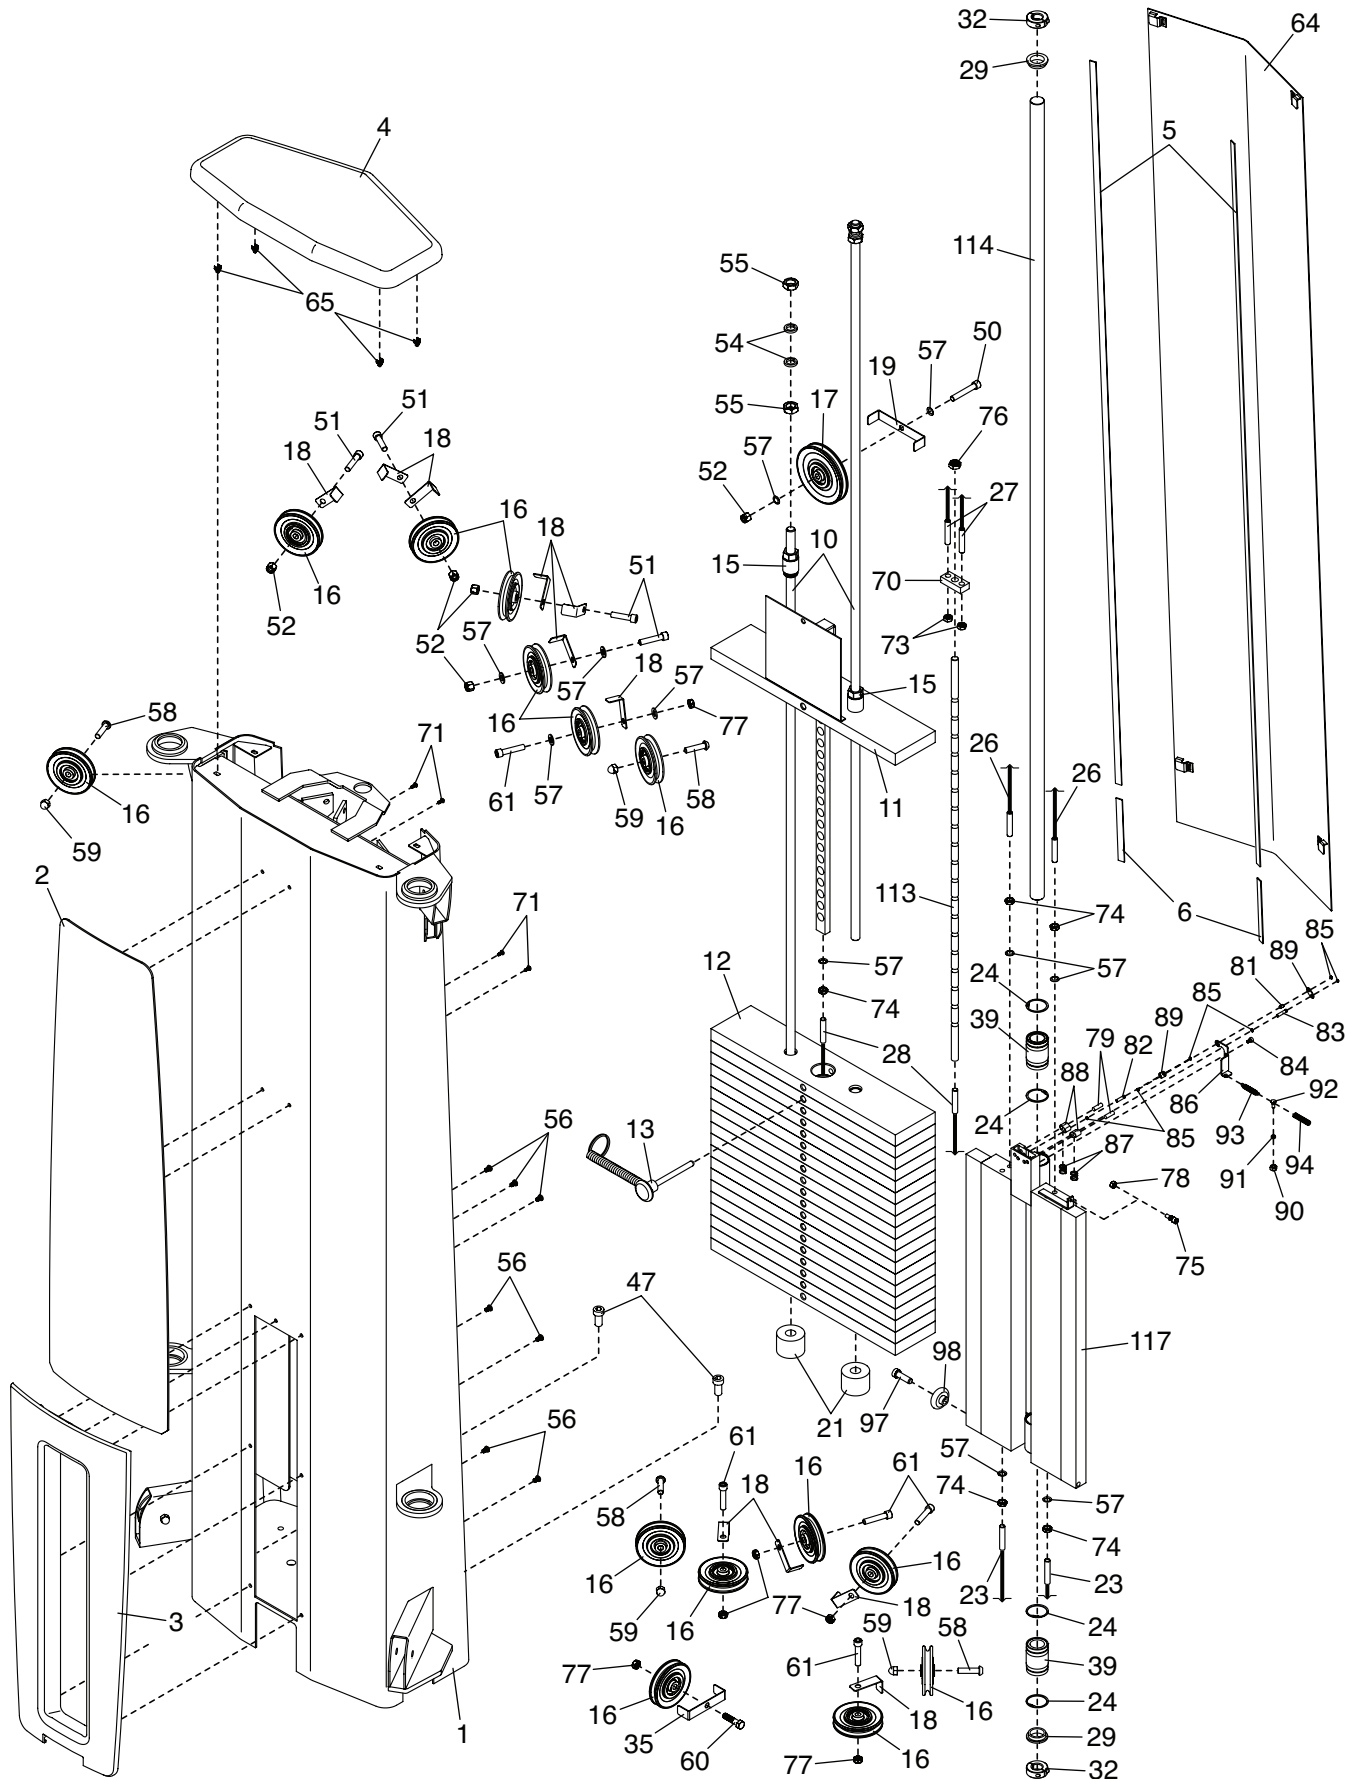

# EXPLODED DRAWING B

Model No. F705.0 R0915A

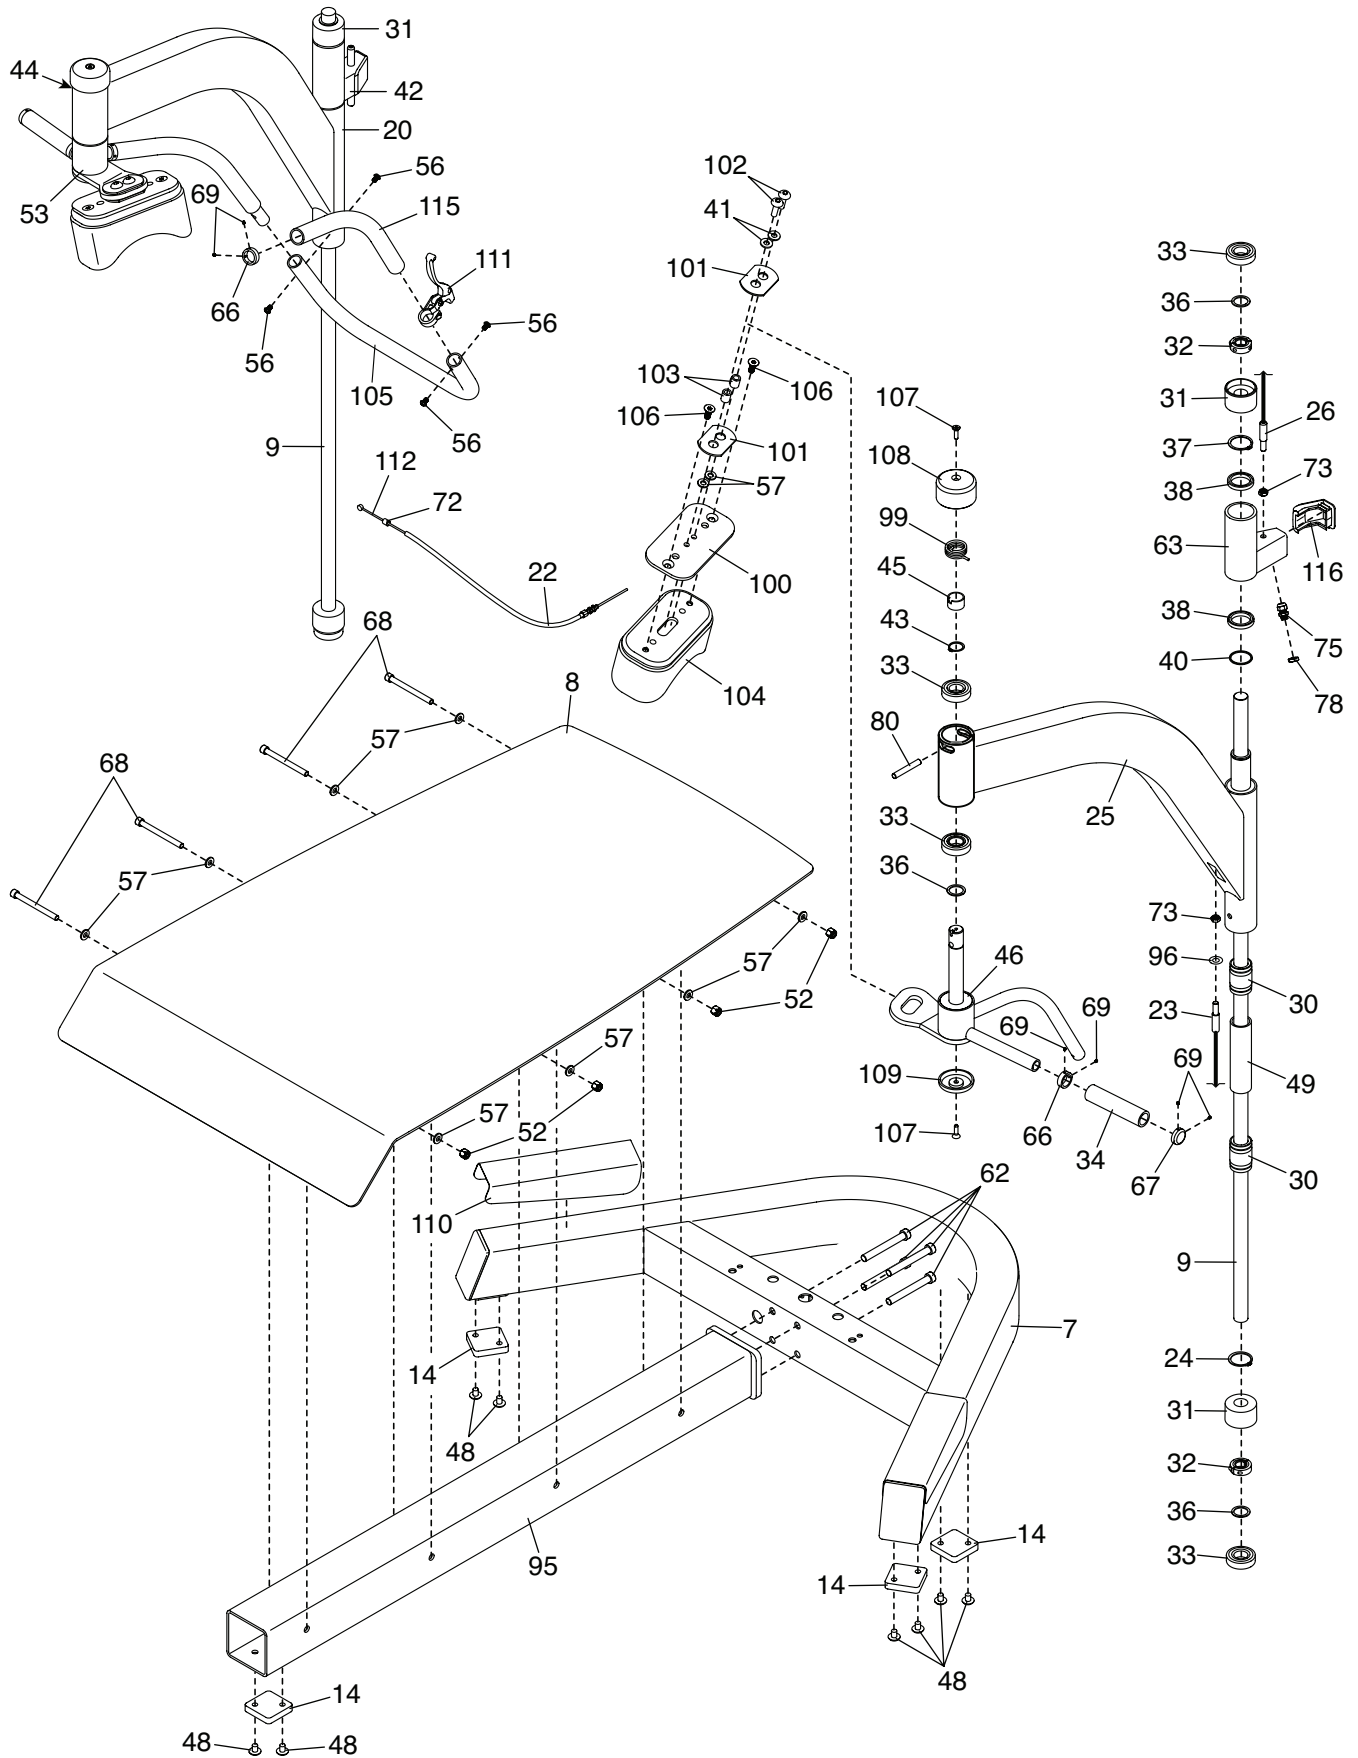

---

# HOW TO CONTACT CUSTOMER CARE

If you have questions after reading this manual, or if parts are damaged or missing, please contact Customer Care at one of the phone numbers or addresses listed below. **Please note the model number, serial number, and name of the product (see the front cover of this manual) before contacting Customer Care. If you are ordering replacement parts, please also note the key number and description of each part (see the PART LIST and the EXPLODED DRAWING near the end of this manual).**

## In the United States

Call: 1-800-201-2109, Mon.–Fri. 6 a.m.–6 p.m. MT

Email: [customercare@freemotionfitness.com](mailto:customercare@freemotionfitness.com)

Write:

FreeMotion Fitness  
1500 South 1000 West  
Logan, UT 84321-9813  
United States

## Outside the United States

Call: 001-800-527-5417 or 001-435-786-3521,

Mon.–Fri. 6 a.m.–3 p.m. USA Mountain Time

Email: [intlcustomercare@freemotionfitness.com](mailto:intlcustomercare@freemotionfitness.com)

---

## LIMITED WARRANTY

### WARRANTY PERIODS AND COVERAGE

FreeMotion Fitness warrants this product to be free from defects in workmanship and material under normal use and service conditions. Parts and labor are warranted for one (1) year, unless otherwise specified on the invoice.

The warranty period commences on the invoice date of purchase. Any parts repaired or replaced during this warranty period will be warranted for the remainder of the original warranty period.

### CONDITIONS AND LIMITATIONS

The following will void the warranty on this product:

1. This warranty applies only to the original owner and is non-transferable.
2. The labor warranty applies only to products sold in the US and Canada. Contact your authorized FreeMotion Fitness dealer for details on labor coverage in your country.
3. Any misuse, abuse, or improper service.
4. Users in excess of the maximum user weight listed in this manual. Note: This product may not have a maximum user weight.
5. Damage caused by moving the product or improper storage including moving or storing the product on its side.
6. Use or storage of the product outdoors or in high-humidity environments including spa and pool areas.
7. Damage caused by improper wiring or insufficient electrical current. Note: This product may not have wiring.

This warranty shall not apply to the following:

1. Cosmetic items including grips, decals, and labels.

2. Pick-up and delivery or freight charges involved with a repair.
3. Any problem as a result of improper assembly or delivery.

### WHAT TO DO IF SERVICE IS REQUIRED

FreeMotion Fitness warranty service may be obtained by contacting the authorized dealer from which you purchased this product. Make sure to retain your original invoice and serial number information. If this product experiences a failure under the warranty terms set forth, FreeMotion Fitness shall provide at their option either repair, replacement, or refund of the purchase price. FreeMotion Fitness compensates service providers for warranty trips within their service area. You may be charged additionally for service calls beyond this service area.

FreeMotion Fitness is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product; damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, or cost of removal or installation; or other consequential damages. Some regions do not allow the exclusion or limitation of consequential damages. Accordingly, the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights that vary from region to region.

### TO CONTACT FREEMOTION FITNESS

See HOW TO CONTACT CUSTOMER CARE above.