


FREEMOTION[®] E P I C[™] LEG CURL

OWNER'S MANUAL

Model No. GZFI8038.0

Serial No. _____

Write the serial number in the space above for future reference.

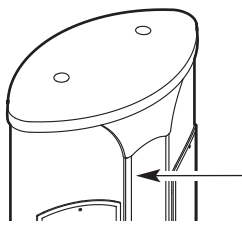


Serial Number Decal (inside tower)

QUESTIONS?

At FreeMotion Fitness, we are committed to providing complete customer satisfaction. If you have questions, see **HOW TO CONTACT CUSTOMER CARE** on the back cover of this manual.

CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

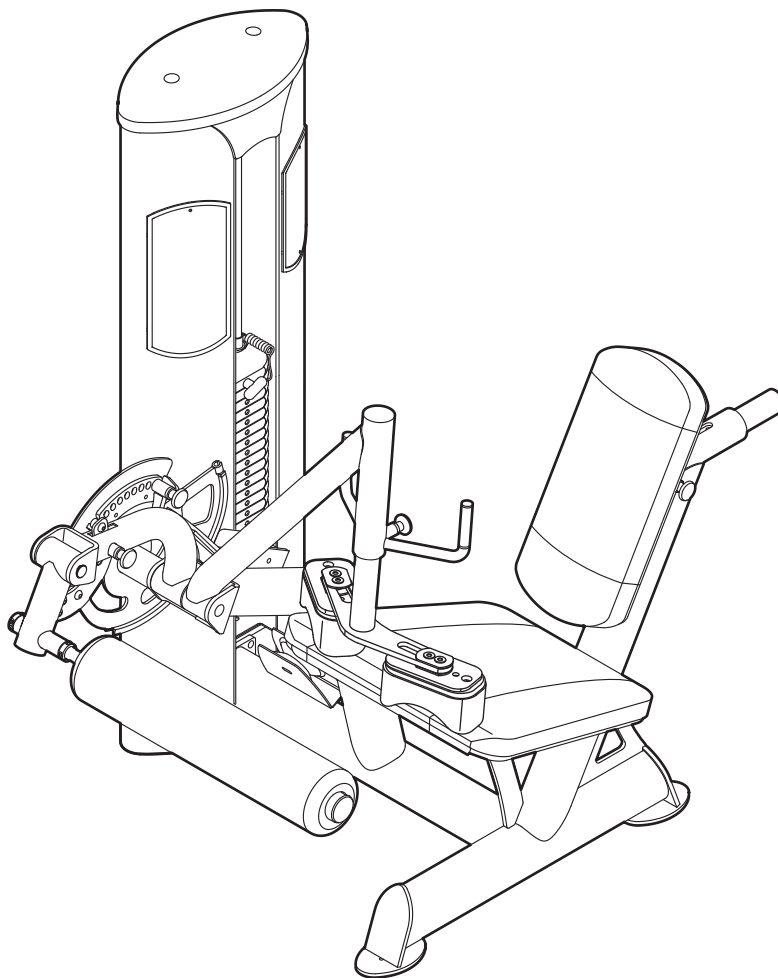

Visit our website at

www.freemotionfitness.com

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS 3

WARNING DECAL PLACEMENT 4

BEFORE YOU BEGIN 5

ADJUSTMENT 6

MAINTENANCE AND TROUBLESHOOTING 8

CABLE DIAGRAM 12

PART LIST 14

EXPLODED DRAWING 15

HOW TO CONTACT CUSTOMER CARE Back Cover

IMPORTANT PRECAUTIONS

⚠ WARNING: To reduce the risk of serious injury, read all the important precautions and instructions in this manual and all warnings on the strength equipment before using the strength equipment. FreeMotion Fitness assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

1. Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems.
2. Keep the strength equipment indoors, away from moisture and dust. Do not put the strength equipment in a garage or covered patio, or near water.
3. Use the strength equipment only on a level surface. Cover the floor beneath the strength equipment to protect the floor.
4. It is the owner's responsibility to ensure that there is enough space around the strength equipment for the intended exercise. Do not crowd the strength equipment.
5. Anchor the strength equipment to the floor with the anchor strap where required or whenever possible to provide maximum stability.
6. It is the responsibility of the owner to ensure that all users of the strength equipment are adequately informed of all precautions, have read and understood all warning and caution labels, and are informed of how to use the strength equipment properly.
7. Keep children under age 12 and pets away from the strength equipment at all times.
8. The strength equipment is designed to support a maximum user weight of 350 lbs. (159 kg).
9. Always wear athletic shoes for foot protection while exercising.
10. Keep hands and feet away from moving parts. Do not lean on or rest your hands on the strength equipment when it is in use.
11. All users of the strength equipment should be instructed to report any injury or strength equipment irregularity to facility staff immediately.
12. Make sure that the weight pin is completely inserted into one of the weights.
13. Check the cable, cable connections, and pulleys before each use of the strength equipment. Make sure all parts are properly tightened. Replace any worn parts immediately.
14. Make sure that the cable remains on the pulleys at all times. If the cable binds while you are exercising, stop immediately and Make sure that the cable is on the pulleys and nothing is interfering with the cable or pulleys.
15. If you feel pain or dizziness while exercising, stop immediately and cool down.
16. Use the strength equipment only as described in this manual.


WARNING DECAL PLACEMENT

The decals shown below have been placed on the strength equipment in the indicated locations. **If a decal is missing or illegible, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual and request a free replacement decal. Apply the decal in the location shown. Note: The decals may not be shown at actual size.**

**WARNING**

- Obtain a medical exam before beginning an exercise program.
- Inspect the machine before use. Do not use if machine appears damaged or inoperable.
- Keep body and clothing free and clear of all moving parts.
- Be certain that the weight pin is completely inserted.
- NEVER pin the weight stack in an elevated position. NEVER use the machine if found in this condition.
- INSPECT all cables, straps and their connections. Do not use if any component is found to be worn or damaged.
- Do not use dumbbells or other means to incrementally increase the weight resistance, other than those provided by the manufacturer.
- Do not allow children on machines. Machine use by teenagers must be supervised by a knowledgeable adult.
- This equipment to be used only under qualified supervision.
- Do not remove this label. REPLACE IF DAMAGED.

Decal 1
GZ7003

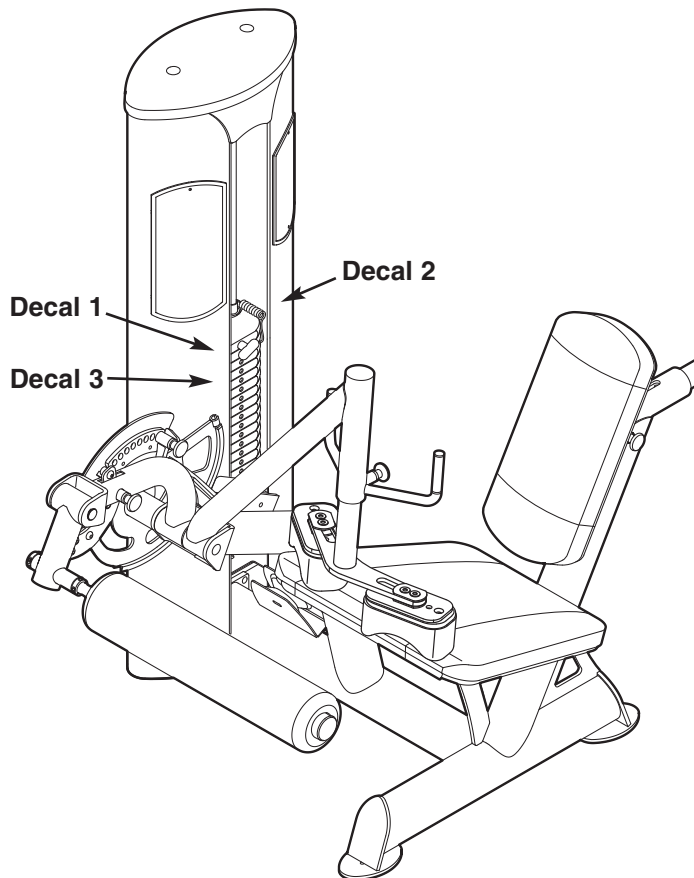

**CAUTION**



Weight selector pin must be fully inserted into the weight plate.

Decal 2
GZ7026

Decal 3
GZ7005

**CAUTION**

**KEEP AWAY FROM
MOVING PARTS. FAILURE
TO DO SO COULD RESULT
IN PERSONAL INJURY.**

7005-1199


BEFORE YOU BEGIN

Thank you for selecting the FREEMOTION® EPIC™ LEG CURL strength equipment. The strength equipment's stylish ergonomic design and never-before-seen features improve upon traditional strength training. The innovative features and quality construction provide a reliable product for your club. And the advanced solutions to isolating individual muscle groups make the LEG CURL strength equipment a key tool for members to reach their goals.

For your benefit, read this manual carefully before using the strength equipment. If you have questions

after reading this manual, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual. To help us assist you, please note the product model number and serial number before calling. The model number and the location of the serial number decal are shown on the front cover of this manual.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

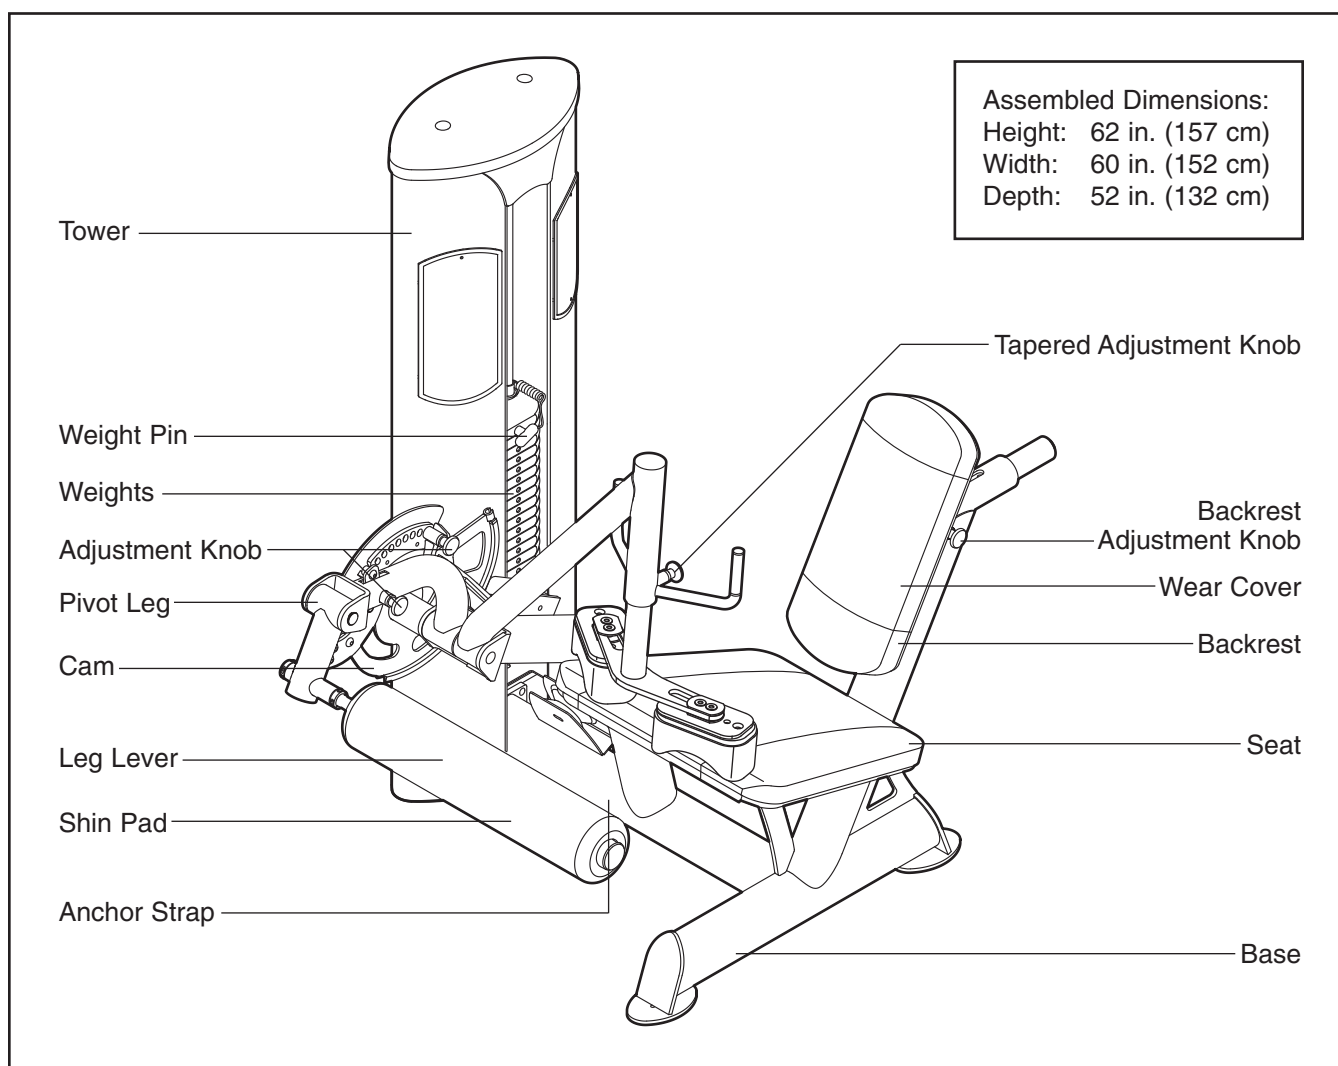


ADJUSTMENT

This section explains how to adjust the strength equipment. Make sure all parts are properly tightened each time the strength equipment is used. Replace any worn parts immediately.

ADJUSTING THE RESISTANCE

To change the amount of resistance for your workout, insert the weight pin into the desired weight. Make sure that the weight pin is fully inserted into the weight stack.

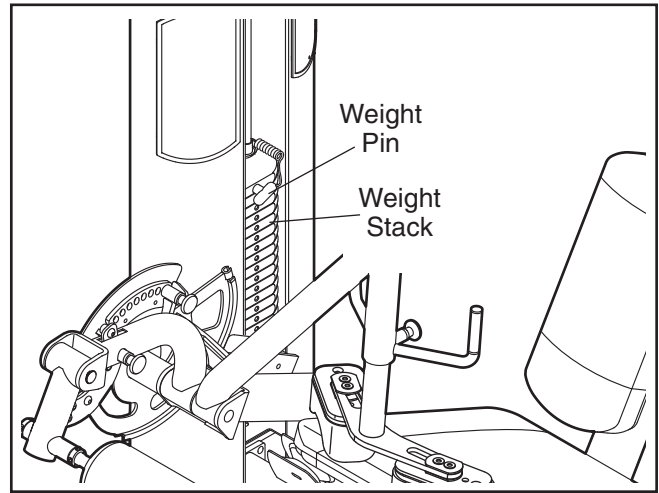


ADJUSTING THE LEG LEVER

To change the position of the pivot arm, hold it with one hand while pulling the adjustment knob out of the selector bracket. Move the pivot arm to the desired position, and reengage the adjustment knob into the selector bracket.


To change the position of the pivot leg, hold it with one hand while pulling the adjustment knob out of the pivot leg bracket. Move the pivot leg to the desired position, and reengage the adjustment knob into the pivot leg bracket.

⚠ WARNING: Always make sure that the adjustment knobs are fully engaged into the brackets before using the leg lever.

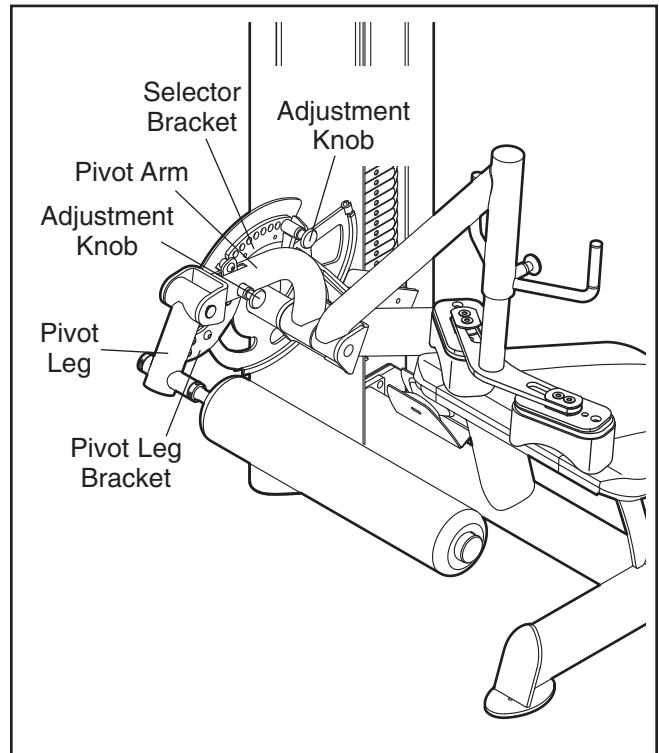


ADJUSTING THE BACKREST

To move the backrest forward, pull the backrest to the desired position. To move the backrest backward, pull the backrest adjustment knob, slide the backrest adjustment tube to the desired position, and reengage the backrest adjustment knob. **Make sure that the backrest adjustment knob is engaged in one of the adjustment holes in the backrest adjustment tube.**

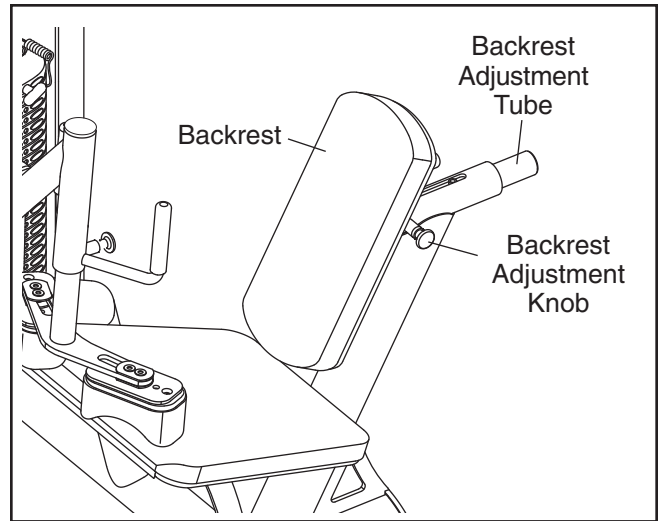

ADJUSTING THE THIGH PADS

Sit on the seat with your legs under the thigh pads. Pull the tapered adjustment knob and move the thigh pads so that they press firmly on your lower thighs. Then, reengage the adjustment knob.

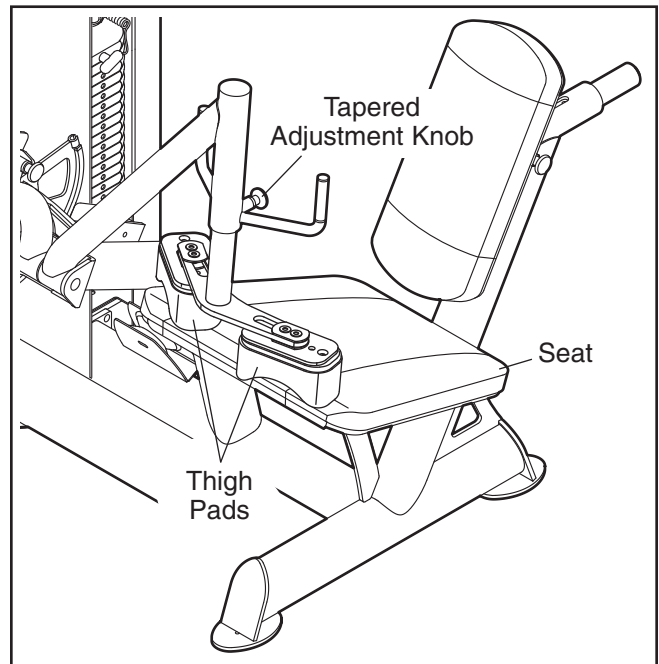

MAINTENANCE AND TROUBLESHOOTING

For optimal performance of the strength equipment and to reduce the chances of injury to users, you must perform preventive maintenance on a regular basis. Instruct all personnel to perform the procedures described in this section. Personnel must also record and report any accident. To maintain the strength equipment's warranty, use only FREEMOTION EPIC parts for repair or replacement. If there are any questions or concerns, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual.

DAILY MAINTENANCE

Upholstery and Frame—General Cleaning

1. Clean the strength equipment using a soft cloth dampened with a light solution of mild soap and warm water. If necessary, use a soft bristle brush with the cleaning solution.
2. Rinse the area thoroughly using a soft cloth dampened with clean water. Dry thoroughly.

Upholstery—Difficult Stains

1. Spray the stain with a non-abrasive household cleaner such as FORMULA 409® cleaner, SIMPLE GREEN®, or a similar product. Rub the stained area gently and let the cleaning solution sit for a few minutes.
2. Rinse the area thoroughly using a soft cloth dampened with clean water. Dry thoroughly.
3. Repeat these steps if necessary using a soft bristle brush.

Optional Method for Difficult Stains

1. Rub the stained area gently using a soft cloth dampened with rubbing alcohol.
2. Rinse the area thoroughly using a soft cloth dampened with clean water. Dry thoroughly.

CAUTION: When using any cleaning product, try it first in an unnoticeable place to ensure that there is no damage to the material. Follow the directions and the safety precautions of the manufacturer of each cleaning product used. FreeMotion Fitness and its vendors cannot be held liable for damage or injuries resulting from the use or misuse of cleaning products.

Important: Do not use abrasive cleaners, which may scratch the strength equipment. Strong cleaners and abrasives will damage decals; use caution around decals. Do not use solvents such as lacquer thinner, kerosene, gasoline, or similar liquids.

WEEKLY MAINTENANCE


Hardware

Check all nuts and bolts and tighten them as required.

Important: All FREEMOTION EPIC cushions have dense plywood supports with tee-nuts that are used to bolt the cushions to the strength equipment. Because the tee-nuts are held by the plywood, they will not withstand the torque that standard nuts and bolts will. When tightening the bolts securing a cushion, turn them only until they are snug and the cushion does not move or feel loose. Overtightening may strip the tee-nuts from the plywood and make it impossible to remove the cushion in the future.


Cables

1. Check each cable for proper tension (see CABLE ADJUSTMENT on page 9).
2. Check the entire length of each cable by slowly performing one repetition on the strength equipment; inspect the cable that is exposed on the exterior of the strength equipment and the cable inside the tower. Run your fingers along the cable, paying close attention at the bends and attachment points. Watch for the following conditions, which may indicate a worn cable in need of replacement:
 - A. a torn or split cable sheath that exposes the cable
 - B. a kinked or severely bent cable
 - C. a curled or twisted sheath
 - D. a stretched cable sheath, showing a thinning cross-section

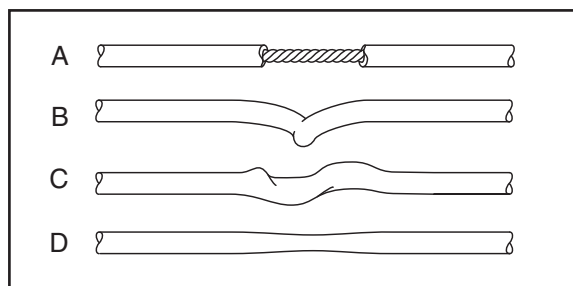

Cable Traps

Check the cable traps to ensure that they are not rubbing against the cables and that they are holding the cables in the grooves of the pulleys. If a cable trap is not correctly aligned, loosen the bolt slightly, readjust the cable trap as necessary, and retighten the bolt.

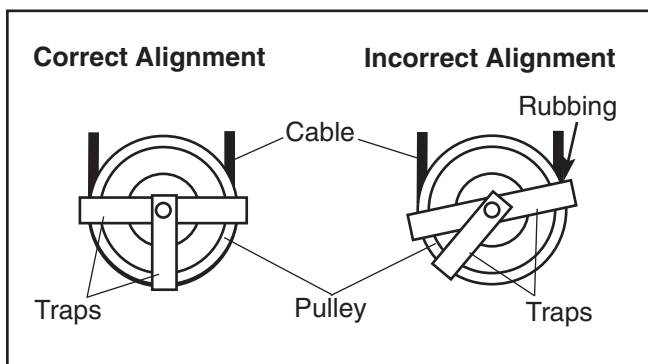

MONTHLY MAINTENANCE

Grips

Check the grips and replace them if needed.

WEIGHT GUIDE LUBRICATION

Clean and lubricate the full length of each weight guide by wiping it with a soft cloth containing a light-weight motor oil, 10W-40 or 10W-30 weight. Apply only a light coating over the entire length of the weight guide. **Do not use TEFLON®-based lubricants.**

CABLE ADJUSTMENT

For the strength equipment to function correctly, the cables must be tensioned correctly. To check the tension of the cables, insert the weight pin into the top weight. Next, slowly raise and lower the top weight by performing one repetition. The top weight should come to rest just on top of the next weight when the repetition is completed.

If there is too much tension on the cables, the top weight will not rest on the next weight, and it may be difficult to insert the weight pin into the weights. If there is not enough tension on the cables, the top weight will not be lifted immediately when the repeti-


tion is begun. Ideally, the cable should not move more than 1/2 in. (1.5 cm) from the resting position before the top weight is lifted.

If there is too much tension or not enough tension on a cable, adjust the cable as described in the following steps.


Tower Pulley Adjustment

Tools required: 5/16" hex key, 9/16" open end wrench

1. Lift the top weight off the weight stack and insert the weight pin into the next weight and the sixth hole from the top of the weight selector.

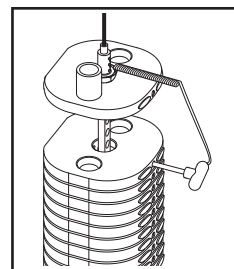

2. Loosen the locknut attaching the pulley to the bracket in the top of the tower.

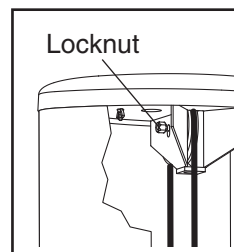


3. Move the pulley to the appropriate location in the bracket. If more slack is needed in the cable, move the pulley down. If less slack is needed in the cable, move the pulley up.
4. Make sure that the cable trap is properly oriented (see CABLE TRAPS at the left) and retighten the locknut attaching the pulley to the bracket.
5. Lift the top weight and remove the weight pin. Lower the top weight onto the next weight.
6. Readjust as necessary.
7. Slowly perform a repetition using a light load and have someone make sure that the cable is not derailed from a pulley or rubbing on a cable trap.

Top Weight Adjustment

Tools required: 5/32" hex key


1. If the cable needs to be shortened 3/4 in. (2 cm) or more, follow the instructions in steps 1 and 2 on page 9; then, go to step 2 below.
2. Lift the coupler cover from the top weight coupler. Loosen but do not remove the two set screws in each side of the weight coupler.
3. Pull the cable out of the top weight coupler. Determine the amount that the cable needs to be shortened, and cut that much off the end of the cable. **The cable must be long enough to be held by the set screws without lifting the top weight.**
4. Cut the cable to the desired length and strip 1 in. (2.5 cm) of the vinyl sheath from the cut end of the cable.
5. Insert the cable into the top weight coupler until all four set screws can be tightened against the cable. Tighten each set screw alternately 1/4 turn, until all are set to 85 inch/pounds (9.6 Newton-meters).
6. Lower the coupler cover over the top weight coupler.
7. Slowly perform a repetition using a light load and have someone make sure that the cable is not derailed from a pulley or rubbing on a cable trap.

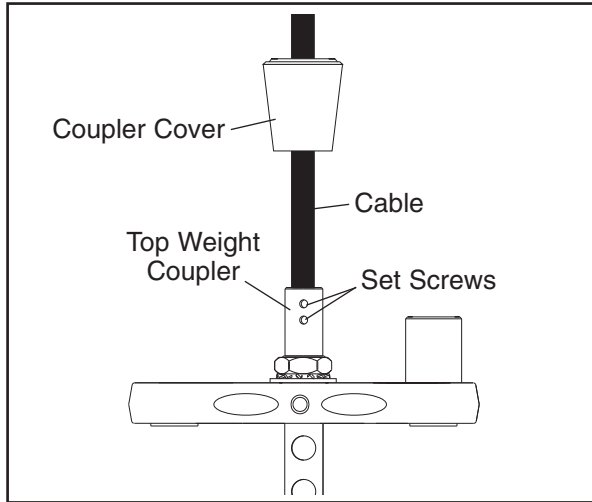

WEIGHT STACK SERVICING

Servicing the weight stack involves replacing the two guide bushings and the weight insert in the top weight. To order these parts, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual.

1. Remove the wingnuts under the tower cap and remove the tower cap from the tower.
2. Remove the nuts and washers from the top of each weight guide.
3. Lift the coupler cover and loosen the four set screws—this will release the cable.
4. Lift the weight guides out of the top of the tower.
5. Remove the nut, star washer, and washer from the top of the weight selector. Lift and rotate the top weight, and remove it through the front opening of the tower.
6. Use a punch to drive the two existing guide bushings and the weight insert out of the top weight.

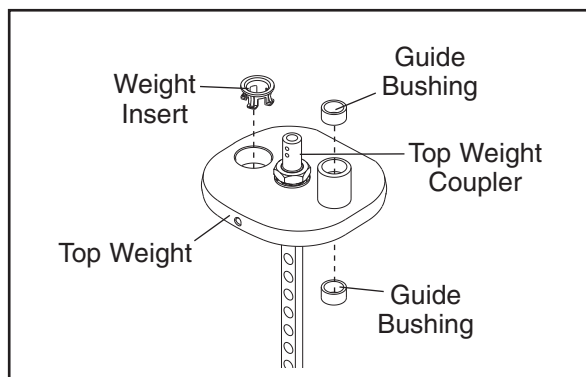

7. Hold one of the new guide bushings square to the face of one of the holes in the top weight, place a protective piece of wood on top of the guide bushing, and lightly tap the guide bushing until it is flush with the surface. **Insert the other guide bushing and the weight insert in the same way.**
8. Replace the top weight. Next, tighten the nut, star washer, and washer onto the weight selector.


9. Reattach the cable to the top weight coupler. Retighten the four set screws into the threaded holes. Tighten the set screws equally until they contact the cable. Then, tighten each screw alternately 1/4 turn, until all are set to 85 inch/pounds (9.6 Newton-meters).
10. Clean and lubricate the weight guides by wiping them with a soft cloth containing a lightweight motor oil, 10W-40 or 10W-30 weight. Apply only a light coating over the entire length. **Do not use TEFLON®-based lubricants.**
11. Reinsert the weight guides through the top of the tower and into the weight stack. Note: If the weight stack has shifted, use a short bar to realign the holes in the weights. Hold the weights while inserting the weight guides.

⚠ WARNING: Do not force the weight guides into the weights; doing so will damage the bushings and the weight inserts.

12. Reattach the weight guides to the top of the frame with the nuts and washers.
13. Insert the weight pin into the top weight. Slowly perform a repetition, lifting the top weight as far as possible. Then, slowly lower the top weight. If the top weight sticks, loosen the nut at the top of one of the weight guides. Slowly perform another repetition. Then, retighten the nut. Check the full travel again and readjust as necessary.
14. Slowly perform a repetition using a light load and have someone make sure that the cable is not derailed from a pulley or rubbing on a cable trap.
15. Replace the tower cap and retighten the wingnuts onto the bolts.

CABLE DIAGRAM

The cable diagram shows the proper route of the cable. Use the diagram to make sure that the cable and the cable traps have been assembled correctly. If the cable has not been correctly routed, the strength equipment will not function properly and damage may occur. The numbers show the correct route of the cable. **Make sure that the cable traps do not touch or bind the cable.**

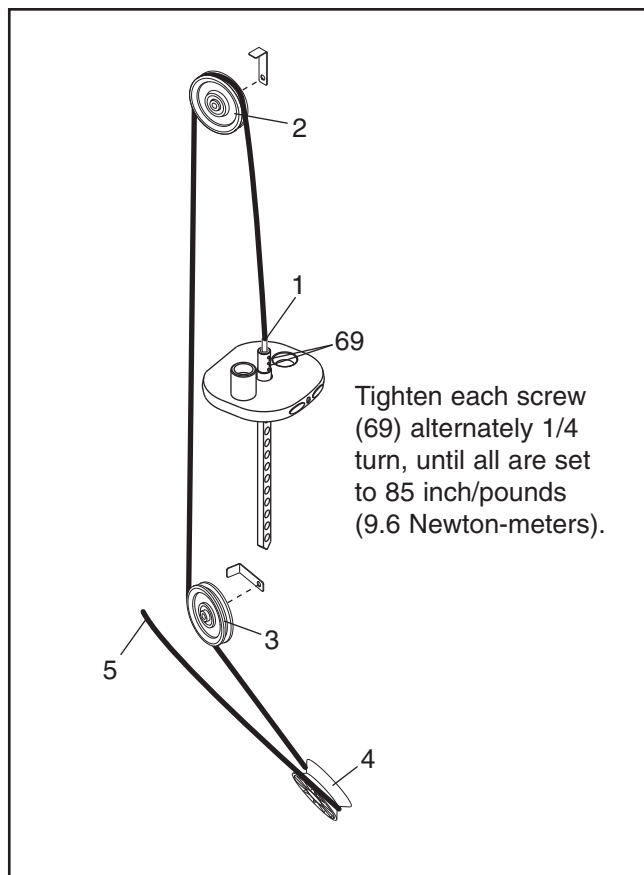

NOTES

PART LIST—Model No. GZFI8038.0

R0108A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Base	57	1	Short Pivot Rod
2	1	Tower	58	1	Leg Pivot Bracket
3	2	Weight Guide	59	2	"V"-pulley Bearing
4	1	Pivot Arm	60	1	Long Panel
5	1	Cam	61	1	Short Panel
6	1	Counterweight	62	1	Short Plate Frame
7	1	Selector Bracket	63	1	Cover
8	1	Pad Tube	64	1	Tower Cap
9	1	Handle	65	2	Wingnut
10	2	Thigh Pad	66	2	1/4" x 1" Button Bolt
11	1	Long Pivot Rod	67	4	Tower Foot
12	1	Backrest Adjustment Tube	68	12	3/8" x 1/2" Button Screw
13	1	Backrest Frame	69	4	Set Screw
14	1	Backrest	70	2	Trim
15	1	Seat	71	1	Selector Nut
16	1	Weight Selector	72	1	Star Washer
17	2	Small Weight Bumper	73	1	Selector Washer
18	19	10-pound Weight	74	1	Seat Wear Cover
19	2	Thigh Plate	75	1	Yellow Handle Collar
20	1	Top Weight	76	6	5/16" x 5/8" Button Screw
21	39	Weight Insert	77	4	5/16" Washer
22	2	Guide Bushing	78	1	Pivot Leg Endcap
23	2	Pulley	79	1	3/8" x 3/4" Yellow Button Screw
24	1	"V"-pulley	80	1	Coupler Cover
25	2	Cable Trap	81	8	3/8" Serrated Washer
26	2	3/4" Washer	82	1	Long Plate Frame
27	4	Rivet	83	1	Anchor Strap
28	1	Cable	84	1	Tapered Adjustment Knob
29	6	1" Bearing	85	4	Aluminum Spacer
30	4	Pivot Stop	86	2	Bushing
31	2	Spacer	87	2	Handle Endcap
32	5	1" Nylon Washer	88	5	3/8" x 1 1/4" Bolt
33	2	Adjustment Knob	89	4	Weight Guide Washer
34	2	Handgrip	90	1	Thigh Post
35	2	Base Foot	91	1	Backrest Wear Cover
36	1	Large Bumper	92	4	1" Snap Ring
37	6	3/8" Nylon Locknut	93	4	3/8" x 1" Flathead Screw
38	4	3/8" x 2" Bolt	94	3	Teflon Tape
39	1	Roll-pin Bushing	95	4	Weight Guide Nut
40	1	Small Tube Bushing	96	1	1/4" x 1 1/4" Roll Pin
41	1	Backrest Handle	97	1	Small Roll Pin Cover
42	1	Large Tube Bushing	98	1	Bungee Cord
43	4	3/8" x 1" Non-patch Bolt	99	2	Bungee Tie
44	4	Slide Plate	100	2	3/8" Jamnut
45	1	Handle Cap	101	1	Access Panel
46	1	3/8" x 2 1/2" Bolt	102	1	Panel Gasket
47	1	3/8" x 2 1/4" Non-patch Bolt	103	6	1/4" x 3/4" Bolt
48	4	3/8" x 1" Bolt	104	6	1/4" Cage Nut
49	2	1/2" x 1 1/4" Bolt	105	2	Handle Collar
50	1	Weight Pin	106	1	Yellow Handle Endcap
51	2	3/8" x 5/8" Button Bolt	107	12	#10 x 1/8" Set Screw
52	2	Pivot Bushing	108	1	Backrest Adjustment Knob
53	4	Bumper	109	1	Roll Pin
54	1	Round Outer Cap	*	—	Technical Sheet/Sleeve
55	1	Pivot Leg	*	—	Owner's Manual
56	1	Shin Pad			

Note: Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts. *These parts are not illustrated.

R0108A



HOW TO CONTACT CUSTOMER CARE

If you have questions after reading this manual, or if you require assistance, please contact Customer Care at the address and phone number listed below. Please be prepared to give the following information:

- the MODEL NUMBER of the product (GZFI8038.0)
- the NAME of the product (FREEMOTION EPIC LEG CURL strength equipment)
- the SERIAL NUMBER of the product (see the front cover of this manual)

When ordering replacement parts, please also give the KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST and the EXPLODED DRAWING on pages 14 and 15).

Customer Care: 1-800-201-2109, Monday–Friday, 8 a.m.–5 p.m. Mountain Time
FreeMotion Fitness, Inc. • 1096 Elkton Dr., Suite 600 • Colorado Springs, CO 80907