


FREEMOTION®

Plate Loaded Squat

Model No. GZPL40110

Serial No. _____

Write the serial number in the space above for future reference.

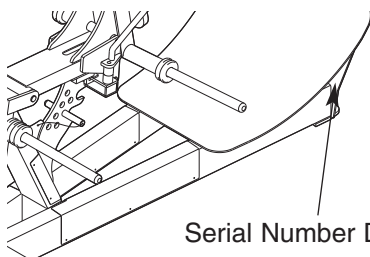

Serial Number Decal

QUESTIONS?


As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if there are missing parts, we will guarantee complete satisfaction through direct assistance from our factory.

TO AVOID DELAYS, PLEASE CALL DIRECT TO OUR TOLL-FREE CUSTOMER HOT LINE. The trained technicians on our customer hot line will provide immediate assistance, free of charge.

CUSTOMER HOT LINE:

1-800-201-2109

Mon.–Fri., 8 a.m.–5 p.m. MST

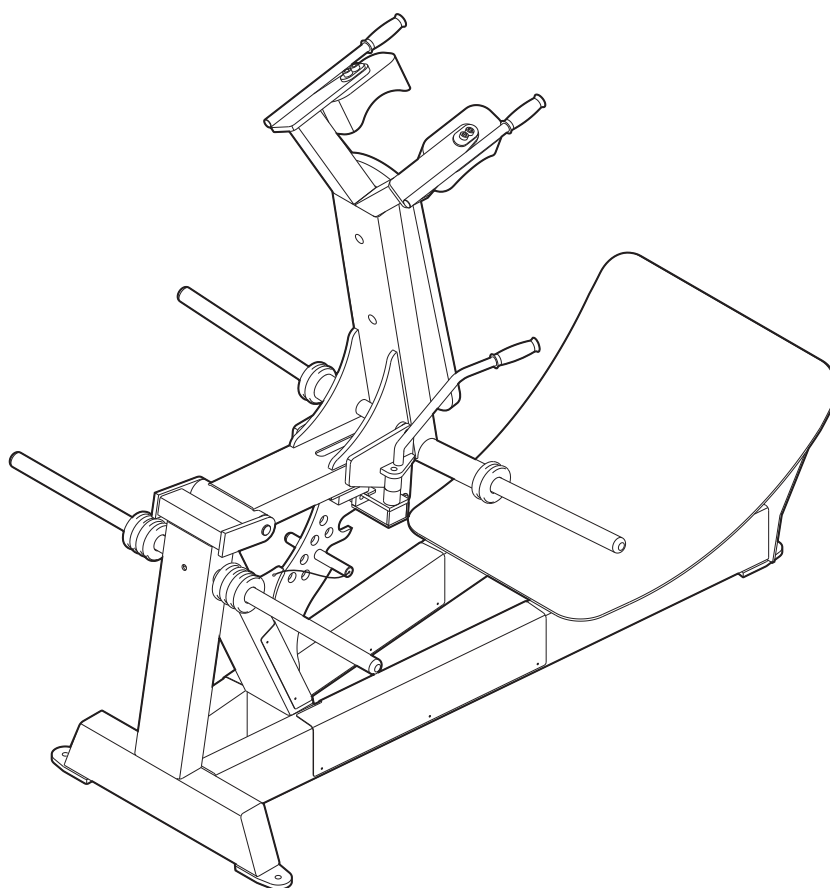

OWNER'S MANUAL

CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.



Visit our website at

www.freemotionfitness.com

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS	3
WARNING DECAL PLACEMENT	4
BEFORE YOU BEGIN	5
ADJUSTMENTS	6
MAINTENANCE	7
PART LIST	8
EXPLODED DRAWING	9
WARRANTY TERMS AND CONDITIONS	10
ORDERING REPLACEMENT PARTS	Back Cover

IMPORTANT PRECAUTIONS

⚠ WARNING: To reduce the risk of serious injury, read the following important precautions before using the strength machine.

1. Read all instructions in this manual before using the strength machine. Use the strength machine only as described in this manual.
2. It is the purchaser's responsibility to ensure that there is enough space around the strength machine for the intended exercise. Do not crowd the strength machine.
3. Using the four 9/16" anchor holes to provide maximum stability, the strength machine must be anchored to the floor where required or whenever possible.
4. It is the responsibility of the owner to ensure that all users of the strength machine are adequately informed of all precautions.
5. All users of the strength machine should be instructed to report any injury or strength machine irregularity to facility staff immediately.
6. Keep children under 12 and pets away from the strength machine at all times.
7. Use the strength machine only on a level surface. Cover the floor beneath the strength machine to protect the floor.
8. Always wear athletic shoes for foot protection while exercising.
9. Keep hands and feet away from moving parts. Do not lean on or rest your hands on the strength machine when it is in use.
10. Make sure all parts are properly tightened before each use of the strength machine. Replace any worn parts immediately.
11. Always place an equal amount of weight on each weight bar. Note: The strength machine does not include weights.
12. The strength machine is designed to support a maximum user weight of 350 pounds. Do not place more than 450 pounds on each weight bar, or on each side of the storage bar. Always place an equal amount of weight on each weight bar.
13. Always make sure the safety stop is inserted into the proper hole in the base for the user, so that the safety stop will not allow the frame to be lowered enough to trap the user.
14. If you feel pain or dizziness at any time while exercising, stop immediately and begin cooling down.


⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

WARNING DECAL PLACEMENT

The decals shown below have been placed on the strength machine in the locations shown. If a decal is missing or illegible, please call our Customer Service Department toll-free at 1-800-201-2109, Monday through Friday, 8 a.m. until 5 p.m. Mountain Time, to order a free replacement decal. Apply the decal in the location shown.




Decal 1
Shown at 65%
PN GZ7045

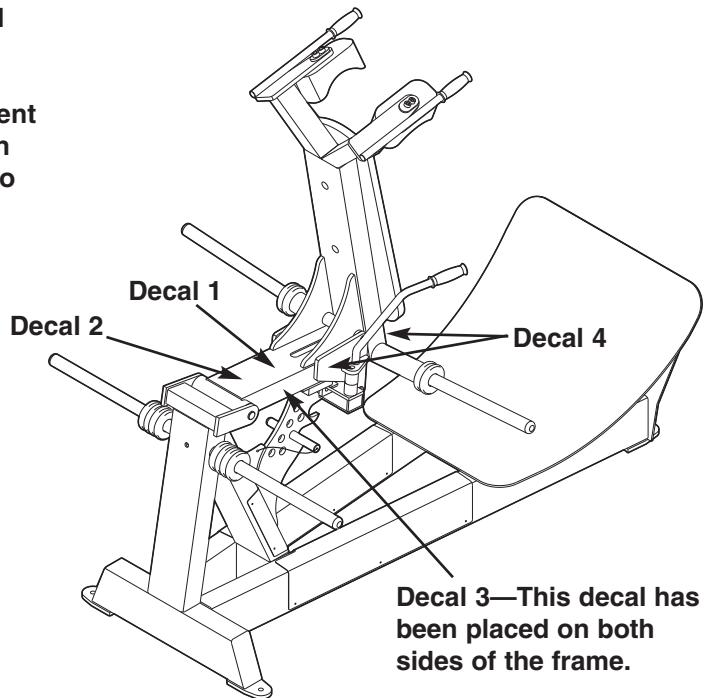

Decal 3—This decal has been placed on both sides of the frame.


Decal 2
Shown at 60%

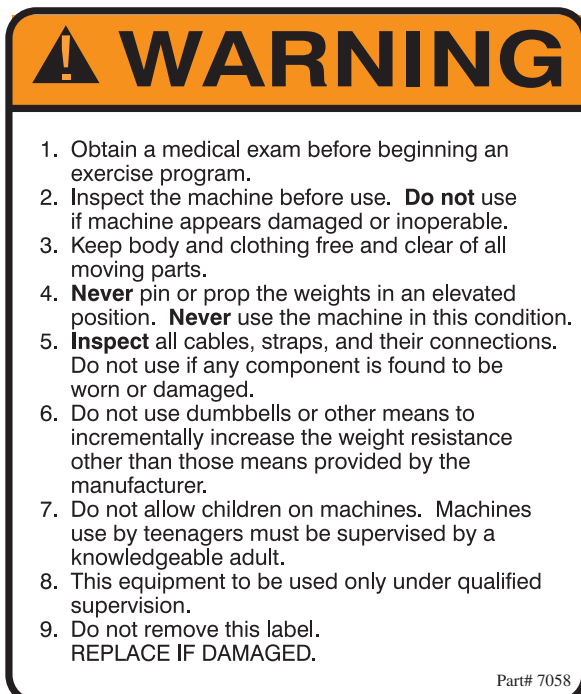

Decal 3



Decal 4
Shown at 65% PN GZ7044

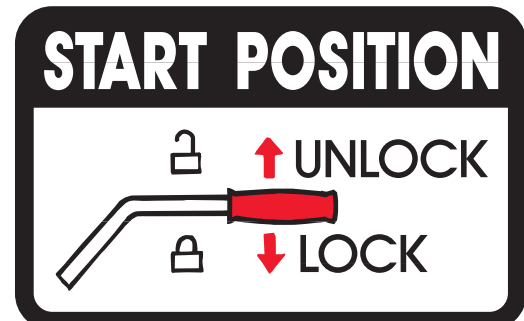


BEFORE YOU BEGIN

Thank you for selecting the FREEMOTION® PLATE LOADED SQUAT strength machine. With unrestricted motion, you can work your body's muscle groups together—the same way you do in real life—and train more specifically and efficiently. Whether your goal is to tone your body, build dramatic muscle size and strength, improve your cardiovascular system, or train muscles for precise patterns of movement, the PLATE LOADED SQUAT strength machine will help you to achieve the specific results you want.

For your benefit, read this manual carefully before using the strength machine. If you have additional

questions, please call our Customer Service Department toll-free at 1-800-201-2109, Monday through Friday, 8 a.m. until 5 p.m. Mountain Time (excluding holidays). To help us assist you, please note the product model number and serial number before calling. The model number is GZPL40110. The serial number can be found on a decal attached to the strength machine (see the front cover of this manual).

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

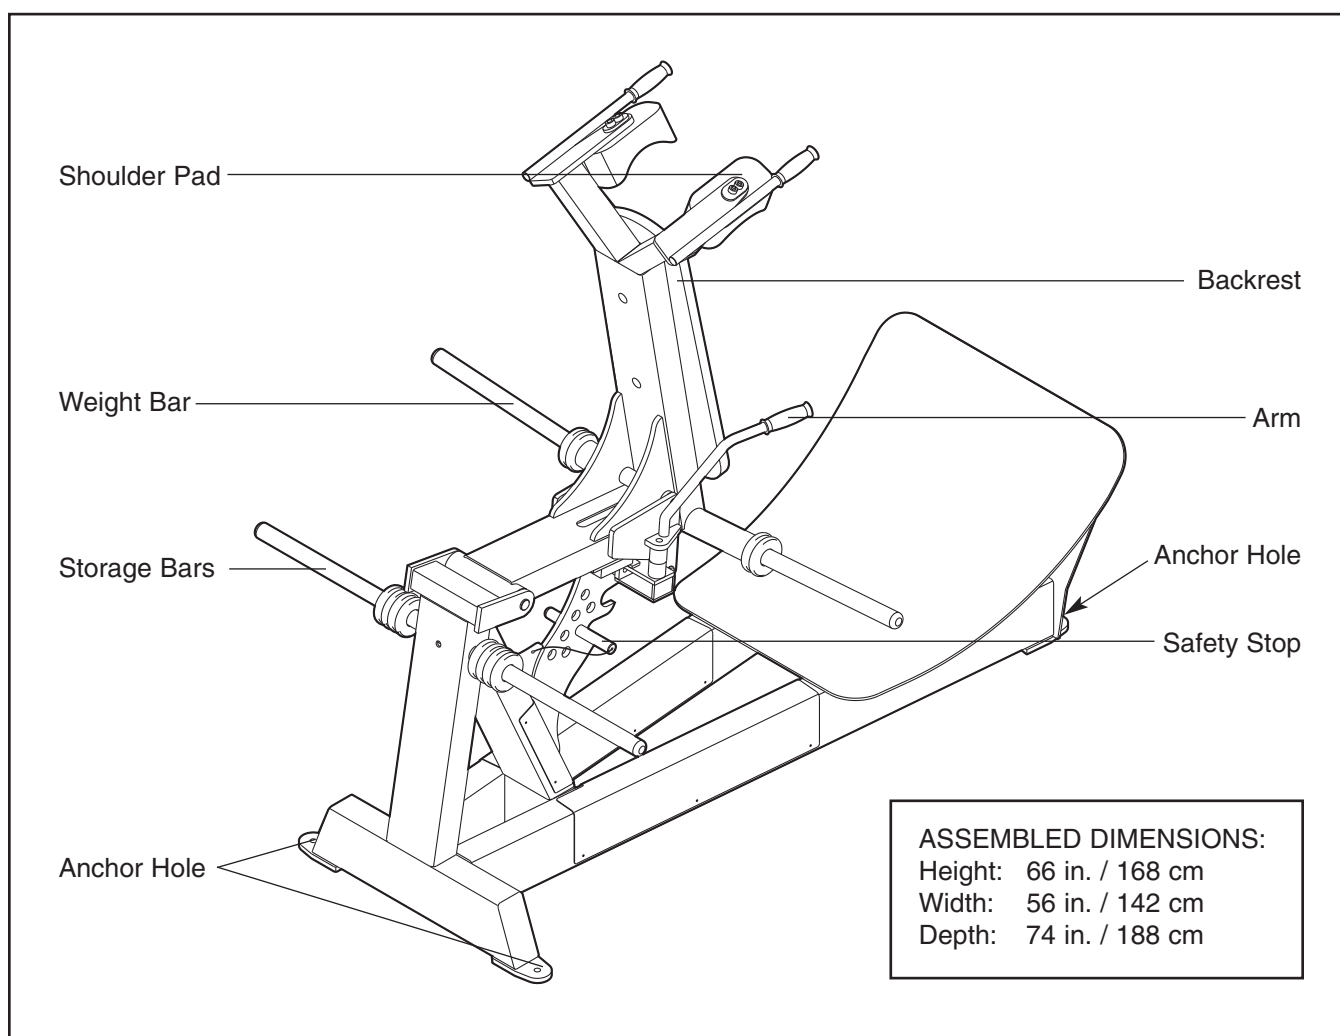

ADJUSTMENTS

This section explains how to adjust the strength machine for exercising. Make sure all parts are properly tightened each time the strength machine is used. Replace any worn parts immediately.

ADDING WEIGHTS TO THE WEIGHT ARM

To add resistance to your workout, slide an equal amount of weight (not included) onto each Weight Bar (7). Make sure that the weights are pushed against the Bumper Rings (23).

Store unused weights on the Storage Bar (8). The Storage Bar can hold up to 500 pounds on each side.

⚠ WARNING: Do not place more than 450 pounds on each Weight Bar (7), or more than 900 pounds on the Storage Bar (8). Always place an equal amount of weight on each Weight Bar.

SETTING UP THE STRENGTH MACHINE



Move the Safety Stop (13) to a hole in the Base (1) that will allow the squat exercise to be performed, but not allow the user to become pinned under the Shoulder Pads (4) if a repetition cannot be completed.

Stand on the deck with your back against the Backrest (3). Lift the Shoulder Pads (4) to disengage the locking mechanism.

Important: The user's feet should be close enough to the lower edge of the deck that the lower back does not move away from the Backrest (3) as the Frame (2) is lowered. Shorter users should stand closer to the lower edge of the deck than taller users. Improper positioning of the feet will cause discomfort in the lower back.

⚠ WARNING: Do not lower the Frame (2) to a position that causes the lower back to move away from the Backrest (3).

When finished with the exercise, push down on the Release Arm (5) while lowering the Frame (2), until the locking mechanism is fully engaged.

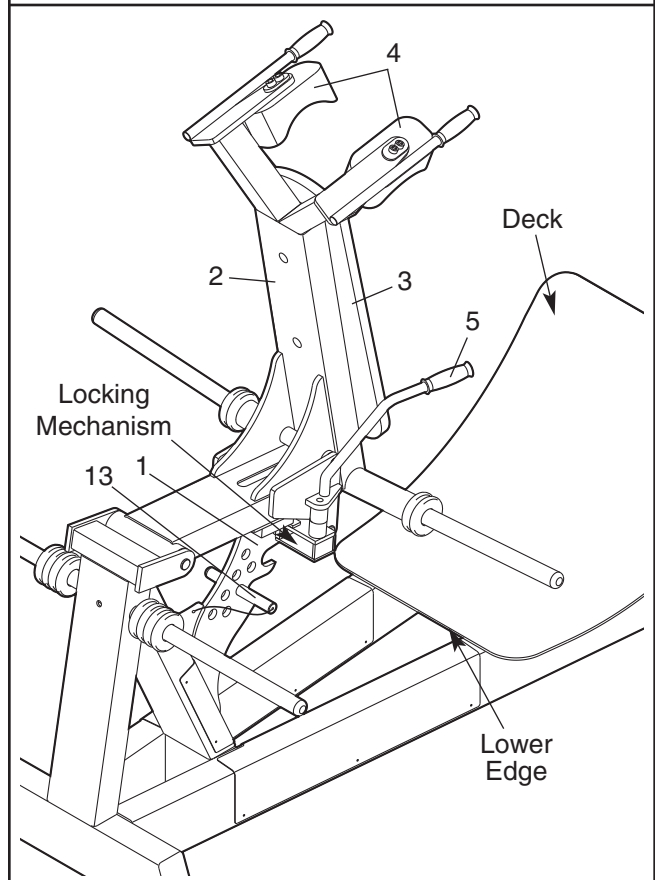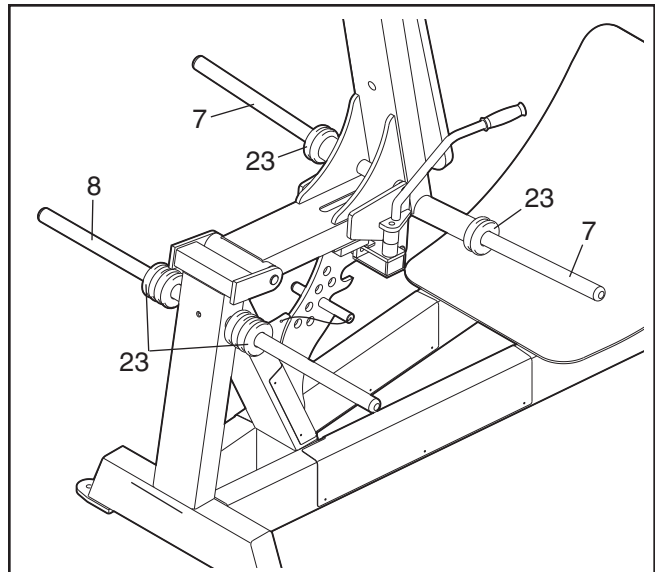

MAINTENANCE

It is important for safe and trouble-free operation of your FreeMotion Fitness® strength equipment to perform routine preventative maintenance on a regular basis. Make sure that all parts are properly tightened each time the strength machine is used. Replace any worn parts immediately. The strength machine can be cleaned with a damp cloth and a mild, non-abrasive detergent. Do not use solvents.

Note: Instruct all personnel to perform equipment inspection and maintenance requirements. Personnel must record and report any accident. Contact FreeMotion Fitness Customer Service at 1-800-201-2109 with any questions or concerns.

Use only original FreeMotion Fitness parts for repair or replacement to maintain your machine's warranty.

FreeMotion Fitness recommends the following procedures:

SCHEDULED MAINTENANCE

DAILY

1. Upholstery—General cleaning:

- Wipe using a soft cloth dampened with a light solution of household dish detergent and warm water.
- If necessary, use a soft bristle brush with the cleaning solution.
- Always remove the cleaning solution using a cloth dampened with clean water. Rinse often.

2. Upholstery—Difficult stains:

- Spray the stain with a non-abrasive household cleaner such as FORMULA 409® cleaner, SIMPLE GREEN®, or a similar product.
- Rub the area gently and let it sit for a few minutes.
- Rinse thoroughly using a clean, water-dampened cloth.
- Repeat if necessary using a soft bristle brush.

Optional method for difficult stains:

- Rub the area gently using a soft cloth dampened with rubbing alcohol.
- Rinse thoroughly using a water-dampened cloth to remove alcohol residue.

CAUTION: When using any cleaning product, try it first in an inconspicuous place to ensure there is no damage to the material. Follow directions and adhere to safety precautions of each manufacturer of cleaning agent used. FreeMotion Fitness and its vendors cannot be held liable for damage or injuries resulting from the use or misuse of cleaning products.

3. Frames:

- Wipe with a light solution of mild soap and warm water. Rinse and dry thoroughly.

Important: Do not use abrasive cleaners because they may scratch the equipment. Strong cleansers and abrasives will damage decals. Use caution around decals. Do not use solvents such as lacquer thinner, kerosene, gasoline, or similar liquids.

4. Stainless Steel Covers:

- Wipe with a light solution of mild soap and warm water. Rinse and dry thoroughly.
- If desired, or to remove corrosion, use available commercial stainless steel polishing compounds. Follow manufacturers' instructions.

WEEKLY

1. Hardware:

- Check all nuts and bolts. Tighten them as required.

MONTHLY OR AS REQUIRED

1. Grips:

- Check and replace as needed.

2. Pivoting Shafts:

- Check to ensure the retainer rings are in place on both ends of the shafts.

3. Weight Bars:

- Check to ensure that the bolts are tight and the bars are secure.

CUSHION ATTACHMENT

Important: All FreeMotion Fitness® cushions are fabricated using dense plywood with tee-nuts installed for bolting to the machine framework. Because these tee-nuts are held by the plywood, they will not withstand the torque that standard nuts and bolts will. Therefore, when tightening the cushion bolts, turn them only until

they are snug and the cushion does not move or feel loose. Overtightening may strip the tee-nuts from the plywood and make it impossible to remove the cushion in the future.

PART LIST—Model No. GZPL40110


R0204A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Base	23	10	Bumper Ring
2	1	Frame	24	2	1" Hole Plug
3	1	Backrest	25	2	1/2" x 4 1/2" Bolt
4	2	Shoulder Pad	26	3	1/2" Nylon Locknut
5	1	Release Arm	27	4	1" Small Nylon Washer
6	1	Arm Plate	28	8	3/8" x 1 1/4" Bolt
7	2	Weight Bar	29	4	Nylon Spacer
8	1	Storage Bar	30	4	Spacer
9	1	Right Base Cover	31	8	3/8" Washer
10	1	Left Base Cover	32	2	Shoulder Pad Plate
11	1	Right Cover	33	4	3/8" x 1 Flat Head
12	1	Left Cover	34	4	1" Bushing
13	1	Safety Stop	35	1	Cam
14	2	Bumper	36	1	1/2" x 3" Bolt
15	1	Long Pivot Bar	37	1	Tether
16	2	Short Pivot Bar	38	2	1/4" x 3/8" Screw
17	1	Red Handle	39	2	1" Large Nylon Washer
18	2	Black Handle	40	4	3/8" Serrated Washer
19	4	Spacer	41	2	3/8" x 1 Bolt
20	1	Locking Box	42	6	1" Retainer Ring
21	18	Rivet	43	2	1" Bearing
22	3	1/2" x 1 1/4" Bolt	#	1	Owner's Manual

Note: “#” indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts.

EXPLODED DRAWING—Model No. GZPL40110

R0204A

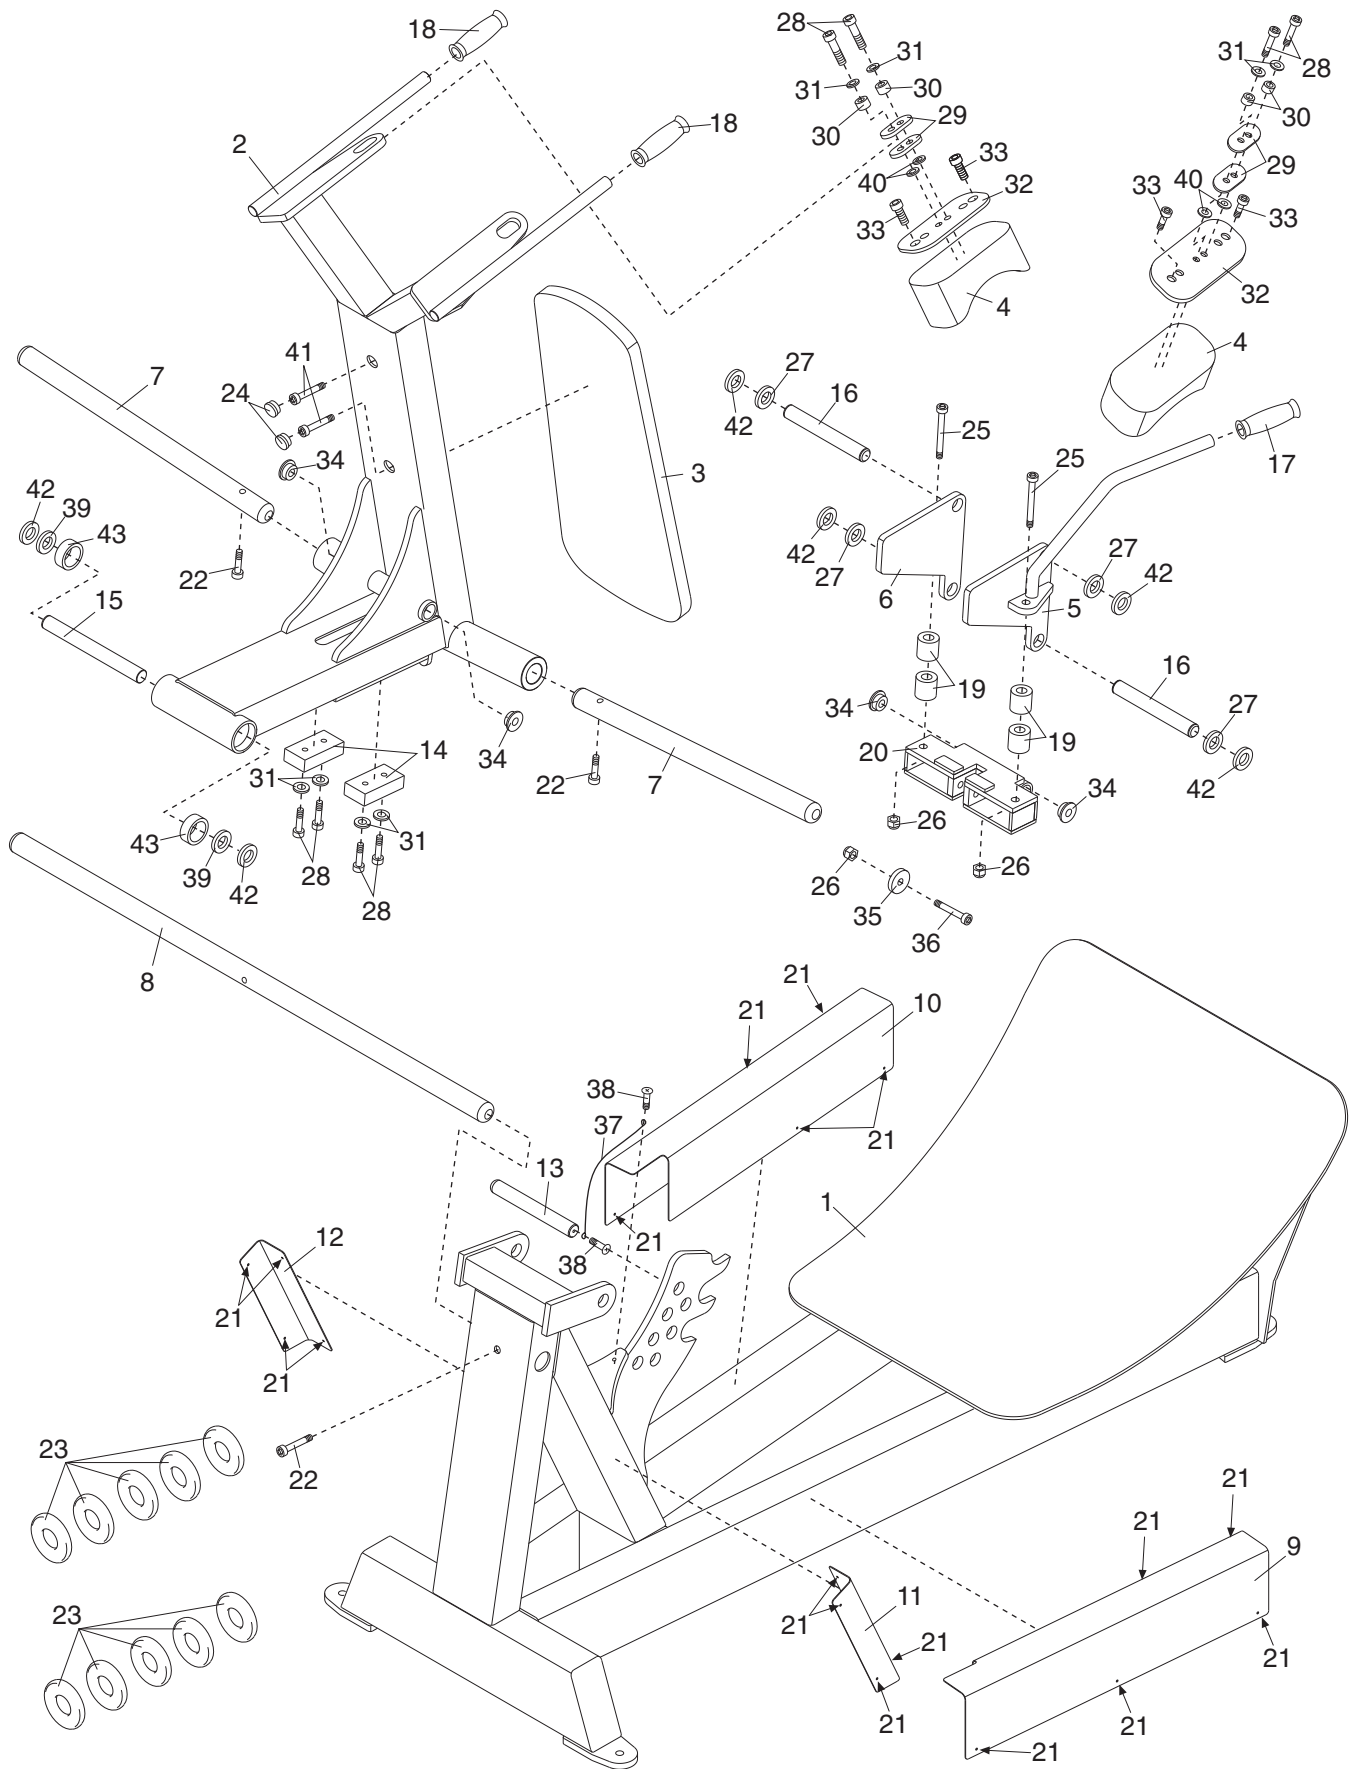

WARRANTY TERMS AND CONDITIONS

Limited Warranty on Commercial Equipment

FreeMotion Fitness, Inc. warrants that all new equipment will be free of manufacturing defects in workmanship and materials, becoming effective at the date of original installation. Parts repaired or replaced under the terms of this warranty will be warranted for the remainder of the original warranty period only. Labor must be performed at a FreeMotion Fitness commercial service facility or by a FreeMotion Fitness authorized commercial service provider.

Terms and Conditions of Coverage

1. Warranty applies only while:
 - (A) it remains in the possession of the original purchaser and proof of purchase is demonstrated,
 - (B) it has not been subject to accident, misuse, abuse, improper service, or modification, and
 - (C) claims are made within the warranty period.
2. All coverage is provided by specific Product according to the guidelines listed below.
3. If the Product or any covered part must be returned to a service facility for repairs, We, FreeMotion Fitness, Inc., will pay all transportation and insurance charges for the first year. We must approve transportation and insurance previous to shipping. You are responsible for transportation and insurance charges during the remaining years.
4. We will ship to you any new or rebuilt replacement part or component, or, at our option, replace the Product. Such replacement parts are warranted for the remaining portion of the original warranty period.
5. This warranty does not cover damage or equipment failure caused by failure to provide reasonable and necessary maintenance as outlined in the owner's manual. Any failures or damage caused by unauthorized service, misuse, accident, negligence, improper assembly or installation, debris resulting from any destruction activities in the Product's environment, rust or corrosion as a result of the Product's location, alterations or modifications without written authorization, or by failure on your part to use, operate, and maintain the Product as set in your owner's manual will void this warranty. **All terms of this warranty are void if this Product is moved beyond the continental borders of the United States of America (excluding Alaska, Hawaii, and Canada) and are then subject to the terms provided by that country's local authorized FreeMotion Fitness representative.**
6. During the labor period, FreeMotion Fitness, Inc. compensates Servicers for warranty trips within their normal service area to repair Product at the consumer's location. You may be charged a trip charge outside the service area.
7. FreeMotion Fitness, Inc. Limited Warranty service may be obtained by contacting Customer Care at 1-800-201-2109.
8. Product limited warranty is void when Product is installed in a country other than where sold.

Limited warranty does not apply to:

1. Repairs performed on Product with missing, altered, or defaced serial numbers.
2. Service calls to correct installation of the Product or instruct owners on how to use the Product.
3. Repair pick-up, delivery, or freight charges other than specified above.
4. Any labor costs incurred beyond the applicable labor warranty period.

Limited Warranty

Parts are warranted to be free from defects in materials and workmanship for the duration of the warranty period as described below. Labor is warranted for one year except for upholstery and grips.

- 10 years: Structural frame
- 3 years: Bearings, guide rods, pulleys, cams, weight stacks
- 1 year: Cables
- 120 days: Upholstery, grips, selector pins, knobs, decals

Your Responsibility

Retain proof of purchase; use, operate, and maintain the Product as specified in the Owner's Manual; notify Customer Care of any defect within 10 days after discovery of the defect; if instructed, return any defective part for replacement, or, if necessary, the entire Product for repair.

Owner's Manual

It is very important that you read the Manual before operating the Product. Remember to perform the periodic maintenance requirements specified in the Manual to assure proper operation and your continued satisfaction.

Receipt of Parts and Service

Simply call Customer Care toll-free at 1-800-201-2109, Monday through Friday from 8 a.m. to 5 p.m. Mountain Time, and give your name, address, and the serial number of your Product. A representative will tell you how to get a replacement part, or, if necessary, arrange for service where your Product is located or advise you on how and where to ship the Product for service.

Before Shipping:

1. Obtain a Return Authorization Number (RA#) from Customer Care.
2. Securely pack your Product.
3. Write the RA# on the outside of the carton.
4. Insure the Product.
5. Include a letter explaining the defect or problem and a copy of your proof of purchase if you believe the service is covered by warranty.

Exclusive Warranty

FreeMotion Fitness, Inc. is not responsible or liable for indirect, special, or consequential damages arising out of, or in connection with, the use or performance of the Product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal or installation, or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you. The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

Unauthorized Changes to Warranty

No one is authorized to change, modify, or extend the terms of this limited warranty.

State Laws

This warranty gives you specific legal rights and you may have other rights which vary from state to state.

ORDERING REPLACEMENT PARTS

To order replacement parts, simply call our Customer Service Department toll-free at 1-800-201-2109, Monday through Friday, 8 a.m. until 5 p.m. Mountain Time (excluding holidays). To help us assist you, please be prepared to give the following information:

- The MODEL NUMBER of the product (GZPL40110)
- The NAME of the product (FREEMOTION® PLATE LOADED SQUAT strength machine)
- The SERIAL NUMBER of the product (see the front cover of this manual)
- The KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST and EXPLODED DRAWING on pages 8 and 9 of this manual)