

IMAGE[®]

Outdoor Sports Bar

Model No. IMKSBB040

QUESTIONS?

If you have questions, or if there are missing parts, we will guarantee complete satisfaction through direct assistance from our factory.


TO AVOID DELAYS, PLEASE CALL DIRECT TO OUR TOLL-FREE CUSTOMER HOT LINE. The technicians on our customer hot line will provide immediate assistance, free of charge.

CUSTOMER HOT LINE:

1-877-897-7493

Mon.–Fri., 8 a.m.–5 p.m. CST

USER'S MANUAL

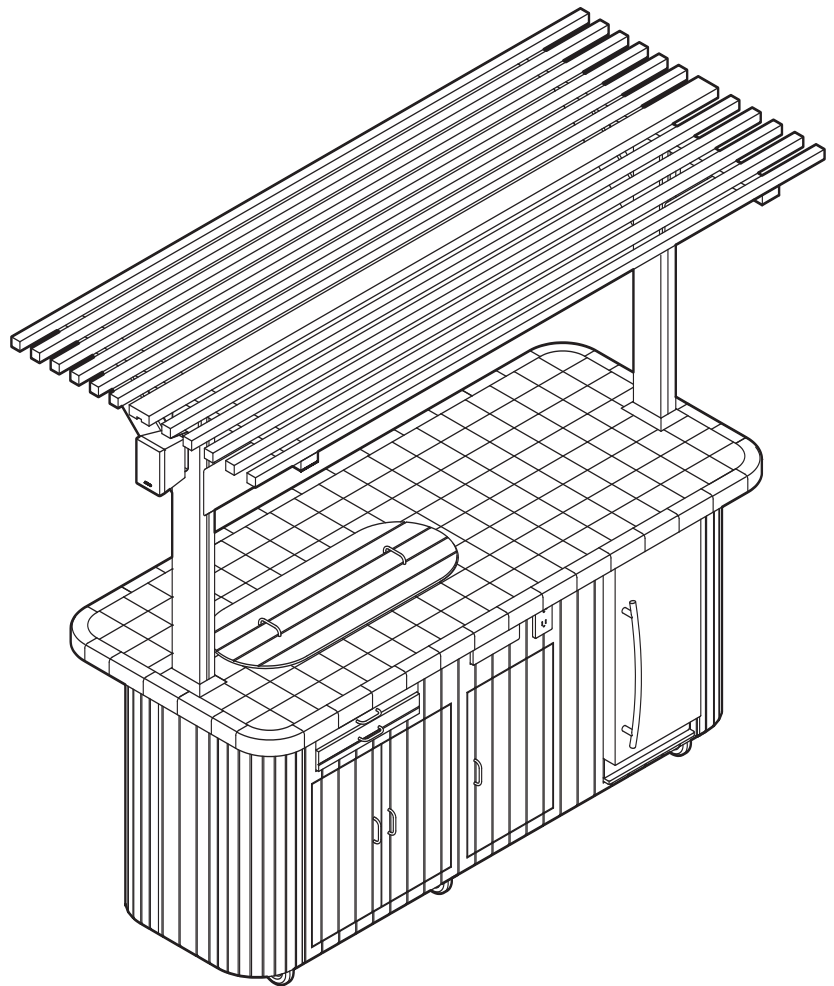

CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.



Visit our website at

www.imagefitness.com

*new products, prizes,
fitness tips, and much more!*

Table of Contents

Important Safety Instructions	3
Before You Begin	4
Grounding Instructions	5
Choosing a Location for the Sports Bar	6
Using and Maintaining the Sports Bar	6
Ordering Replacement Parts	Back Cover
Limited Warranty	Back Cover

Important Safety Instructions

⚠ WARNING: To reduce the risk of fire, electric shock, or serious injury, read and follow these important safety instructions before using the sports bar.

1. It is the responsibility of the owner to ensure that all users of the sports bar are adequately informed of all precautions.
2. The sports bar is intended for home use only. Do not use the sports bar in a commercial rental, or institutional setting.
3. The sports bar weighs approximately 750 pounds. Make sure that the location selected for the sports bar will support this weight.
4. Park the sports bar only on a level surface.
5. Set the casters in the locked position at all times except when moving.
6. Inspect and tighten all parts regularly.
7. **DANGER**—Do not operate electrical equipment in wet conditions. Make sure that all electrical equipment is dry before operating.
8. **DANGER**—To reduce the risk of electric shock, always unplug the sports bar from the electrical outlet before cleaning.
9. **WARNING**—Risk of Electric Shock—Connect the power cord to a properly grounded outlet only. See Grounding Instructions on page 5.
10. Unplug the power cord from the outlet before putting on or taking off parts.
11. To disconnect the power cord, turn all controls to the off position, and then remove the plug from outlet.
12. Keep the power cord away from heated surfaces.
13. Never operate the sports bar if it has a damaged power cord or plug, if it is not working properly, if it has been dropped or damaged, or if it has been dropped into water. Call our Customer Service Department toll-free at 1-877-897-7493.
14. **WARNING**—The Ground Fault Circuit Interrupter (GFCI) must be tested before each use. To test the GFCI, press the “test” button while the lights on the sports bar are turned on. The lights should shut off. Press the “reset” button. The lights should turn on. If the lights continue to be lit after the “test” button is pressed, the GFCI is damaged. Do not use the sports bar until the GFCI has been repaired or replaced by a qualified electrician.
15. Do not let children play, sit, or stand on the ceramic top.
16. Close supervision is necessary when the sports bar is used by or near children, invalids, or disabled persons.
17. Use the sports bar only for its intended use as described in this manual. Read all instructions in this manual before using the sports bar. Do not use attachments not recommended by the manufacturer.
18. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
19. When loading, always place heavier items on the bottom and lighter items near the top to help prevent the possibility of the sports bar from tipping over.

⚠ WARNING: Read all instructions before using the sports bar. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.


SAVE THESE INSTRUCTIONS

Before You Begin

Congratulations for selecting the IMAGE® Outdoor sports bar for your entertainment. The sports bar allows you to enjoy all the benefits of an outdoor bar in the comfort and privacy of your back yard.

For your benefit, read this manual carefully before using the sports bar. If you have questions after read-

ing this manual, please call our Customer Service Department toll-free at 1-877-897-7493, Monday through Friday, 8 a.m. until 5 p.m. Central Time (excluding holidays). To help us assist you, please mention the product model number when calling. The model number is IMKSBB040.

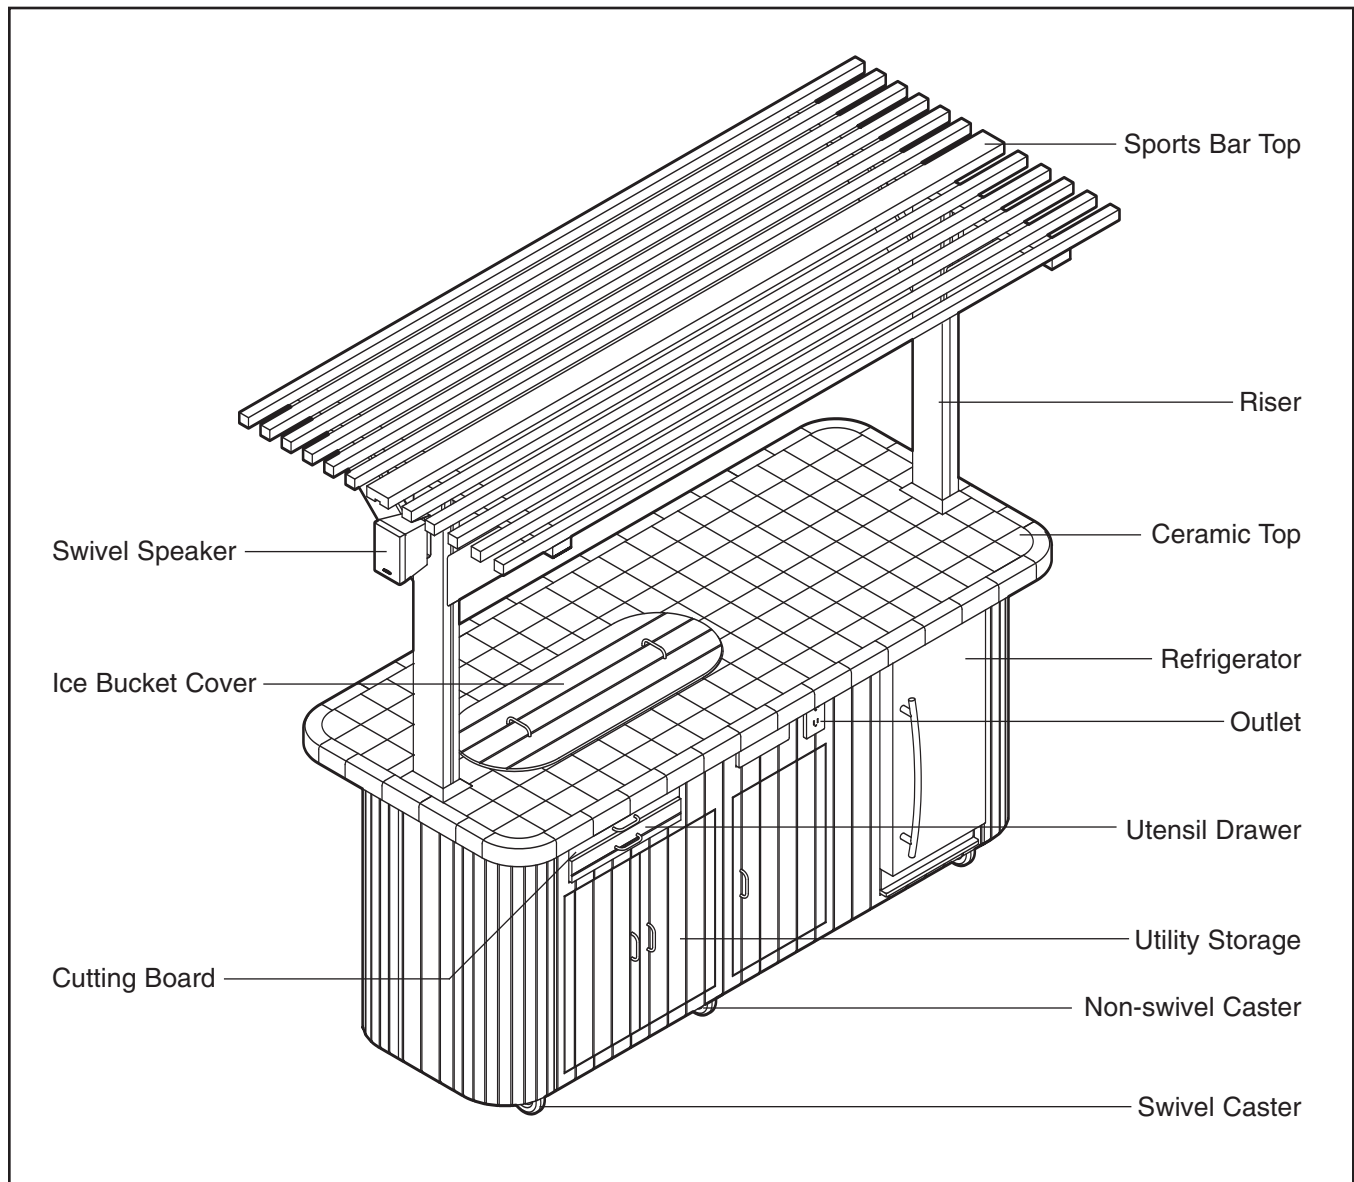


Grounding Instructions

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock.


This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

⚠ DANGER: Improper connection of the equipment-grounding conductor can result in an increased risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product—if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit and it has a grounding plug that looks like the plug illustrated below.

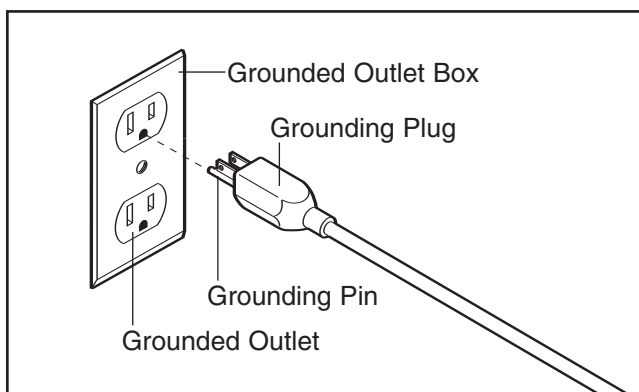

A temporary adapter that looks like the adapter illustrated below can be used to connect this plug to a 2-pole receptacle as shown in the drawing if a properly grounded outlet is not available.

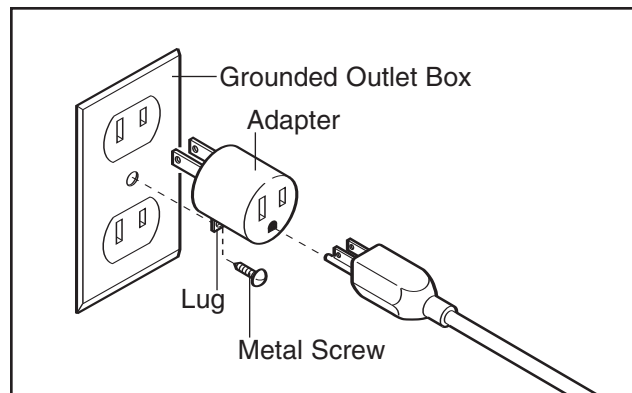

The temporary adapter should be used only until a properly grounded outlet (as shown at the left) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

Choosing a Location for the Sports Bar

There are many factors to consider when choosing a location for the sports bar. Following are several factors you may wish to consider as you decide where to set up the sports bar.

1. The sports bar should be near a power source capable of supplying 110 volts AC power.
2. The location must be able to support the weight of the sports bar. The sports bar weighs approximately 750 pounds.
3. Make sure the location is flat, level, and stable.
4. The location must allow sufficient space around the sports bar to permit servicing of the sports bar.

Using and Maintaining the Sports Bar

MAINTAINING THE SPORTS BAR EXTERIOR

Any exposed wooden surface should be cleaned and restained as necessary. The risers should be cleaned with a mild soap solution; do not use solvents or waxes.

CLEANING THE CERAMIC TOP

Clean the ceramic top with a damp sponge using a solution of 1/4 cup of white vinegar to 2 gallons of water. You may also choose a cleaner specifically formulated for ceramic tile. Do not stand, sit, or play on the ceramic top.

USING AND MAINTAINING THE ICE BUCKET

The sports bar features an ice bucket to keep your beverages cool. The ice bucket consists of a stainless steel bucket recessed into a sturdy plastic liner. The ice bucket can be easily removed, emptied, and cleaned. Note: To keep ice longer, place the lid on the ice bucket when not serving drinks.

To remove the ice bucket, carefully slide your fingers underneath each of the rounded sides of the bucket and lift. Each time you remove the bucket, carefully examine the gasket on the bottom of the bucket for damage. If the gasket is damaged, please call our Customer Service Department for a replacement gasket or to schedule a service call.

The ice bucket has a convenient drain plug that allows any water to drain into the plastic liner. The plastic liner prevents water from dripping into the internal structure of the sports bar. Attached to the plastic liner is a drain hose assembly consisting of a clamp, a filter screen, and a standard garden hose adapter.

To drain the water, attach a standard garden hose to the standard hose adapter on the drain hose. Pull the drain hose from the clamp on the bottom of the sports bar. Remove the drain plug in the ice bucket. If the water does not appear to be draining, make sure that the drain hose has not become obstructed with debris and that it is level with or lower than the sports bar.

In the case of an obstruction, unscrew the clamp at the end of the hose; take the filter screen out of the hose and remove any debris. The drain hose assembly can also be removed from the plastic liner by pulling the hose away from the plastic drain in the plastic liner.

When you are finished draining the ice bucket, disconnect the garden hose from the drain hose and push the drain hose into the clamp. Insert the drain plug into the ice bucket.

USING AND MAINTAINING THE CUTTING BOARD

To use the cutting board, pull it out completely. If it is more convenient, the cutting board can be removed from the sports bar and moved to another location for use. Clean the cutting board frequently with hot soapy water. Sanitize the cutting board with diluted chlorine bleach or vinegar solution consisting of one teaspoon of liquid chlorine bleach in one quart of water or a one to five dilution of vinegar. Flood the surface with sanitizing solution and allow it to stand for several minutes. Next, rinse and dry the cutting board. The cutting board is designed to support 15 pounds.

Caution must be taken when using the cutting board.

- The cutting board should be scrubbed thoroughly with hot water and soap.

- The cutting board and other food surfaces should be kept dry when not in use. Resident bacteria survive no more than a few hours without moisture. Keep moisture of any type from standing on the cutting board for long periods of time. Do not allow moisture to collect beneath the cutting board. Prop up one end of the cutting board if it is on the ceramic top and not in use.
- During use, scrape the cutting board often with a scraper or a spatula. Scraping removes much of the moisture that builds up on the cutting board. Never scrub the cutting board with a steel brush (a steel brush will mar the finish). An occasional sanding will return the cutting board to a smooth luster.
- Each week that the cutting board is used, it should be oiled to seal the grain against bacteria. Oiling also helps to prevent the wood from cracking or pulling apart at the joints. **Use an oil that is both edible and tasteless.** USP-grade mineral oil is a popular choice as it is the cheapest pure food-grade oil you can buy (do not use vegetable or olive oil because it can turn rancid). Before applying oil to the cutting board, warm the oil slightly. Apply the oil with a soft cloth, in the direction of the grain, allowing the oil to soak in. Remove all surface oil with a dry, clean cloth.
- Some professional cooks add beeswax to the mineral oil for a more durable finish. In a microwave-safe dish, shave about 1/2 teaspoon of beeswax into 1 cup of mineral oil, and microwave it on high for about 45 seconds. Apply the oil to the cutting board while it is still warm. Allow the oil to soak in for a few minutes, and then remove all surface oil with a dry, clean cloth. Save or dispose of the remaining oil.

USING AND MAINTAINING THE UTENSIL DRAWER

The utensil drawer is divided into two compartments. The compartment on the left has multiple slots for your knives, and the compartment on the right is for storing various other utensils. Clean the drawer with a damp, soft cloth. The drawer is designed to support 15 pounds.

Always secure knives when leaving them unattended.

USING AND MAINTAINING THE SPEAKERS, CD PLAYER, LIGHTS, AND REFRIGERATOR

The sports bar features a premium sound system that delivers excellent sound through the two externally mounted swivel speakers. These speakers can be swiveled in the direction you like. To use the speakers, refer to the manufacturer's manual that came with the speakers.

The sports bar features a CD player with a cover so that it can be used outdoors. To use and care for the CD player, refer to the manufacturer's manual that came with the CD player. Please be aware that the maximum volume of the CD player and speakers can disturb your neighbors.

The sports bar features bright halogen bulbs with a control switch that allows you to use the sports bar at night. Use only 150 watt or smaller wattage bulbs with the sports bar.

The sports bar incorporates an external power outlet for small kitchen appliances only.

Follow the instructions in the user's manual that came with the refrigerator for information on use and maintenance.

If the CD player, speakers, lights, or refrigerator do not function, check to see if the GFCI breaker may have been tripped or not turned on. Reset the GFCI breaker. If the GFCI breaker has not been tripped, check all connections behind the sports bar, at the power strip or at the power source, or reset the fuse breaker.

If the sports bar still does not function correctly, call our Customer Service Department toll-free at 1-877-897-7493, Monday through Friday, 8 a.m. until 5 p.m. Central Time.

Ordering Replacement Parts

To order replacement parts, simply call our Customer Service Department toll-free at 1-877-897-7493, Monday through Friday, 8 a.m. until 5 p.m. Central Time (excluding holidays). To help us assist you, please be prepared to give the following information when calling:

- The MODEL NUMBER of the product (IMKSBB04)
- The NAME of the product (IMAGE Outdoor Sports Bar)

Limited Warranty

Icon Health and Fitness Inc. (ICON), warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days for the bar and 1 year for electronic components from the date of purchase. All repairs for which warranty claims are made must be pre-authorized by ICON. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage, or repairs not provided by ICON authorized service personnel; to products used for commercial or rental purposes; or to products used as store display models. Specifically excluded are damages caused by or attributable to the following incidents: any damage to the premium cedar surround or frame attributable to improper handling or freight damage.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of or damage to property, loss of revenues or profits, loss of enjoyment or use, costs of removal, installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitations may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

ICON HEALTH & FITNESS, INC., 1500 S. 1000 W., LOGAN, UT 84321-9813