

LEGEND™

Model No. LP100230

QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or find that a part is missing or damaged, we will guarantee you complete satisfaction through direct assistance from our factory.

TO AVOID UNNECESSARY DELAYS, PLEASE CALL DIRECT TO OUR TOLL-FREE CUSTOMER HOT LINE.

The trained technicians on our customer hot line will provide immediate assistance, free of charge to you.

CUSTOMER HOT LINE:
1-800-999-3756
Mon.-Fri., 6 a.m.-6 p.m. MST


CAUTION!

Read all safety precautions and instructions in this manual before using this equipment. Save this manual for future reference.

PATENT PENDING

Show TIME

ADJUSTABLE BASKETBALL SYSTEM

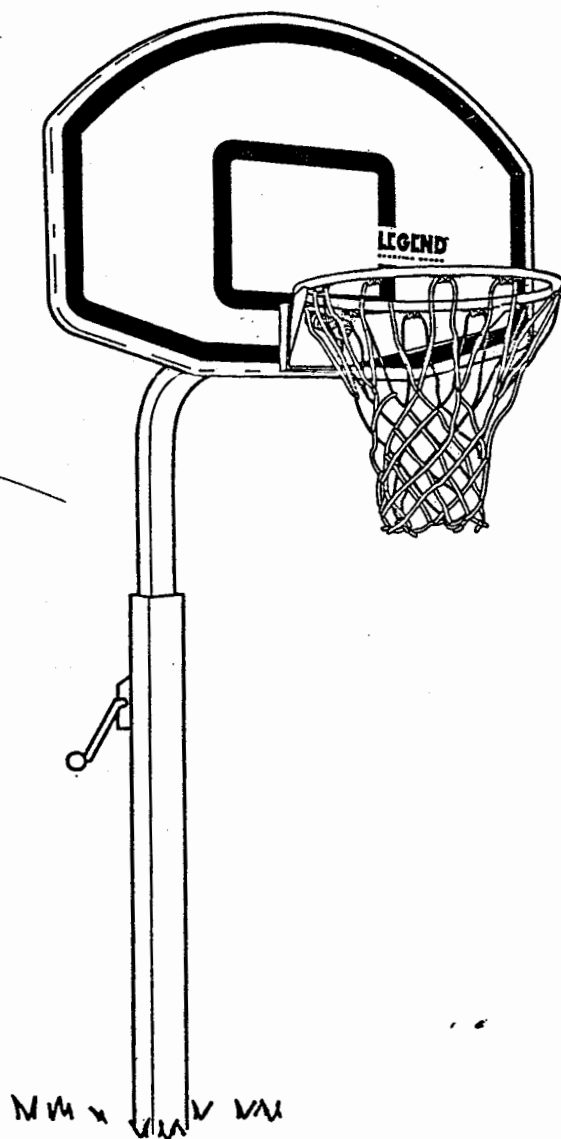

OWNER'S MANUAL

WARNING: IMPORTANT SAFETY PRECAUTIONS

WARNING: OWNERS MUST ENSURE THAT ALL PLAYERS KNOW AND FOLLOW THESE RULES FOR SAFE OPERATION OF THE ADJUSTABLE BASKETBALL SYSTEM. FAILURE TO COMPLY WITH THESE RULES COULD RESULT IN VERY SERIOUS PERSONAL INJURY OR PROPERTY DAMAGE.

- 1. Read this manual carefully before assembling or using the adjustable basketball system.**
- 2. Choose a location for the pole where it will not be near overhead power lines. The pole must also be in a location where vehicles will not back into the rim or backboard when the rim is at a low height.**
- 3. Regularly inspect and tighten all parts of this equipment. Replace any worn or damaged part immediately.**
- 4. Never hang from the rim or climb the post, as serious injury could result. Doing either of these things will void the warranty.**
- 5. When attempting "slam dunks" or any other maneuver, do not allow your face or hands to come in contact with the rim, net or backboard. Serious injury can occur if a player's head, teeth or hands come in contact with the rim, net or backboard. Players must wear mouth guards at all times while playing.**
- 6. Never wear jewelry or watches while playing. Serious injury can occur if such objects become caught in the net.**
- 7. Never jump, hop or spring off objects to perform "slam dunks" or any other maneuver.**
- 8. Always adjust the height of the rim from behind the adjustable basketball system. Never stand under the backboard or hang from the rim while adjusting the height.**
- 9. Never leave the handle in the crank mechanism after adjusting the height of the rim. Remove the handle and attach it to the back of the pole, with the handle acting as a safety backup for the crank mechanism.**
- 10. When the rim is at a low height, be careful to avoid bumping your head on the rim or backboard.**
- 11. Never use the adjustable basketball system unless the crank cover is securely attached to the pole.**
- 12. Never play on a wet surface. Serious injury can occur if a player slips.**
- 13. Any adjustment made to the height of the rim must be made by an adult.**

TABLE OF CONTENTS

IMPORTANT SAFETY PRECAUTIONS.....	2
LIMITED WARRANTY	3
BEFORE YOU BEGIN	4
ASSEMBLY	5
ADJUSTMENT	9
MAINTENANCE	10
PART LIST	10
EXPLODED DRAWING.....	11
ORDERING REPLACEMENT PARTS.....	Back Cover

LIMITED WARRANTY

Proform Fitness Products, Inc. (PROFORM), warrants to the original purchaser, for a period of one (1) year from the date of purchase, the pole, hardware and crank mechanism to be free from defects in workmanship and materials. The term "defects" is defined as imperfections that impair the use of the product. The backboard and rim are warranted to the original purchaser against defects in workmanship and materials for a period of eight (8) years in ordinary weather conditions. Deterioration, damage or fracture to the board due to severe weather conditions such as tornadoes, hail, flood or hurricanes, or discoloration or fading due to exposure to the elements is not covered in this warranty. This warranty does not cover scratching or scuffing of the product that may result from normal usage. In addition, defects resulting from intentional damage, negligence, unreasonable use, or hanging from the net or rim will void this warranty.

This warranty is expressly limited to the repair or replacement, at PROFORM'S option, of defective basketball equipment. PROFORM does not assume liability for incidental or consequential damage, loss of property, revenues, enjoyment or use, cost of installation or removal to the extent permitted by law. Freedom from injury cannot be guaranteed; therefore the user assumes all risk of injury due to use. This warranty ceases when you sell or give away the product, or use it for commercial purposes. All warranty claims must obtain pre-authorization by calling the PROFORM Customer Service Department at 1-800-999-3756. Warranty service must be performed by a PROFORM authorized service center, accompanied by sufficient proof of purchase.

PROFORM FITNESS PRODUCTS, INC., 1500 S. 1000 W., LOGAN, UT 84321-9813

CUSTOMER RECORD: Fill in the information requested below and keep it for future reference.

Model No.: _____


Dealer Name: _____ Purchase Date: _____

Dealer Address: _____ City: _____ State: _____ Zip: _____

BEFORE YOU BEGIN

Congratulations for selecting the LEGEND™ SHOW TIME adjustable basketball system. At LEGEND, we are committed to providing complete customer satisfaction. If you have questions, or find that a part is missing or damaged, please do not contact the store where you purchased the adjustable basketball system. Simply call our toll-free Customer Service Hotline at 1-800-999-3756, Monday through Friday, 6 am until 6 pm Mountain Time (excluding holidays). The trained technicians on our Customer Service Hotline will provide immediate assistance, free of charge to you. Please mention model LP100230 when calling.


For your safety and benefit, read this manual carefully before using the adjustable basketball system. Save this manual in a safe place for future reference.

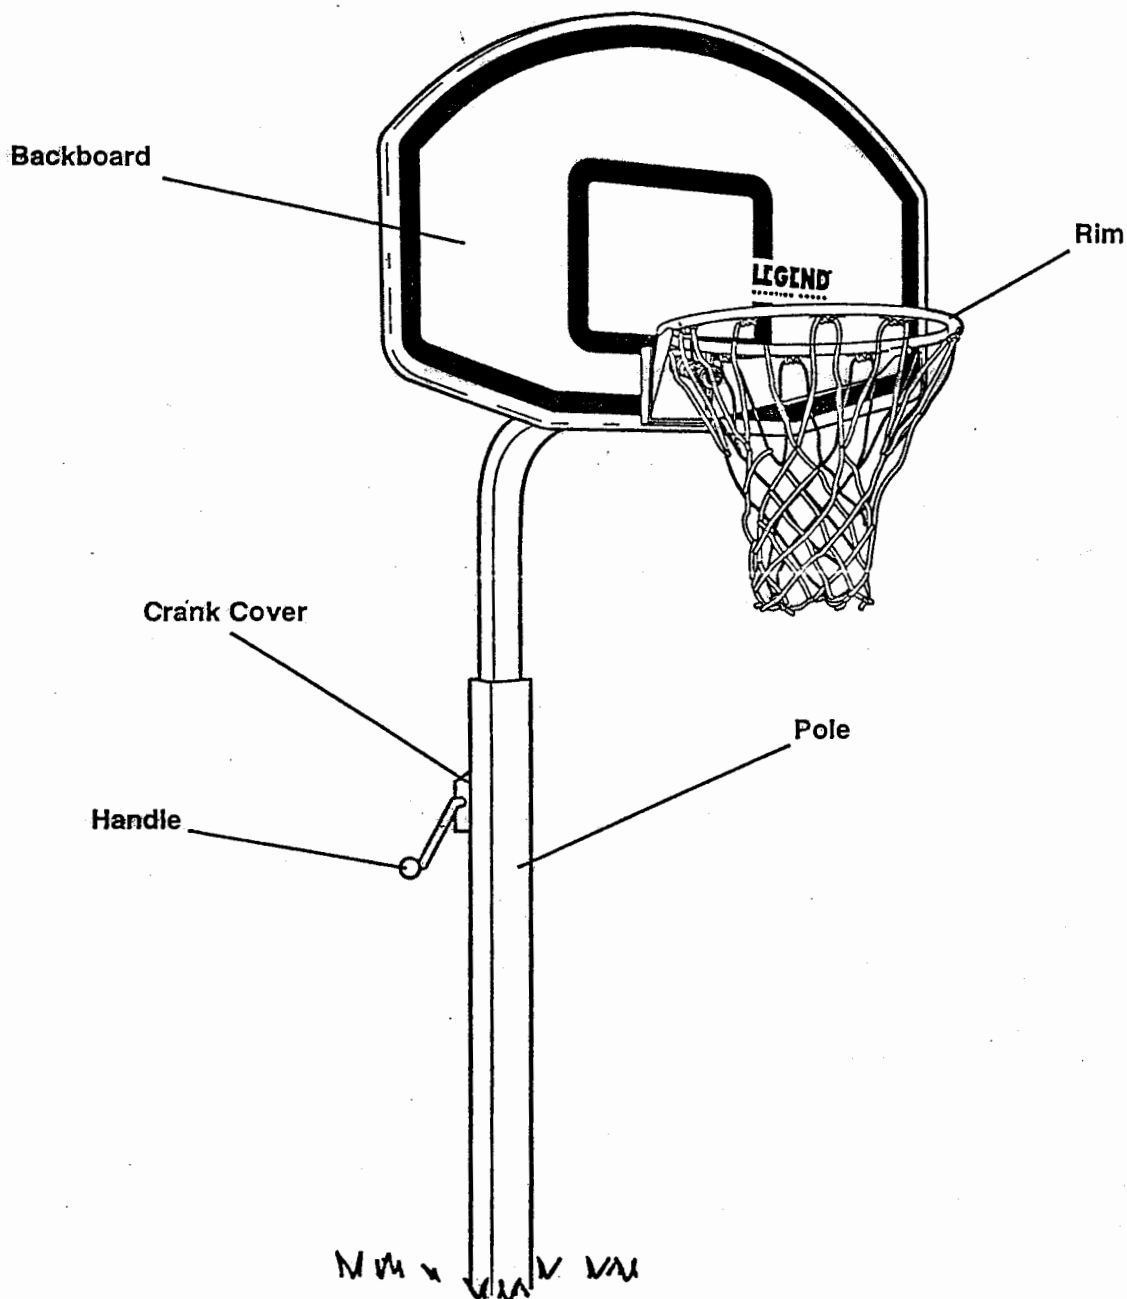


ASSEMBLY

The base pole must be set in concrete before the adjustable basketball system can be assembled. A shovel, a level and eight 60 pound bags of premix concrete are required. **WARNING: Choose a location where the pole will not be near overhead power lines or underground cables. The pole must also be in a location where vehicles will not back into the rim or backboard when the rim is at a low height.**


1. Dig a round hole 21 inches across and 24 inches deep. The edge of the hole should be even with the edge of the playing surface.
2. Mix the eight bags of concrete according to the directions on the bags. Fill the hole to ground level with concrete. There may be a small amount of concrete left over.
3. Identify the Base Pole (25) by carefully observing the drawing at the right. Turn the Base Pole as shown. The two indicated holes must be at the top. Insert the Base Pole into the concrete **until the surface line on the Base Pole is level with the playing surface.** The drain hole should be about 2 inches above the concrete. It may be helpful to rock the Base Pole from side to side in order to insert it into the concrete. After the Base Pole is at the proper depth, tamp the concrete smooth around the Base Pole.
4. Check the Base Pole (25) frequently during the next hour to make sure that it does not sink further into the concrete. Use a level to make sure that the Base Pole remains vertical on all sides. Allow the concrete to dry for at least 48 hours before beginning assembly.

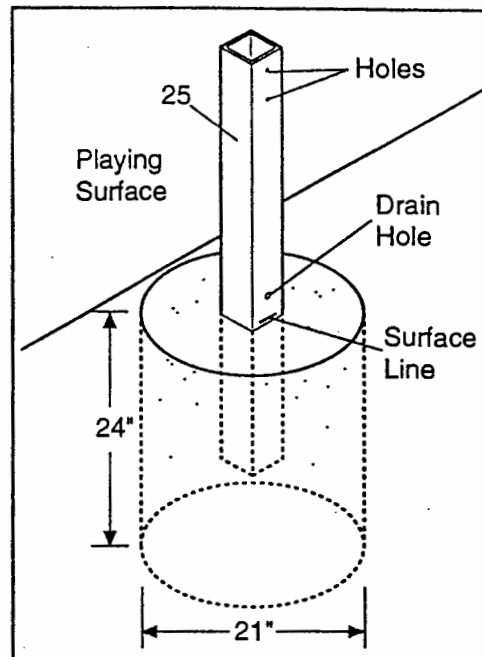


After the concrete has cured, the adjustable basketball system is ready to be assembled. A standard screwdriver, two hammers and two adjustable wrenches are required. Use the drawings below to identify the small parts used in assembly. The number in parenthesis below each part refers to the key number of the part. The second number refers to the quantity used in assembly.

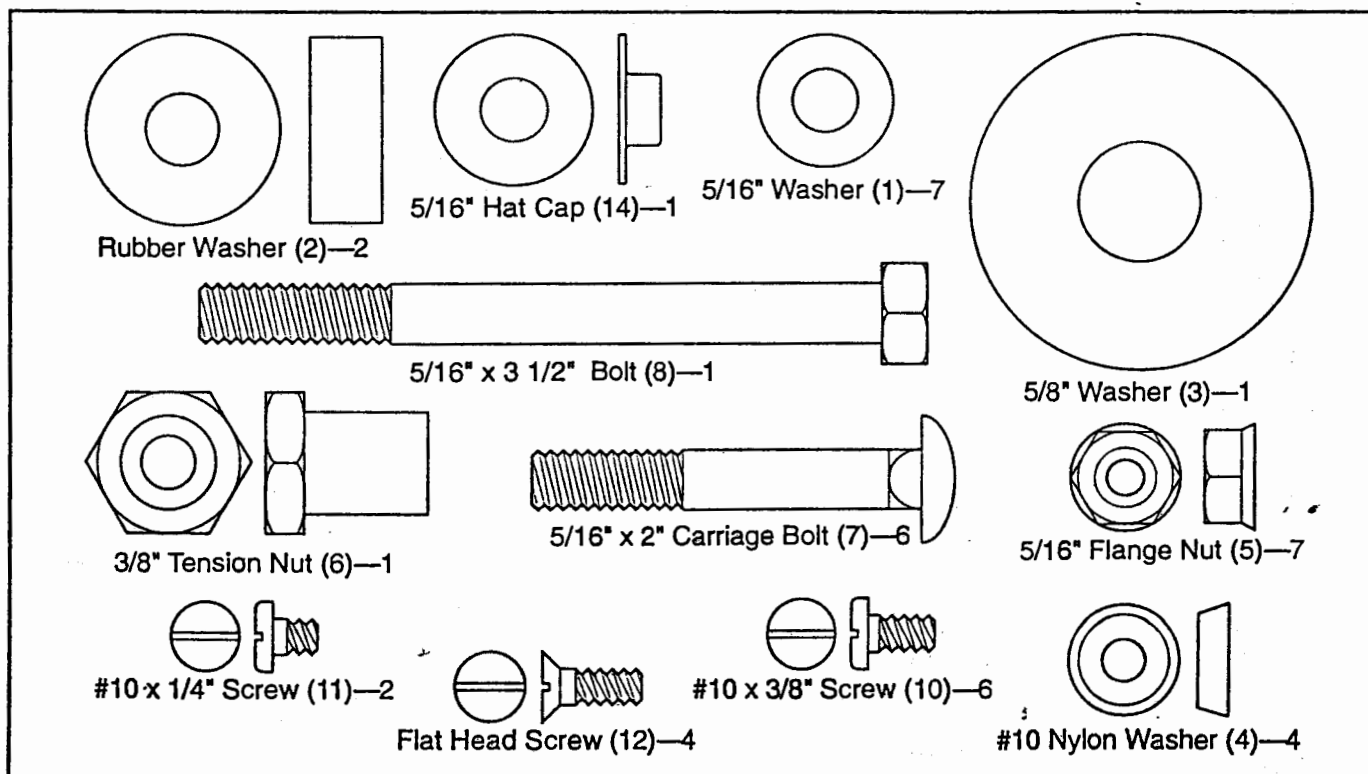


1. Slide the Crank Pole (24) onto the Base Pole (25). If necessary, place a piece of scrap wood on top of the Crank Pole, and tap the wood with a hammer until the two holes in the Crank Pole are aligned with the two holes in the Base Pole. Do not hit the Crank Pole directly with a hammer, or the Crank Pole may be damaged. **IMPORTANT: Do not slide the Crank pole too far onto the Base Pole; it will be very difficult to slide it back.** Attach the Crank Pole to the Base Pole with the two #10 x 1/4" Screws (11).
2. Slide the Backboard Pole (22) onto the Extension Pole (23). If necessary, place a piece of scrap wood on the ground and gently tap the Poles against the wood until the four holes in the Backboard Pole are aligned with the four holes in the Extension Pole. Attach the Backboard Pole to the Extension Pole with the four Flat Head Screws (12) and #10 Nylon Washers (4).
3. Slide the Sleeve (27) onto the lower end of the Extension Pole (23). Make sure that the open side of the Sleeve is turned to the indicated position. Press the eight Bushings (26) into the lower end of the Extension Pole as shown.
4. Hold down the lock tab on the back of the Crank Pole (24) (see the inset drawing). Slide the Extension Pole (23) and Backboard Pole (22) as far as they will go into the Crank Pole (24). Make sure that the Poles are turned as shown. Press the Sleeve (27) down into the upper end of the Crank Pole.
5. Insert the Handle (28) all the way into one end of the Crank Mechanism (29) (See the inset drawing). Hold down the lock tab on the back of the Crank Pole (24). Align the ends of the Crank Mechanism with the bracket on the Crank Pole. Slide the Crank Mechanism into the bracket. Use the Handle to turn the Crank Mechanism until the teeth engage in the slots in the Backboard Pole (22). Remove the Handle from the Crank Mechanism.
6. Slide the Crank Cover (30) onto the bracket on the Crank Pole (24). Attach the Crank Cover with two #10 x 3/8" Screws (10). **WARNING: Never use the adjustable basketball system unless the Crank Cover is securely attached to the Crank Pole.**

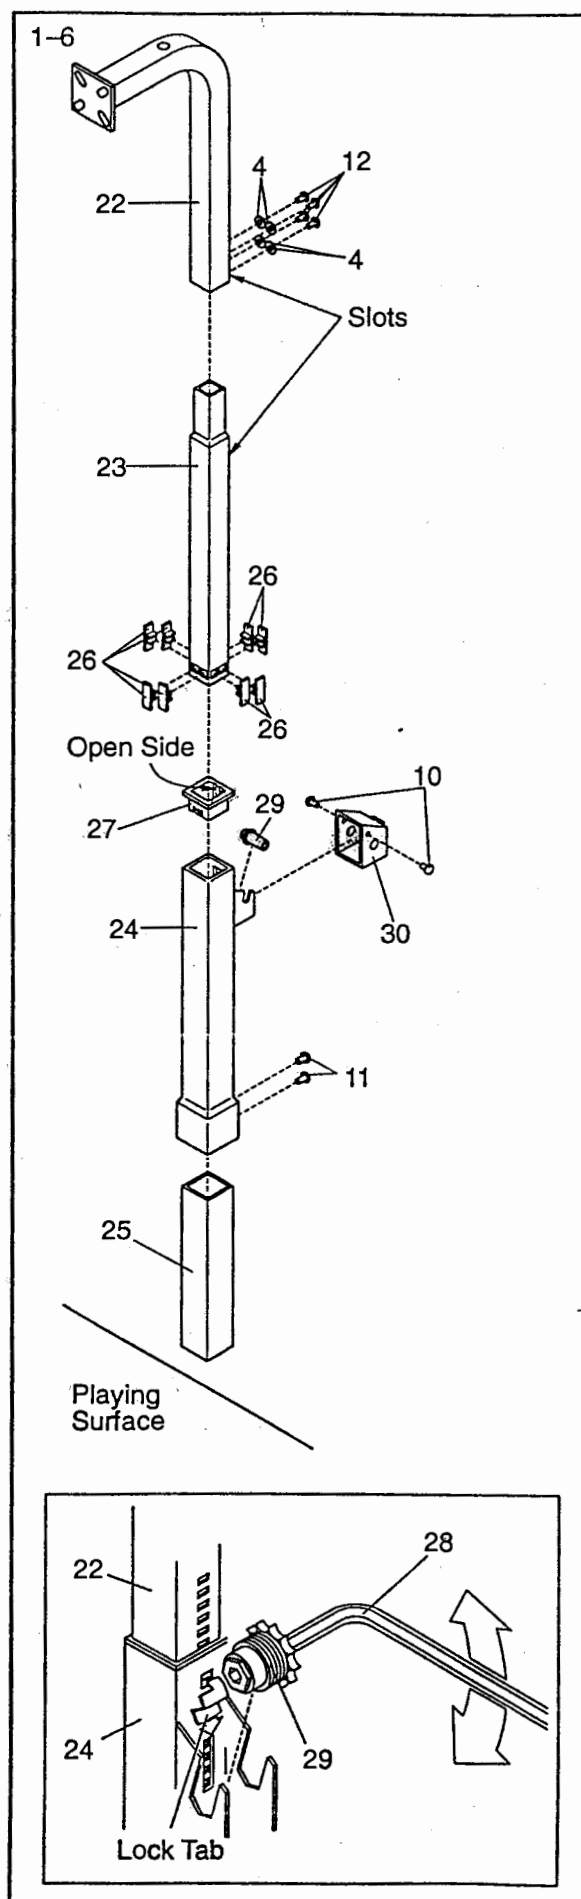

7. Insert the tip of the Handle (28) through the indicated hole in the Crank Pole (24) and into one of the slots in the Backboard Pole (22). Press the Handle into the clip on the back of the Crank Cover (30).

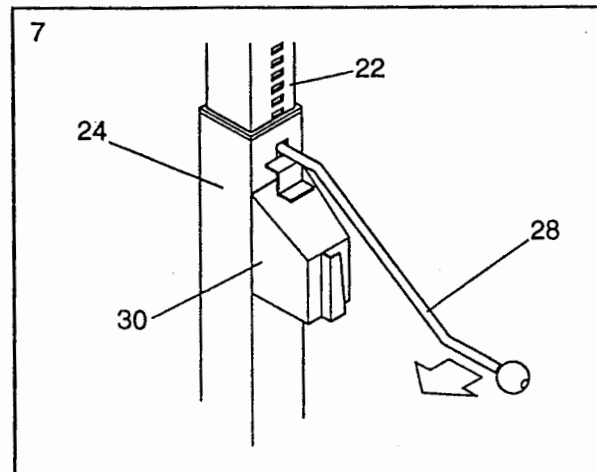


8. Slide the Bent Washer (54) onto the 5" "T" Bolt (9) so that the Bent Washer bends around the head of the "T" Bolt. Insert the "T" Bolt through the Rim Bracket (16) from the indicated side. Attach the Rim Bracket and the Backboard (19) to the Backboard Pole (22) with four 5/16" x 2" Carriage Bolts (7), 5/16" Washers (1) and 5/16" Flange Nuts (5). Do not fully tighten the Flange Nuts yet.

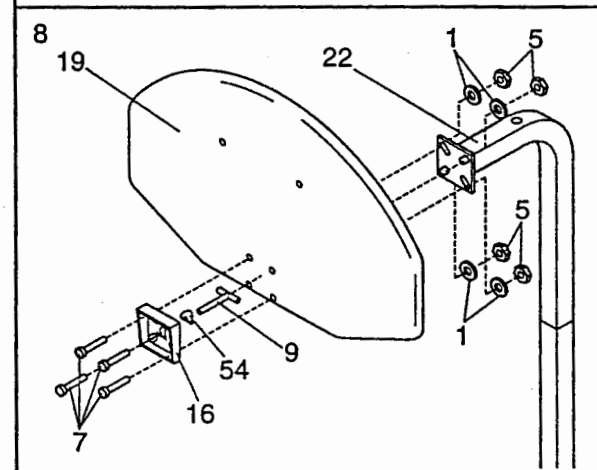


9. Insert the 5/16" x 3 1/2" Bolt (8) up through the Backboard Pole (22). Slide the Left and Right Struts (20, 21) onto the Bolt. Finger tighten a 5/16" Flange Nut (5) and 5/16" Washer (1) onto the Bolt. Align the other ends of the Struts with the indicated holes in the Backboard (19). Make sure that the ends of the Struts are parallel to the Backboard—if they are not, reverse the Struts. Attach the Struts to the Backboard with two 5/16" x 2" Carriage Bolts (7), the two Rubber Washers (2), two 5/16" Washers (1) and two 5/16" Flange Nuts (5).


Level the Backboard (19) and the Rim Bracket (16), and tighten the Flange Nuts used in assembly steps 8 and 9.

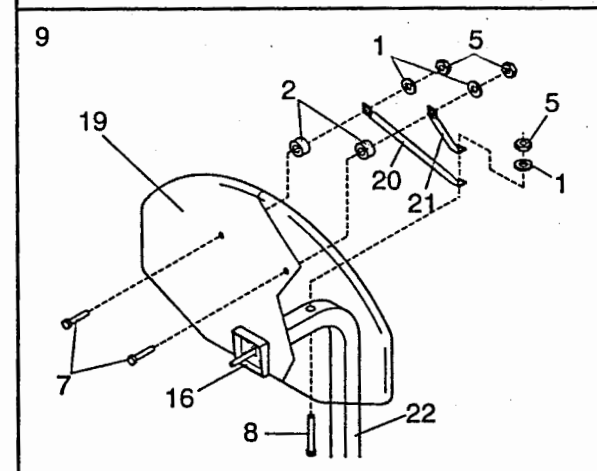


10. Slide the Rim (18) into the Rim Bracket (16) and insert the 6" Pin (15) through the Rim and the Rim Bracket. Hold one hammer against the head of the Pin, and tap the 5/16" Hat Cap (14) onto the other end of the Pin.

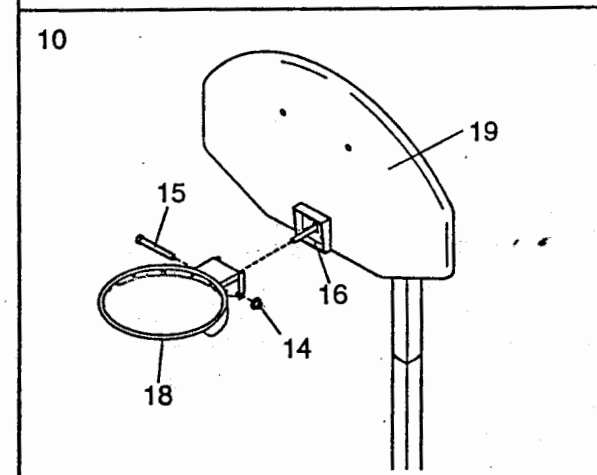


11. Slide the Spring Plate (31) onto the 5" "T" Bolt (9) so that the dimples rest in the grooves in the Rim (18). Slide the Spring (13) and the 5/8" Washer (3) onto the "T" Bolt. Turn the Spring so it is angled downward. Thread the 3/8" Tension Nut (6) onto the "T" Bolt. Tighten the Tension Nut as desired to adjust the tension of the breakaway Rim (18). **IMPORTANT:** The Tension Nut must compress the Spring at least 1/4".

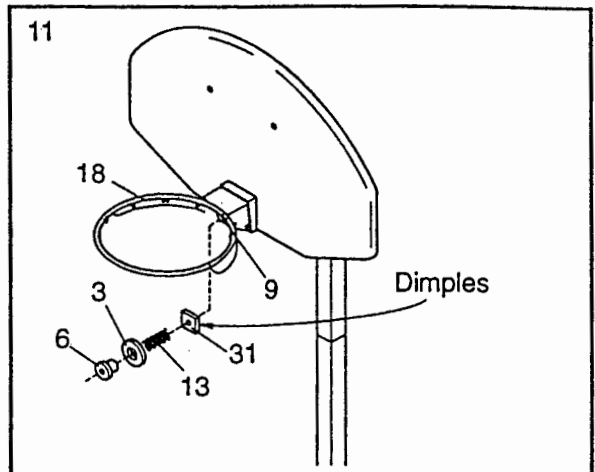

12. Slide the Rim Cover (40) up into the Rim (18). Attach the Rim Cover to the Rim with four #10 x 3/8" Screws (10).

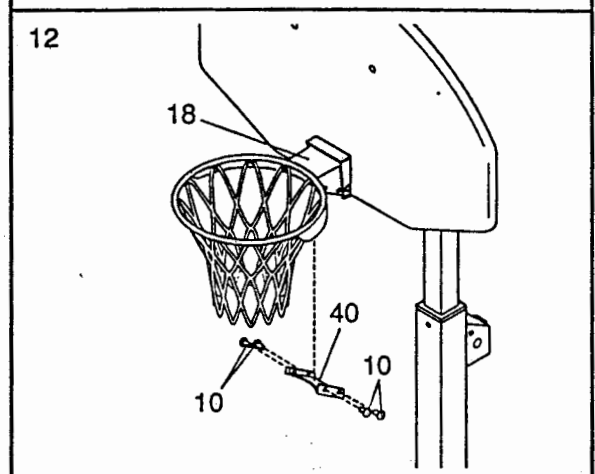


13. Attach the Net (17) to the Rim (18) by sliding each loop of the Net into one of the coils on the Rim (see the inset drawing).

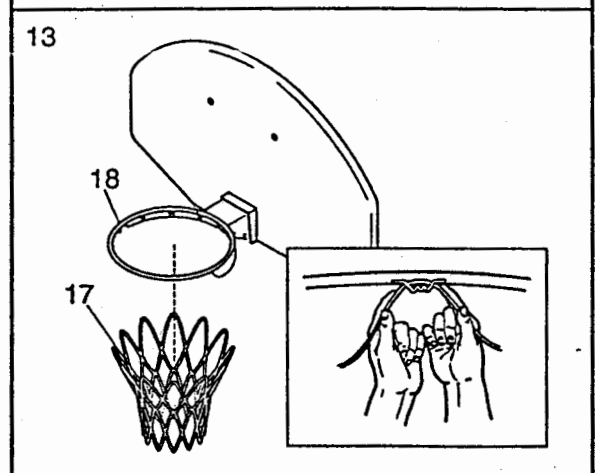

14. Insert each end of the Pad (38) under the fold on each end of the Pad Cover (39) as shown.

Peel the backing off a Fastener Strip (41). Press the Fastener Strip firmly onto the Crank Pole (24) in the indicated position. Apply the other Fastener Strip to the other side of the Crank Pole. Fasten the Pad Cover (39) around the Crank Pole (24) and Base Pole (25). Make sure that the Pad (38) is between the Pad Cover and the Poles. Make sure that the fastener strips on the inside of the Pad Cover are attached to the Fastener Strips you applied to the Crank Pole.

Make sure that all parts are tight before using.

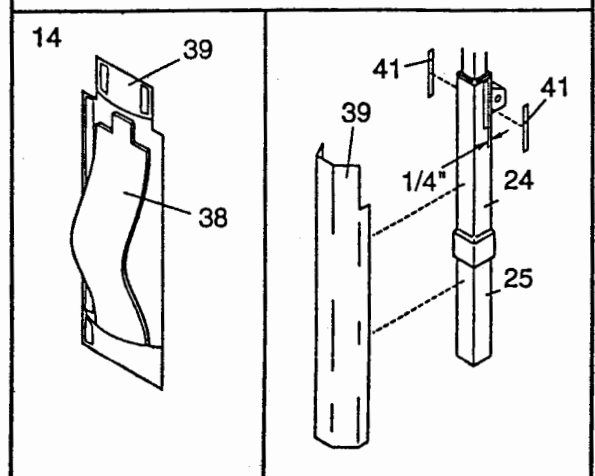


ADJUSTMENT

ADJUSTING THE HEIGHT OF THE RIM

Using the unique CRANK-IT-UP™ adjustment system, the height of the rim can be adjusted from 6' up to 10'. Follow the instructions below to adjust the height of the rim. **WARNING: Read the safety precautions on page 2 before adjusting the height of the rim.**


1. Remove the Handle (28) from the clip on the back of the Crank Cover (30). Insert the tip of the Handle (28) completely into either side of the Crank Mechanism (29). Hold the Handle securely and turn it to raise the rim slightly until the lock tab can be depressed. Hold down the lock tab and slowly turn the Handle to raise or lower the rim to the desired height. The height of the rim is shown by the height mark nearest the top of the Sleeve (27). Release the lock tab, making sure that it rests in a slot in either the Extension Pole (23) or the Backboard Pole (22). **IMPORTANT: Do not attempt to adjust the height of the rim without depressing the lock tab, or to force the height of the rim above 10' or below 6'. Doing either of these things will damage the Crank Mechanism and void the warranty.**

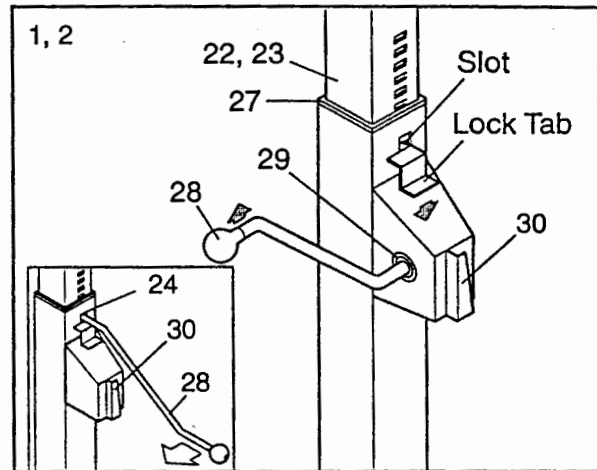

2. (See the inset drawing above.) Insert the tip of the Handle (28) through the indicated hole in the Crank Pole (24) and into one of the slots in the pole. Press the Handle into the clip on the back of the Crank Cover (30). **WARNING: Do not use the adjustable basketball system without the Handle locked in place.**

ADJUSTING THE TENSION OF THE BREAKAWAY RIM

The tension of the breakaway Rim (18) can be adjusted by turning the 3/8" Tension Nut (6). First remove the four #10 x 3/8" Screws (10) attaching the Rim Cover (40) to the Rim. Turn the Tension Nut clockwise to increase the tension, or counterclockwise to decrease the tension. Reattach the Rim Cover. **IMPORTANT: The Tension Nut must always be adjusted so that the spring is compressed at least 1/4".**

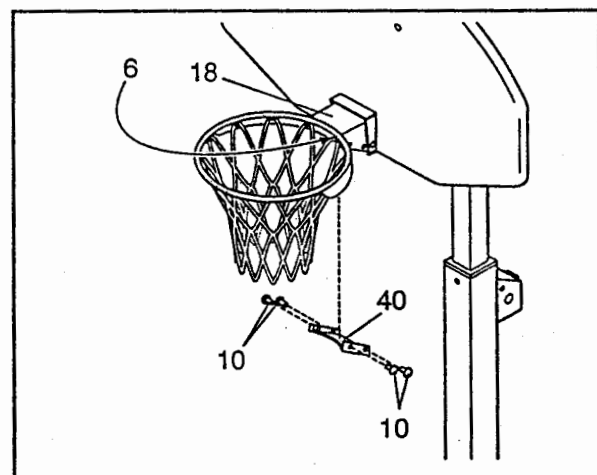

MAINTENANCE

Regularly inspect and tighten all parts of the adjustable basketball system. Replace any worn or damaged part immediately. Keep weeds, leaves and other organic matter away from the base of the pole. To maximize the life of the adjustable basketball system, inspect the pole every six months for chipped paint or rust. If any chipped paint or rust is found, follow the steps below to correct the problem.

1. Using sandpaper, remove all of the chipped paint or rust from the pole.
2. Clean the damaged area and let it dry completely.
3. Apply exterior enamel primer to the damaged area according to the instructions on the primer container.
4. Apply exterior enamel paint to the damaged area according to the instructions on the paint container.

If any part of the pole is penetrated completely by rust, the damaged pole section(s) should be replaced. See the back cover of this manual for information about ordering replacement parts.

PART LIST—Model No. LP100230


R594A

Key No.	Qty.	Description	Key No.	Qty.	Description	Key No.	Qty.	Description
1	7	5/16" Washer	15	1	6" Pin	29	1	Crank Mech.
2	2	Rubber Washer	16	1	Rim Bracket	30	1	Crank Cover
3	1	5/8" Washer	17	1	Net	31	1	Spring Plate
4	4	#10 Nylon Washer	18	1	Rim	32	1	Owner's Manual
5	7	5/16" Flange Nut	19	1	Backboard	33	1	Bent Washer
6	1	3/8" Tension Nut	20	1	Left Strut	34	1	Tab Axle
7	6	5/16" x 2" Crg. Bolt	21	1	Right Strut	35	1	Tab Spring
8	1	5/16" x 3 1/2" Bolt	22	1	Backboard Pole	36	1	Tab Cap
9	1	5" "T" Bolt	23	1	Extension Pole	37	1	Lock Tab
10	6	#10 x 3/8" Screw	24	1	Crank Pole	38	1	Pad
11	2	#10 x 1/4" Screw	25	1	Base Pole	39	1	Pad Cover
12	4	Flat Head Screw	26	8	Bushing	40	1	Rim Cover
13	1	Spring	27	1	Sleeve	41	2	Fastener Strip
14	1	5/16" Hat Cap	28	1	Handle	42	1	Handle Knob

Specifications are subject to change without notice.

EXPLODED DRAWING—Model No. LP100230

R594A

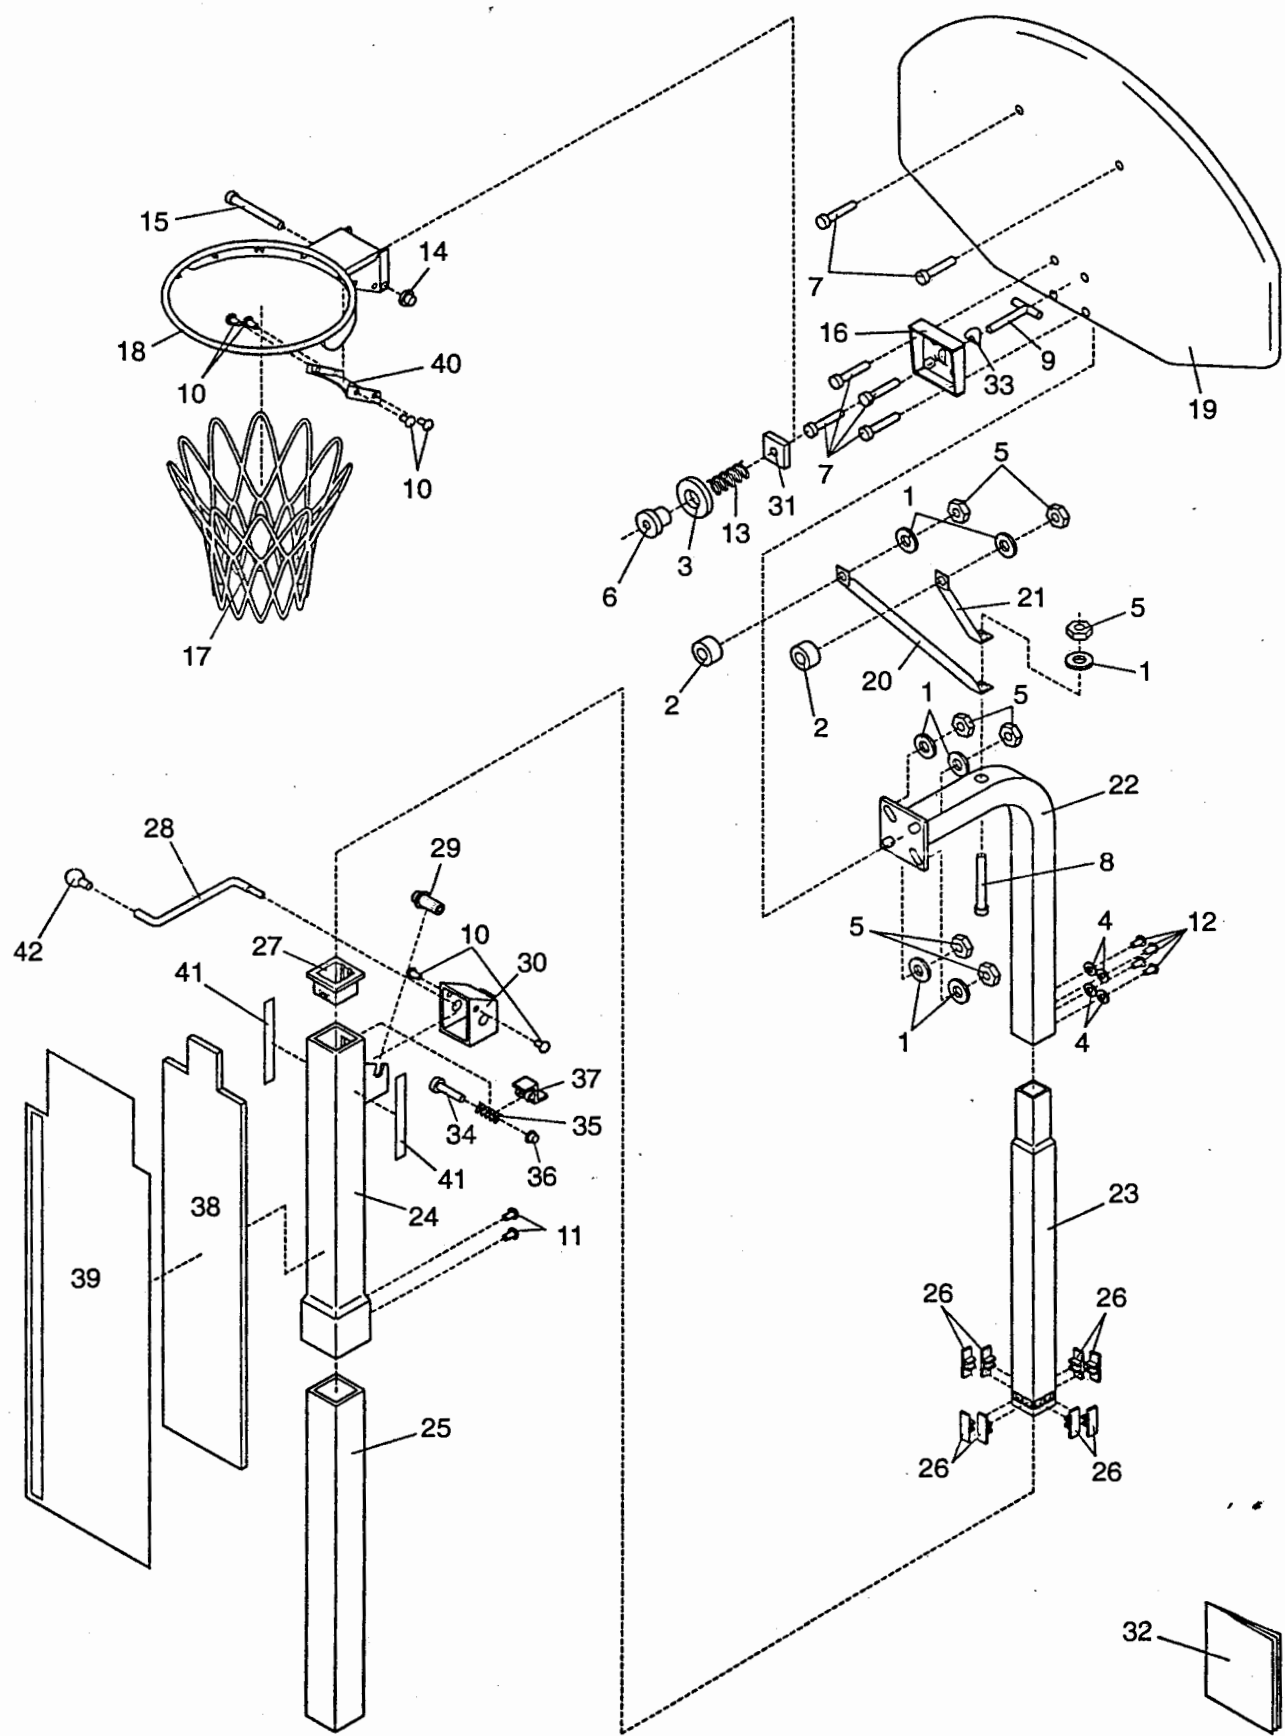

ORDERING REPLACEMENT PARTS

To order replacement parts, simply call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please be prepared to give the following information when calling:

1. The MODEL NUMBER of the product (LP100230).
2. The NAME of the product (LEGEND® SHOW TIME adjustable basketball system).
3. The KEY NUMBER and DESCRIPTION of the part(s) from page 10 of this manual.