


CADENCE[®]

2300

Model No. WL360900

Serial No.

Write the serial number in the space above for reference.

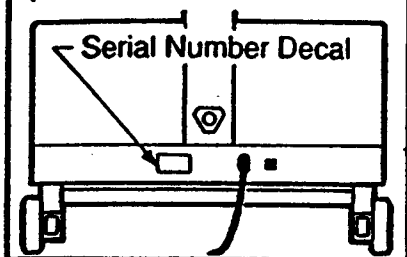

Fitness Trak 5.0 MPH
Calorie/Pulse Monitor
Auto Incline

weslo, inc

A Subsidiary of Weider Health and Fitness, Inc.



OWNER'S
MANUAL

Patented

CAUTION: Read all safety precautions and instructions in this owner's manual carefully before using this equipment. Save this manual for your future reference.

Part No. 100723 5/90

© Weslo, Inc. 1990

IMPORTANT SAFETY PRECAUTIONS

WARNING: To reduce the risk of burns, fire, electric shock or injury to persons, read the following important safety precautions and information before operating the treadmill.

1. Position the treadmill on a clear, level surface with a minimum of 8 feet of clearance behind the treadmill. Do not place the treadmill on thick carpet, near water or outdoors.
2. Plug the power cord directly into a grounded circuit carrying 12 or more amps. No other appliance should be on the same circuit. (See the OPERATION section of this manual for proper grounding instructions.) Keep the power cord away from heated surfaces. If an extension cord is required, use only a 14-gauge, general-purpose cord of six to ten feet in length with a three-wire conductor.
3. Never operate the treadmill if the cord or plug are damaged, or if the treadmill is not working properly. (Refer to the INTRODUCTION section of this manual for instructions if the treadmill is not working properly.)
4. Never start the treadmill while you are standing on the walking belt. Always hold the hand-rail when walking or running on the treadmill.
5. Keep small children away from the treadmill during operation. Never leave the treadmill unattended while it is running.
6. Always wear appropriate clothing when using the treadmill. Do not wear flowing clothing that could become caught in the treadmill. *Always wear running or aerobic shoes. Never use the treadmill with bare feet, wearing only stockings, or in sandals.* Athletic support clothes are also recommended for both men and women.
7. Never drop or insert any object into any opening.
8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Use this treadmill only as described in this manual.
10. Always unplug the power cord before performing the maintenance and adjustment procedures described in this manual. Never remove the motor hood unless instructed to do so by an authorized service representative. Servicing other than the procedures described in this manual should be performed by an authorized service representative only.
11. This treadmill is designed to accommodate a maximum of 250 lbs. Do not use this treadmill for commercial or rental purposes.

WARNING: Before beginning this or any exercise program consult your physician. This is especially important for individuals over the age of 35 or persons with pre-existing health problems. Read all instructions before using. Weslo assumes no responsibility for personal injury or property damage sustained by or through the use of this product.


SAVE THESE INSTRUCTIONS

TABLE OF CONTENTS

Important Safety Precautions.....	2
Introduction.....	3
Assembly.....	4
Operation and Adjustment.....	5
Maintenance and Trouble-Shooting.....	6
Conditioning Guidelines.....	8
Part List.....	10
Exploded Drawing.....	11
Ordering Parts.....	Back Cover
Warranty.....	Back Cover

INTRODUCTION


Thank you for purchasing a Weslo CADENCE 2300 treadmill. The CADENCE 2300 combines advanced technology with innovative design to let you enjoy one of the most effective forms of cardiovascular exercise in the convenience and privacy of your own home. This manual is provided to help you understand the simple assembly and operation of the treadmill. If you have additional questions, please call our Customer Service Department toll-free at 1-800-99WESLO (999-3756), Monday through Friday, 6 a.m. until 6 p.m. Mountain time (excluding holidays). Please mention the treadmill model number and serial number when calling. The model number is listed on the front cover of this manual. The serial number is recorded on a decal on the frame (see the drawing on the front cover). Before reading the following sections of this manual, please review the drawing below and familiarize yourself with the parts labeled.

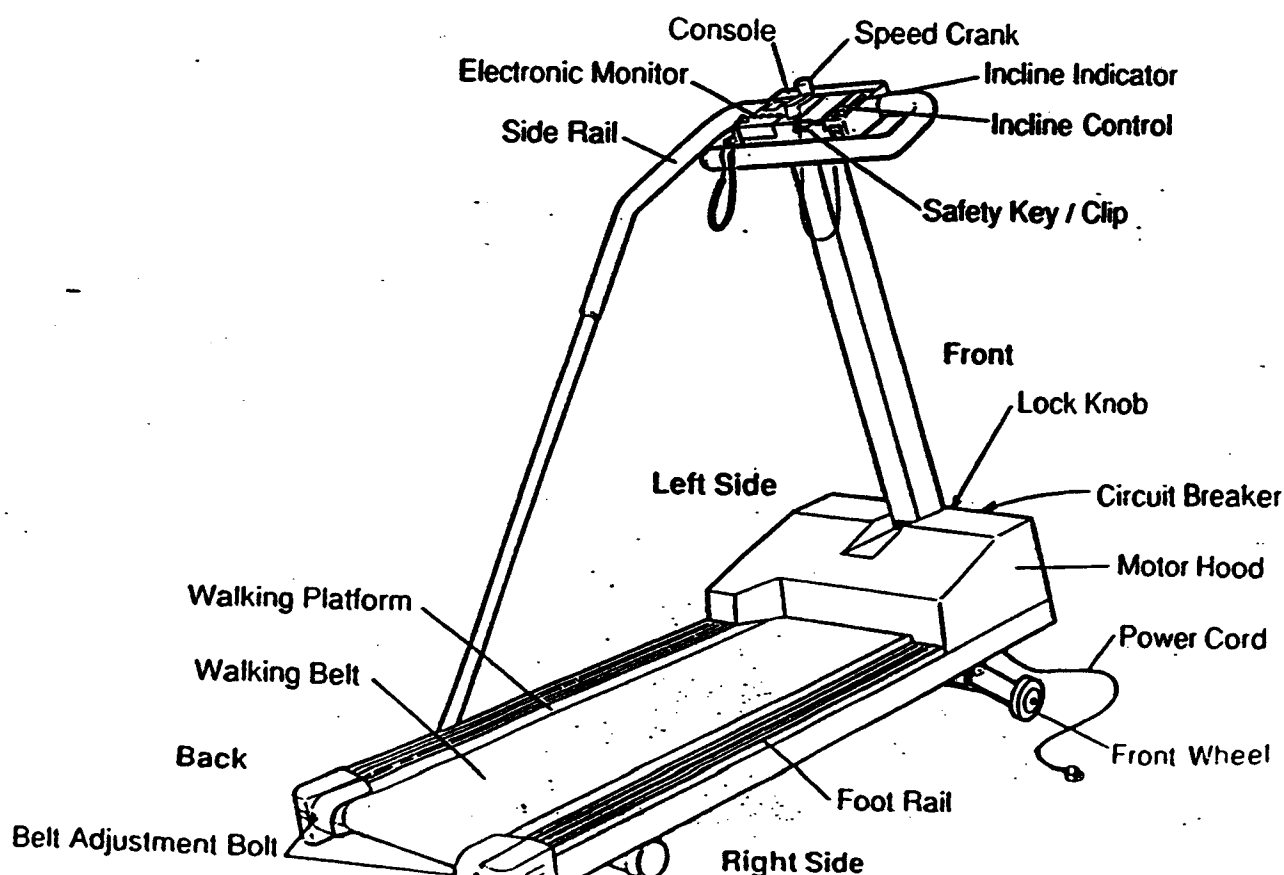


ASSEMBLY

Remove all parts from the packing carton. Make sure that all parts are included before disposing of the packing materials. Read each step carefully before beginning. Assembly can be completed using a standard screwdriver (not included).


1. Raise the Upright Post (19) to a vertical position. Insert the Lock Knob (24), with the Lock Knob Washer (23), into the Upright Post, and turn the Knob clockwise until almost tight. Leave a little play in the Upright Post for the following steps.

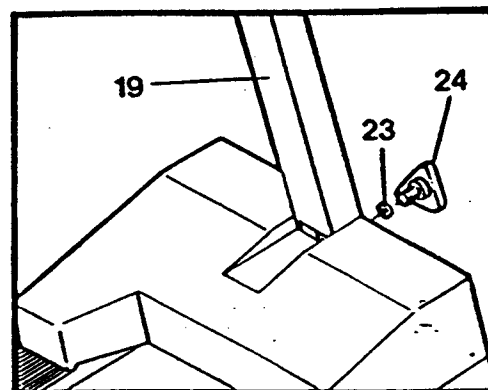

2. Slide the upper end of the Side Rail (6) into the opening in the left side of the Console (9). Insert the Short Side Rail Bolt (18) through the metal plate under the Console, and tighten the Bolt into the Side Rail. Note: If the Side Rail cannot be inserted into the Console far enough to attach the Bolt, roll back the Side Foam Grip (7) slightly.

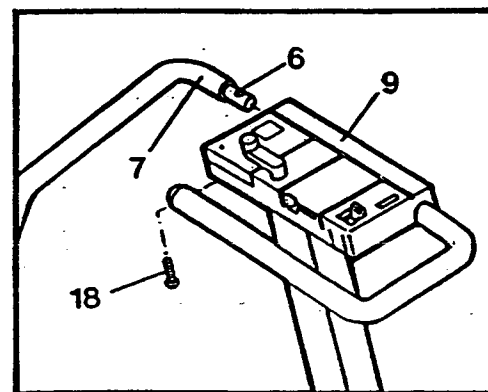

3. Align the hole in the lower end of the Side Rail (6) with the hole in the Frame (48). Attach the Side Rail with the Long Side Rail Bolt (4), Formed Washer (3) and the Side Rail Washer (2). Tighten the Lock Knob (See step 1).

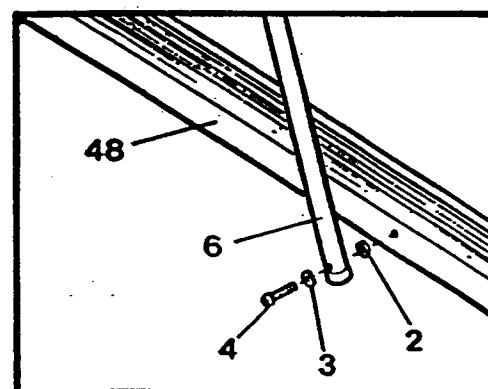


OPERATION AND ADJUSTMENT

GROUNDING INSTRUCTIONS

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


DANGER: Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in Drawing 1. A temporary adapter that looks like the adapter illustrated in Drawing 2 may be used to connect this plug to a 2-pole receptacle as shown in Drawing 2 if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (Drawing 1) can be installed by a qualified electrician. The green colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw. Some 2-pole receptacle outlet box covers are not grounded. Contact a qualified electrician to determine if the outlet box cover is grounded before using an adapter.

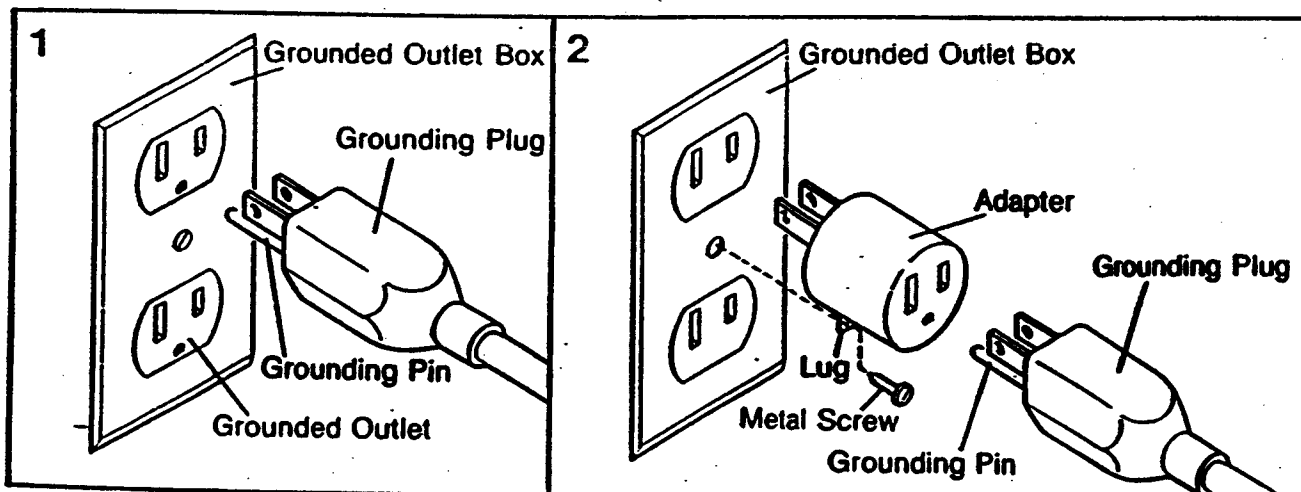

SILICONE APPLICATION

To maintain the low-friction quality of the walking belt and reduce treadmill wear, a non-oil, non-petroleum base silicone lubricant should be applied generously to the walking platform. (Silicone lubricant is available at most hardware and automotive stores.) It is very important to apply silicone lubricant before initial use of the treadmill. Lubricant should also be applied after every 10 hours of use or whenever a decrease in performance is noticed. **UNPLUG THE POWER CORD**, lift each side of the walking belt and apply the lubricant generously to the area indicated in the drawing.

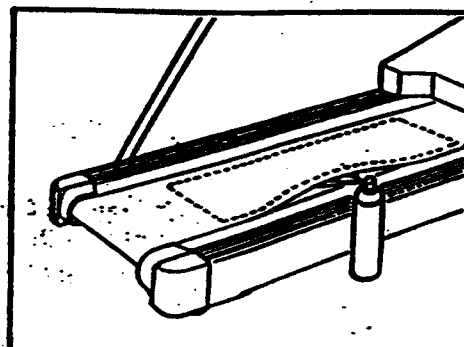


OPERATING INSTRUCTIONS

Read the instructions below carefully before starting the treadmill.

1. Step onto the foot rails and grasp the side rail with a firm grip.
2. Attach the clip on the safety key to the waistband of your clothing. Insert the key into the power switch. To turn the power on, move the key to the right. The walking belt will begin to move.
IMPORTANT: For your safety, always wear the clip when using the treadmill. If you should slip or fall while exercising, the key will be disengaged from the switch, instantly turning the power off.
3. Carefully step onto the moving walking belt and begin walking.
4. Turn the speed crank until the walking belt is moving at the desired speed. Turn the crank counter-clockwise to increase the speed, or clockwise to decrease the speed. Note: Turn the crank only when the walking belt is moving. Do not turn the crank too far or the cable may be damaged.
5. To turn the treadmill off, move the safety key to the left. Remove the key from the power switch.

INCLINE ADJUSTMENT

To vary the level of exercise intensity, the incline of the treadmill can be changed using the lever on the right side of the console. Do not adjust the incline while you are walking or running on the treadmill. To increase the incline of the treadmill, stand toward the rear of the frame and pull back the lever. When the desired incline is reached, release the lever. To decrease the incline, stand toward the front of the frame, lean forward if necessary, and pull back the lever until the desired incline is reached. There is a bubble located above the incline lever on the console. The bubble measures the incline of the treadmill.

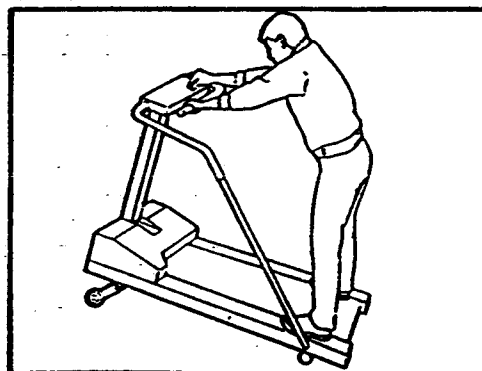

ELECTRONIC MONITOR OPERATION

Refer to the ELECTRONIC MONITOR OPERATION GUIDE accompanying this manual for instructions.

MAINTENANCE AND TROUBLE - SHOOTING


Check all parts periodically to ensure that they are tightened securely. Outside surfaces of the treadmill can be cleaned using a damp cloth and mild, non-abrasive detergent. Do not allow water to come in contact with the electronic monitor.

WALKING BELT ADJUSTMENT


To prevent damage to the walking belt, the belt must be kept from shifting to either side of the treadmill during use. Periodically observe the spaces between the edges of the belt and the sides of the frame. If the belt is too close to one side of the frame, adjust the belt in the following manner.

1. Locate the belt adjustment bolts and the allen wrench. **KEEP YOUR HANDS AWAY FROM THE MOVING WALKING BELT OR SERIOUS INJURY COULD RESULT.**


2. A. If the walking belt has shifted to the left side: Turn the left adjustment bolt clockwise and the right adjustment bolt counterclockwise, 1/8 of a turn at a time, until belt moves away from the side of the frame.

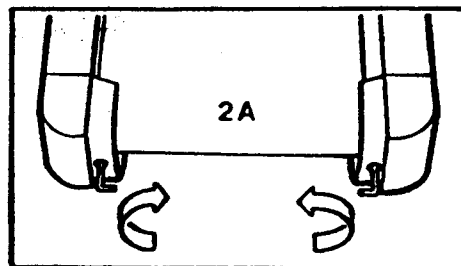


B. If the walking belt has shifted to the right side: Turn the left adjustment bolt counterclockwise and the right adjustment bolt clockwise, 1/8 of a turn at a time, until belt moves away from the side of the frame.

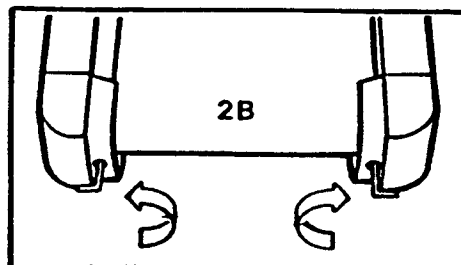


If the walking belt slips during operation, the tension should be adjusted. Turn both adjustment bolts clockwise an equal amount until the belt no longer slips. Be careful to keep the belt centered. **Do not overtighten the bolts.** Overtightening may stretch the belt, cause excessive roller noise and reduce motor performance.

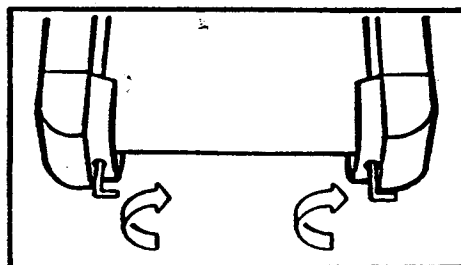

To check for proper walking belt tightness, **UNPLUG THE POWER CORD** and lift the sides of the belt. You should be able to lift both sides approximately 2-3 inches off the walking platform. The center of the belt should remain just at the surface of the platform, causing the belt to bow.

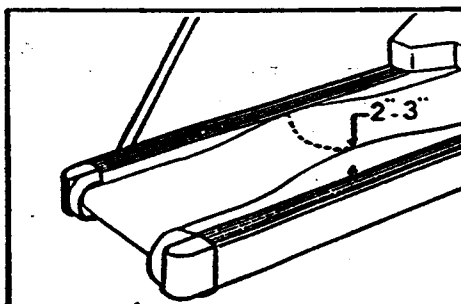


The allen wrench can be stored on one of the roller brackets using the adhesive tool clamp included.

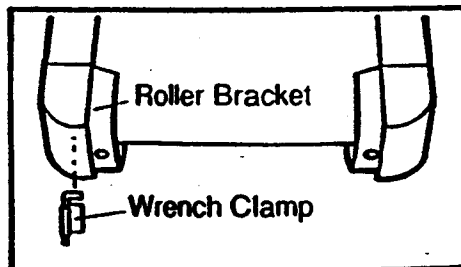

CIRCUIT BREAKER

If the treadmill stops or will not start, check the circuit breaker located on the front of the frame near the power cord. The circuit breaker is designed to protect the electrical system. If the circuit breaker has tripped, the switch will protrude as shown. To reset the circuit breaker, allow the treadmill to cool for a few minutes, **MOVE THE SAFETY KEY TO THE OFF POSITION** and push the switch back in.

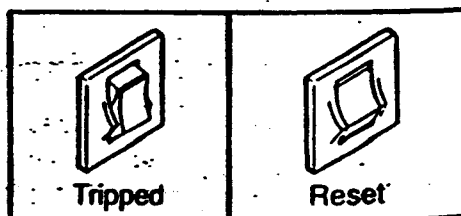

ELECTRONIC MONITOR

A 9-volt battery must be installed in the electronic monitor before the monitor can be operated (see the ELECTRONIC MONITOR OPERATION GUIDE). If the monitor does not function properly, test the monitor using new batteries. Most problems are the result of weak batteries.

STORAGE

Always unplug the power cord when the treadmill is not in use. To convert the treadmill to the storage position, first remove the bolts and washers from the lower and upper ends of the side rails. Store the bolts and washers in a secure location. Loosen the lock knob and lay the upright post on the treadmill. Lay the side rail on the treadmill. The treadmill can be moved by lifting the back end and pushing or pulling the treadmill on the front wheels.

CONDITIONING GUIDELINES

The following guidelines will help you plan and regulate your personal fitness program. Before beginning this or any exercise program, consult your physician. Remember that adequate rest and good nutrition are also essential to the success of any fitness program.

EXERCISE INTENSITY

For an effective aerobic workout, it is important to exercise at the proper intensity level. You can maintain the proper intensity level using your heart rate as a guide. To develop your cardiovascular capacity, your heart rate should be kept within what is called your "training zone" during exercise. You can find your training zone by consulting the table below. Training zones are listed for both conditioned and unconditioned persons, ages 20 to 85 years.

AGE	UNCONDITIONED TRAINING ZONE (BEATS/MIN)	CONDITIONED TRAINING ZONE (BEATS/MIN)	AGE	UNCONDITIONED TRAINING ZONE (BEATS/MIN)	CONDITIONED TRAINING ZONE (BEATS/MIN)
20	138-167	133-162	55	127-155	122-149
25	136-166	132-160	60	126-153	121-147
30	135-164	130-158	65	125-151	119-145
35	134-162	129-156	70	123-150	118-144
40	132-161	127-155	75	122-147	117-142
45	131-159	125-153	80	120-146	115-140
50	129-156	124-150	85	118-144	114-139

During the first few weeks of your exercise program you should keep your heart rate near the low end of your training zone. Over the course of a few months, gradually increase your heart rate until you reach the high end of your training zone. As your conditioning improves, a greater workload will be required in order to raise your heart rate to your training zone.

You can measure your heart rate and find the proper level of exercise intensity using the electronic monitor (see the ELECTRONIC MONITOR OPERATION GUIDE.) First, set the monitor for 4 minutes. Press the "START/STOP" key and exercise at a comfortable pace until the 4 minutes elapse. Immediately measure your heart rate using the Pulse function. If your heart rate is below your training zone, increase your level of exertion. If your heart rate is too high, reduce your level of exertion.

THE WORKOUT

Each workout should begin with at least 5 minutes of stretching or light calisthenics. Warming up in this manner prepares the body for more strenuous exercise by increasing circulation, delivering more oxygen to the muscles, and raising the body temperature. The warm-up should be followed by 20-30 minutes of exercising with your heart rate in your training zone. Each workout should end with at least 5 minutes of stretching or light exercise to aid circulation and prevent soreness.

To maintain or improve your conditioning, you must exercise 2-3 times per week as described above. A day of rest between workouts is recommended. After a few months of exercising, the number of workouts can be increased to 4-5 per week. The key to achieving successful results is consistency.


PART LIST – MODEL NO. WL360900

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Side Rail Endcap	40	2	Hood Mount Anchor
2	1	Side Rail Washer	41	4	Phillips Screw
3	1	Formed Washer	42	4	Leg Bolt
4	1	Long Side Rail Bolt	43	1	Safety Cover
5	1	Front Foam Grip	44	1	Left Foot Rail
6	1	Left Side Rail	45	6	Platform Screw
7	1	Side Foam Grip	46	1	Front Roller/Pulley
8	4	Console Screw	47	1	Walking Belt
9	1	Console Assembly	48	1	Frame
10	1	Speed Crank <i>NLP</i>	49	1	Walking Platform
11	1	Pulse Ear Clip	50	3	Screw
12	1	Electronic Monitor	51	1	Long Shaft Spacer
13	1	Clothes Clip	52	1	Right Roller Bracket
14	1	Safety Key/Clip	53	1	Rear Roller
15	1	Speed Adj. Assembly	54	1	Allen Wrench
16	1	Incline Indicator	55	1	Wrench Clamp
17	1	Spacer	56	2	Adjustment Bolt
18	1	Short Side Rail Bolt	57	2	Adjustment Washer
19	1	Upright Post	58	1	Left Roller Bracket
20	1	Hinge Bolt	59	1	Motor Hood
21	4	Hinge Washer	60	6	Hood Screw
22	1	On/Off Wire	61	1	Sensor Magnet
23	1	Lock Knob Washer	62	1	V-Belt
24	1	Lock Knob	63	1	Sensor Wire/Reed Switch
25	1	Hinge Nut	64	4	Mounting Screw
26	1	Incline Leg	65	1	Right Foot Rail
27	1	Pulley Clamp	66	1	Handrail Cap
28	1	Pivot Shaft	67	4	Leg Locknut
29	2	Cable Swivel	68	2	Rear Leg End Cap
30	2	Swivel Nut	69	1	Incline Control/Cable
31	2	Motor Clamp Assembly	70	1	Cylinder Pin
32	1	Motor Pulley <i>6200</i>	71	1	Cotter Pin
33	2	Pivot Shaft Bolt	72	1	Lift Cylinder
34	1	Motor	73	1	Cylinder Cushion
35	2	Wheel	74	1	Cylinder Bracket
36	2	Wire Clip	75	1	E-Clip
37	1	Circuit Breaker	76	1	Cylinder Release
38	1	Power Cord	77	1	Short Shaft Spacer
39	6	Small Screw	#	1	Owner's Manual
			#	1	Electronic Monitor Guide

Note: “#” indicates a non-illustrated part.

See the back cover of this manual for information on ordering additional parts.

EXPLODED DRAWING - MODEL NO. WL360900

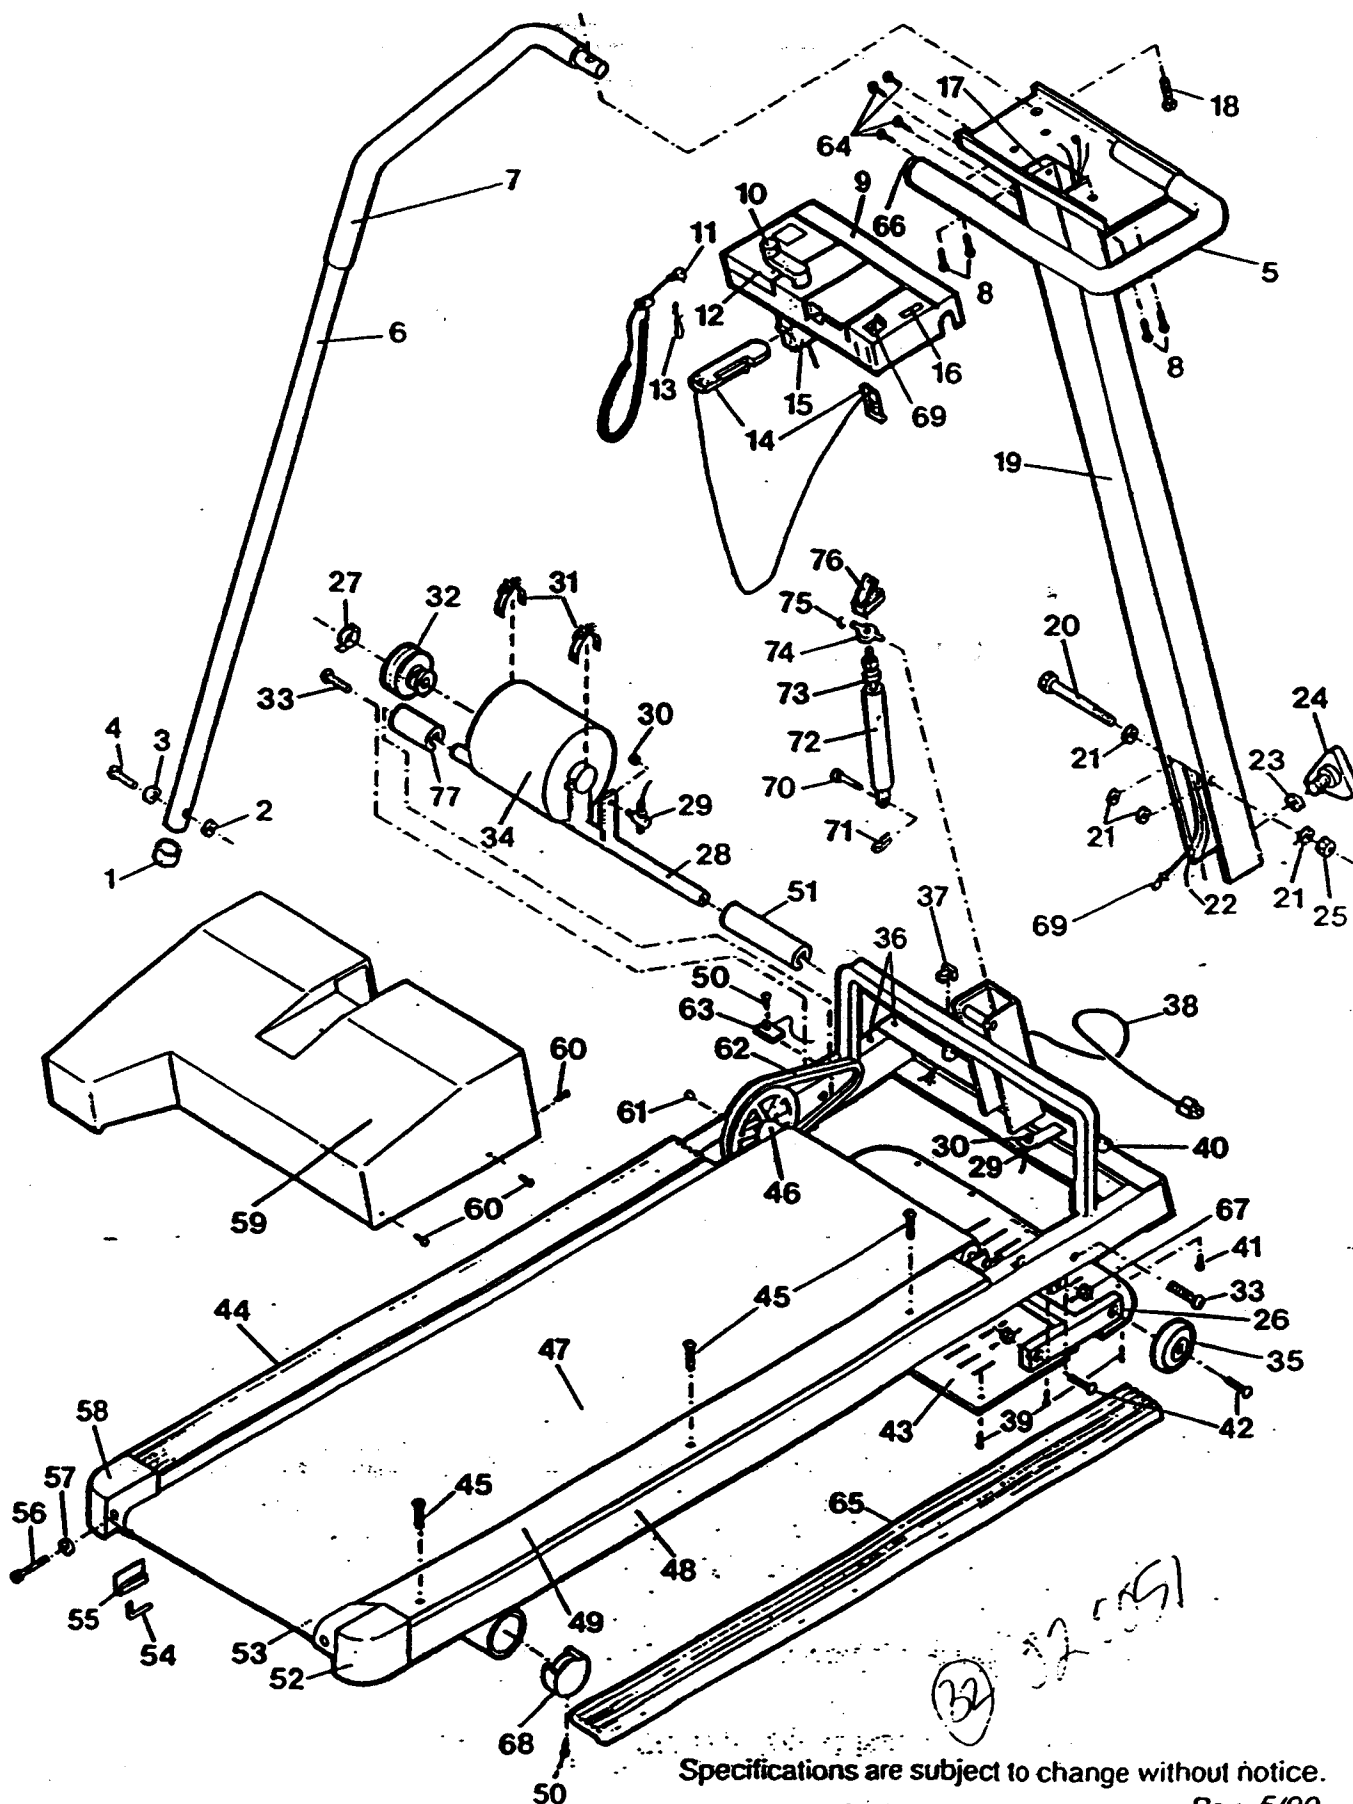

Specifications are subject to change without notice.
Rev. 5/90

ORDERING PARTS

Replacement parts can be ordered by calling our Customer Service Department toll-free at 1-800-99WESLO (999-3756). Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please be prepared to give the following information:

1. The name of the product (Weslo CADENCE 2300 Treadmill).
2. The model number of the product (WL360900).
3. The serial number of the product, found on a decal on the frame (see the drawing on the front cover for the location of the decal).
4. The key number of the part from the part list on page 10.
5. The description of the part from the part list on page 10.

LIMITED WARRANTY

Weslo, Inc. ("Weslo") warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. Weslo's obligation under this Warranty is limited to replacing or repairing, at Weslo's option, the product at one of its authorized service centers. All products for which warranty claim is made must be received by Weslo at one of its authorized service centers with all freight and other transportation charges prepaid, accompanied by sufficient proof of purchase. All returns must be pre-authorized by Weslo. Pre-authorization may be obtained by calling Weslo's Customer Service Department at 1-800-99WESLO. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by a Weslo authorized service center or for products used for commercial or rental purposes. No other warranty beyond that specifically set forth above is authorized by Weslo.

WESLO IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE, OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES OF WHATSOEVER NATURE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ANY AND ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

WESLO INC., P.O. BOX 10, LOGAN UT 84321