


WESLO[®] CADENCE[®] 850

Model No. WLTL85053/WLTL55553

Serial No. _____

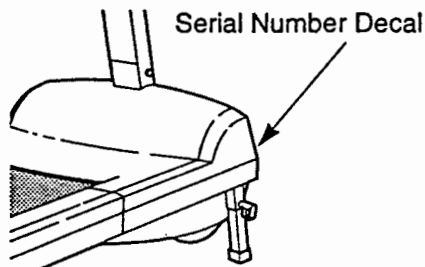

OWNER'S MANUAL

QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or find that there are missing or damaged parts, we will guarantee you complete satisfaction through direct assistance from our factory. TO AVOID UNNECESSARY DELAYS, PLEASE CALL DIRECT TO OUR TOLL-FREE CUSTOMER HOT LINE. The trained technicians on our Customer Hot Line will provide immediate assistance, free of charge to you.


CUSTOMER HOT LINE:

1-800-999-3756

Mon.-Fri., 6 a.m.-6 p.m. MST

▲ CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

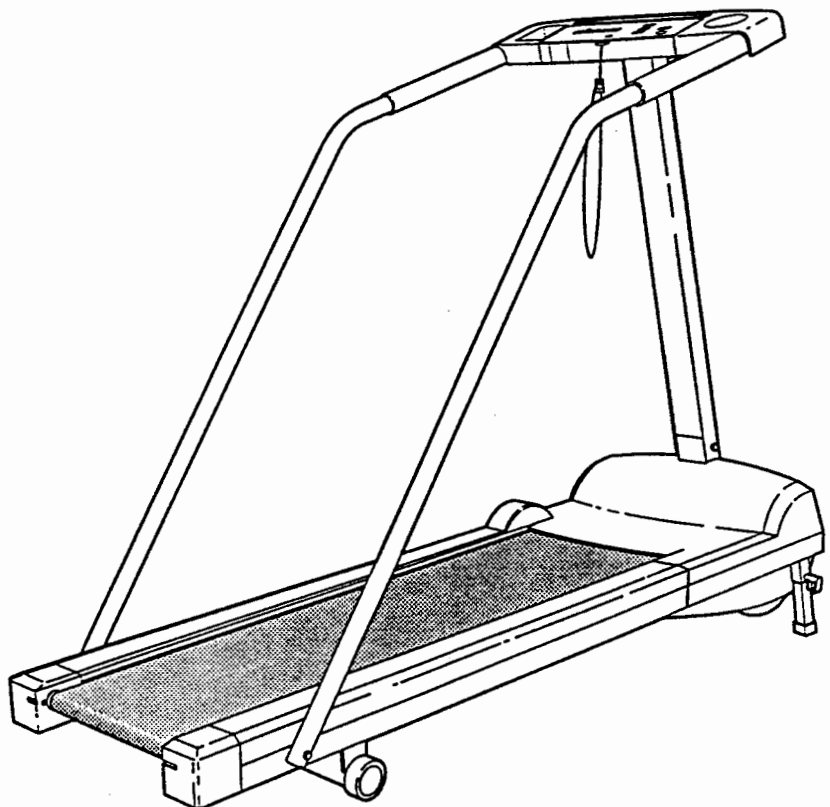

DESIGNED TO
1996
CONSTRUCTING

WESLO® CADENCE® 850

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS	3
BEFORE YOU BEGIN	4
ASSEMBLY	5
OPERATION AND ADJUSTMENT	7
TROUBLE-SHOOTING AND STORAGE	10
CONDITIONING GUIDELINES	12
PART LIST	14
EXPLODED DRAWING	15
ORDERING REPLACEMENT PARTS	Back Cover
LIMITED WARRANTY	Back Cover

REF
JU
MANU

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

IMPORTANT PRECAUTIONS

▲ WARNING: To reduce the risk of burns, fire, electric shock or injury to persons, read the following important precautions and information before operating the treadmill.

1. It is the responsibility of the owner to ensure that all users of this treadmill are adequately informed of all warnings and precautions.
2. Use the treadmill only as described in this manual.
3. Place the treadmill on a level surface, with eight feet of clearance behind it. Do not place the treadmill on any surface that blocks air openings. To protect the floor or carpet from damage, place a mat under the treadmill.
4. Keep the treadmill indoors, away from moisture and dust. Do not put the treadmill in a garage or covered patio, or near water.
5. Do not operate the treadmill where aerosol products are used or where oxygen is being administered.
6. Keep small children and pets away from the treadmill at all times.
7. The treadmill should be used only by persons weighing 250 pounds or less. Never allow more than one person on the treadmill at a time.
8. Wear appropriate exercise attire when using the treadmill. Do not wear loose clothing that could become caught in the treadmill. Athletic support clothes are recommended for both men and women. *Always wear athletic shoes. Never use the treadmill with bare feet, wearing only stockings, or in sandals.*
9. When connecting the power cord (see HOW TO PLUG IN THE POWER CORD on page 7), plug the power cord into a surge protector (not included) and plug the surge protector into a grounded circuit capable of carrying 15 or more amps. No other appliance should be on the same circuit.
10. Use only a UL-listed surge protector, rated at 15 amps, with a 14-gauge cord of five feet or less in length. Do not use an extension cord.
11. Never move the walking belt while the power is turned off. Do not operate the treadmill if the power cord or plug is damaged, or if the treadmill is not working properly. (See BEFORE YOU BEGIN on page 4 if the treadmill is not working properly.)
12. Keep the power cord and the surge protector away from heated surfaces.
13. Never start the treadmill while you are standing on the walking belt. Always hold the handrails while exercising on the treadmill.
14. The treadmill is capable of high speeds. Adjust the speed in small increments to avoid sudden jumps in speed.
15. To reduce the possibility of the treadmill overheating, do not operate the treadmill continuously for longer than 1 hour.
16. The pulse sensor is not a medical device. Various factors, including the user's movement, may affect the accuracy of heart rate readings. The pulse sensor is intended only as an exercise aid in determining heart rate trends in general.
17. Never leave the treadmill unattended while it is running. Always remove the SAFEKEY when the treadmill is not in use.
18. To change the incline level of the treadmill, refer to the instructions on page 10. Do not use the treadmill with the incline pins removed.
19. Never drop or insert any object into any opening.
20. Inspect and tighten all parts of the treadmill every three months.
21. Always unplug the power cord before performing the maintenance and adjustment procedures described in this manual. Never remove the motor hood unless instructed to do so by an authorized service representative. Servicing other than the procedures in this manual should be performed by an authorized service representative only.

SAVE THESE INSTRUCTIONS


BEFORE YOU BEGIN

Thank you for selecting the WESLO CADENCE® 850 treadmill. The CADENCE 850 treadmill blends advanced technology with innovative design to let you enjoy an excellent form of cardiovascular exercise in the convenience and privacy of your home.

For your benefit, read this manual carefully before using the treadmill. If you have additional questions, please call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m.

until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please note the product model number and serial number before calling. The model number is WLTL85053/WLTL55553. The serial number can be found on a decal attached to the treadmill (see the front cover of this manual for the location).

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

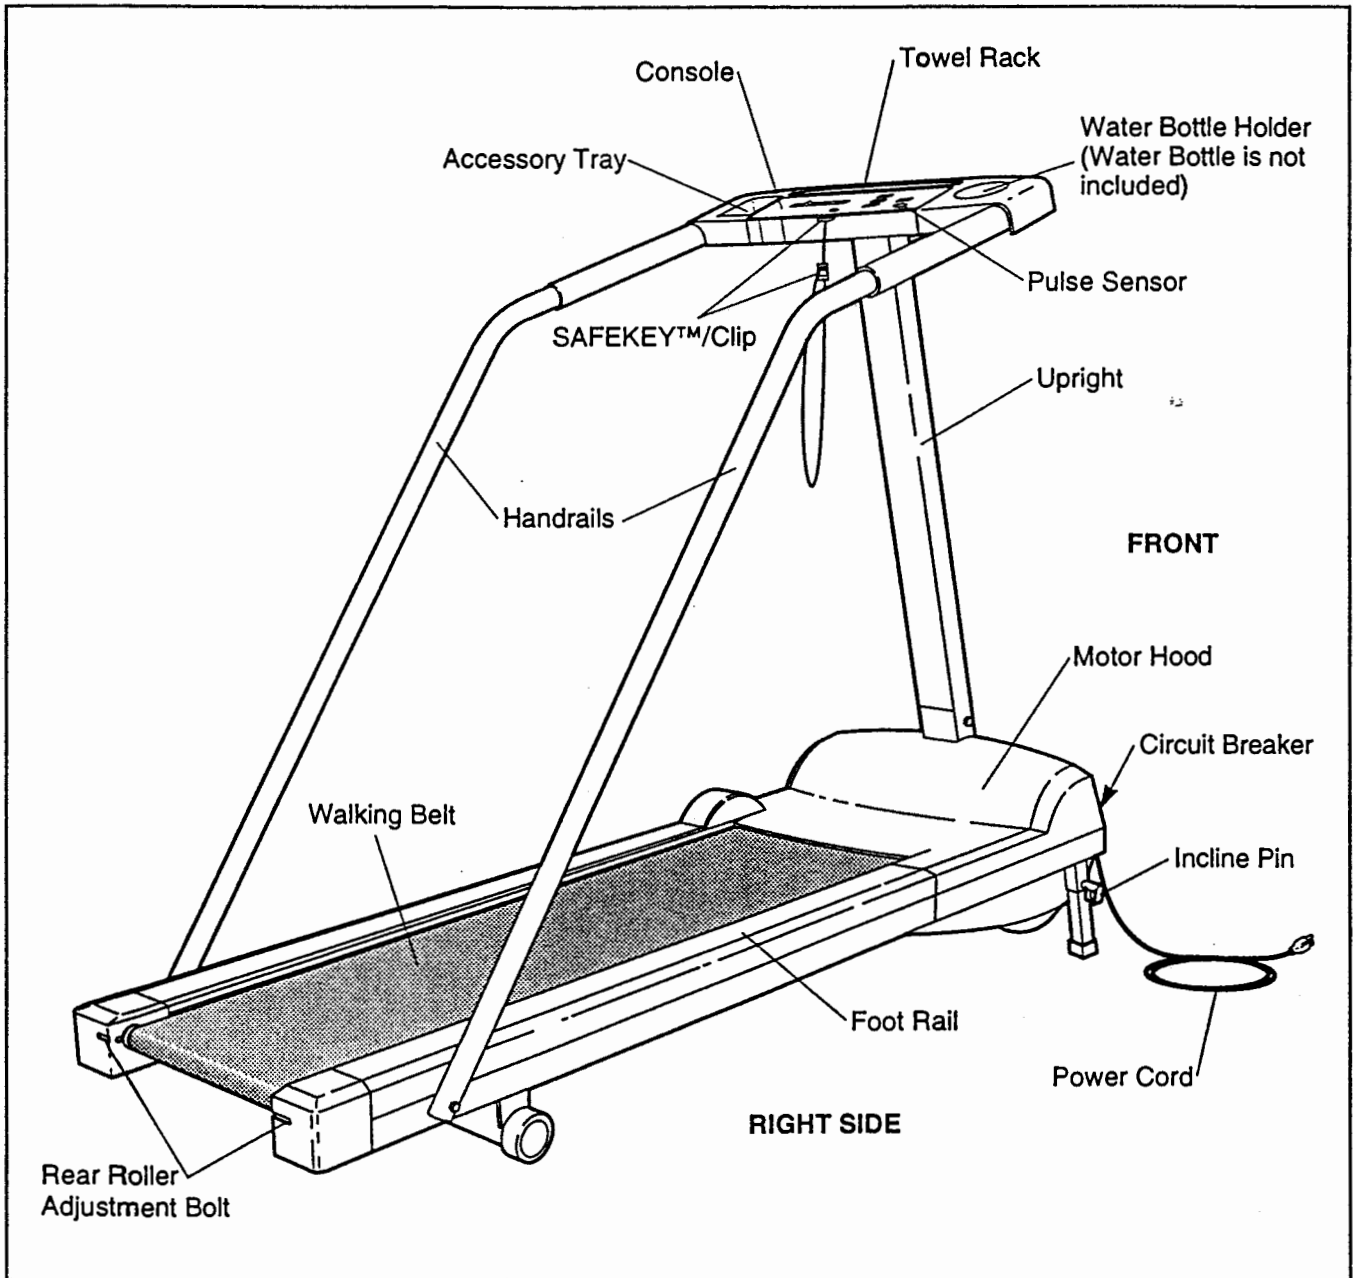


REF
MANU


ASSEMBLY

Set the treadmill in a cleared area and remove all packing materials. Do not dispose of the packing materials until assembly is completed. Refer to the drawings below to identify small parts used in assembly.


TOOLS REQUIRED FOR ASSEMBLY: One adjustable wrench  (not included).

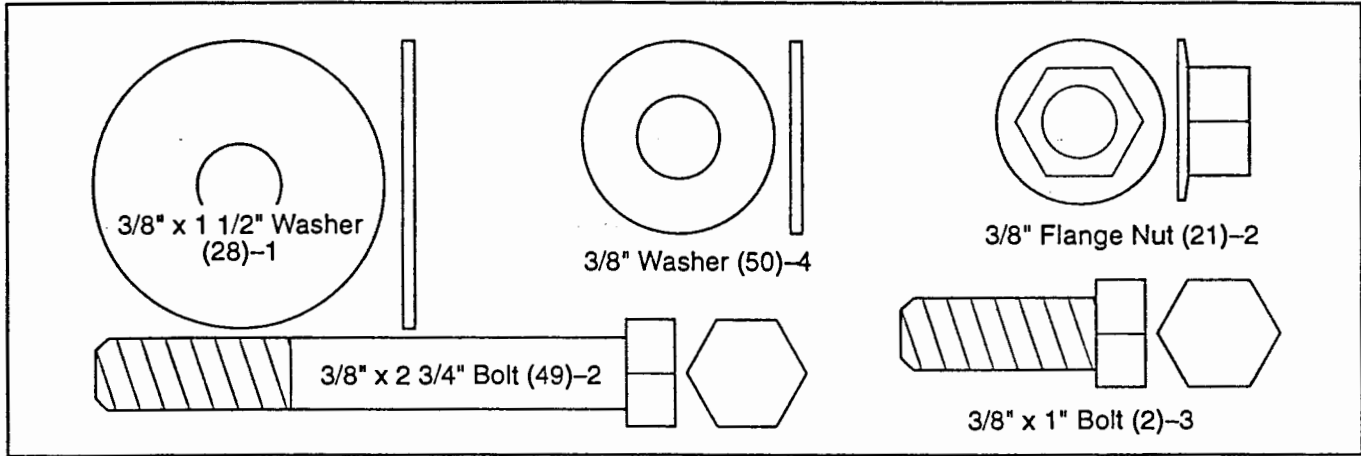

1. Raise the Upright (11) to the vertical position. Slide the 3/8" x 1 1/2" Washer (28) onto a 3/8" x 1" Bolt (2). Insert the Bolt into the lower end of the Upright and finger tighten the Bolt into the Frame (59).

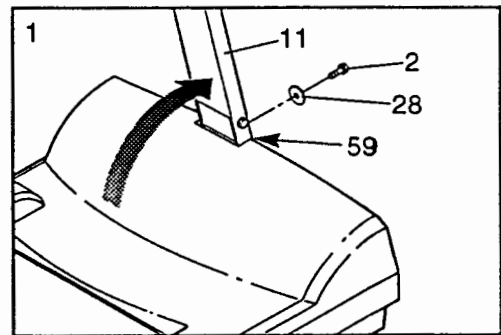


2. If there are plastic cable ties in the upper ends of the Handrails (1), cut them off. Insert the upper end of one of the Handrails into the Console Housing (3). (Note: The two Handrails are identical. Due to the manufacturing process, there is a dimple near the lower end of each Handrail. It makes no difference which side the dimple is on when the Handrails are assembled.) Insert a 3/8" x 1" Bolt (2), with a 3/8" Washer (50), up into the plate under the Console Housing, and finger tighten the Bolt into the Handrail.

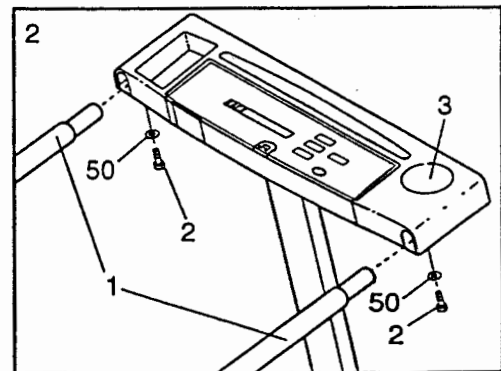

Attach the other Handrail (1) in the same manner.


3. Insert a 3/8" x 2 3/4" Bolt (49), with a 3/8" Washer (50), into the lower end of the right Handrail (1) and the Frame (59). Reach under the Frame and tighten a 3/8" Flange Nut (21) onto the Bolt.

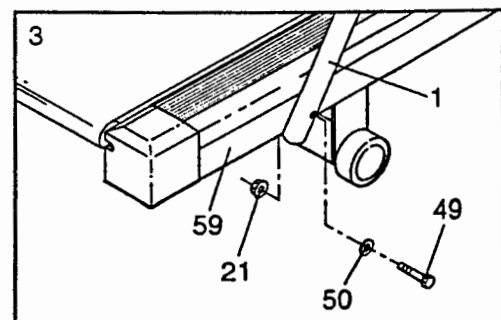


Attach the other Handrail (1) (not shown) in the same manner.
Tighten all Bolts used in steps 1 through 3.

ED TO
1996
TURNING

- The Console (3) requires three "AA" batteries (not included); alkaline batteries are recommended. Slide up the Battery Cover (77). Press three batteries into the battery compartment, with the negative (-) ends of the batteries touching the springs. Close the Battery Cover.

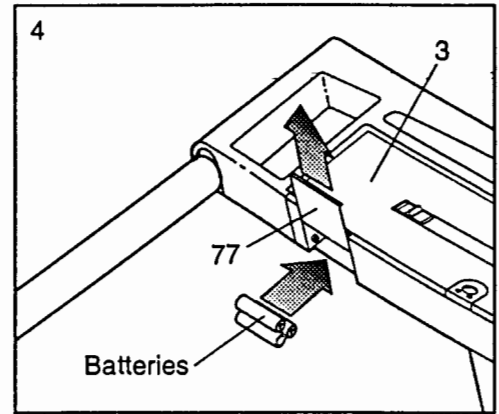

- Remove the paper backing from the Wrench Clip (64). Press the Wrench Clip onto the Right Endcap (63) in the indicated location. Press the Allen Wrench (65) into the Wrench Clip.

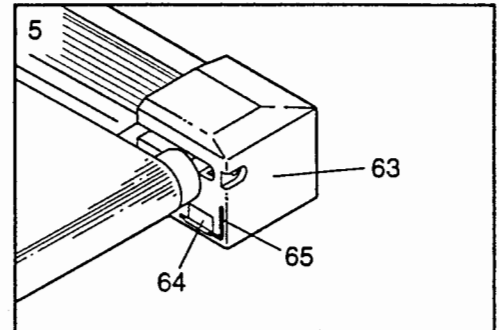

Make sure that all parts are tightened before you use the treadmill. **Note: To protect the floor or carpet, place a mat under the treadmill.**

RF
MAIN

OPERATION AND ADJUSTMENT

THE PERFORMANT LUBE™ WALKING BELT

Your treadmill features a walking belt coated with PERFORMANT LUBE™, a high-performance lubricant. **IMPORTANT:** Never apply silicone spray or other substances to the walking belt or the walking platform. They will deteriorate the walking belt and cause excessive wear.

HOW TO PLUG IN THE POWER CORD

⚠ DANGER: Improper connection of the equipment-grounding conductor can result in an increased risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product—if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

Your treadmill, like any other type of sophisticated electronic equipment, can be seriously damaged by sudden voltage changes in your home's power. Voltage surges, spikes, and noise interference can result from weather conditions or from other appliances being turned on or off. To decrease the possibility of your treadmill being damaged, always use a surge protector (not included) with your treadmill.

Surge protectors are sold at most hardware stores and department stores. Use only a UL-listed surge protector, rated at 15 amps, with a 14-gauge cord of five feet or less in length.

This product must be grounded. If it should malfunction or break down, grounding provides a path of least resistance for electric current to reduce the

risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. **Plug the power cord into a surge protector, and plug the surge protector into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.**

This product is for use on a nominal 120-volt circuit, and has a grounding plug that looks like the plug illustrated in drawing 1 below. A temporary adapter that looks like the adapter illustrated in drawing 2 may be used to connect the surge protector to a 2-pole receptacle as shown in drawing 2 if a properly grounded outlet is not available.

The temporary adapter should be used only until a properly grounded outlet (drawing 1) can be installed by a qualified electrician.

The green-colored rigid ear, lug, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used it must be held in place by a metal screw. **Some 2-pole receptacle outlet box covers are not grounded. Contact a qualified electrician to determine if the outlet box cover is grounded before using an adapter.**


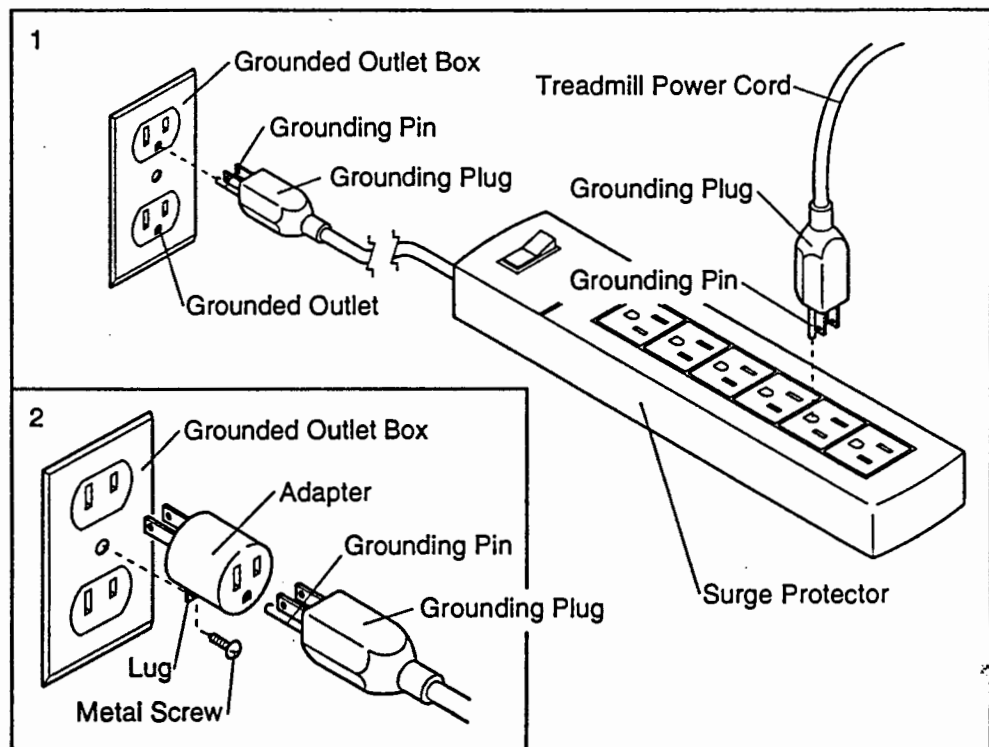


DIAGRAM OF THE CONSOLE


Your treadmill features one of the two consoles shown below. The operation of both consoles is explained on pages 9 and 10.

VERSION A

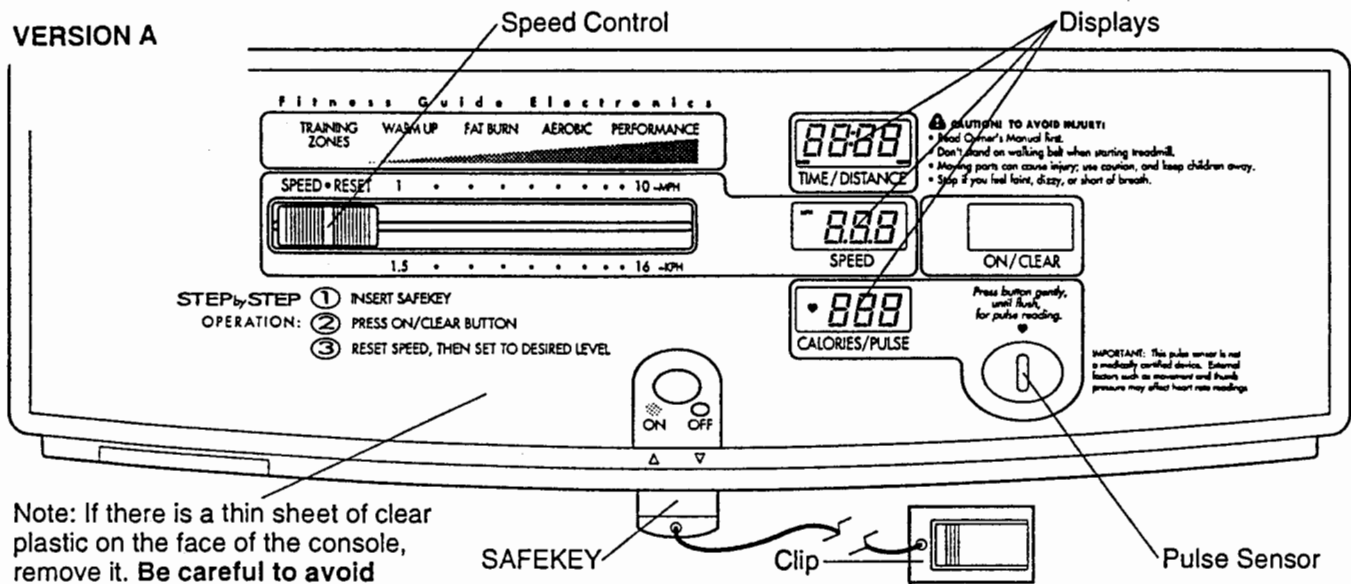

Note: If there is a thin sheet of clear plastic on the face of the console, remove it. Be careful to avoid spilling liquids on the console.

VERSION B

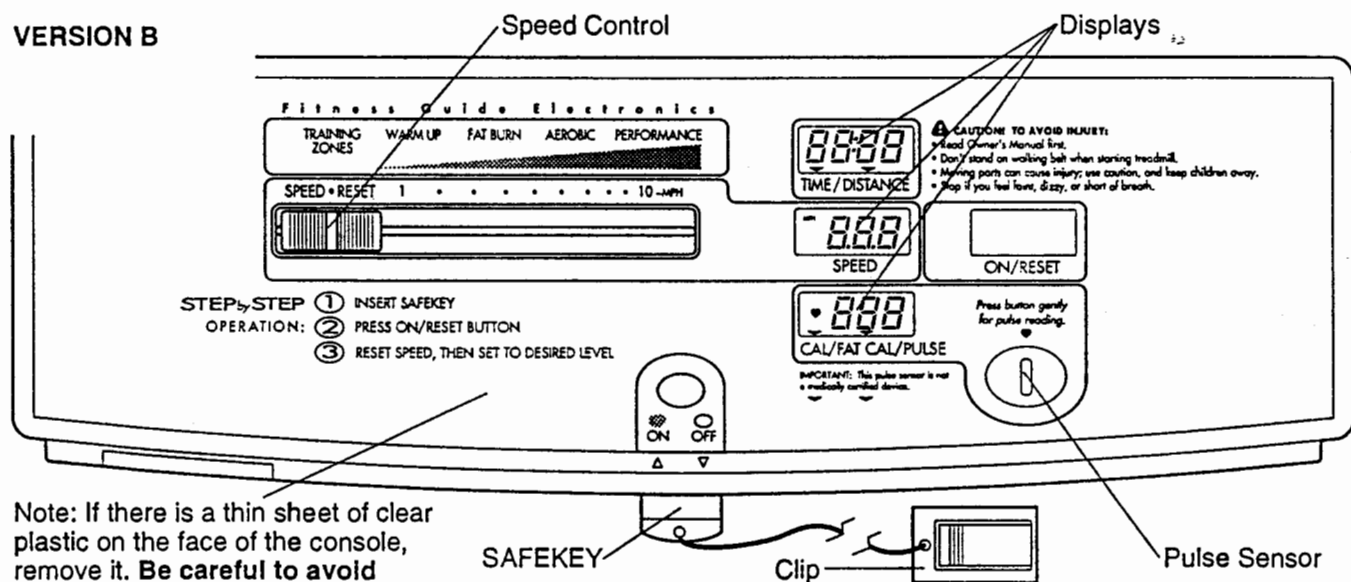

Note: If there is a thin sheet of clear plastic on the face of the console, remove it. Be careful to avoid spilling liquids on the console.

CAUTION: Before operating the console, read the following important precautions.

- Do not stand on the walking belt when turning on the power.
- Always wear the clip while operating the treadmill. When the SAFEKEY is removed from the console, the power will shut off.
- After the speed control is moved, there will be a pause before the walking belt begins to move.
- Adjust the speed in small increments until you are familiar with the treadmill.
- The training zones marked above the speed control are guidelines only. Read **CONDITIONING GUIDELINES** on pages 12 and 13 to determine the proper exercise level.
- To reduce the risk of electric shock, keep the console dry. Avoid spilling liquid on the console and use only a sealed water bottle.


REF
JL
MANU

STEP BY STEP CONSOLE OPERATION

Make sure that the power cord is properly plugged in. (See HOW TO PLUG IN THE POWER CORD on page 7.) Next, step onto the foot rails of the treadmill. Find the clip attached to the SAFEKEY (see the drawing on page 8), and slide the clip onto the waistband of your clothing. Follow the steps below to operate the console:


1 Insert the SAFEKEY fully into the power switch.

Note: The three displays will not turn on yet, unless batteries were just installed.

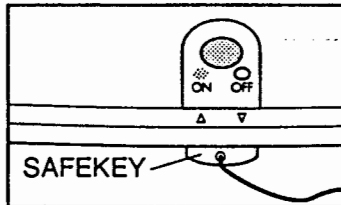


2 Press the ON/CLEAR (or ON/RESET) button.

When the ON/CLEAR (or ON/RESET) button is pressed, the three displays will turn on. Note: If batteries were just installed, the displays will already be on.

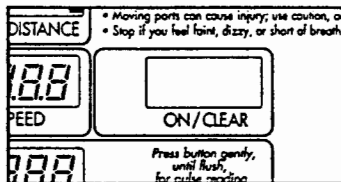

3 Reset the speed control and start the walking belt.


Slide the speed control fully to the left, to the "SPEED RESET" position. Next, slide the control to the right until the walking belt begins to move at slow speed.

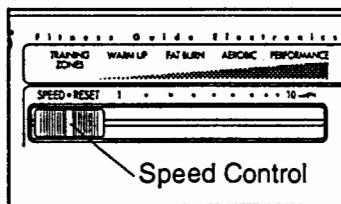

Carefully step onto the walking belt and begin walking. Change the speed of the walking belt as desired by sliding the speed control. To stop the walking belt, step onto the foot rails and slide the speed control to the "SPEED RESET" position.

4 Measure your pulse if desired.


To use the pulse sensor, stand on the foot rails and place your thumb on the pulse sensor as shown. The pulse sensor is pressure-activated.

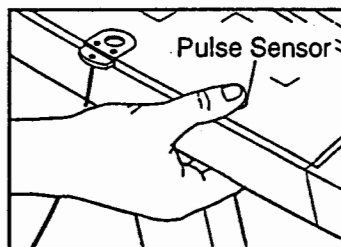

Fully press down the pulse sensor. Do not press too hard, or the circulation in your thumb will be restricted, and your pulse will not be detected. Next, slightly raise your thumb until the heart-shaped indicator in the CALORIES/PULSE display (or the CAL/FAT CAL/PULSE display) flashes steadily. Hold your thumb at this level. After 5 to 10 seconds, your pulse will be displayed. Hold your thumb on the sensor for another 15 seconds for the most accurate reading. If the displayed pulse appears to be too high or too low, or if your pulse is not displayed, lift your thumb off the sensor and allow the display to reset. Press down again on the sensor as described above. Make sure that your thumb is positioned as shown, and that you are applying the proper amount of pressure. Try the sensor several times until you become familiar with it. Always stand still while measuring your pulse.

5 Follow your progress with the three displays.


TIME/DISTANCE display—This display shows both the elapsed time and the total distance that you have walked or run. Every seven seconds, the display will automatically change from one mode to the other. Mode indicators will show which mode is displayed. Note: When the walking belt is stopped, the elapsed time will pause.

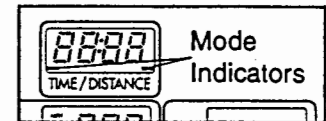

SPEED display—This display shows the speed of the walking belt.



CALORIES/PULSE display (or CAL/FAT CAL/PULSE display)—If you have console version B

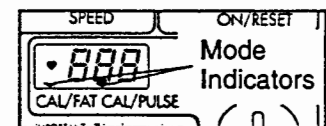

(see the drawing at the right), this display shows the approximate numbers of *calories* and *fat calories* you have burned. (See BURNING FAT on page 12 for an explanation of fat calories.) Every seven seconds, the display will automatically change from one number to the other. Mode indicators will show which number is displayed. Note: This display also shows your heart rate when your thumb is on the pulse sensor.

If you have console version A (see the drawing at the right), this display shows the approximate number of *calories* you have burned. To find the approximate number of *fat calories* you have burned, refer



to the table below. Find the number of calories you have burned in the shaded column, and look to the right to find the number of fat calories you have burned. For example, if the CALORIES/PULSE display shows that you have burned about 80 calories, the table below shows that you have burned about 50 fat calories.

Calories	Fat Cal.	Calories	Fat Cal.
10	6	210	131
20	13	220	138
30	19	230	144
40	25	240	150
50	31	250	156
60	38	260	163
70	44	270	169
80	50	280	175
90	56	290	181
100	63	300	188
110	69	310	194
120	75	320	200
130	81	330	206
140	88	340	213
150	94	350	219
160	100	360	225
170	106	370	231
180	113	380	238
190	119	390	244
200	125	400	250

Note: The CALORIES/PULSE display also shows your heart rate when your thumb is on the pulse sensor.

To reset the three displays, press the ON/CLEAR (or ON/RESET) button.

6 When you are finished exercising, stop the walking belt and remove the SAFEKEY.


Step onto the foot rails and slide the speed control to the "SPEED RESET" position. Remove the SAFEKEY from the console.

Note: The three displays will not turn off when the SAFEKEY is removed. Any time that the walking belt is stopped and the console buttons are not pressed for five minutes, the displays will automatically turn off.

HOW TO CHANGE THE INCLINE OF THE TREADMILL

To vary the intensity of your exercise, the incline of the treadmill can be changed. There are three different incline levels. Before changing the incline, remove the SAFEKEY and unplug the power cord.

To change the incline, carefully lay the treadmill on its left side. Remove the incline pin from the right incline leg as shown.

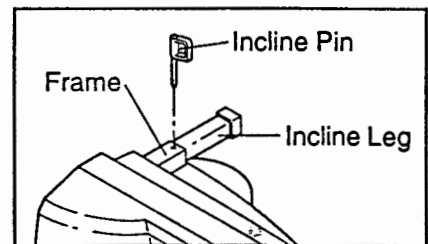

Adjust the incline leg to the desired height and fully re-insert the incline pin. Lay the treadmill on its right side. Repeat the procedure for the left incline leg. **CAUTION: Before using the treadmill, make sure that both Incline pins are fully inserted at the same height. Do not use the treadmill with the Incline pins removed.**

REF
MANU


TROUBLE-SHOOTING AND STORAGE

Most treadmill problems can be solved by following the simple steps below. Find the symptom that applies to your treadmill and follow the steps listed. If further assistance is needed, please call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays).

1. SYMPTOM: THE POWER DOES NOT TURN ON

- a. Make sure that the power cord is plugged into a surge protector, and that the surge protector is plugged into a properly grounded outlet. (See page 7.) Use only a UL-listed surge protector, rated at 15 amps, with a 14-gauge cord of five feet or less in length.
- b. After the power cord has been plugged in, make sure that the SAFEKEY is fully inserted into the console. (See step 1 on page 9.)

- c. Check the circuit breaker located on the treadmill frame near the power cord. If the switch protrudes as shown, the circuit breaker has tripped. To reset the circuit breaker, wait for five minutes and then press the switch back in.

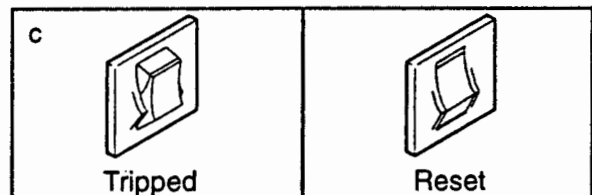

2. SYMPTOM: THE POWER TURNS OFF DURING USE


- a. Check the circuit breaker located on the treadmill frame near the power cord. If the circuit breaker has tripped, the switch will protrude. (See page 10.) To reset the circuit breaker, wait for five minutes and then press the switch back in.
- b. Make sure that the power cord is plugged in.
- c. Remove the SAFEKEY from the console. Reinsert the SAFEKEY fully into the console.

3. SYMPTOM: THE DISPLAYS OF THE CONSOLE DO NOT FUNCTION PROPERLY

- a. Check the batteries in the console. (See assembly step 4 on page 6.) Most problems are the result of drained batteries.


4. SYMPTOM: THE WALKING BELT SLOWS WHEN WALKED ON

- a. Use only a UL-listed surge protector, rated at 15 amps, with a 14-gauge cord of five feet or less in length.
- b. If the walking belt is overtightened, treadmill performance may decrease and the walking belt may be permanently damaged. Remove the SAFEKEY and **UNPLUG THE POWER CORD**. Using the allen wrench, turn both rear roller adjustment bolts counterclockwise, 1/4 of a turn (see the drawing below). When the walking belt is properly tightened, you should be able to lift each side of the walking belt 2 to 3 inches off the walking platform. The center of the walking belt should just touch the walking platform. Be careful to keep the walking belt centered. Plug in the power cord, insert the SAFEKEY and run the treadmill for a few minutes. Repeat until the walking belt is properly tightened. If the walking belt still slows when walked on, please call our Customer Service Department.

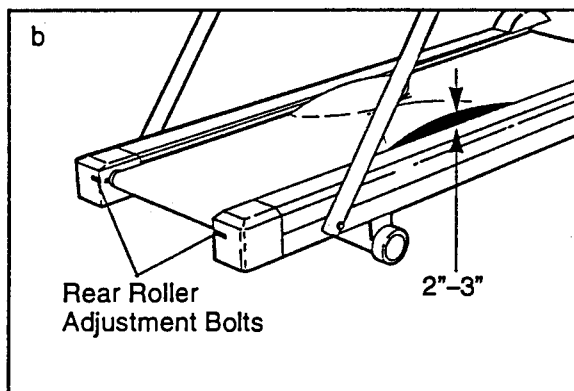


5. SYMPTOM: THE WALKING BELT IS OFF-CENTER OR SLIPS WHEN WALKED ON


- a. If the walking belt has shifted to the left, first remove the SAFEKEY and **UNPLUG THE POWER CORD**. Using the allen wrench, turn the left rear roller adjustment bolt clockwise, and the right bolt counterclockwise, 1/4 of a turn each. Be careful not to overtighten the walking belt. Plug in the power cord, insert the SAFEKEY and run the treadmill for a few minutes. Repeat until the walking belt is centered.

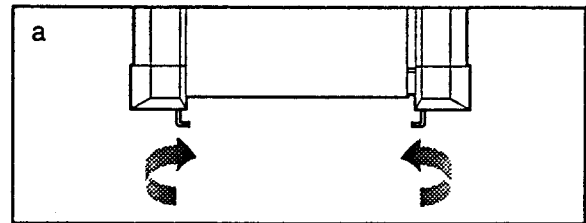

- b. If the walking belt has shifted to the right, first remove the SAFEKEY and **UNPLUG THE POWER CORD**. Using the allen wrench, turn the left rear roller adjustment bolt counterclockwise, and the right bolt clockwise, 1/4 of a turn each. Be careful not to overtighten the walking belt. Plug in the power cord, insert the SAFEKEY and run the treadmill for a few minutes. Repeat until the walking belt is centered.

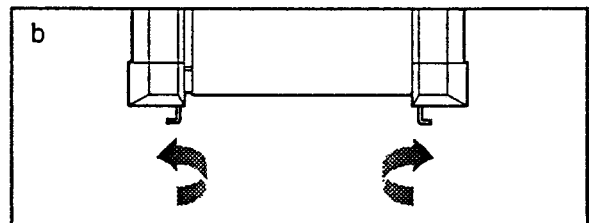


- c. If the walking belt slips when walked on, first remove the SAFEKEY and **UNPLUG THE POWER CORD**. Using the allen wrench, turn both rear roller adjustment bolts clockwise, 1/4 of a turn. When the walking belt is correctly tightened, you should be able to lift each side of the walking belt 2 to 3 inches off the walking platform. The center of the walking belt should just touch the walking platform. Be careful to keep the walking belt centered. Plug in the power cord, insert the SAFEKEY and run the treadmill for a few minutes. Repeat until the walking belt is properly tightened.

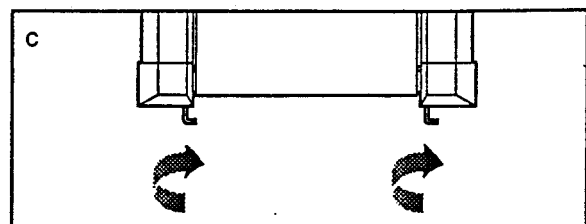


STORAGE

Unplug the power cord when the treadmill is not in use. It is recommended that the batteries be removed from the console and the treadmill be covered during extended periods of storage.


Remove the bolt, washer, and nut from the lower end of each handrail.

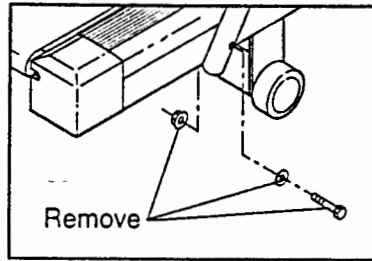

Remove the bolt and washer from the upper end of each handrail. Slide the handrails out of the console housing.

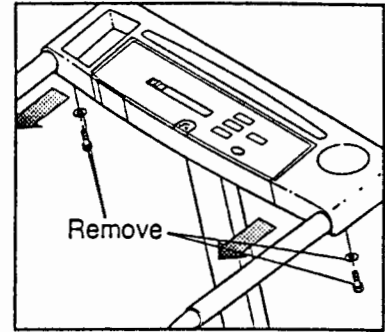

Remove the bolt and washer from the lower end of the upright. Lay the upright on the treadmill. Keep all hardware in a secure location.

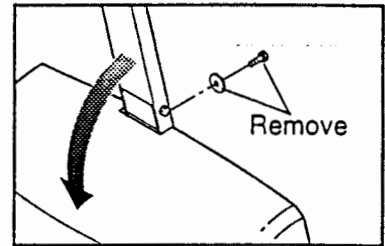

CONDITIONING GUIDELINES

⚠ WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for individuals over the age of 35 or individuals with pre-existing health problems.

The pulse sensor is not a medical device. Various factors, including your movement, may affect the accuracy of heart rate readings. The sensor is intended only as an exercise aid in determining heart rate trends in general.

The following guidelines will help you to plan your exercise program. Remember—these are general guidelines. For more detailed information about exercise, obtain a reputable book or consult your physician.

EXERCISE INTENSITY

Whether you want to burn fat, strengthen your cardiovascular system, or increase your athletic performance, you can tailor your exercise to your specific goals. The key to achieving the desired results is to exercise with the proper intensity.

Burning Fat

To burn fat effectively, you must exercise at a relatively low intensity level for a sustained period of time. During the first few minutes of exercise, your body uses easily accessible *carbohydrate calories* for energy. Only after the first few minutes of exercise does your body begin to use stored *fat calories* for energy. If your goal is to burn fat, set the speed control on the console to FAT BURN to help you maintain the proper intensity level. (See step 3 on page 9.)

Aerobic Exercise

If your goal is to strengthen your cardiovascular system, your exercise must be "aerobic." Aerobic exercise is activity that requires large amounts of oxygen for prolonged periods of time. This increases the demand on the heart to pump blood to the muscles, and on the lungs to oxygenate the blood. The proper intensity level for aerobic exercise can be found by using your pulse as a guide. As you exercise, your pulse should be kept at a level between 70% and 85% of your maximum possible heart rate. This is known as your training zone. You can find your training zone in the table below. Training zones are listed according to age and physical condition.

Age	Training Zone (Beats/Min.)	
	Unconditioned	Conditioned
20	138-167	133-162
25	136-166	132-160
30	135-164	130-158
35	134-162	129-156
40	132-161	127-155
45	131-159	125-153
50	129-156	124-150
55	127-155	122-149
60	126-153	121-147
65	125-151	119-145
70	123-150	118-144
75	122-147	117-142
80	120-146	115-140
85	118-144	114-139

During the first few months of your exercise program, keep your pulse near the low end of your training zone as you exercise. After a few months of regular exercise, your pulse can be gradually increased until it is near the middle of your training zone as you exercise. You can measure your pulse using the pulse sensor. Exercise for about four minutes, and then measure your pulse immediately. If your pulse is too high or too low, adjust the intensity of your exercise. It may also be helpful to set the speed control on the console to AEROBIC to help you maintain the proper intensity level. (See step 3 on page 9.)

Performance Training

If your goal is high performance athletic conditioning, set the speed control on the console to PERFORMANCE to help you maintain the proper intensity level. (See step 3 on page 9.)

WORKOUT GUIDELINES

When exercising, wear appropriate attire. Always wear athletic shoes for foot protection. Each workout should include three basic parts: (1) a warm-up, (2) training zone exercise, and (3) a cool-down.

Warming Up

Warming up prepares the body for exercise by increasing circulation, delivering more oxygen to the muscles and raising the body temperature. Begin each workout with 5 to 10 minutes of stretching and light exercise to warm up.

Training Zone Exercise

After warming up, increase the intensity of your exercise until your pulse is in your training zone for 20 to 60 minutes. (During the first few weeks of your exercise program, do not keep your pulse in your training zone for longer than 20 minutes.) Breathe regularly and deeply as you exercise—never hold your breath.

Cooling Down

Finish each workout with 5 to 10 minutes of stretching to cool down. This will increase the flexibility of your muscles and will help to prevent post-exercise problems.

Exercise Frequency

To maintain or improve your condition, complete three workouts each week, with at least one day of rest between workouts. After a few months, you may complete up to five workouts each week if desired.

The key to success is to make exercise a regular and enjoyable part of your everyday life.

PART LIST—Model No. WLTL85053/WLTL55553

R0696A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	2	Handrail w/Foam Grip	44	1	Walking Platform
2	3	3/8" x 1" Bolt	45	1	Walking Belt
3	1	Console Housing	46	2	Foot Rail
4	1	70" Wire Harness	47	1	Pulley/Flywheel/Fan
5*	1	Console Assembly	48	2	Incline Leg Washer
6	9	Console Screw	49	2	3/8" x 2 3/4" Bolt
7	1	Pot Wire	50	4	3/8" Washer
8	1	Console Cable Loom	51	1	Controller
9	1	SAFEKEY™/Clip	52	1	Choke
10	2	Foam Grip	53	10	Small Screw
11	1	Upright	54	1	4" Cable Tie
12	1	Motor Swivel Bolt	55	2	8" Cable Tie
13	1	Motor Mount Bracket	56	1	Tie Holder
14	1	Motor Swivel Nut	57	1	Tie Screw
15	2	Motor Bolt	58	1	Wire Tie
16	1	Motor	59	1	Frame
17	2	Motor Nut	60	2	Rear Leg Endcap
18	1	Motor Tension Bolt	61	1	Magnet
19	1	Motor Tension Washer	62	1	Roller Ground Wire
20	1	Star Washer	63	1	Right Endcap
21	3	3/8" Flange Nut	64	2	Wrench Clip
22	4	Wire Clip	65	1	3/16" Allen Wrench
23	4	Hood Anchor	66	2	Rear Roller Adjustment Bolt
24	4	Anchor Screw	67	1	Left Endcap
25	1	Upright Pivot Nut	68	1	Rear Roller
26	2	Upright Pivot Washer	69	8	Platform Screw
27	1	Upright Cable Loom	70	4	Hood Screw
28	1	3/8" x 1 1/2" Washer	71	1	Hood
29	2	Rubber Cushion	72	1	Reed Switch Extension Wire
30	1	Power Cord	73	1	Reed Switch/Sensor Wire
31	1	Circuit Breaker	74	1	Motor Belt
32	1	Upright Pivot Bolt	75	1	Cage Nut
33	1	Grommet	76*	1	Motor/Pulley/Flywheel/Fan
34	2	Frame Endcap	77	1	Battery Cover
35	9	Screw	78	1	Potentiometer
36	2	Incline Pin	79	1	Speed Control
37	2	Incline Leg Cap	80	2	Incline Leg Plug
38	2	Incline Leg	#	1	8" Green Ground Wire
39	2	Belt Guide	#	1	8" White Wire, Male/Female
40	1	Front Roller Adjustment Bolt	#	1	Owner's Manual
41	3	Adjustment Washer			
42	1	Safety Cover			
43	1	Front Roller/Pulley			


* Includes all parts shown in the box.
Indicates a non-illustrated part.

RELEASE
JUN 1
MANUFACTURE

Specifications are subject to change without notice. See the back cover for information about ordering replacement parts.

EXPLODED DRAWING—Model No. WLTL85053/WLTL55553

R0696A

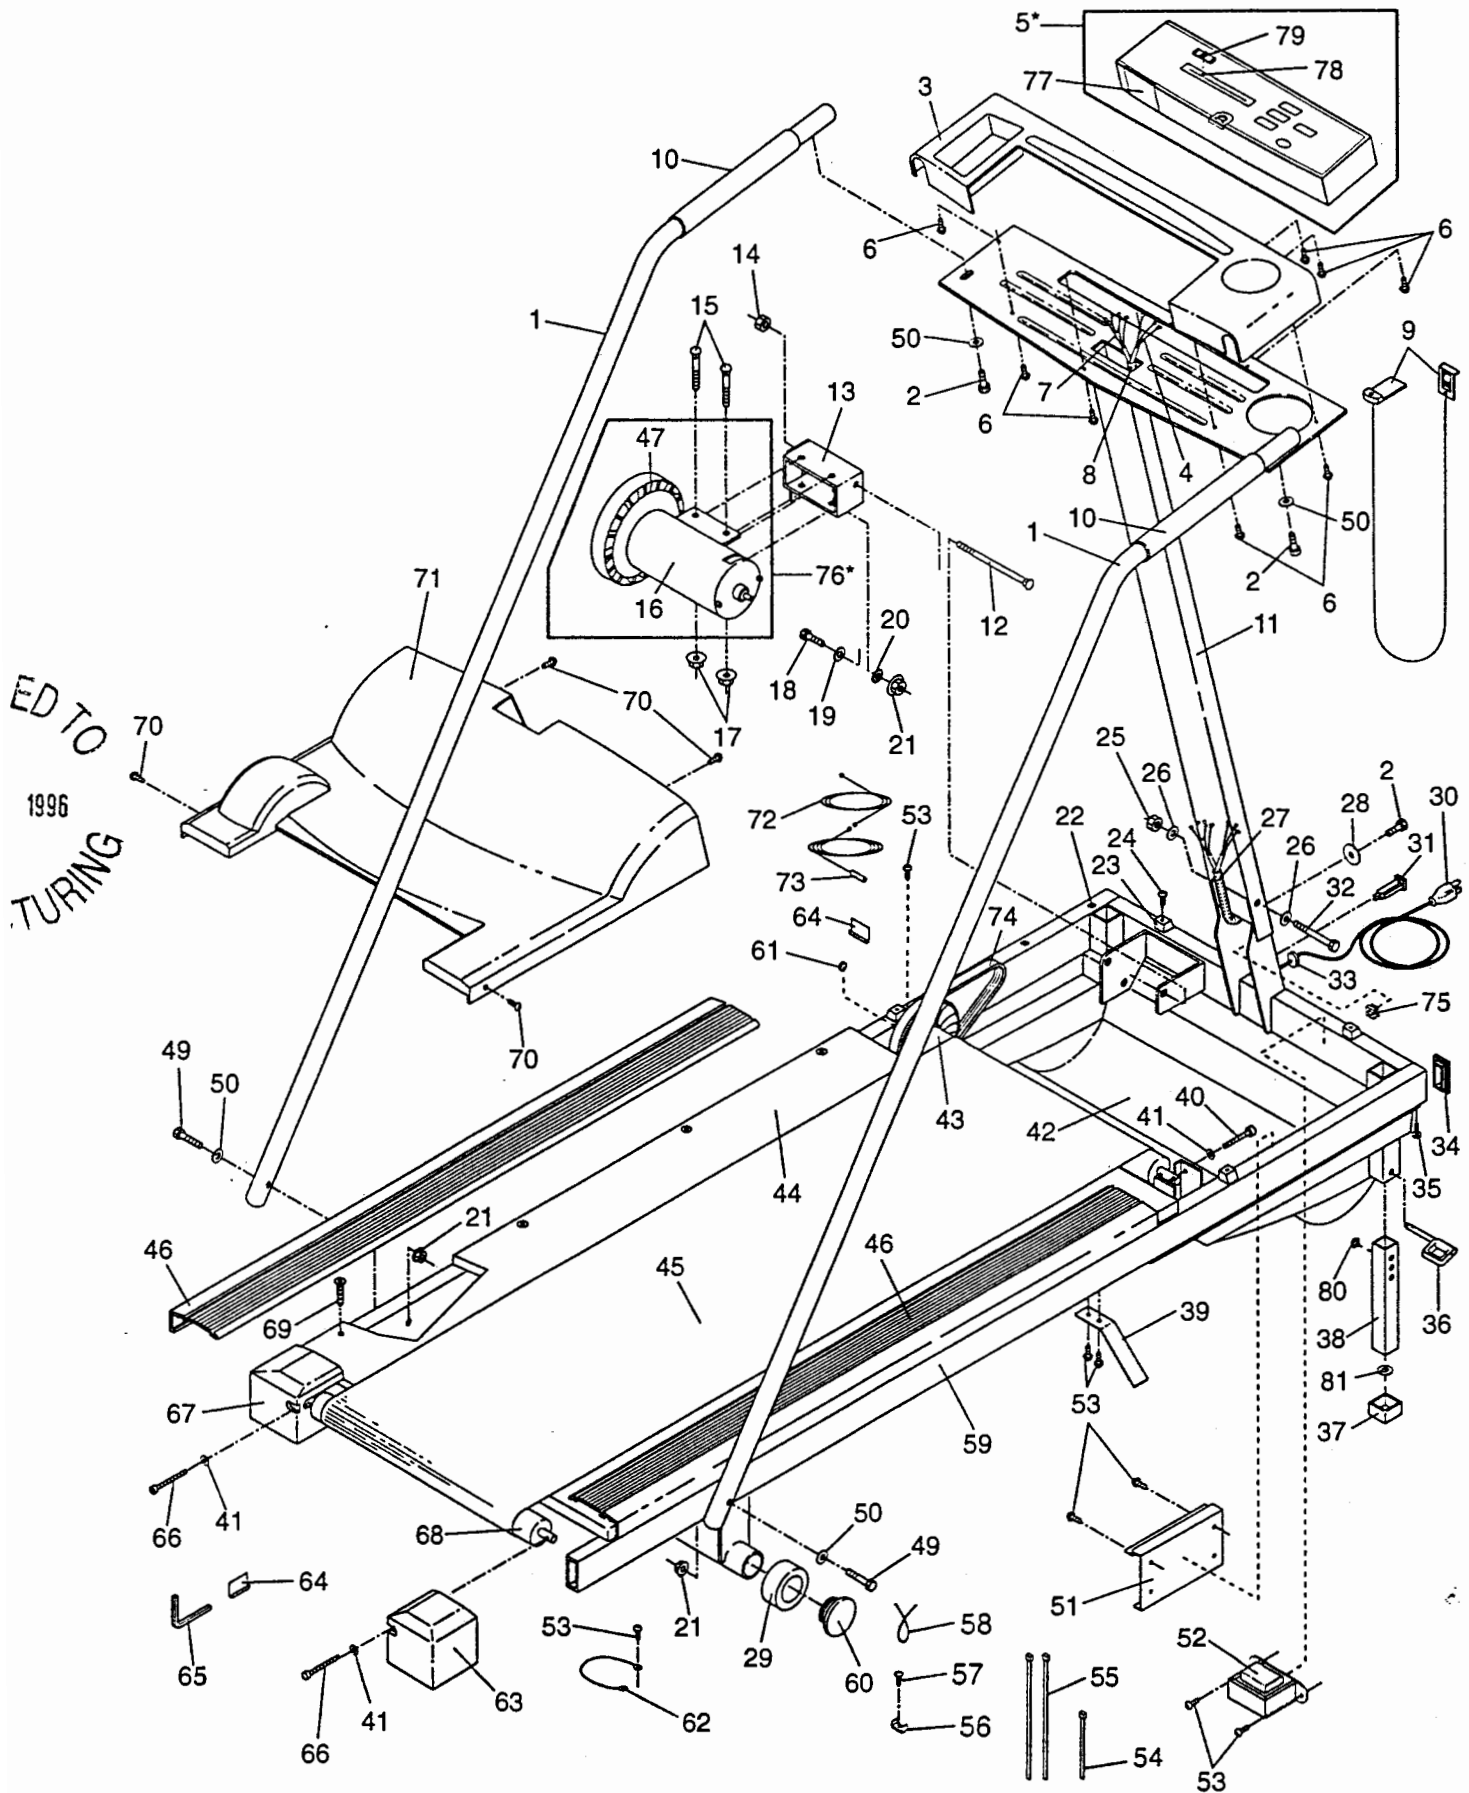

ORDERING REPLACEMENT PARTS

To order replacement parts, call our Customer Service Department toll-free at 1-800-999-3756, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). When ordering parts, please be prepared to give the following information:

- The MODEL NUMBER of the product (WLTL85053/WLTL55553).
- The NAME of the product (WESLO CADENCE® 850 treadmill).
- The SERIAL NUMBER of the product (see the front cover of this manual).
- The KEY NUMBER of the part(s) (see page 14 of this manual).
- The DESCRIPTION of the part(s) (see page 14 of this manual).

If possible, place the treadmill near your telephone for easy reference when calling.

LIMITED WARRANTY

ICON Health & Fitness, Inc. ("ICON"), warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to replacing or repairing, at ICON's option, the product at one of its authorized service centers. All products for which warranty claim is made must be received by ICON at one of its authorized service centers with all freight and other transportation charges prepaid, accompanied by sufficient proof of purchase. All returns must be pre-authorized by ICON. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an ICON authorized service center, to products used for commercial or rental purposes, or to products used as store display models. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON IS NOT RESPONSIBLE OR LIABLE FOR INDIRECT, SPECIAL OR CONSEQUENTIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THE PRODUCT OR OTHER DAMAGES WITH RESPECT TO ANY ECONOMIC LOSS, LOSS OF PROPERTY, LOSS OF REVENUES OR PROFITS, LOSS OF ENJOYMENT OR USE, COSTS OF REMOVAL, INSTALLATION OR OTHER CONSEQUENTIAL DAMAGES OF WHATSOEVER NATURE. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

THE WARRANTY EXTENDED HEREUNDER IS IN LIEU OF ANY AND ALL OTHER WARRANTIES AND ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE IS LIMITED IN ITS SCOPE AND DURATION TO THE TERMS SET FORTH HEREIN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS. ACCORDINGLY, THE ABOVE LIMITATION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

ICON HEALTH & FITNESS, INC., 1500 S. 1000 W., LOGAN UT 84321-9813

REF
MANU