

Modular Mover

5632

Assembly Instructions

TOOLS REQUIRED

- 3/8" Allen wrench
- 3/8" Allen wrench

CAUTION!! When raising or lowering modular unit, keep hands and feet clear of columns, angle supports and frame attachments.

1. Read and understand all instructions thoroughly before performing this procedure.
2. Verify you received the items shown in Figure 1.

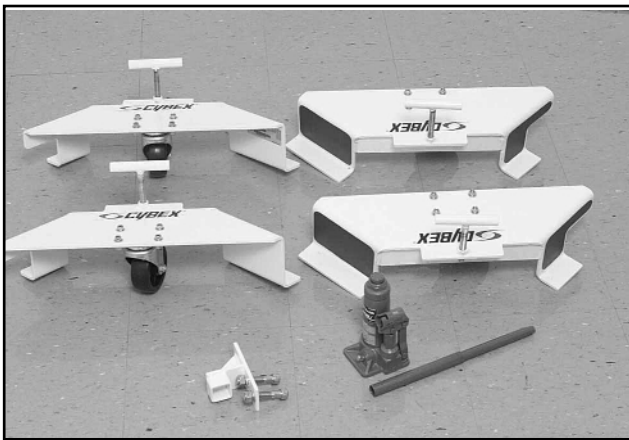


Figure 1

DESCRIPTION	PART NO.
A. Handle Jack	01950
B. Jack Handle	
C. Modular Mover	01941
D. Lifting Bracket	01951
E. Hex Nut.....	HN784000
F. Split Lockwasher	JS388300
G. SHCS .500-13 x 2.75	JC782832

3. Remove all perforated screens and set aside.
4. Remove all side stations (if applicable).
5. Install lifting bracket to the center of post using two socket head cap screws. After tightening screws in step 3, place hydraulic jack under lifting bracket and raise modular unit approximately 1" off the floor. See Figure 2.



Figure 2

6. Install lift dolly and tighten in place using T-handle on dolly. See Figure 3.



Figure 3

7. Repeat step 4 for each remaining position around the modular unit. **NOTE:** *If a leg Curl/Leg Extension is next to an O.C. Cable Column, then do not install lift dolly in this position.*
8. After lift dollies have been secured in place, the modular unit can be lowered and the hydraulic jack can be removed.
9. Move modular unit to desired location. **NOTE:** *When moving modular unit be sure to support any pieces attached to the columns.*
10. Position modular unit as desired. Install hydraulic jack and raise unit. Remove lift dollies and lower modular unit.
11. Remove lifting bracket from center post.
12. Reattach any side stations.
13. Reattach perforated screens to the modular unit. Be sure screens are secured.