


# Assembly Sheet - PP115R (ALL CONFIGURATIONS)

1. Installation to be completed in accordance with manufacturer's written specifications and installation instructions.
2. See spec sheet or contact manufacturer for detailed material, finishes, and configuration options.
3. Contact manufacturer for detailed layout.
4. Do not scale drawings.
5. Subject to change without notice.

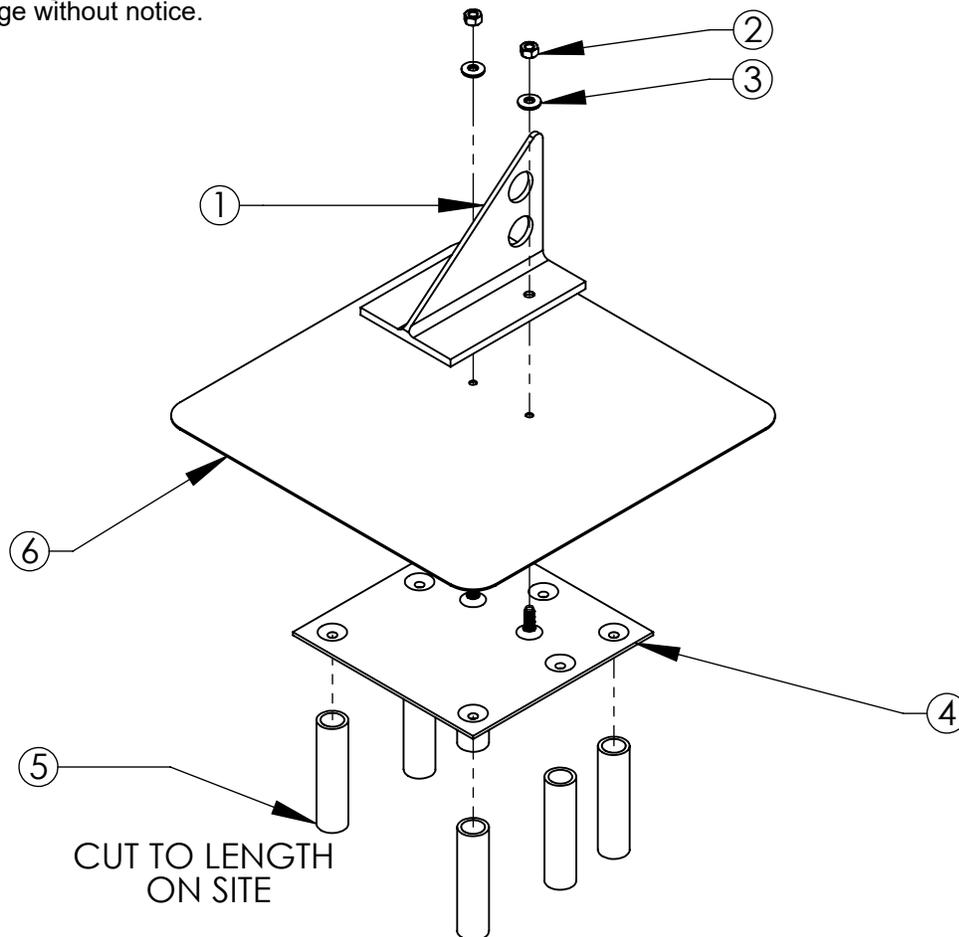

CONTACT ALPINE SNOWGUARDS FOR FERRULE LENGTHS GREATER THAN 6"

ITEM NO.	PART CODE	DESCRIPTION	QTY
1	KIT-145 BRACKET (2-PIPE SHOWN)	KIT-145 BRACKET (2-PIPE, 3-PIPE, OR HI-HOLE OPTIONS)	1
2	N-HX SS-.3125-18	NUT SS HEX FINISHED .3125-18 (INCLUDED IN POLY KIT 145)	2
3	W-NEO SS-.313	SS NEO WASHER .313 ID (INCLUDED IN POLY KIT 145)	2
4	BASE SS 8X8-100R	SS 8X8-100R BASE PLATE	1
5	FERRULE	FERRULE FOR 115R-1" OD-AL (SOLD SEPARATELY)	6
6	TARGET PATCH FLASHING	TARGET PATCH FLASHING (CUSTOMER SUPPLIED)	1



289 Harrel Street  
Morrisville, VT 05661  
Phone: 1.888.766.4273  
Fax: 1.888.766.9994  
Email: [Info@alpinesnowguards.com](mailto:Info@alpinesnowguards.com)

Scale: 1:6

4/22/2021