

## PD30 Snow Guard Installation Instructions for F-WAVE Revia Shingles

### ROOF TYPES

- New / Existing F-WAVE Revia Synthetic Shingle

### INSTALLATION


1. Apply shingle manufacturers' approved sealant to underside of PD30 snow guard and set it in place so that the top of the snow guard is in line with the edge of the course of shingles above.

**Note:** Do not insert or install snow guard between shingle layers to maintain integrity of adhesive layer between F-Wave Revia Shingles.

2. Insert fasteners into EPDM/stainless steel bonded washers, and fasten snow guard into roof deck.

**Note:** Do not overtighten fasteners. Overtightening may cause damage to EPDM layer on washers and may cause snow guard to lift off roof surface.

3. Apply manufacturers' approved sealant around fasteners after snow guard is secured to roof deck.

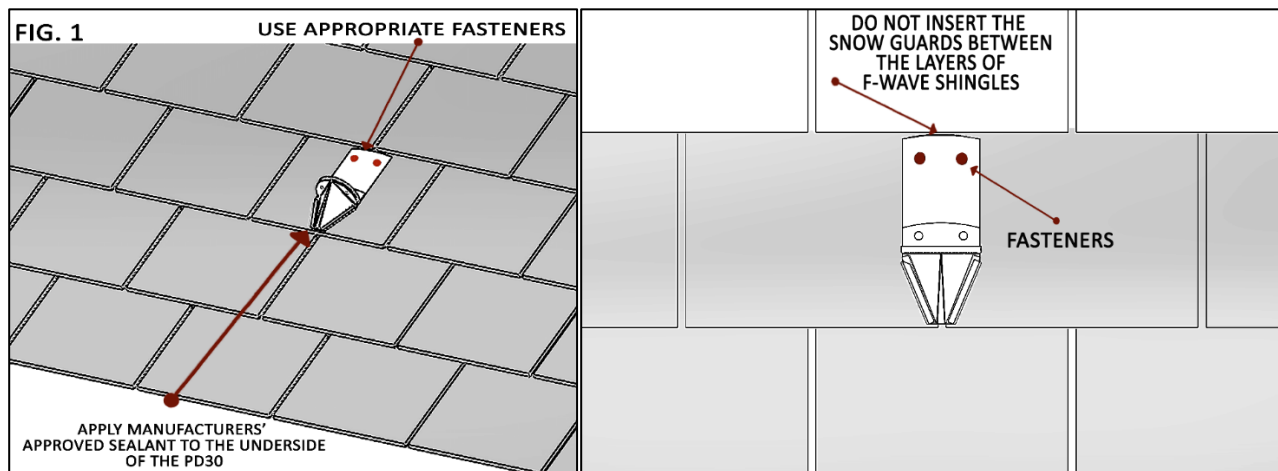





## PD30 Snow Guard Installation Instructions for F-WAVE Revia Shingles

### STANDARD SNOW GUARD LAYOUT OPTIONS

- Contact manufacturer for detailed layout.
- First row of snow guards is placed above outermost wall or support of the building.

If you have any questions, please contact us at 888-766-4273.

PAD LAYOUT GUIDELINES					
Layout	Rafter Length	Ground Snow Load (PSF)	Roof Pitch	Est. Snow Guard QTY.	Spacing
3-Row Pattern	15' or Less	60 psf or Less	16/12 or Less	17 per 10' of Eave	3 rows, 24" on center horizontally with middle row staggered 12"
2 x 4 Pattern	Greater Than 15'	60 psf or Less	16/12 or Less	12 per roofing square	Space rows 2' vertically and 4' horizontally to within 10' of the ridge.
2 x 3 Pattern	Any	61 - 90 psf	16/12 or Less	18 per roofing square	Space rows 2' vertically and 3' horizontally to within 10' of the ridge.
2 x 2 Pattern	Any	91 - 120 psf	16/12 or Less	24 per roofing square	Space rows 2' vertically and 2' horizontally to within 10' of the ridge.

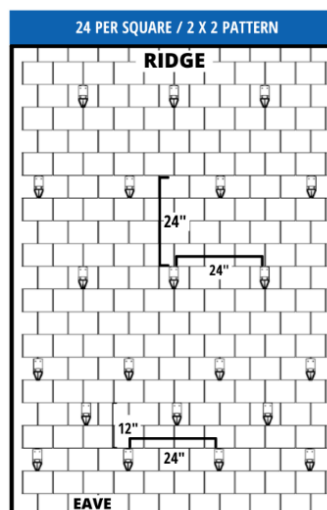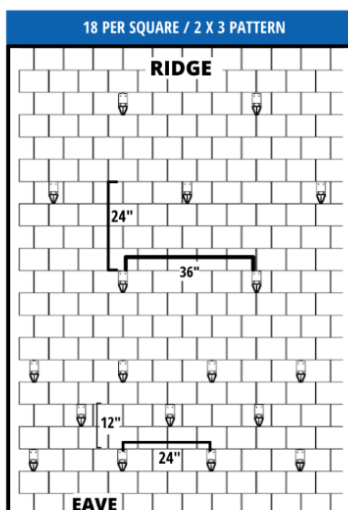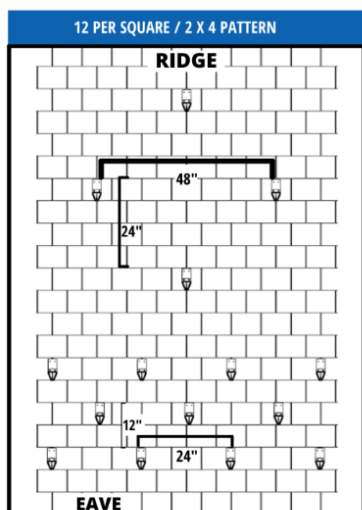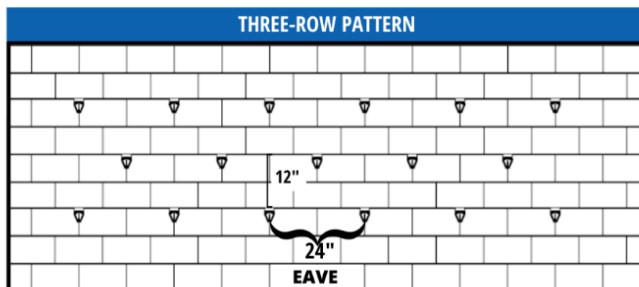

Document version 06.08.2022  
07 72 53 SNOW GUARDS