


# TR160-WM

*Instruction manual*

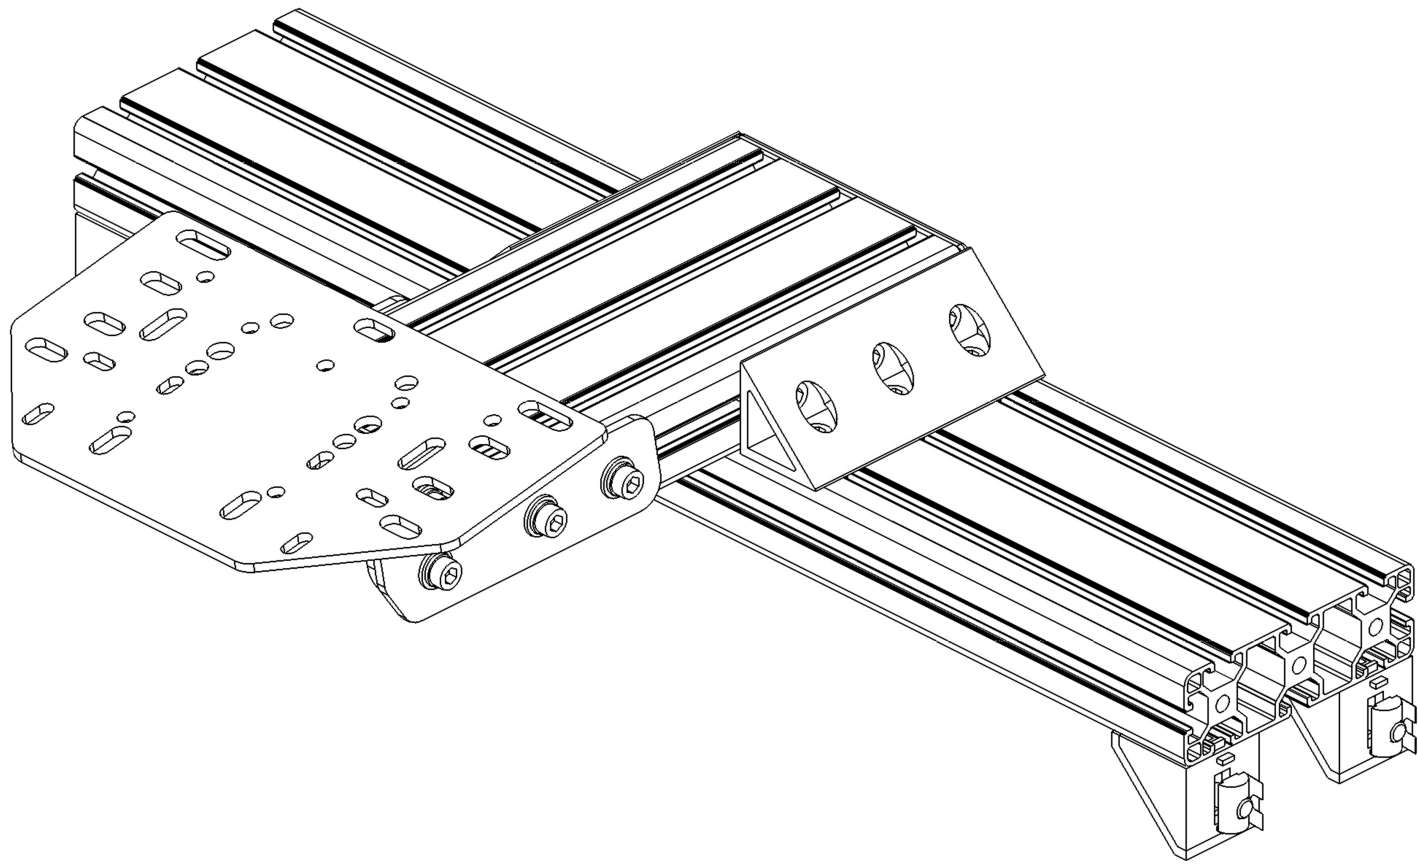

TR160-WM







- Two people needed



- Tighten hardware

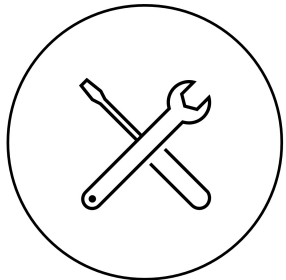


- Leave hardware loose for adjustment

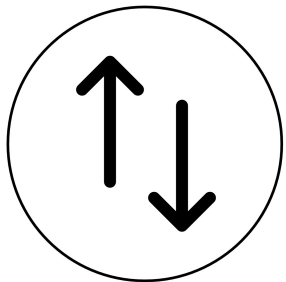






- Make Adjustment




# NOTE

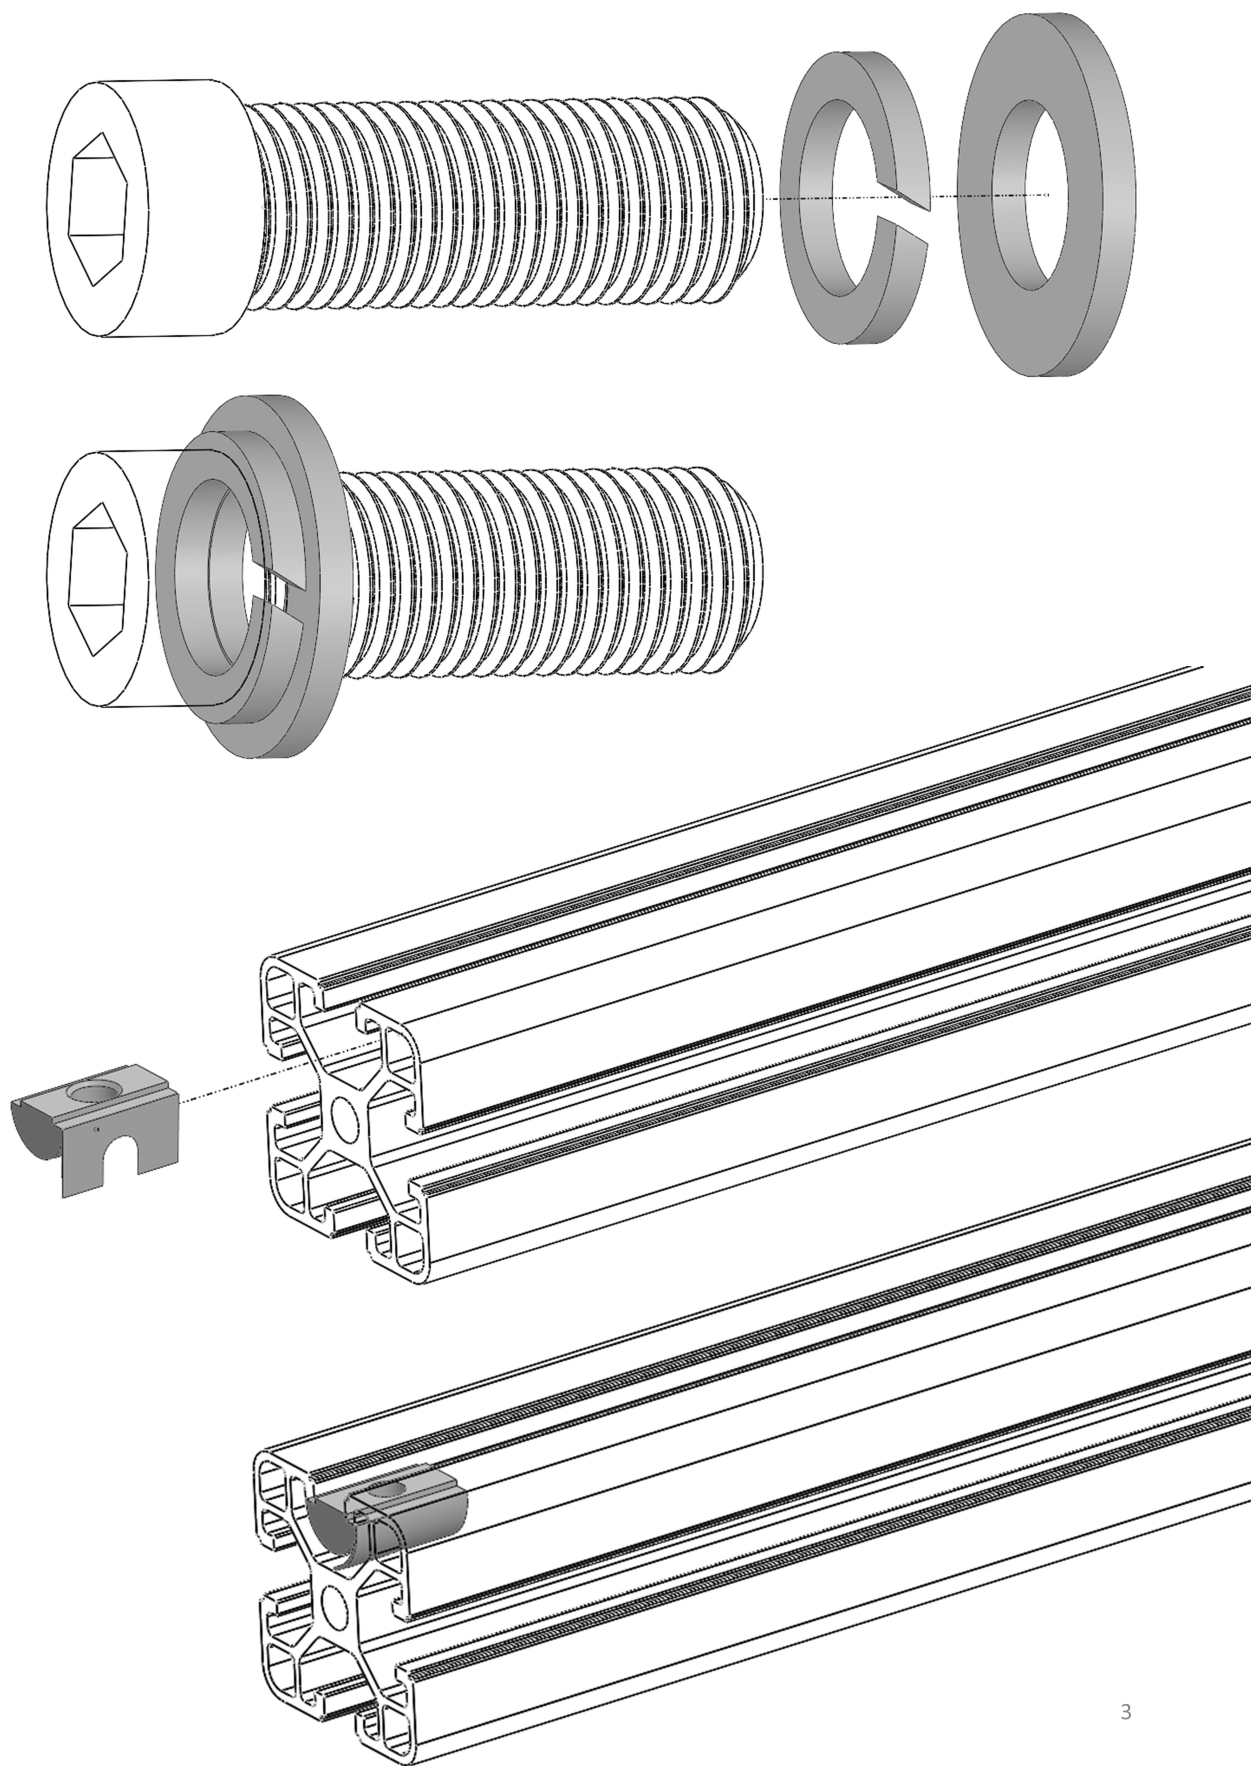

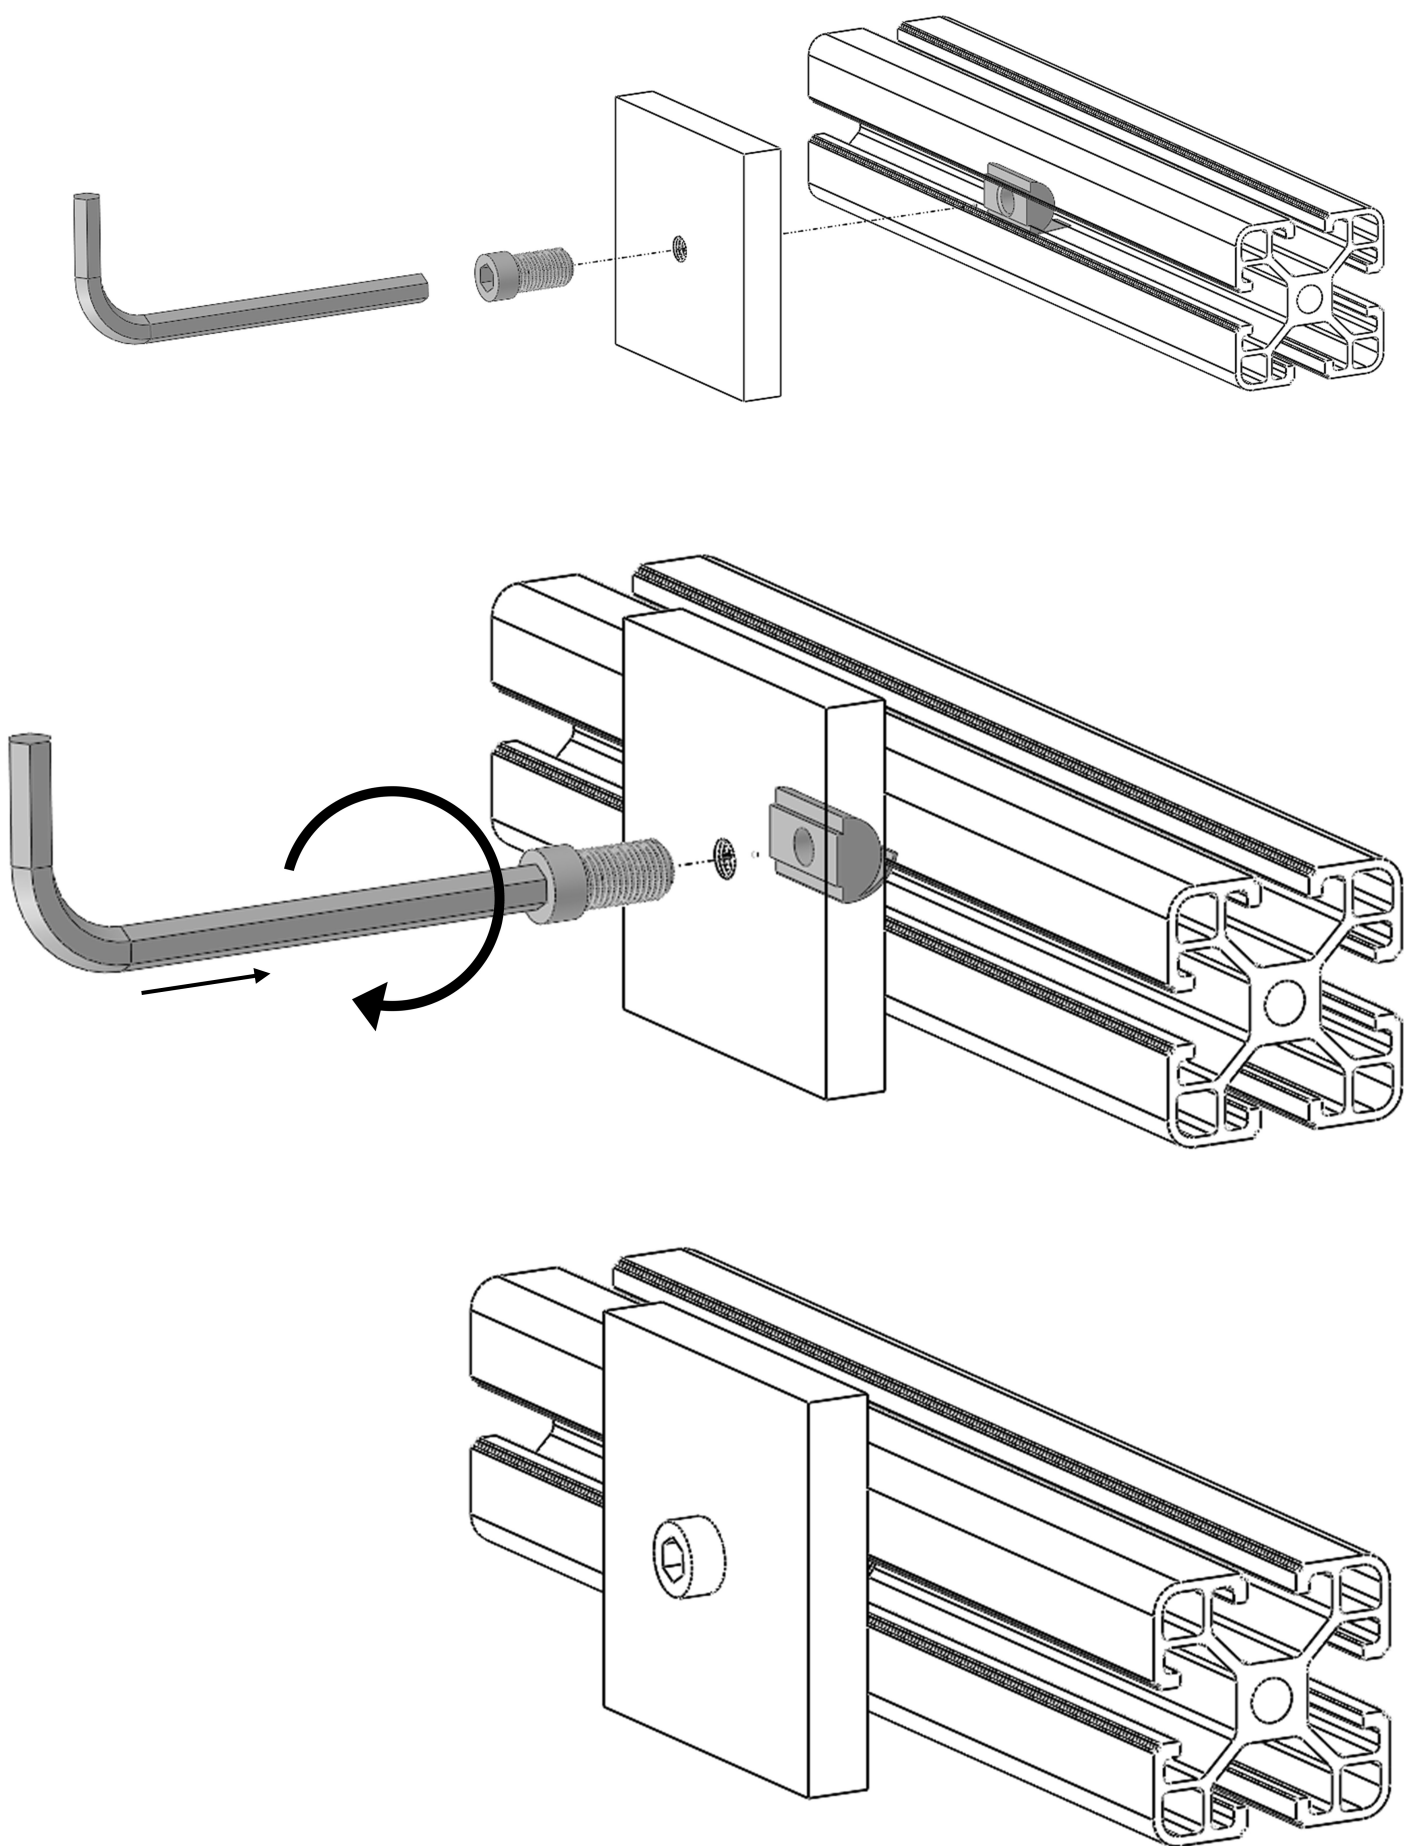

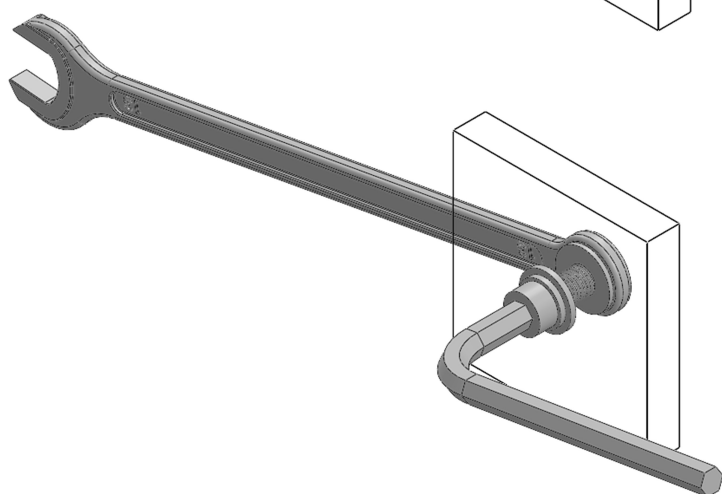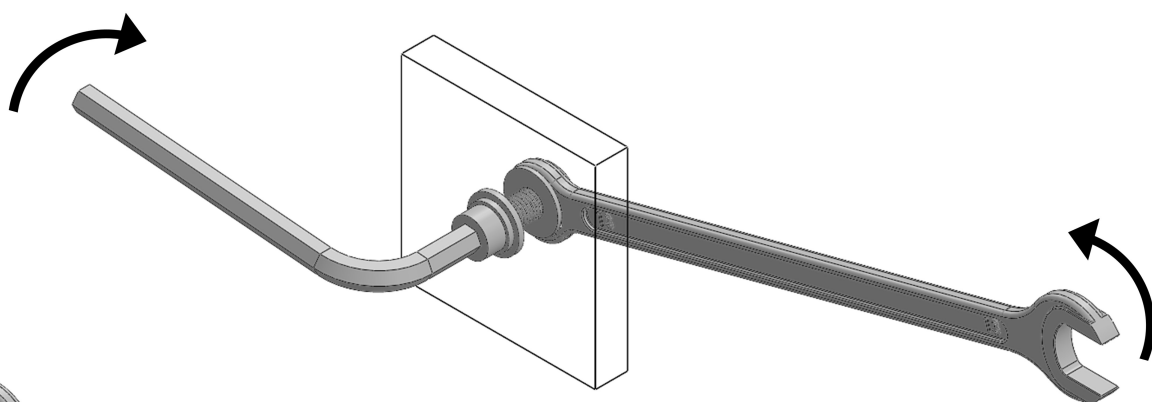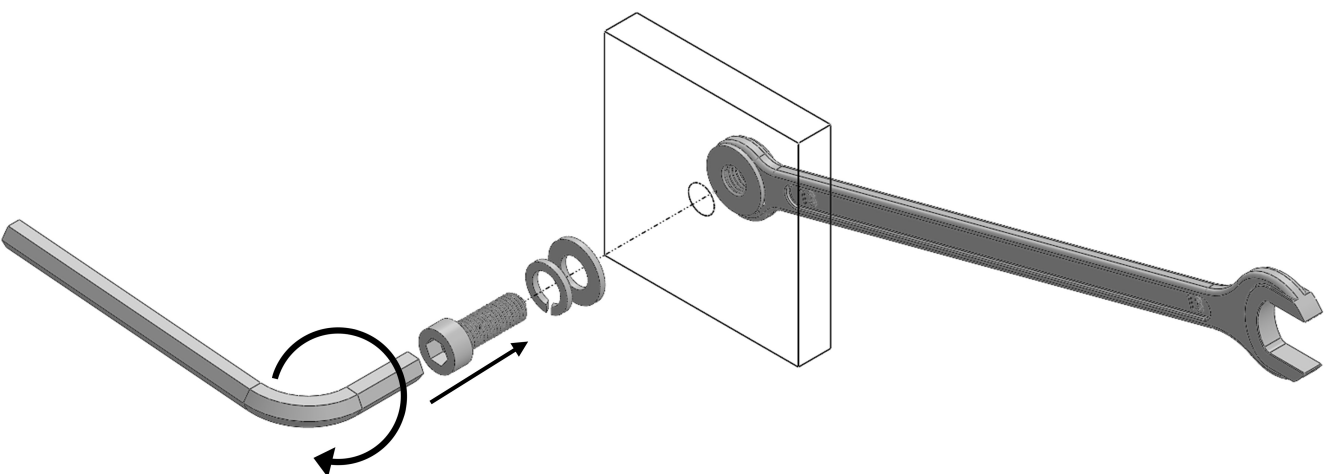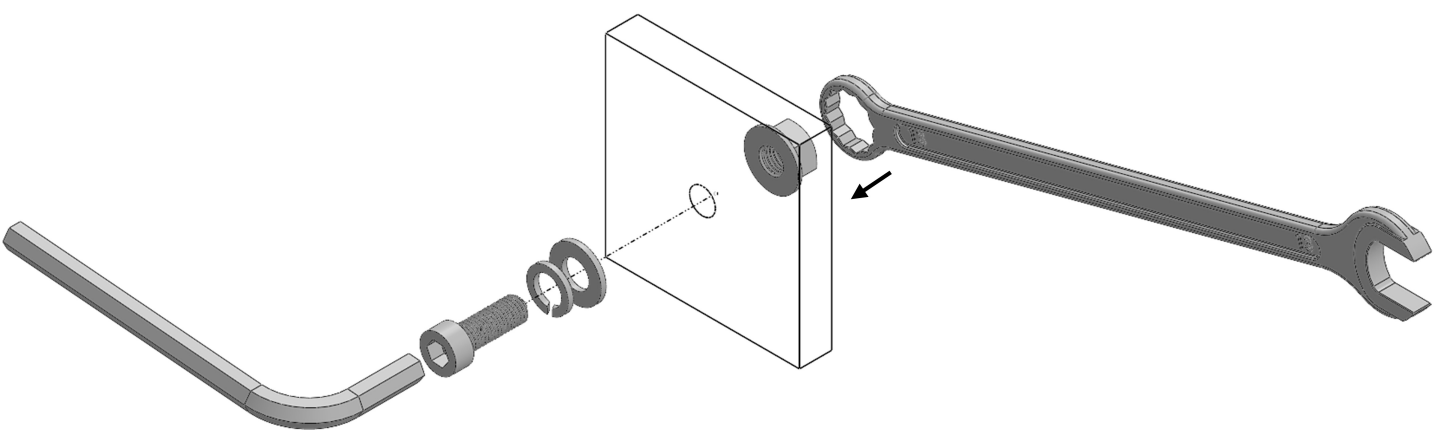


# TR160-WM

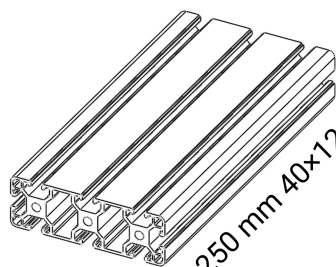

250 mm 40x120 Aluminium Profile

P6 × 1

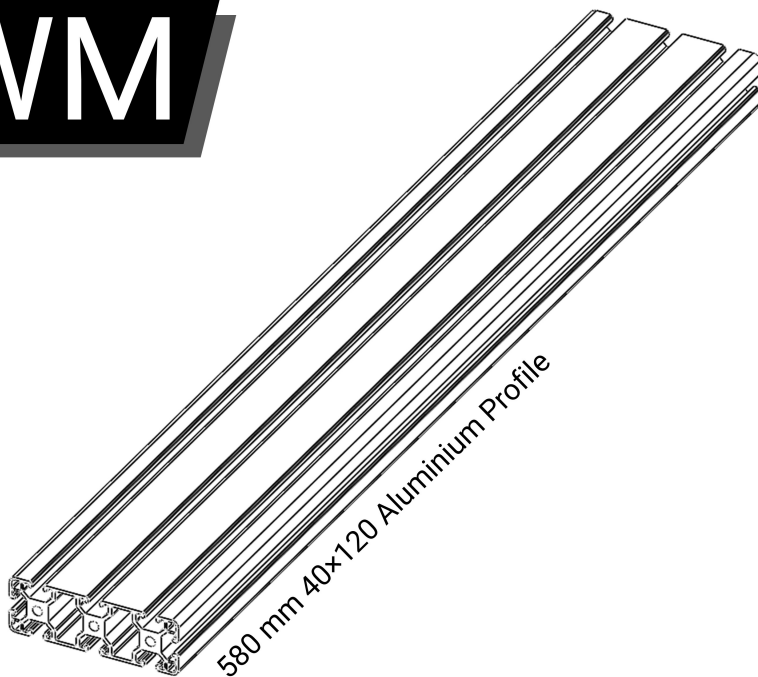



580 mm 40x120 Aluminium Profile

P4 × 1




40 x 120 mm Profile End Cap

E2 × 2

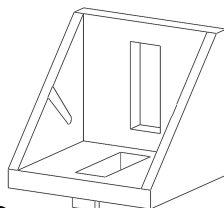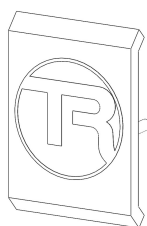

40 x 40 Corner Brackets with Cap

CB1 × 4

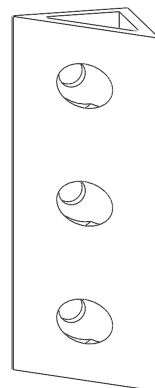

40 x 120 Anodized Corner Bracket

CB3 × 2



M8x16 Hex Screw

S2 × 12



M8x20 Hex Screw

S3 × 16



M6x20 Hex Screw

S6 × 4




Flat Washer

W1 × 16




Lock Washer

W2 × 16

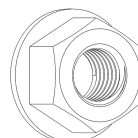


M8 Flange Nut

N1 × 4




M8 T-Nut

N2 × 24


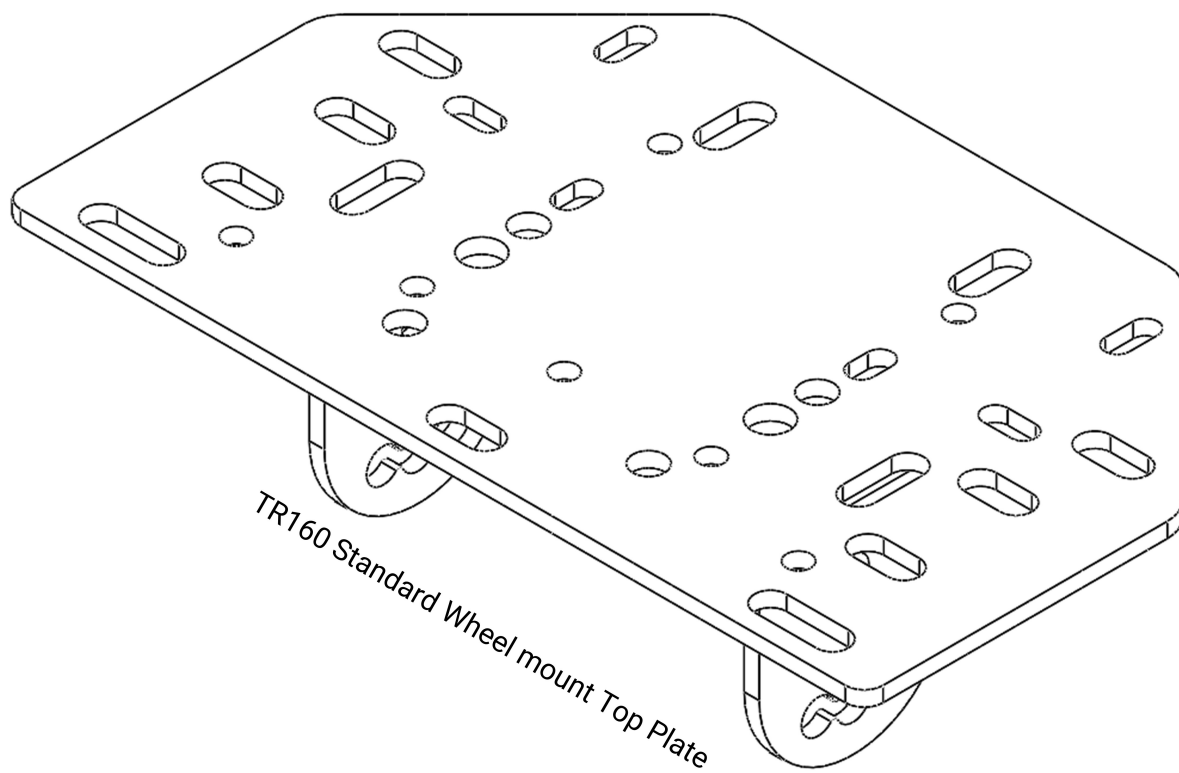


WM1 × 1

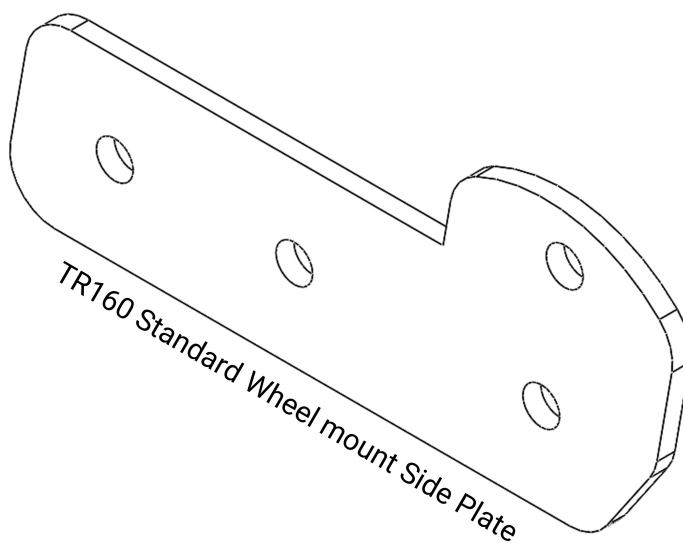



WM2 × 2

1

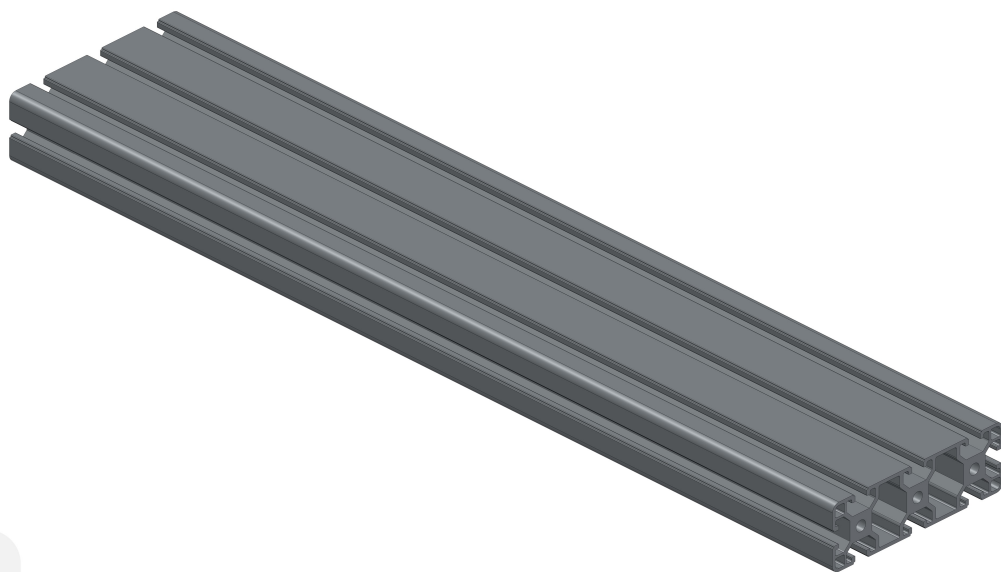


P4x1

1a

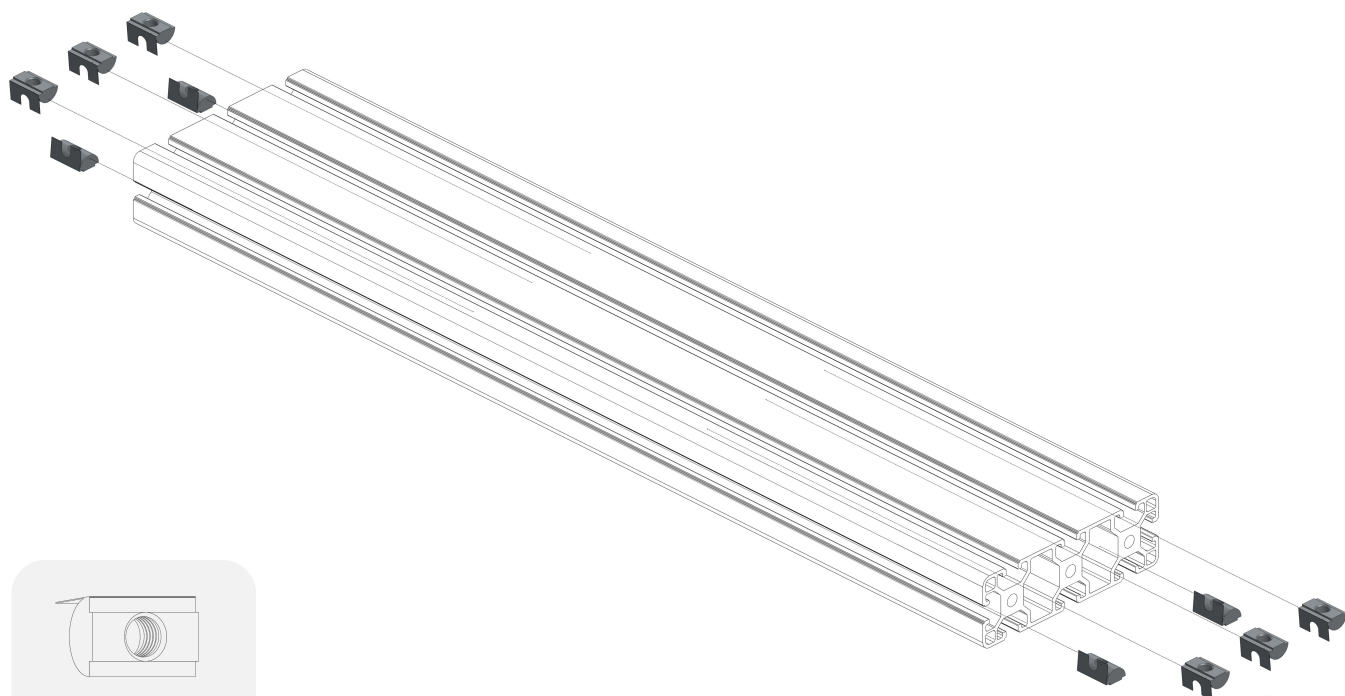


N2x10

1b

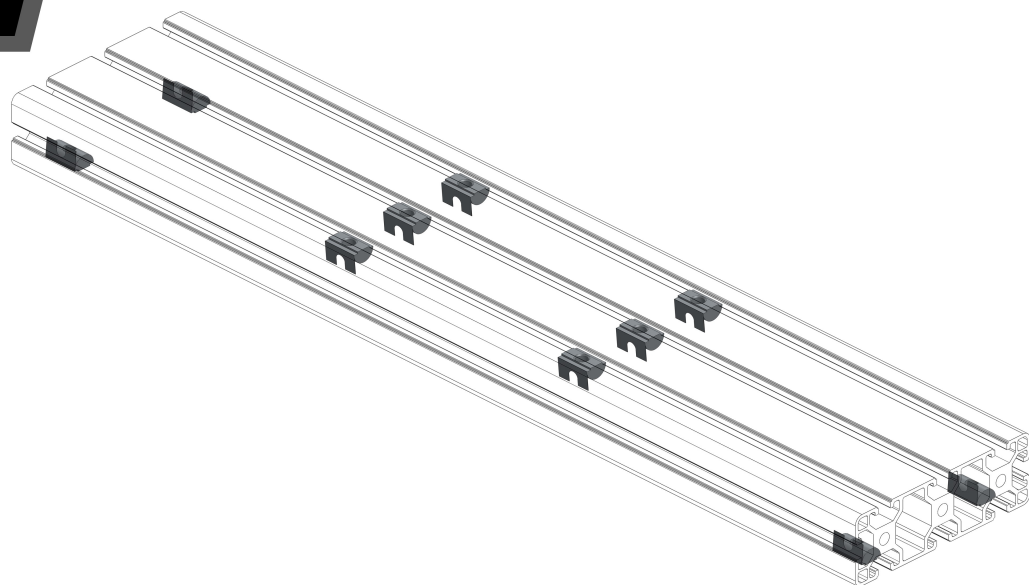


2

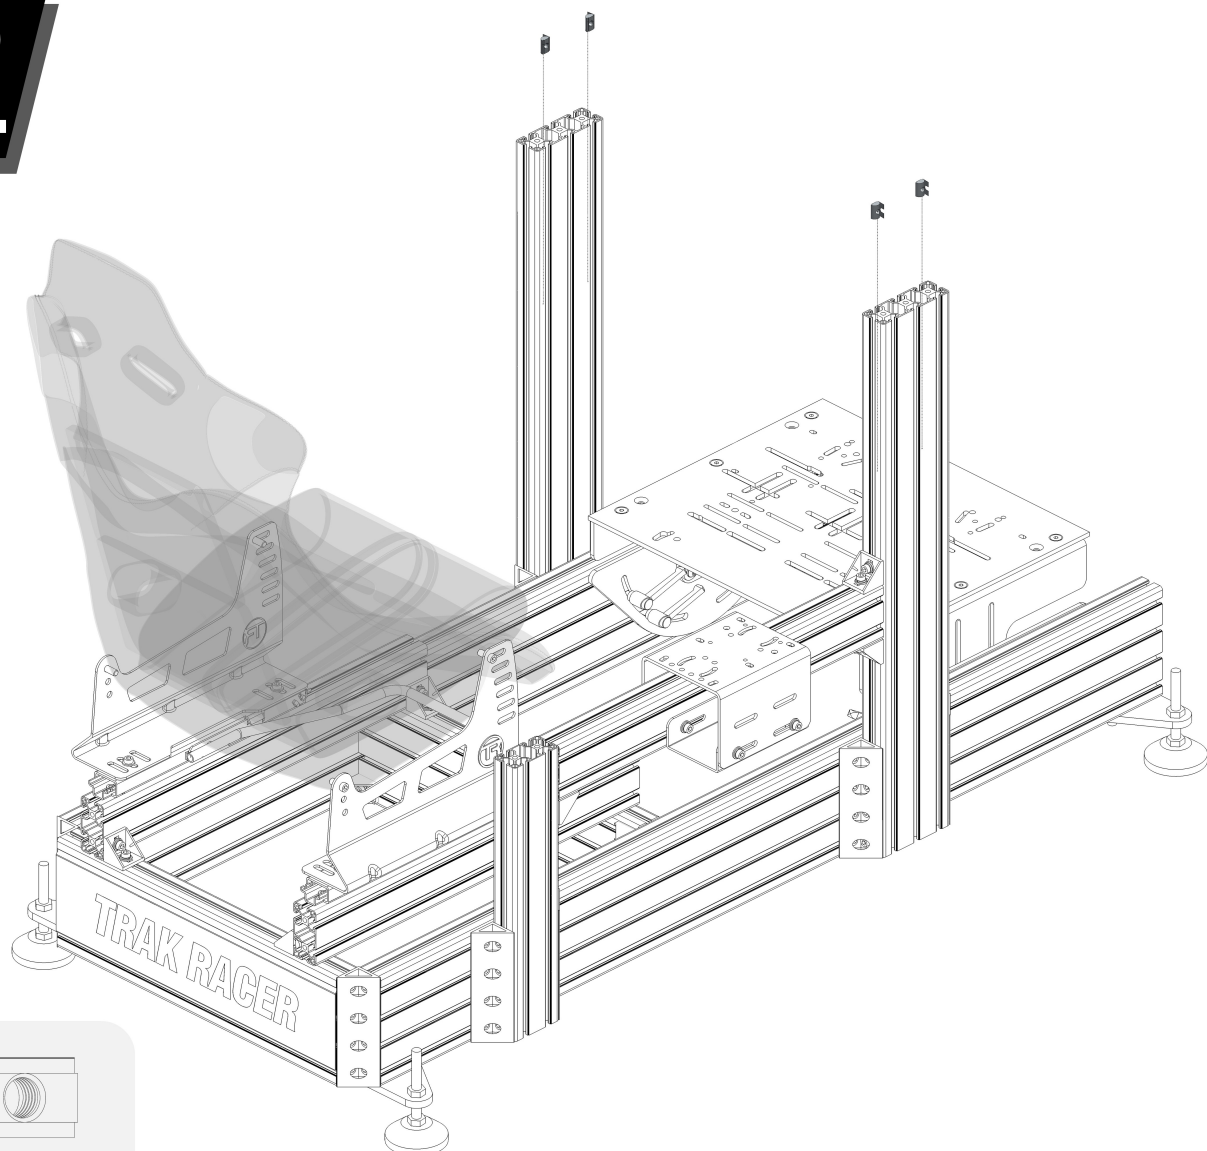


N2x4

2a

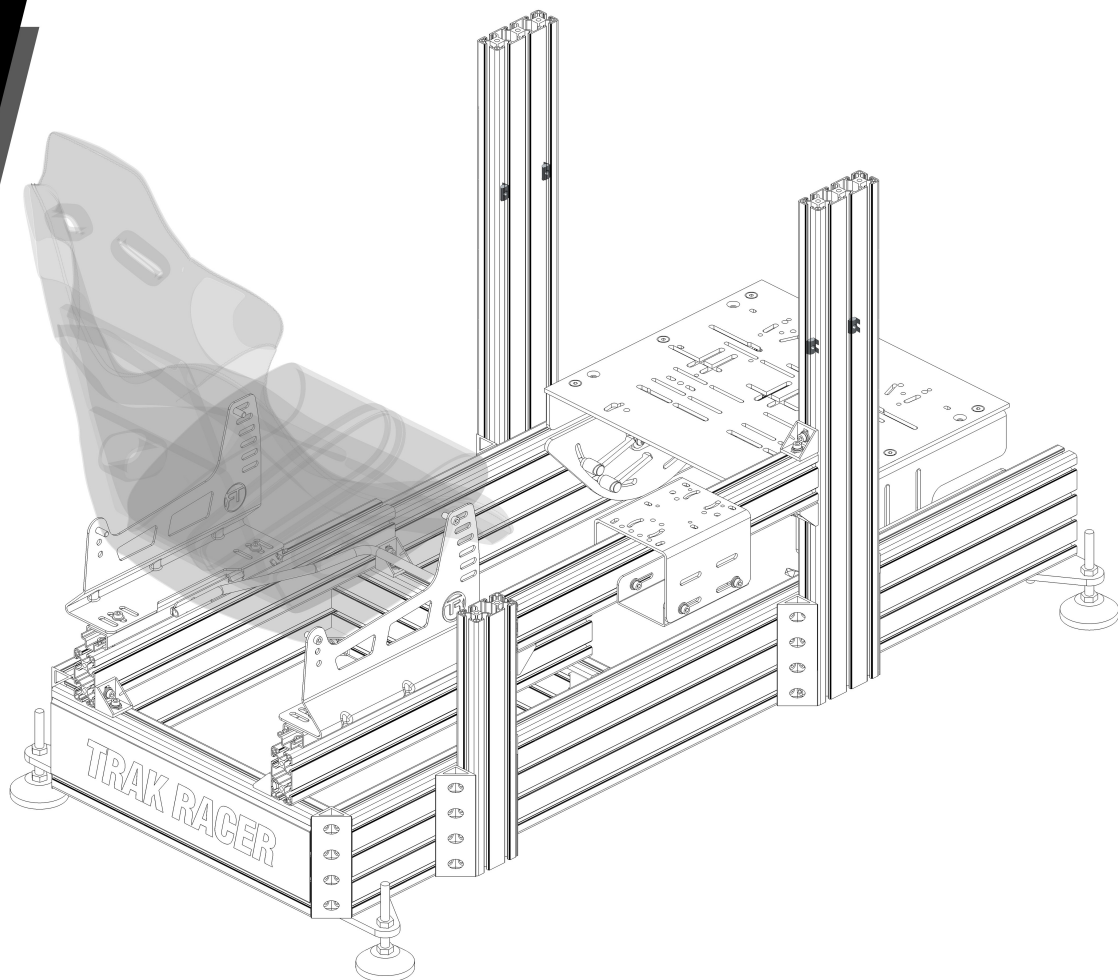


3

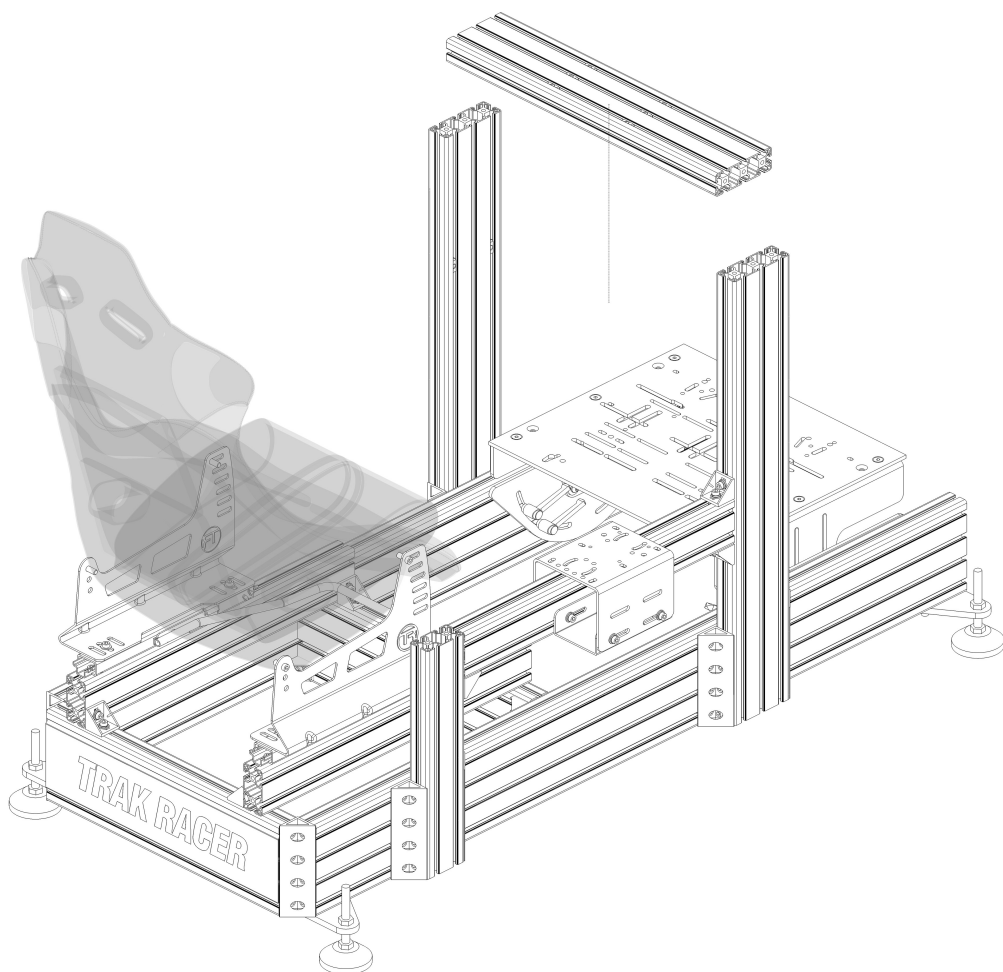




3a

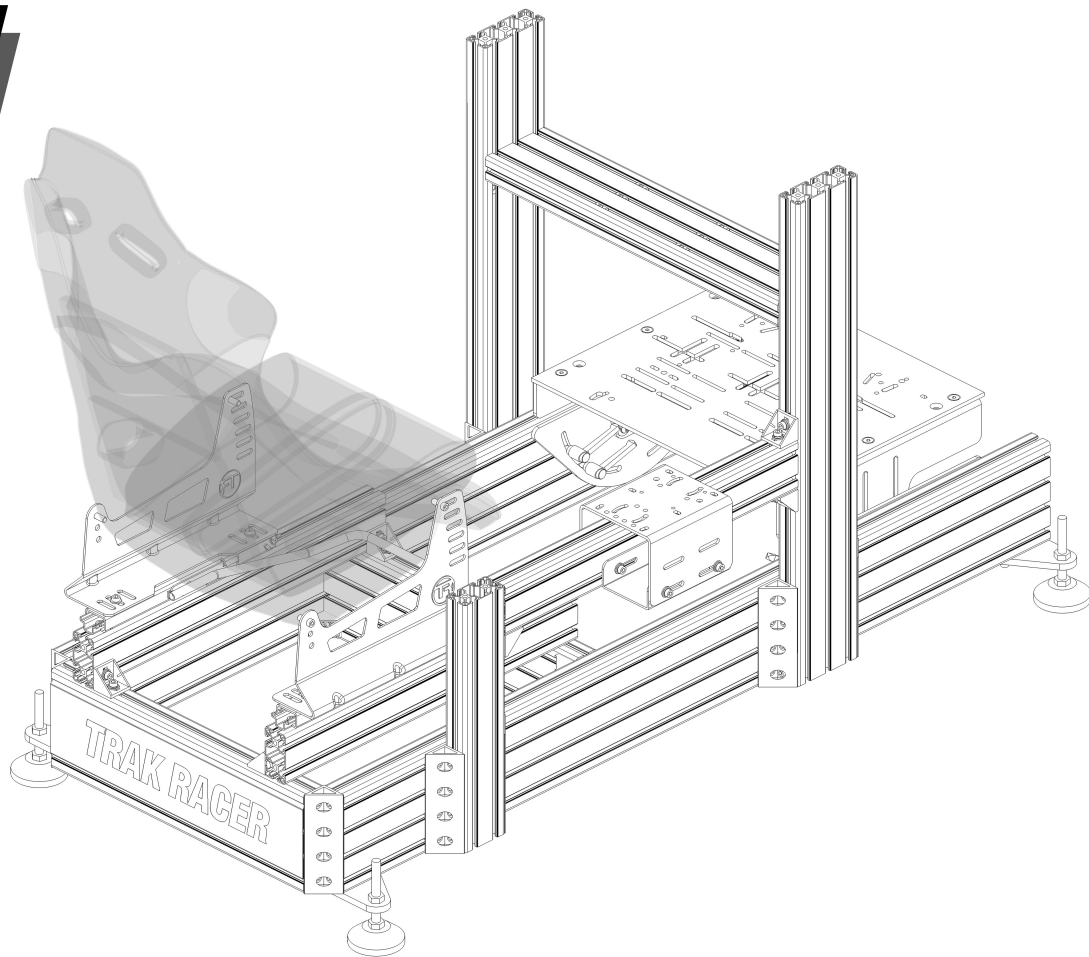


4

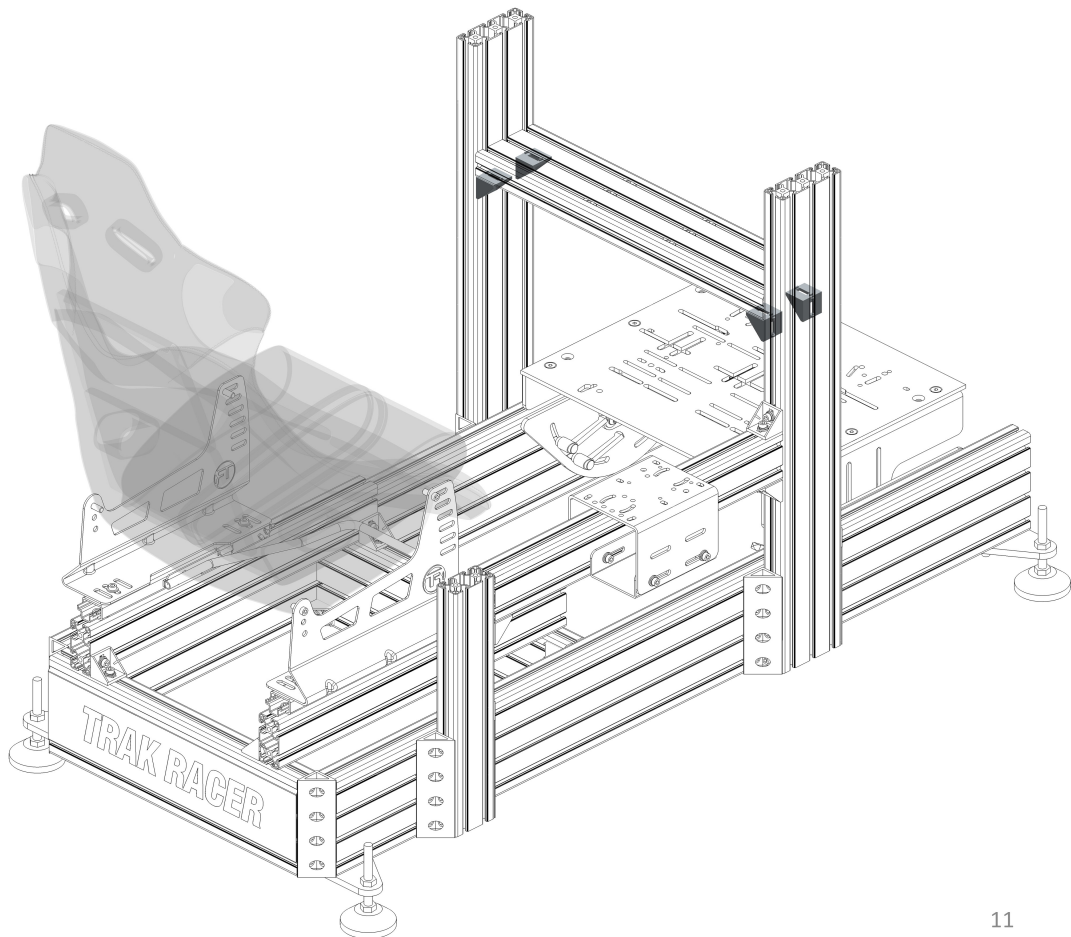

CB1×4


5

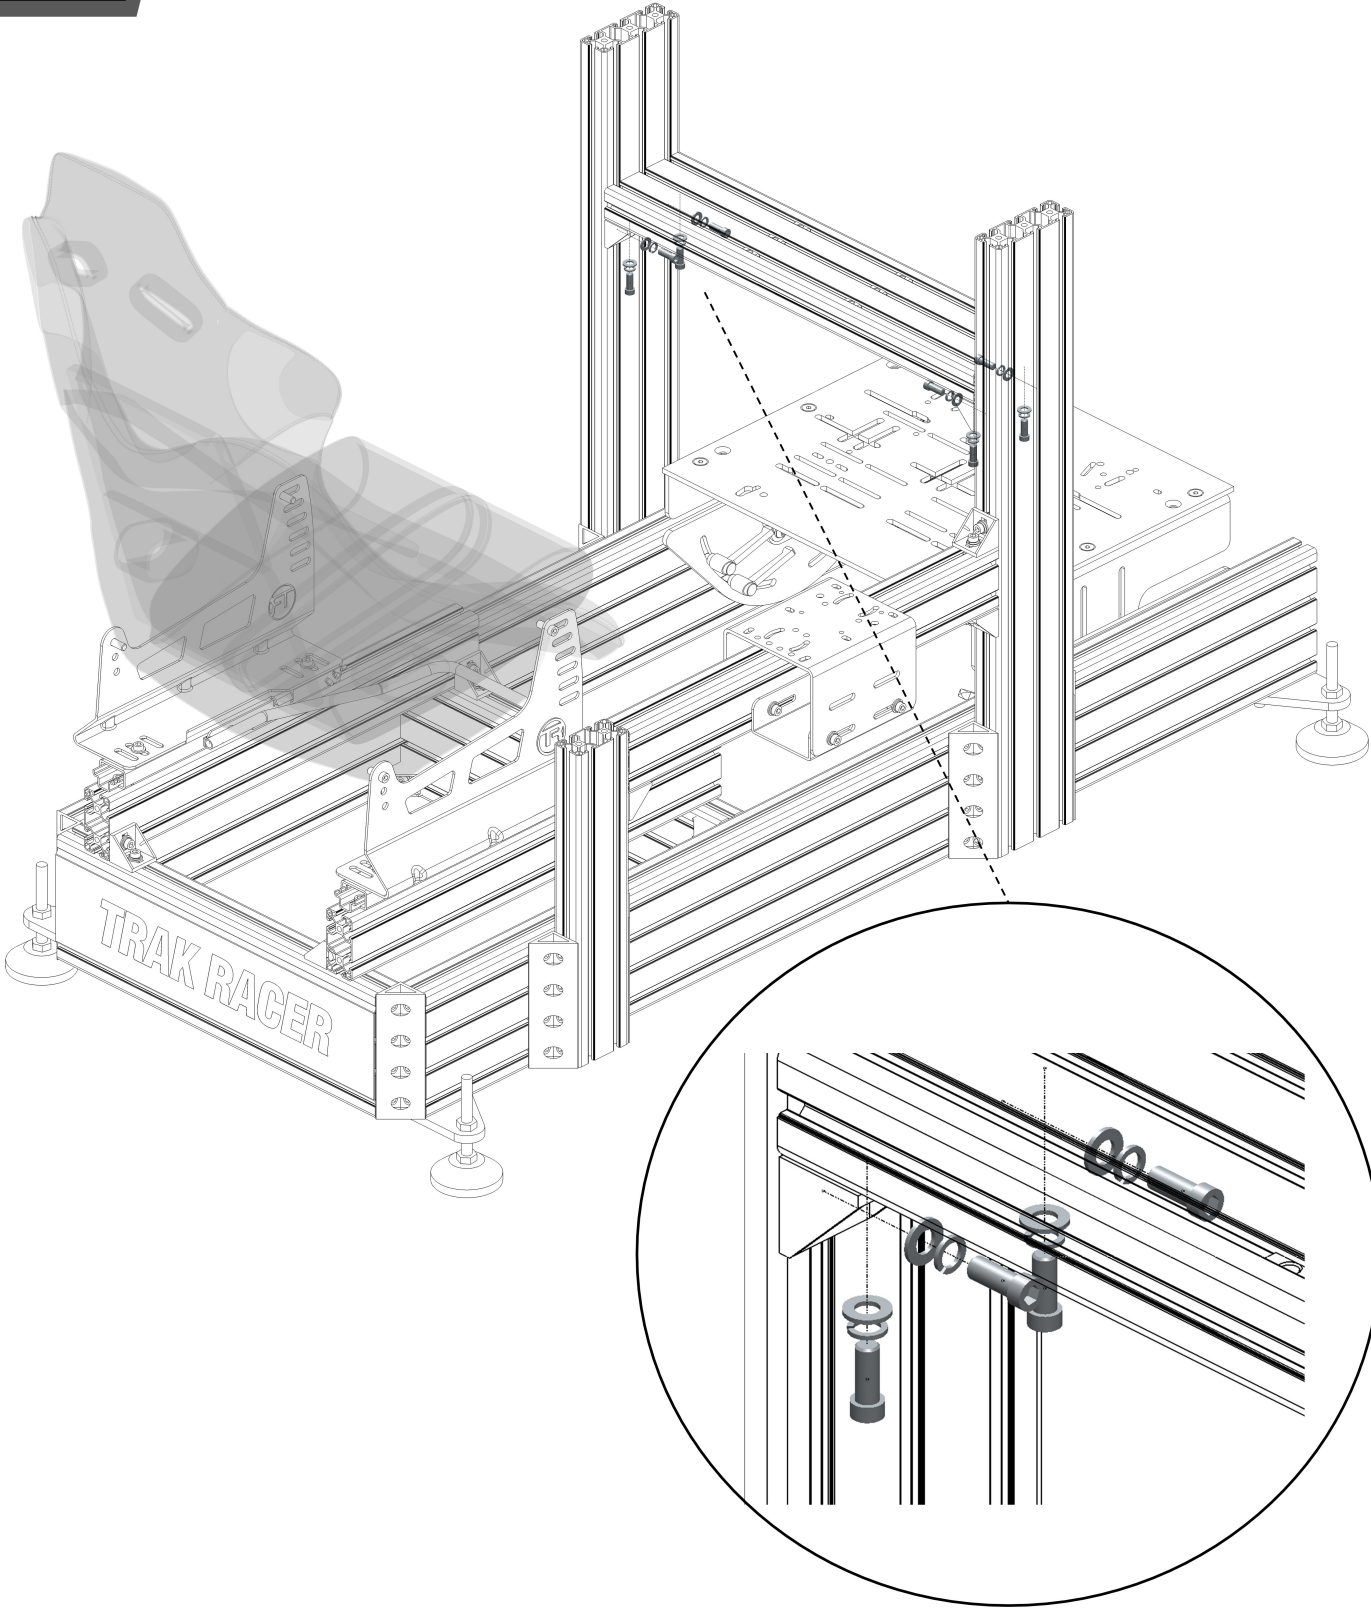


W1x8




W2x8





S3x8

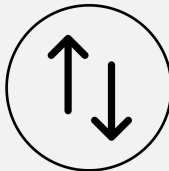

5a


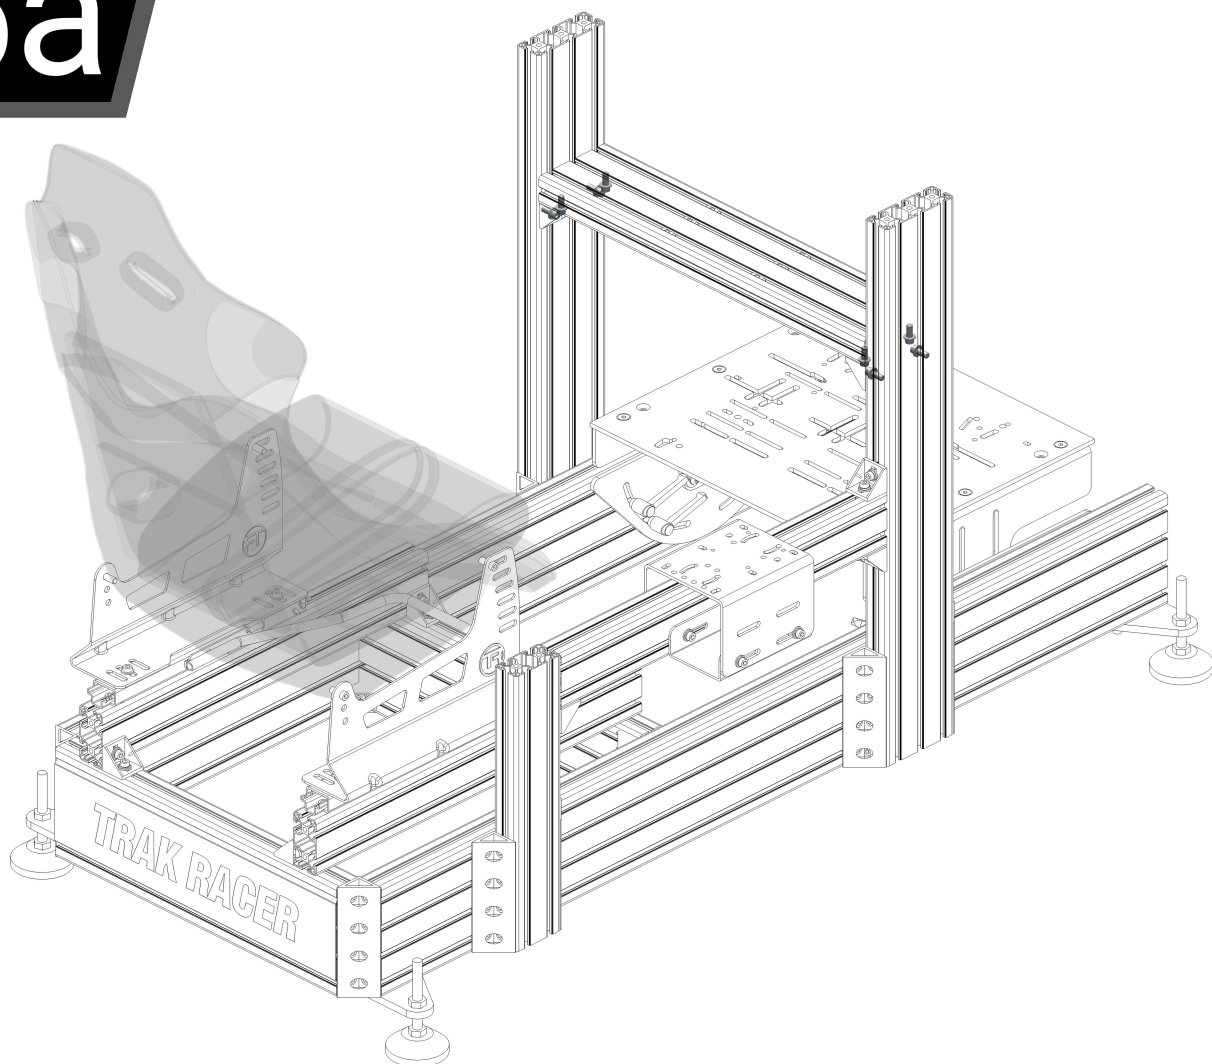


6

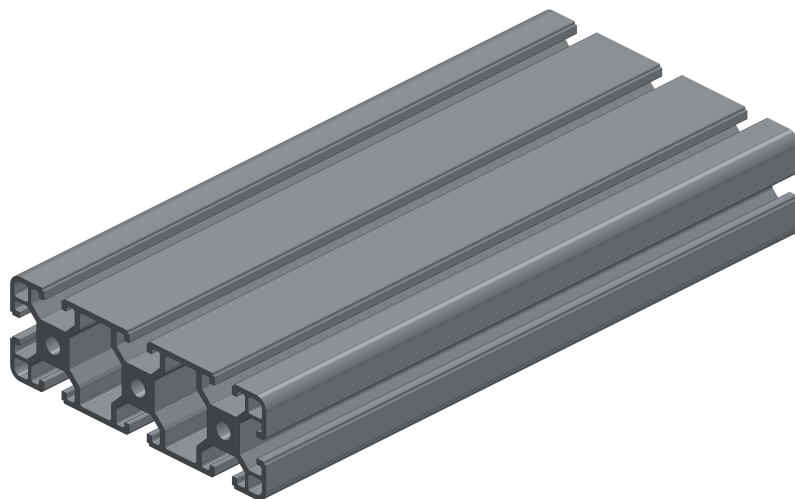


P6x1

6a

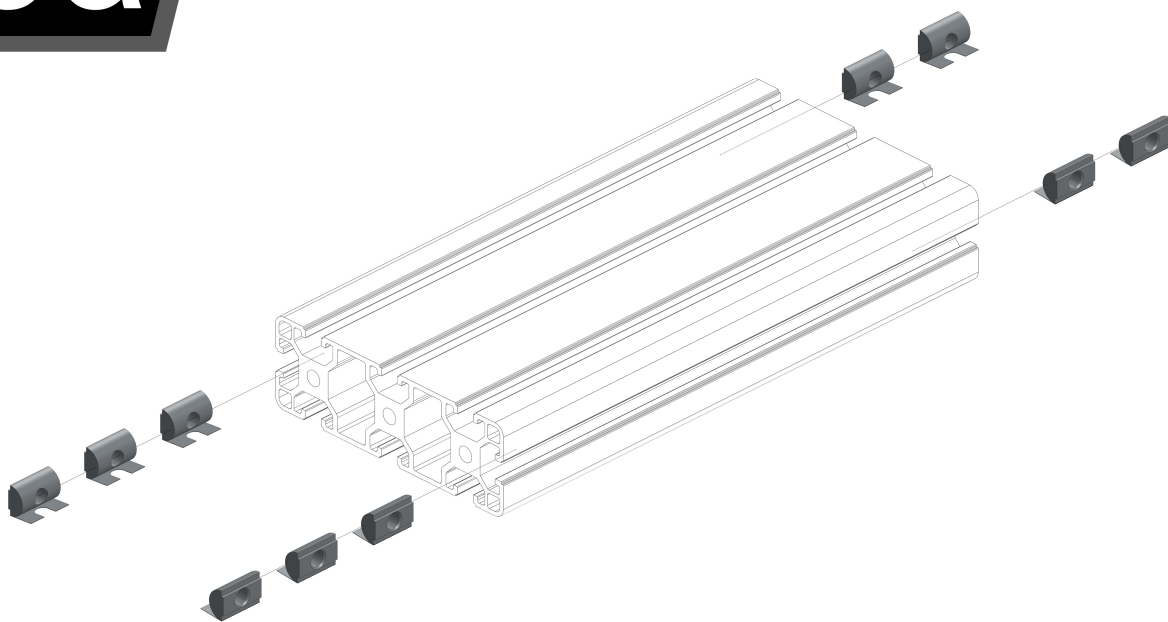


N2x10


6b

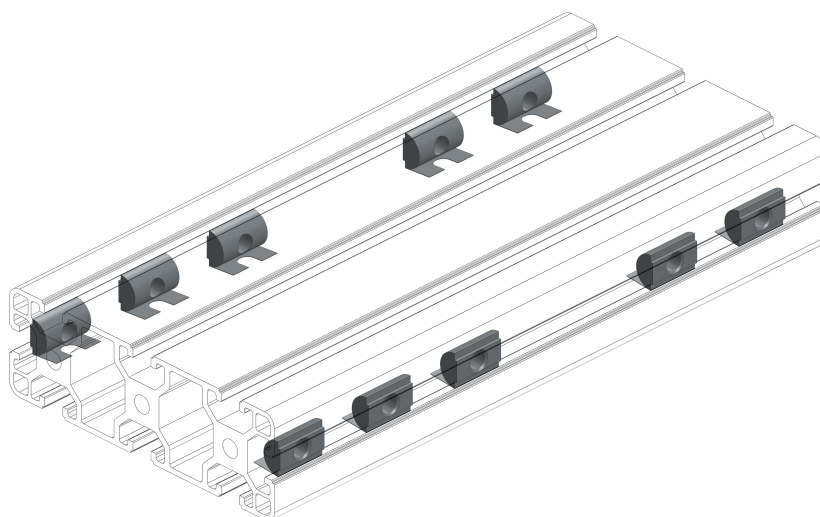

7

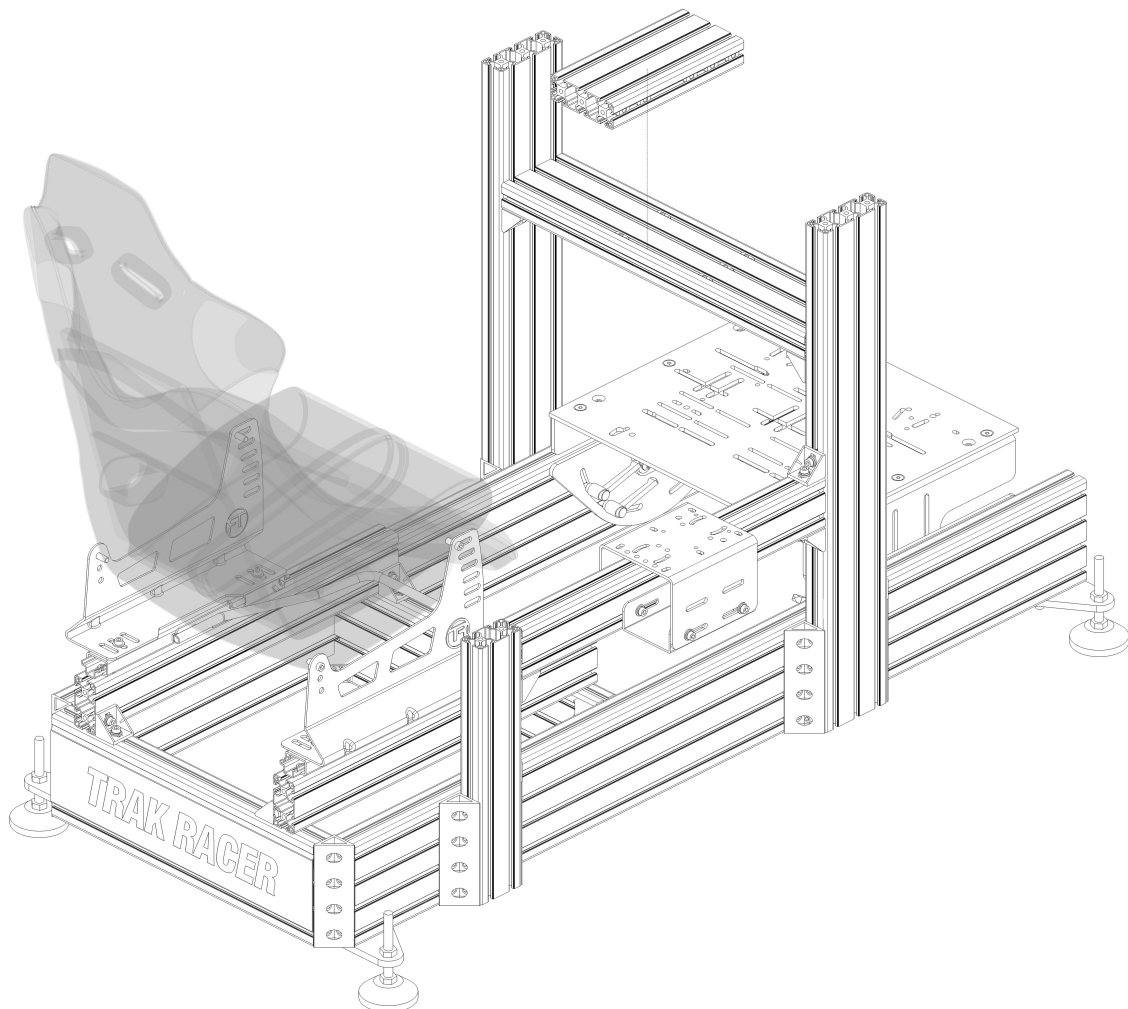


7a


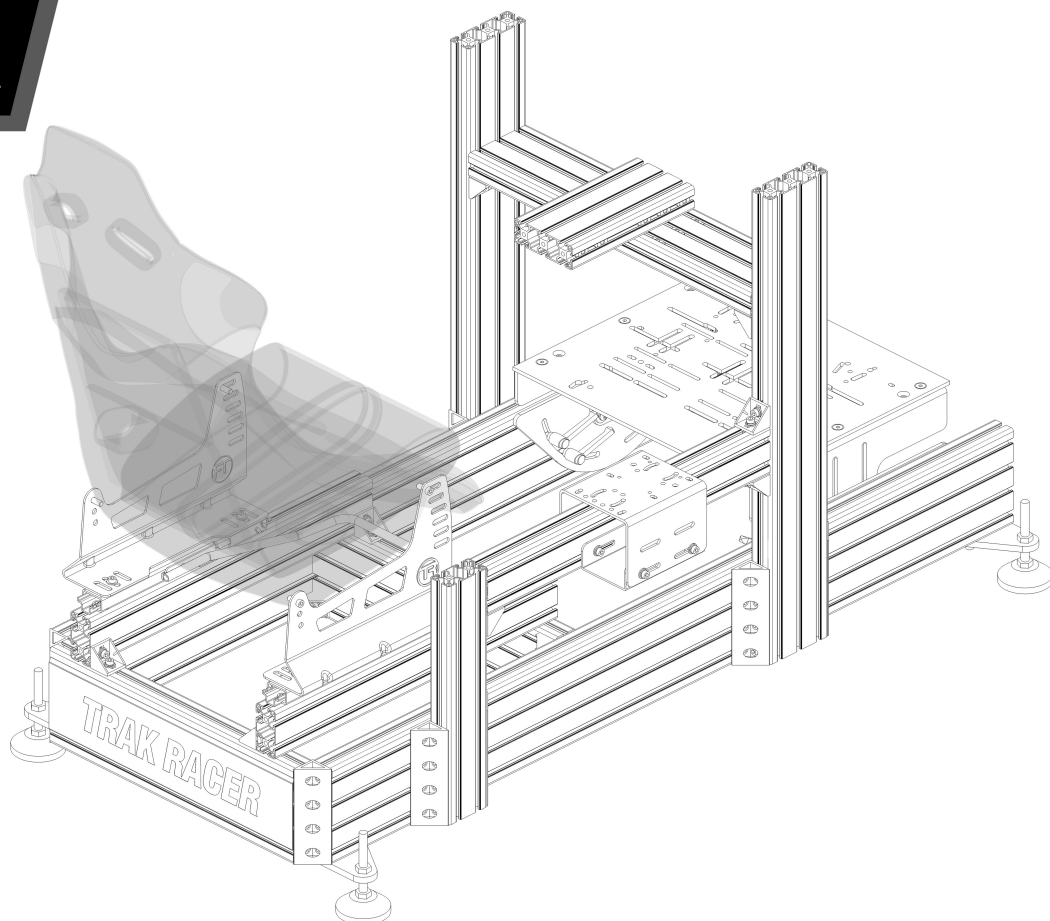





8

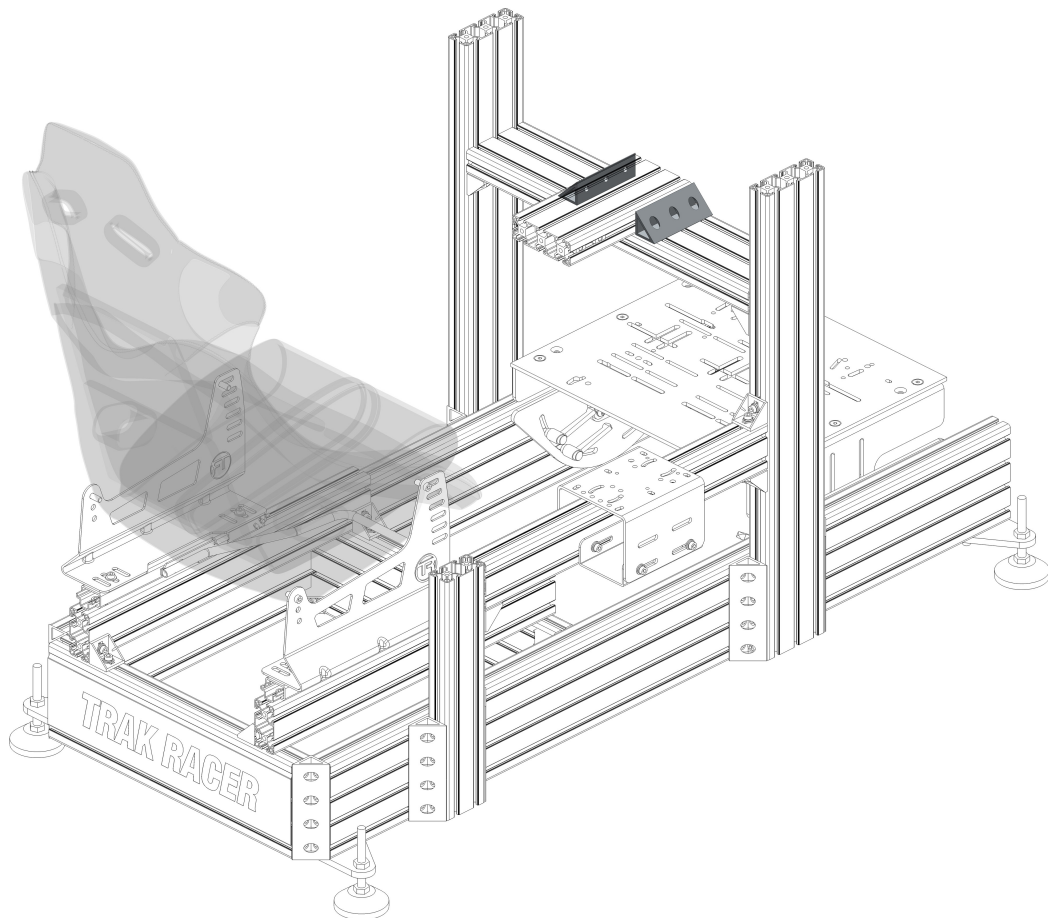


9

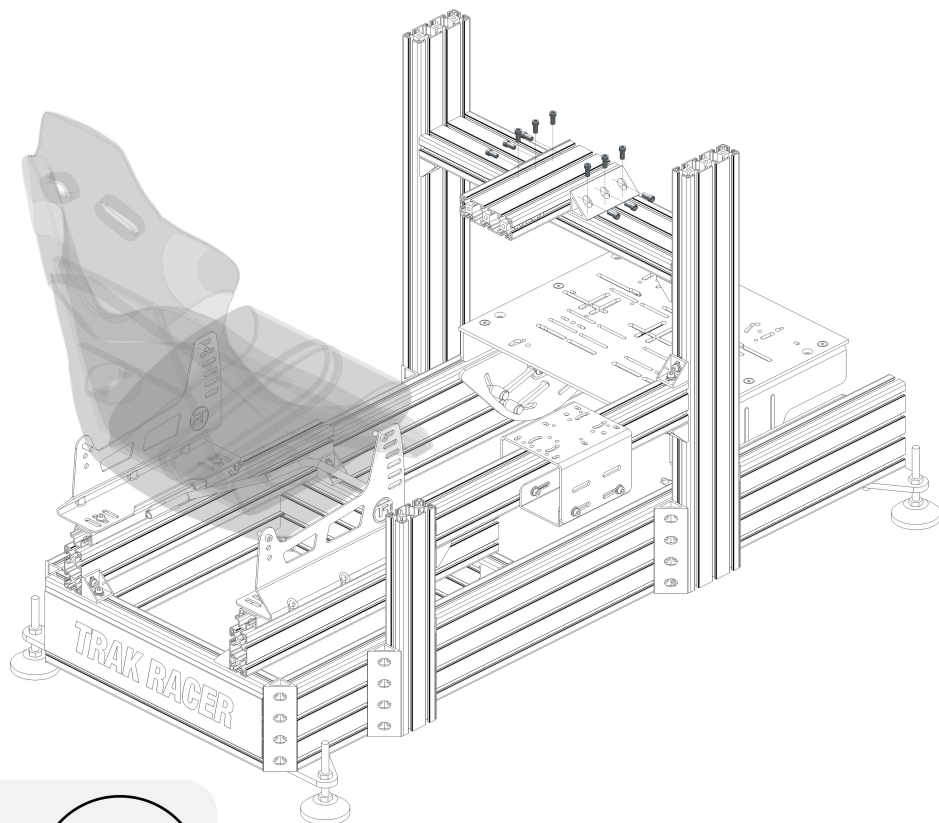


S2x12

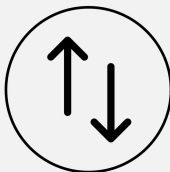

9a

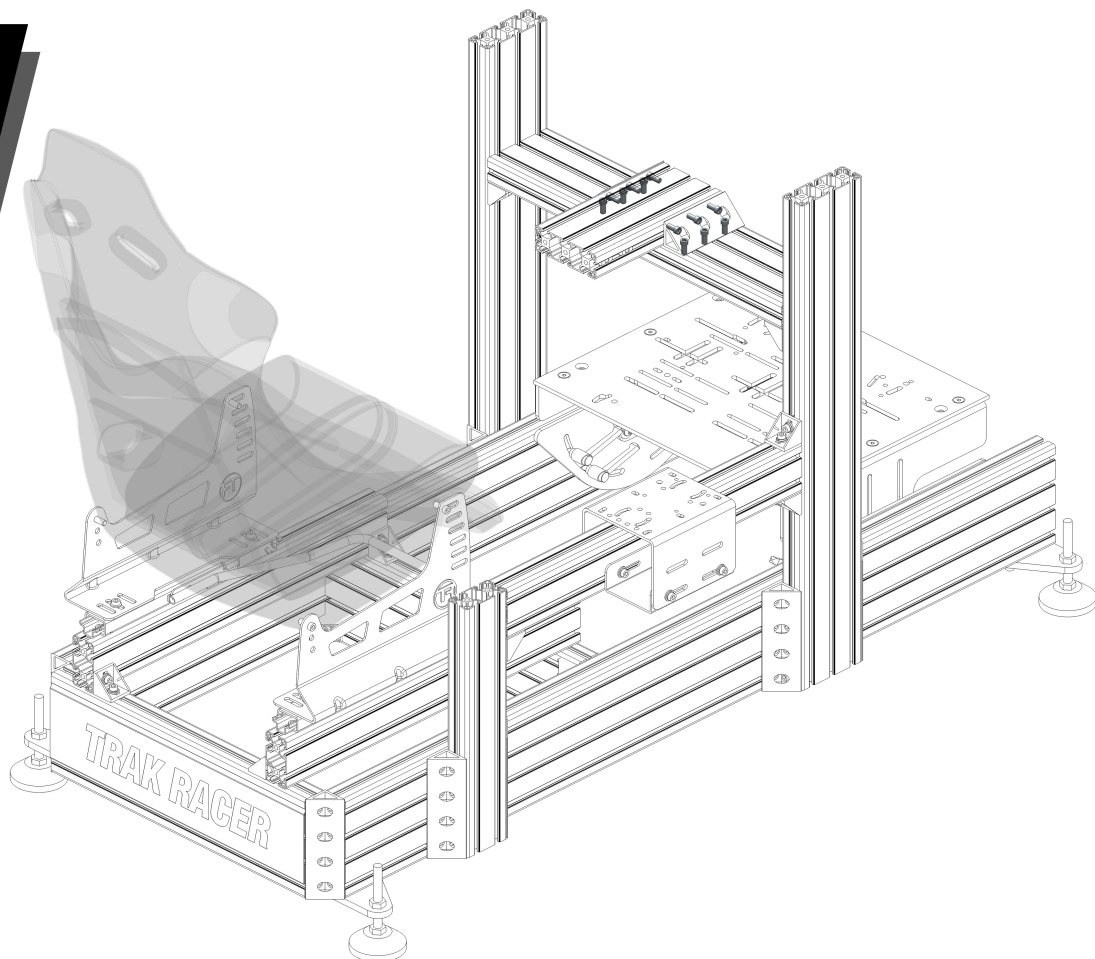


10

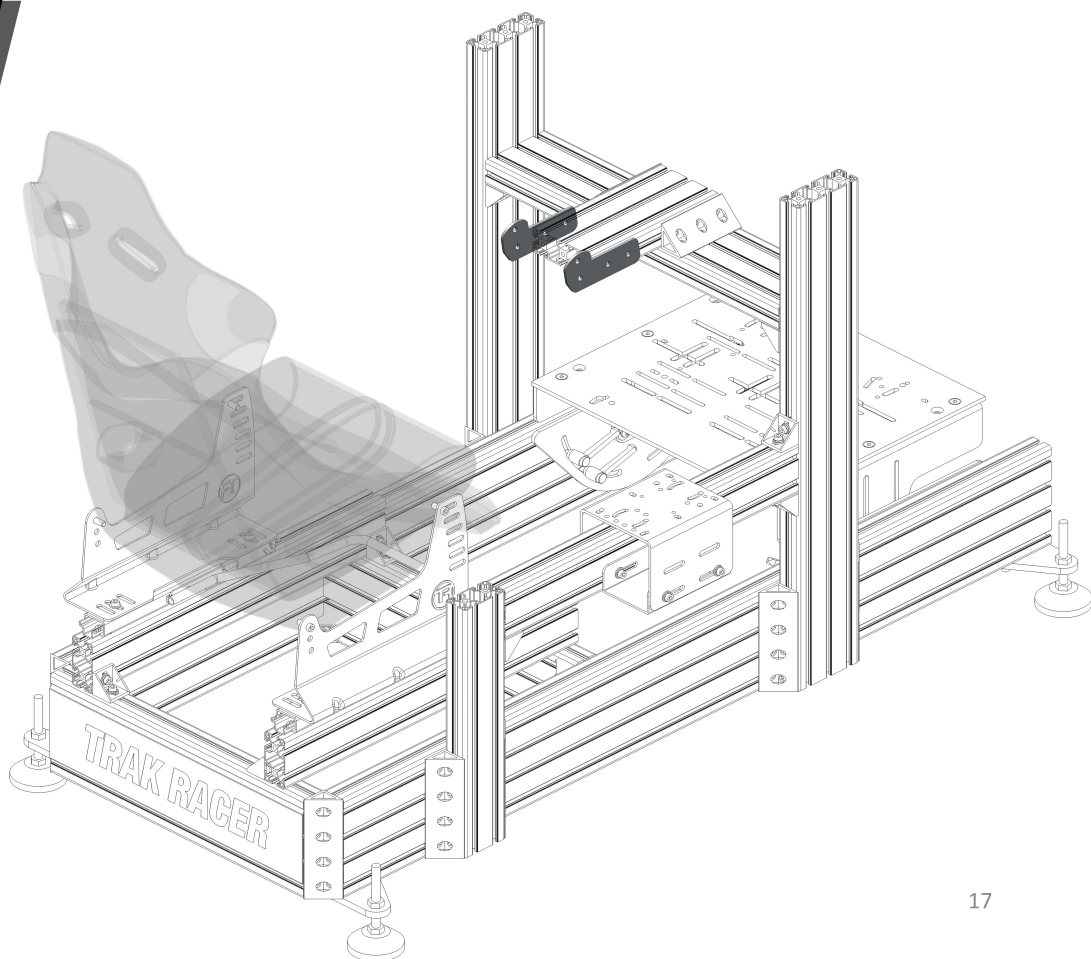

WM2x2


# 11

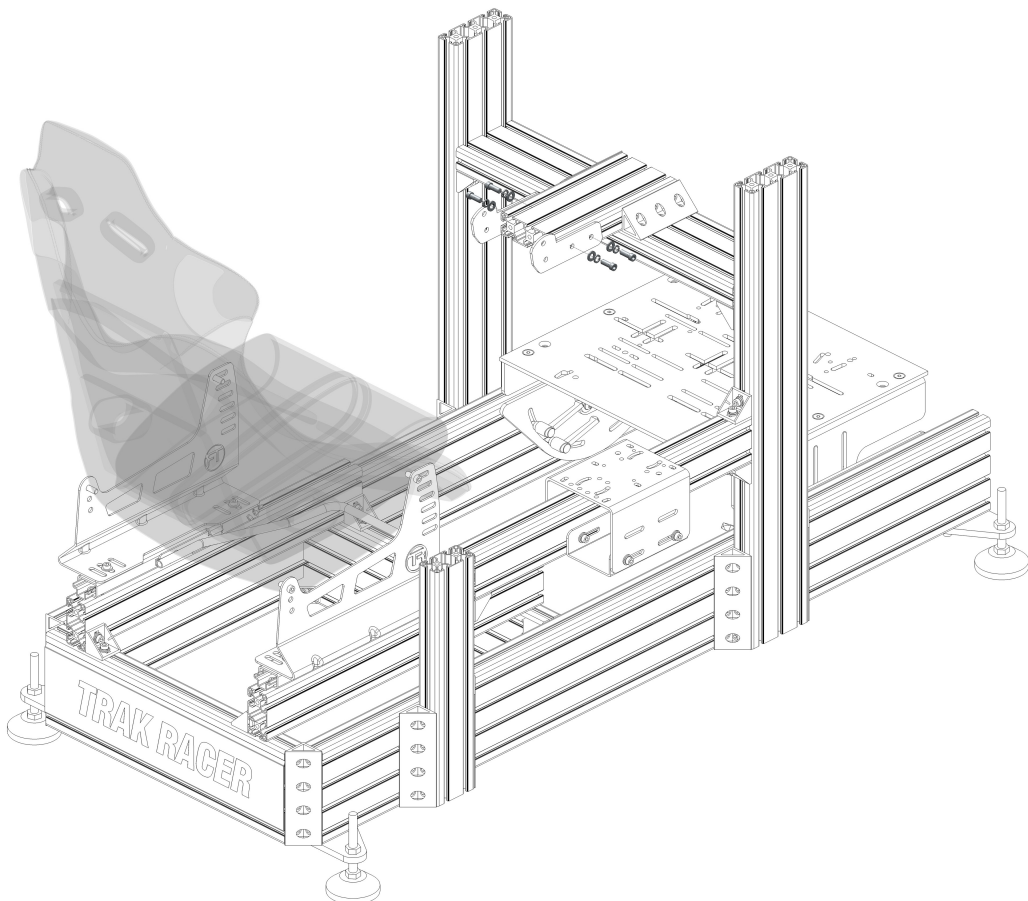


W1x4




W2x4



S3x4

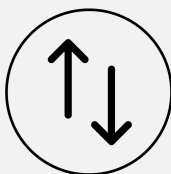


# 11a

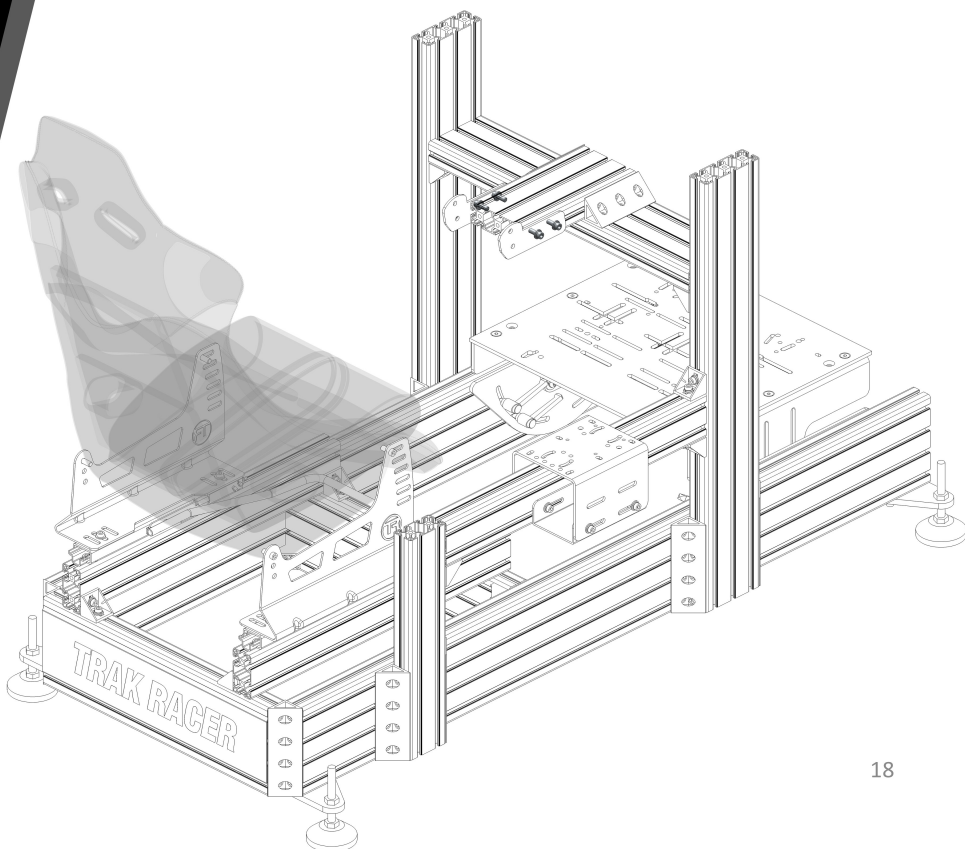




# 12

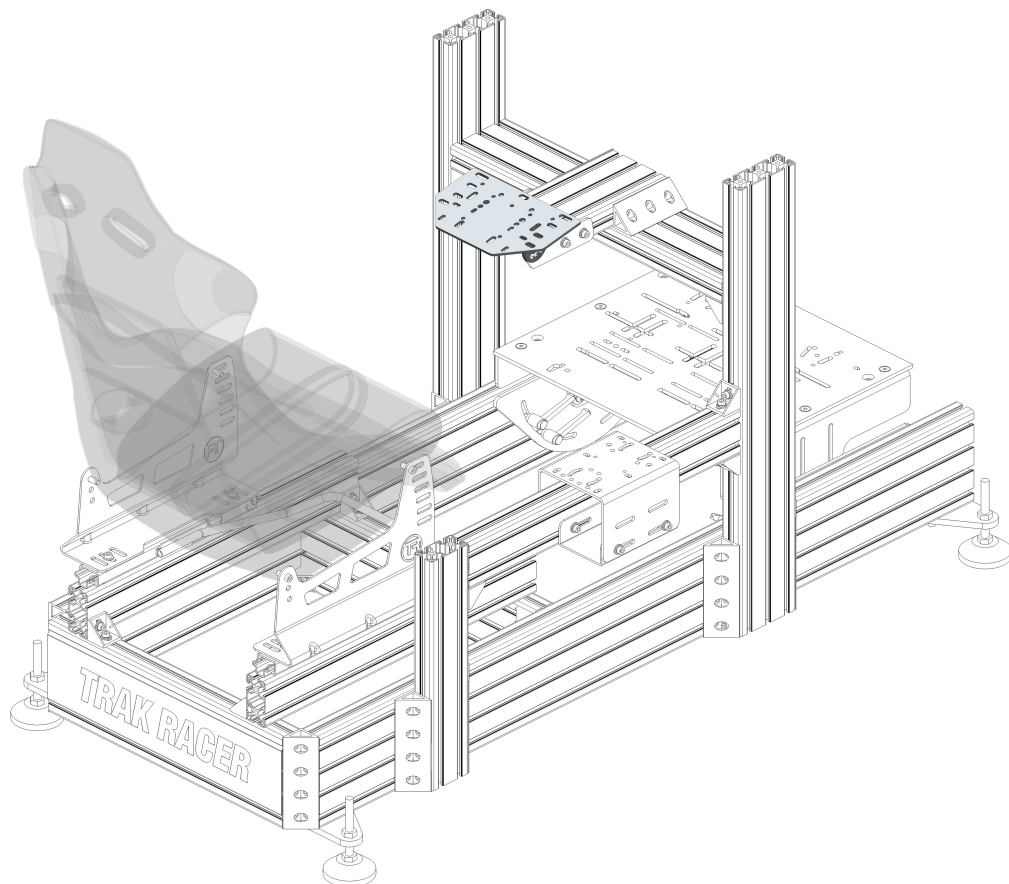

WM1x1


# 13

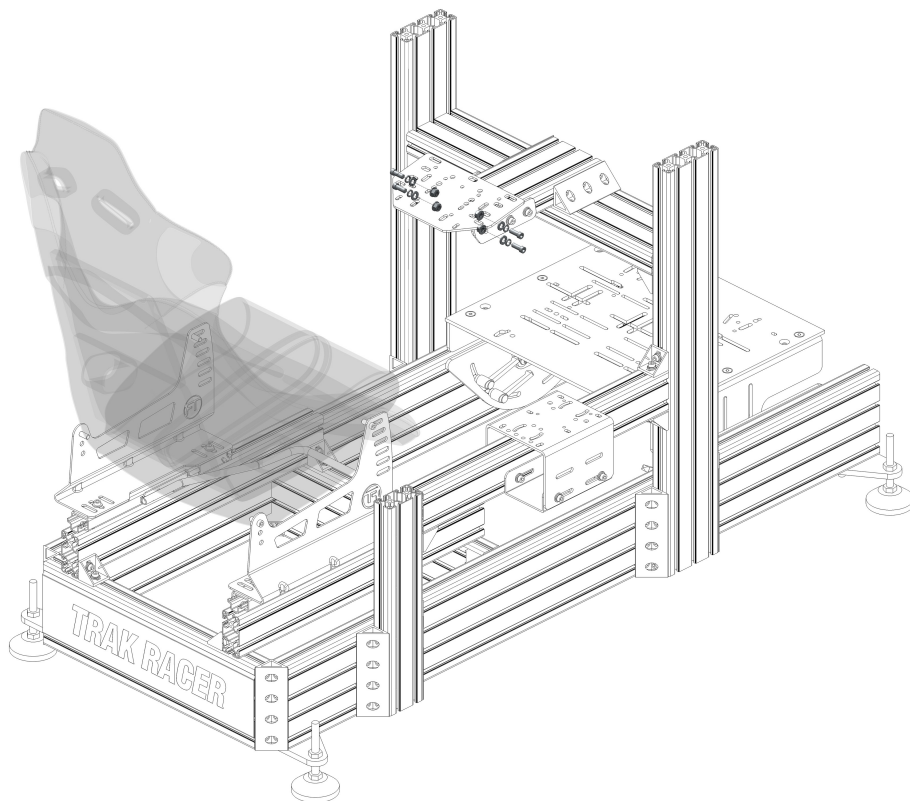

W1x4




W2x4




S3x4



N1x4

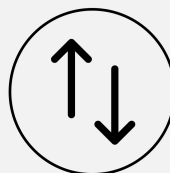

# 13a

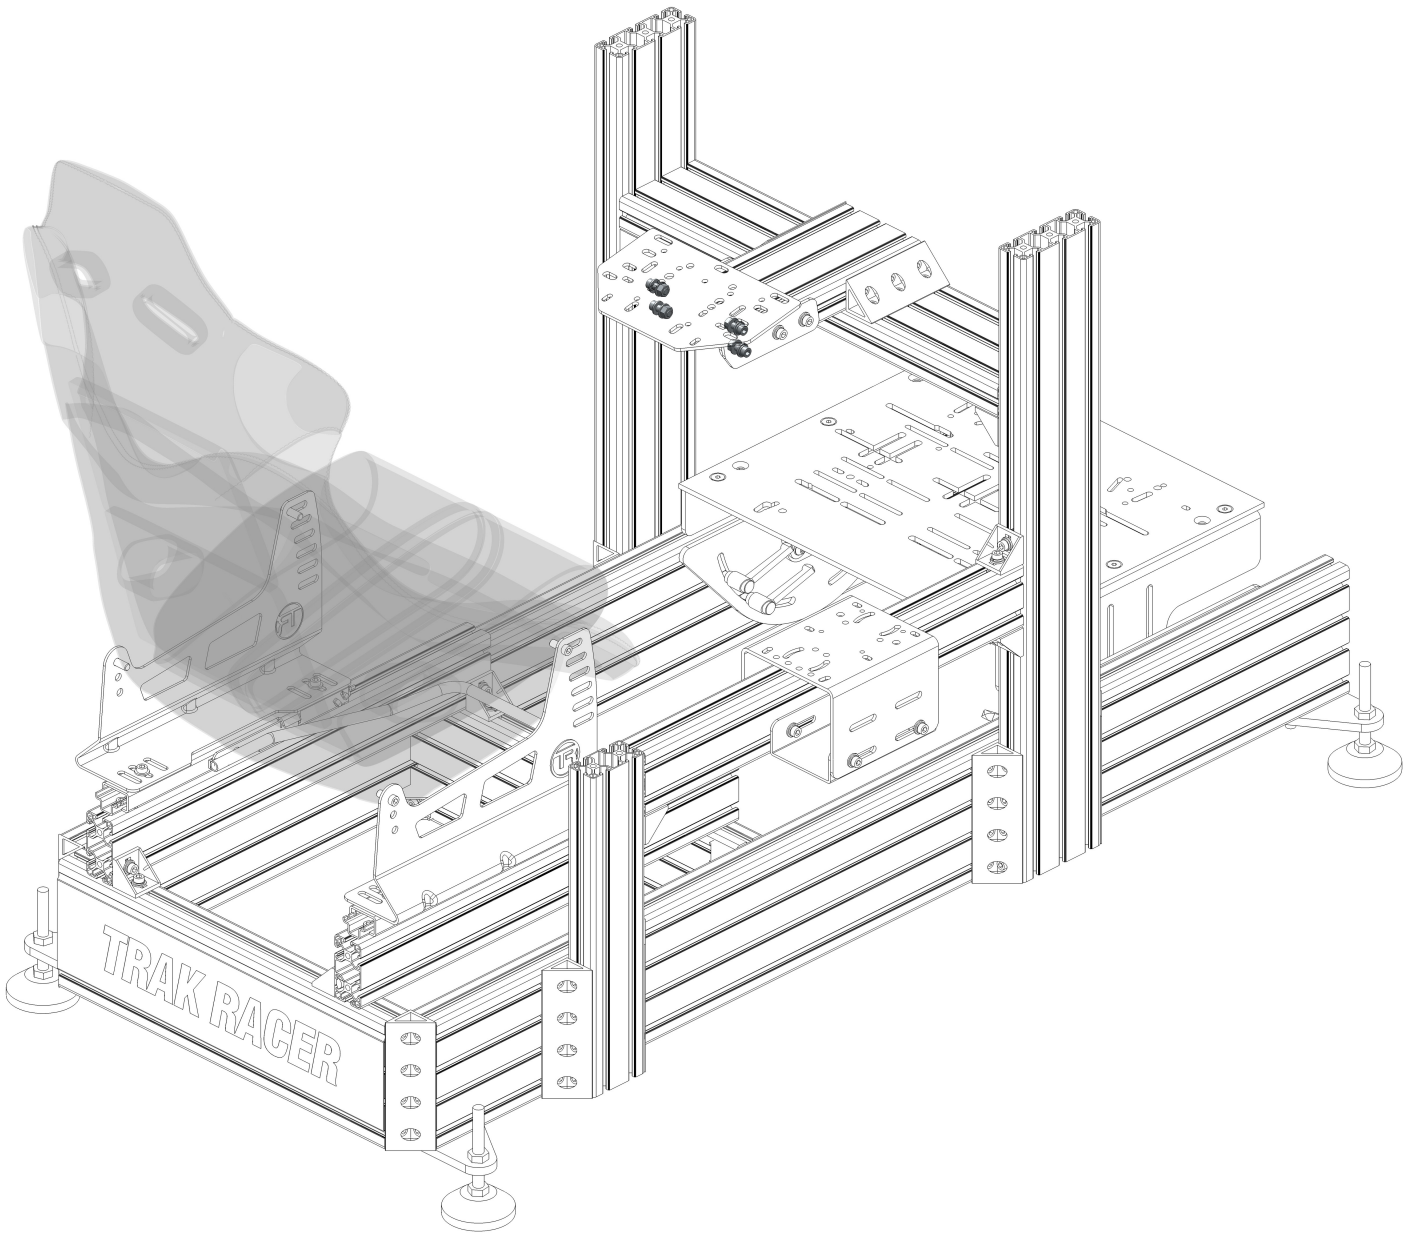

# FINISHED



Share your build online and tag us to be featured!



@trakracer



@trakracer



@trak\_racer