

INTEGRATED ALUM. PROFILE MONITOR MOUNTS


Instruction manual

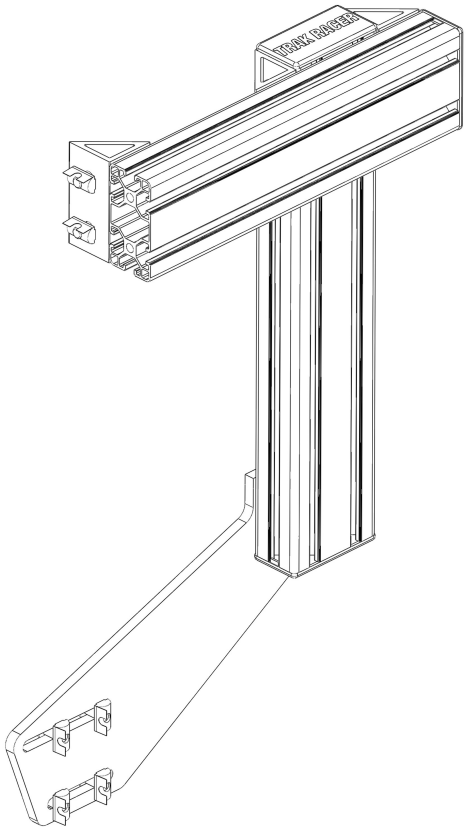

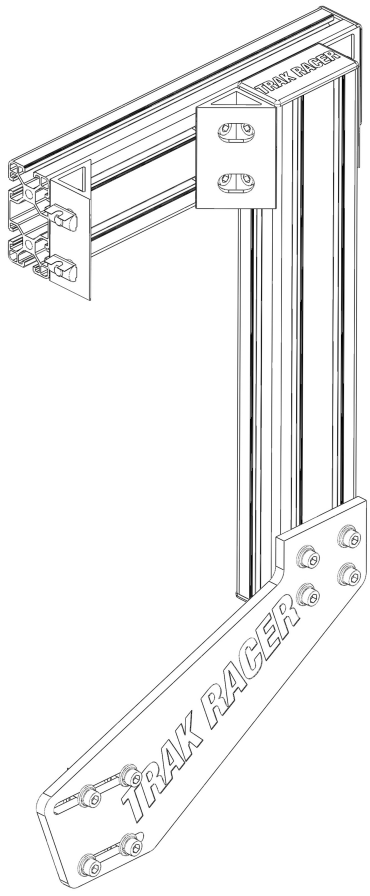


TR80-TMKIT2


TRAK RACER

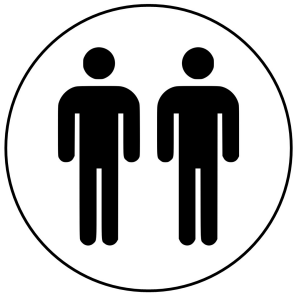


- Two people needed

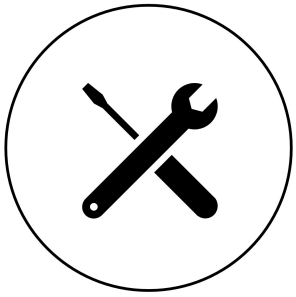


- Tighten hardware

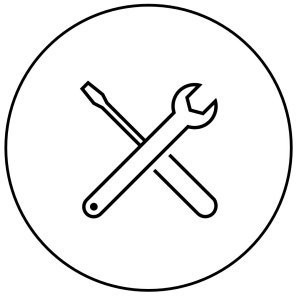

- Leave hardware loose for adjustment

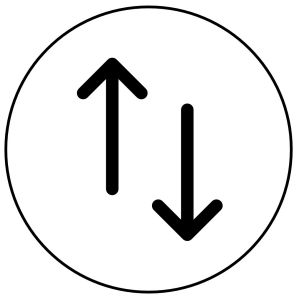

- Make Adjustment

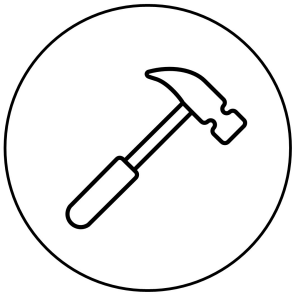



- Break tab off Corner bracket CB1 (Page 6)





- Safety glasses needed


NOTE

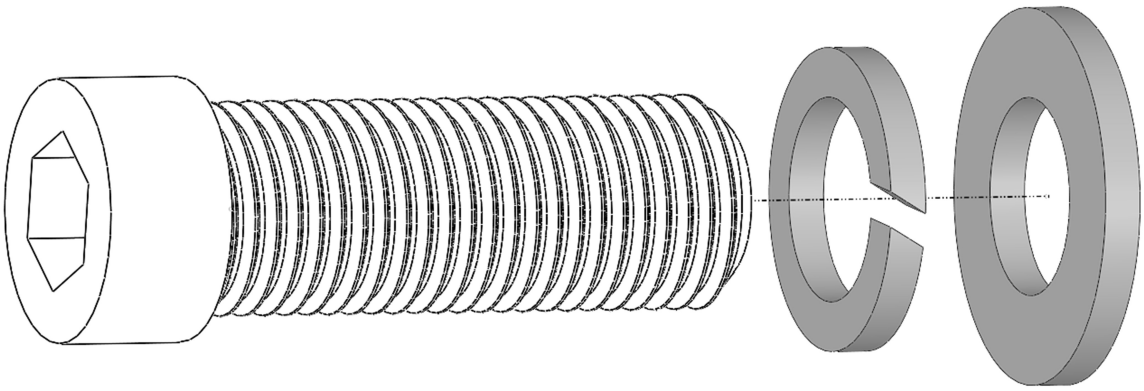


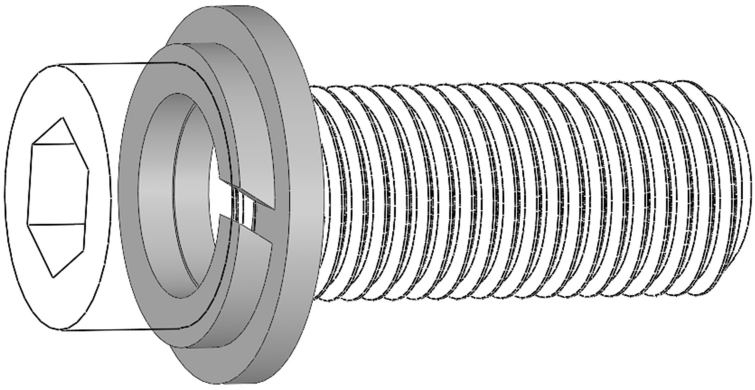

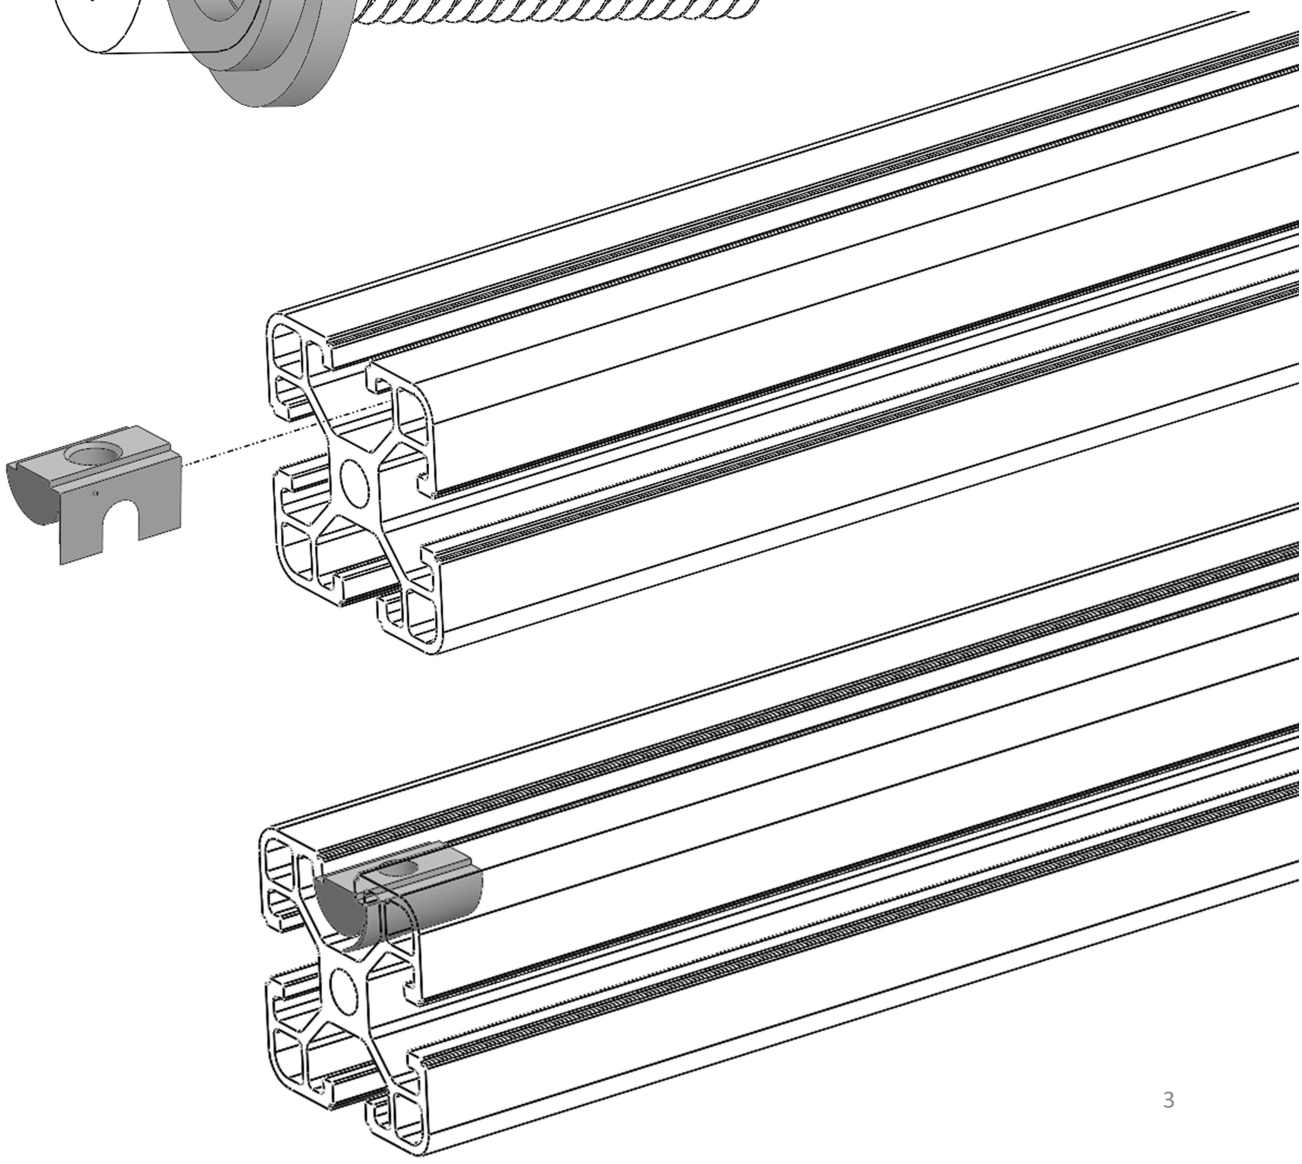


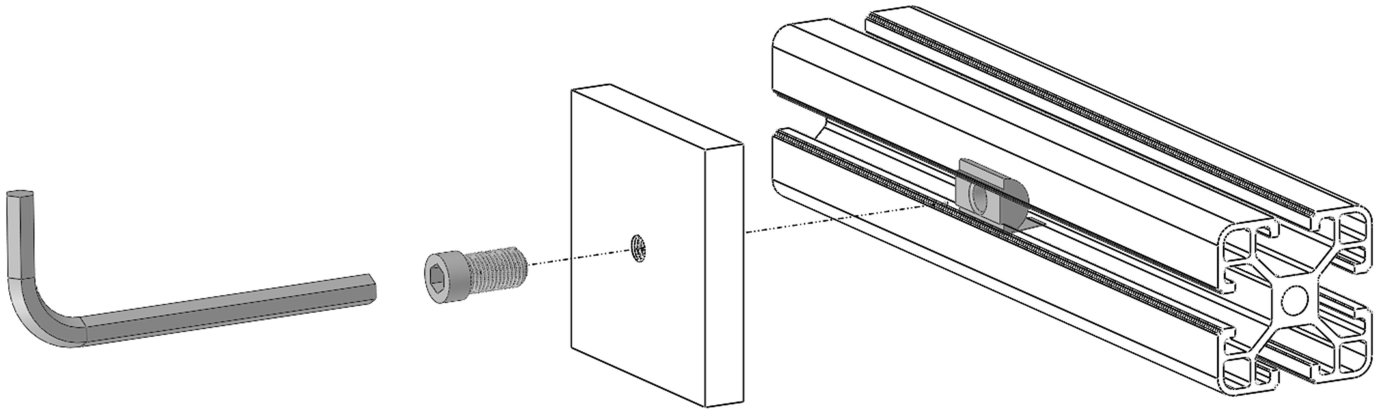

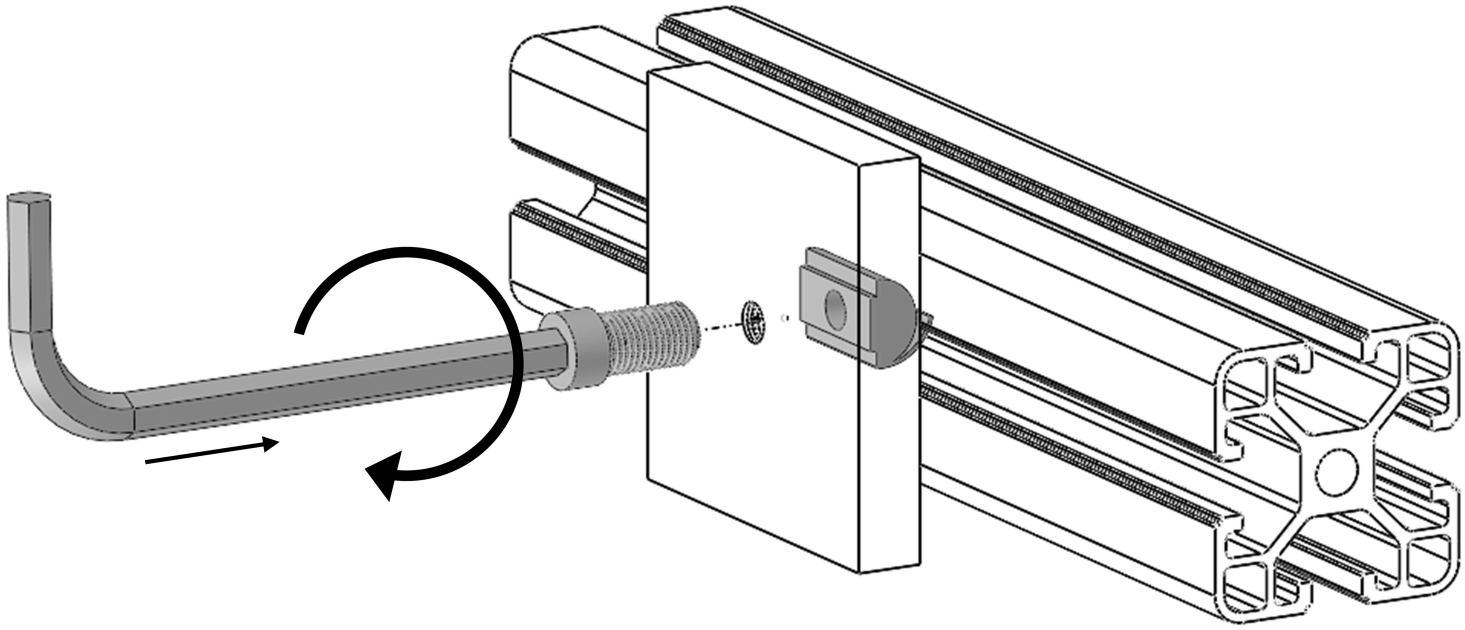


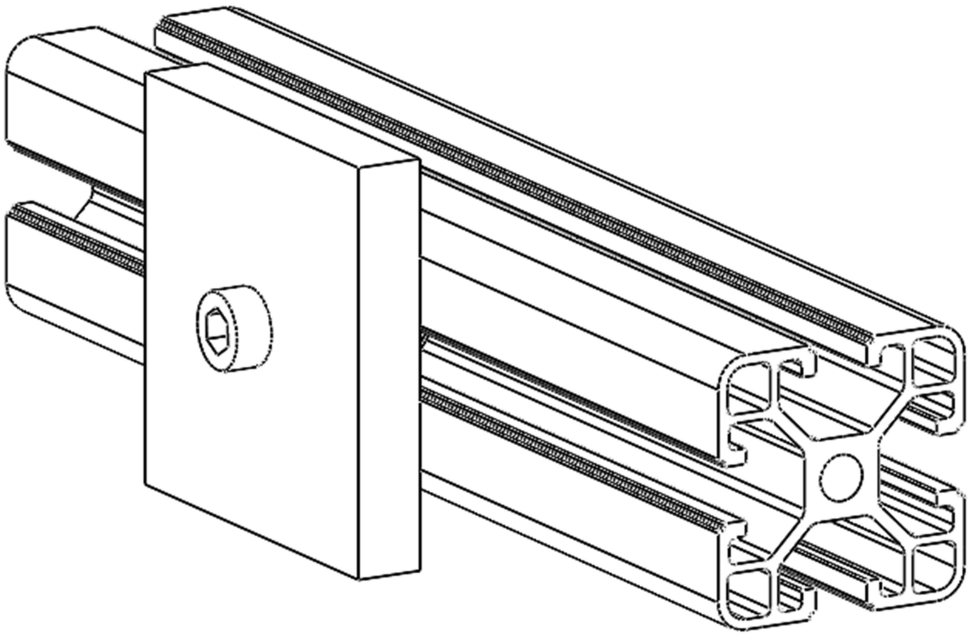


TR80-TMKIT2

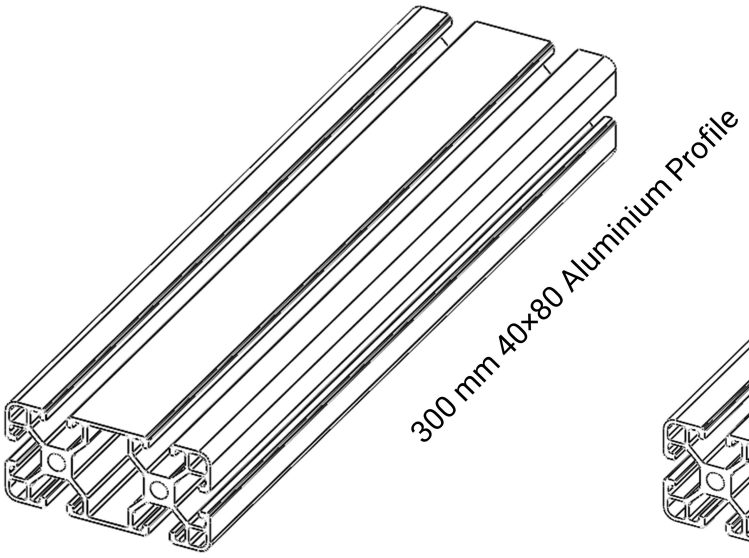


P7 × 2

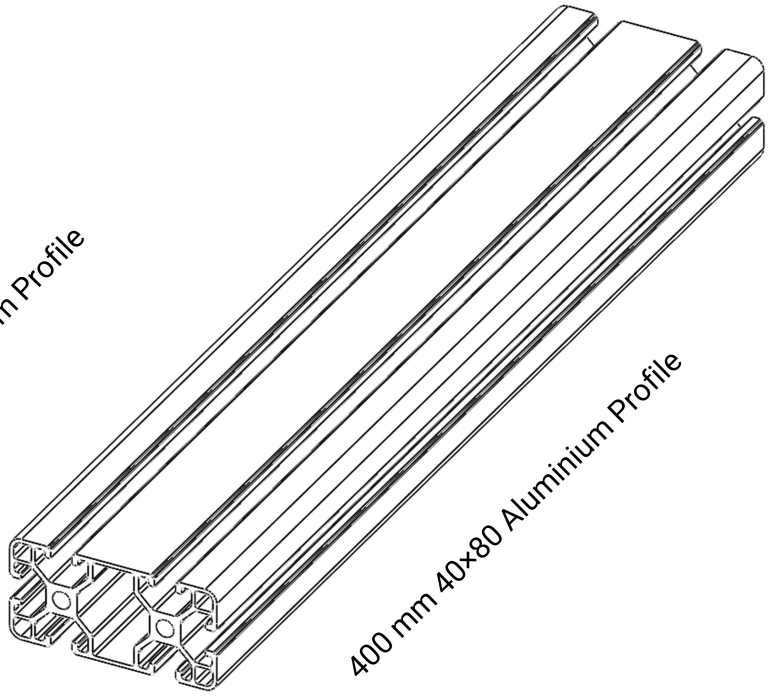


P8 × 2

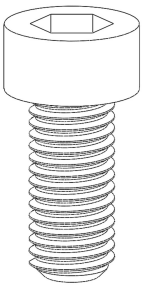


S2 × 16

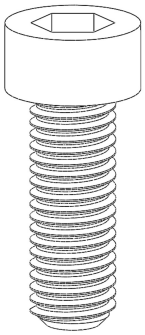


S3 × 16

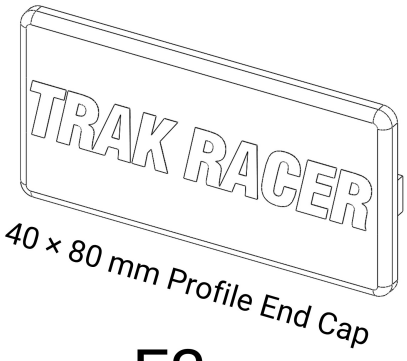


E3 × 6

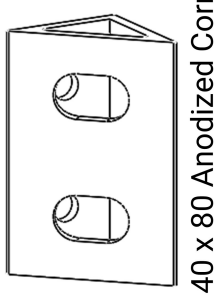


CB4 × 4

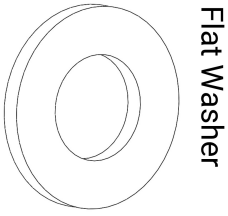


W1 × 16

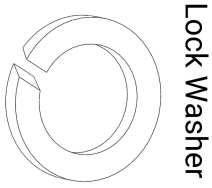

W2 × 16

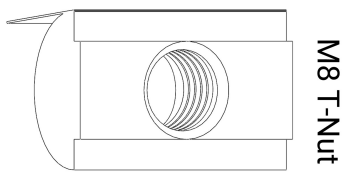



N2 × 32

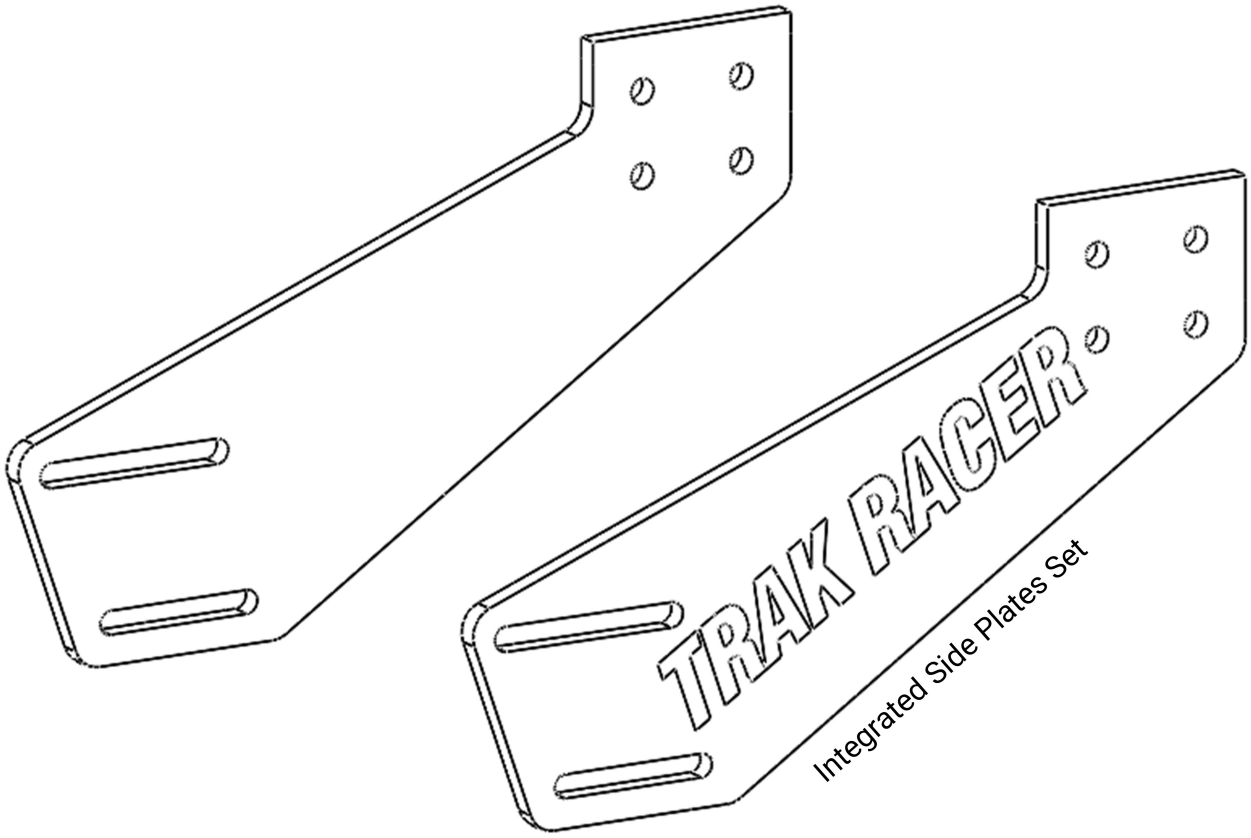

ISP × 1


1

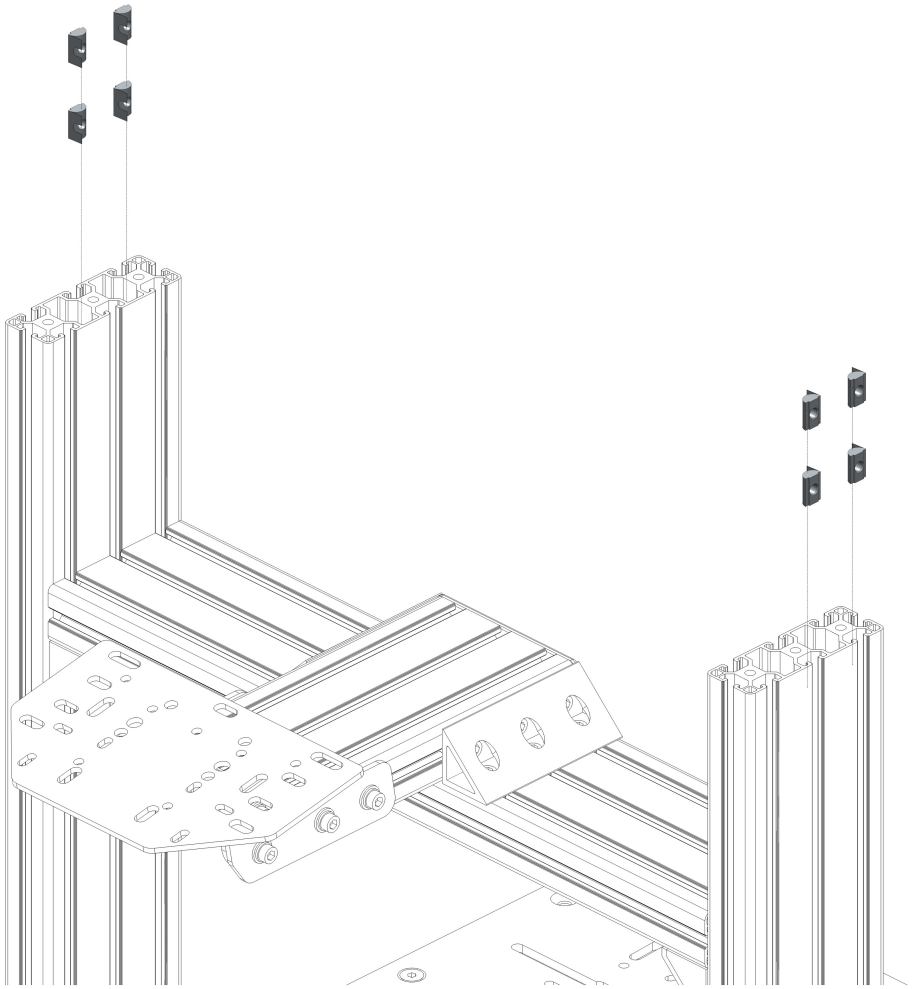





N2×8

1a

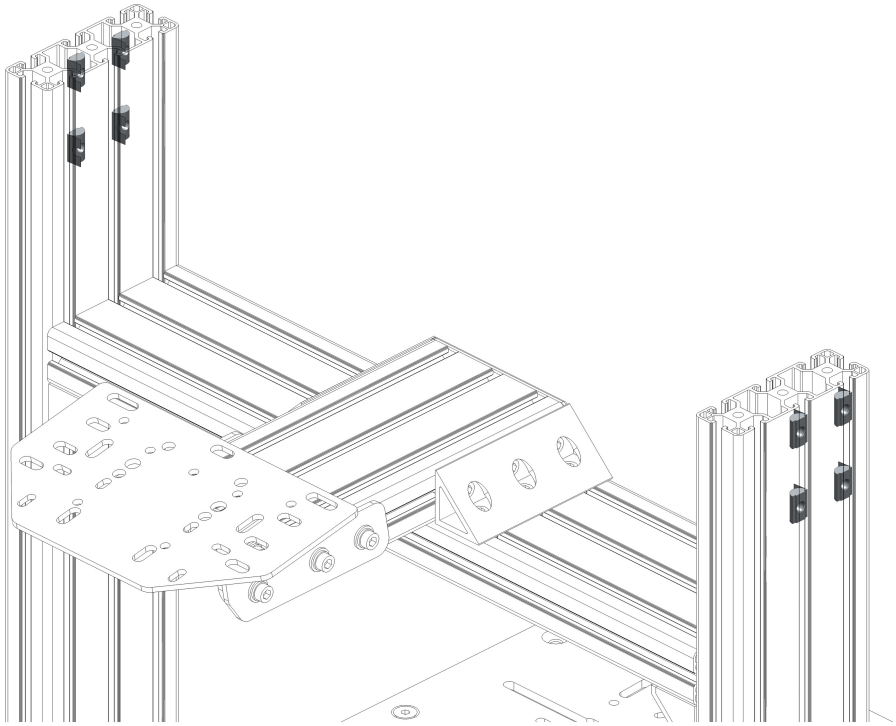


2

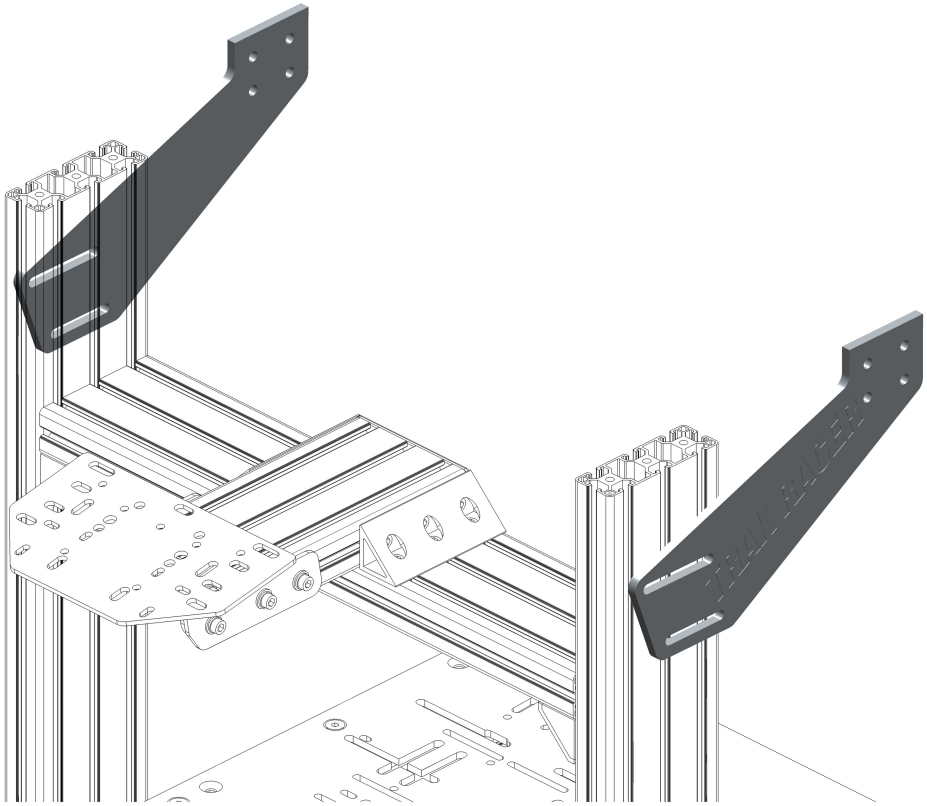

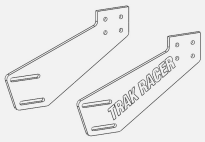

ISP ×1

3

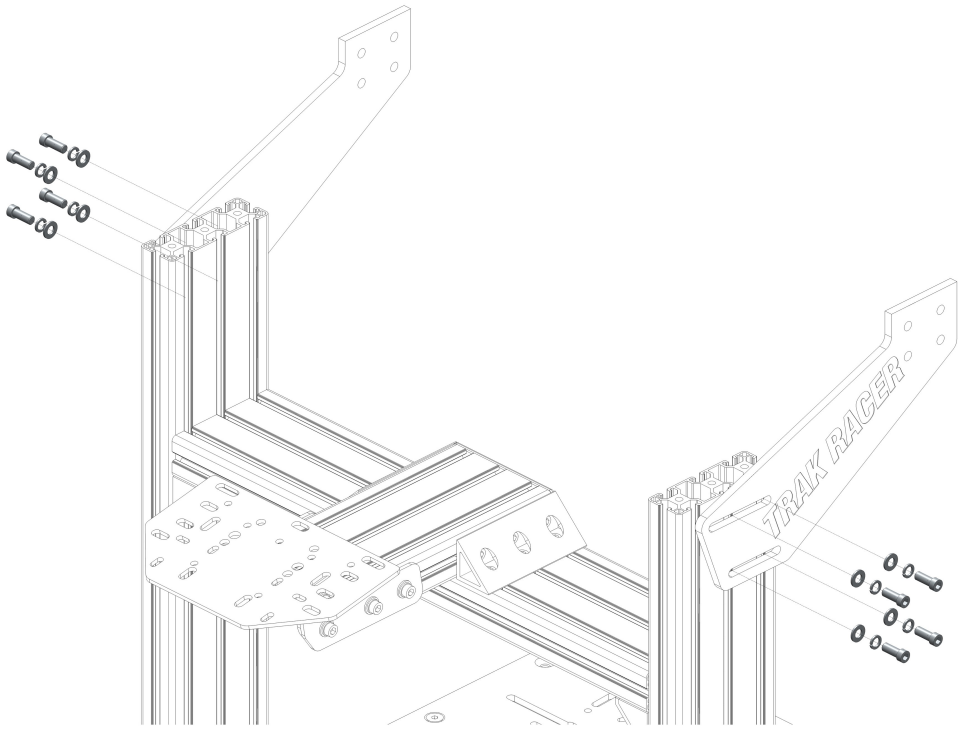





W1×8



W2×8




S3×8

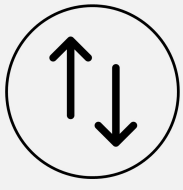





3a

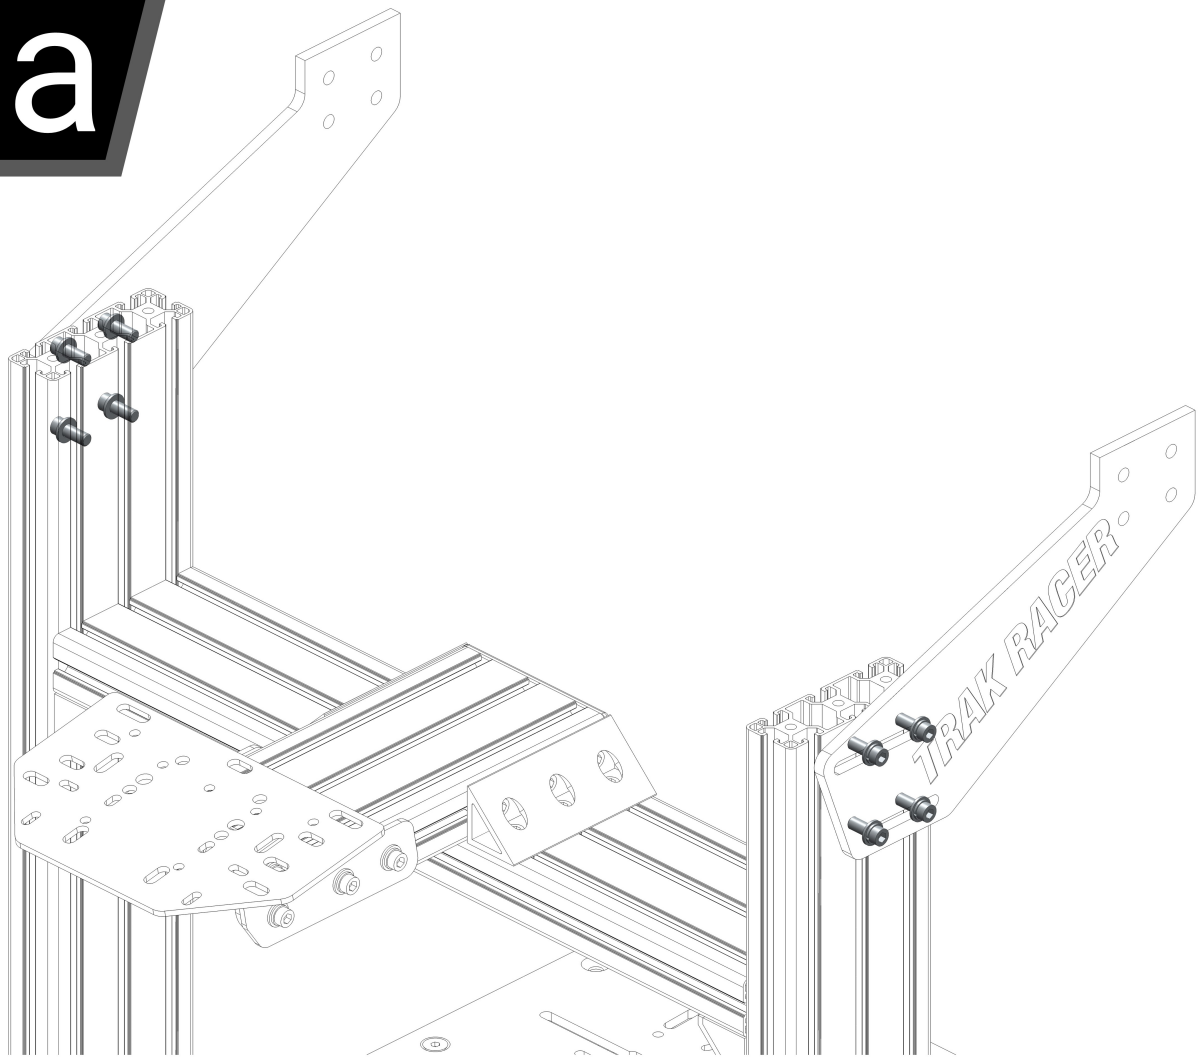

4

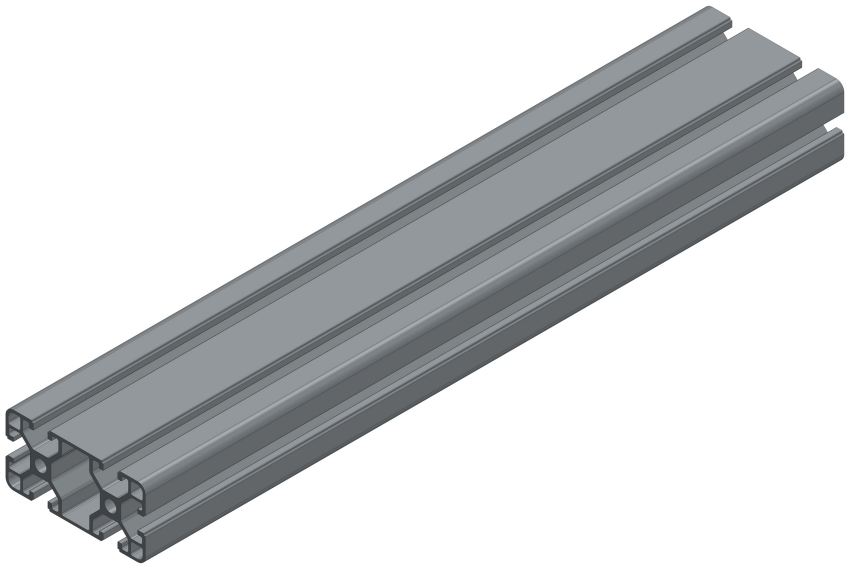

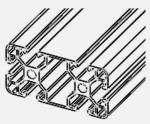


P8×2

4a



×2




N2×8

4b







5

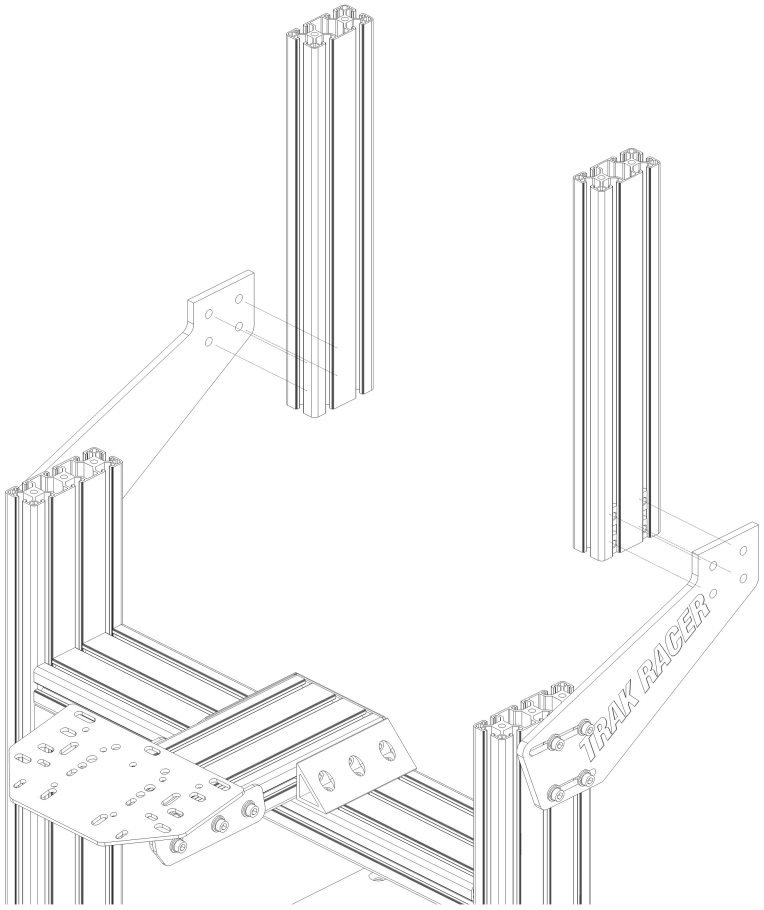


5a

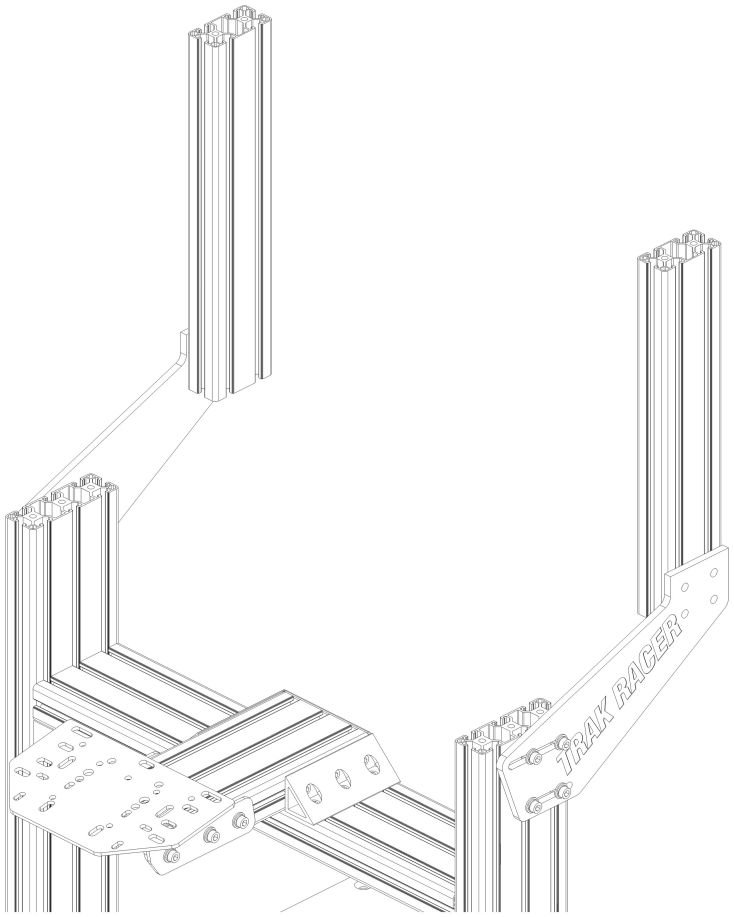


5b

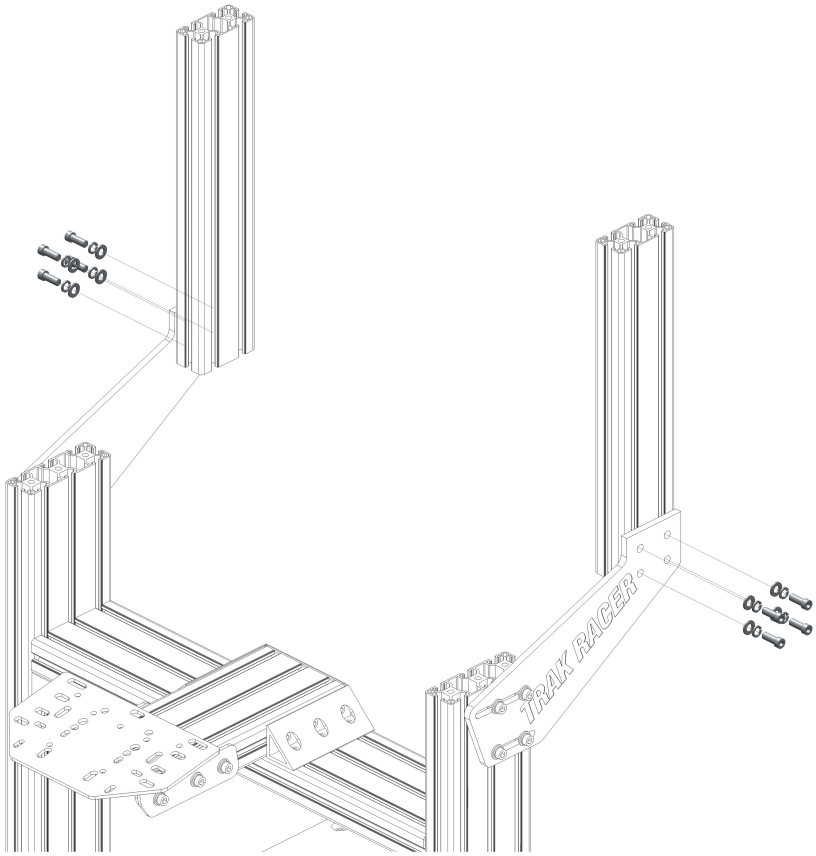


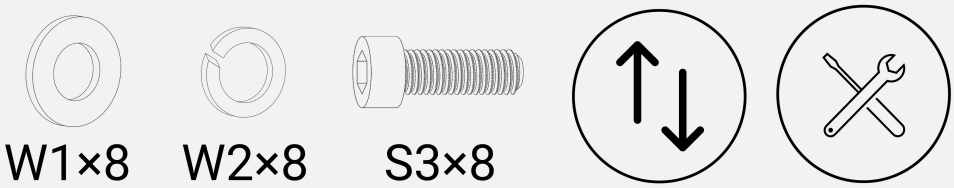



5c

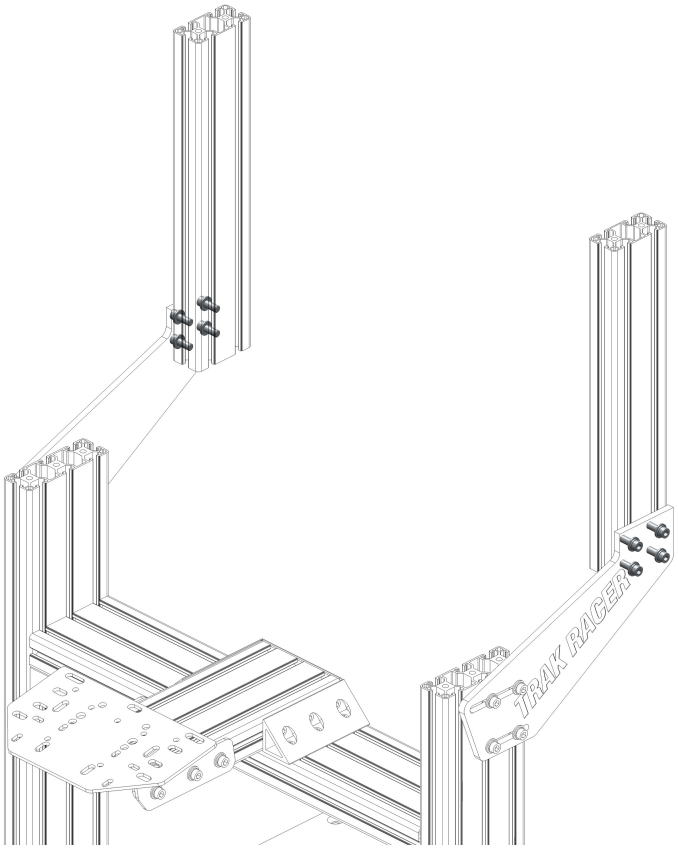

6

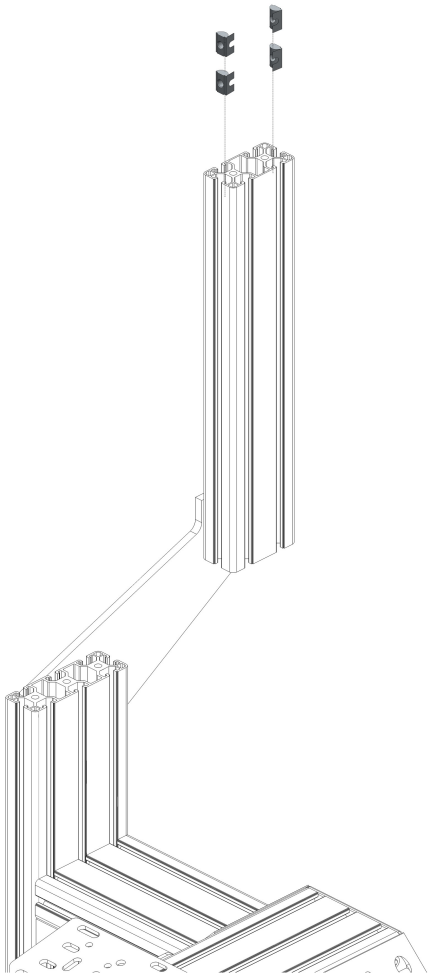


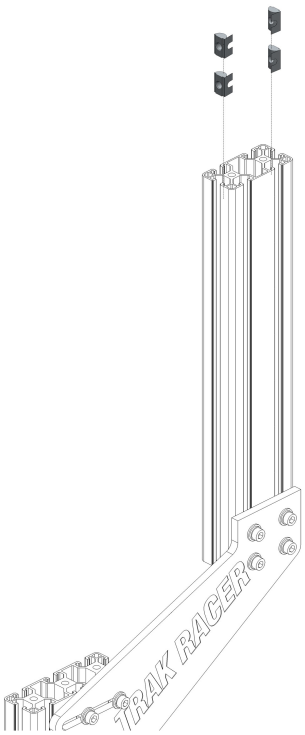





N2×8


6a

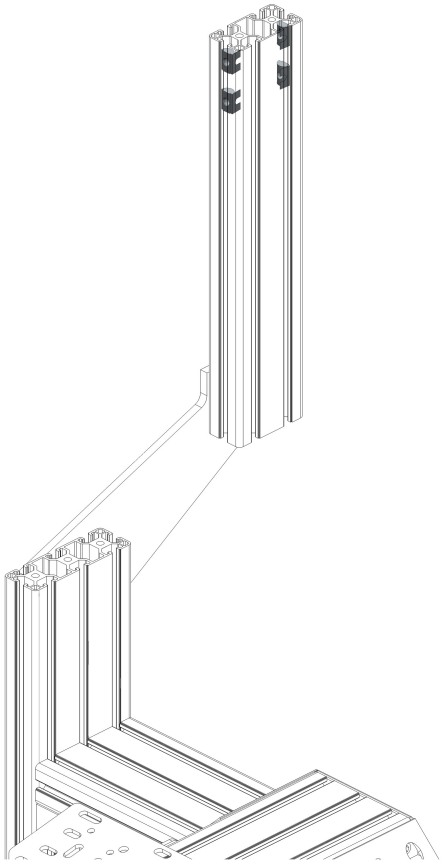

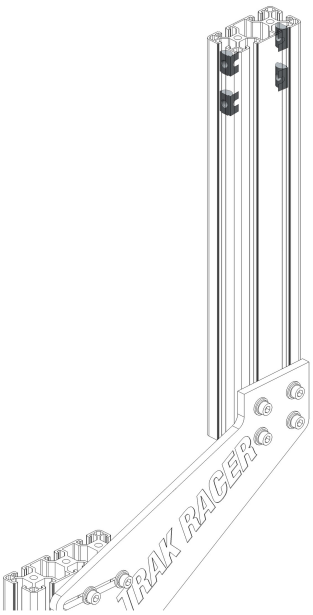


7

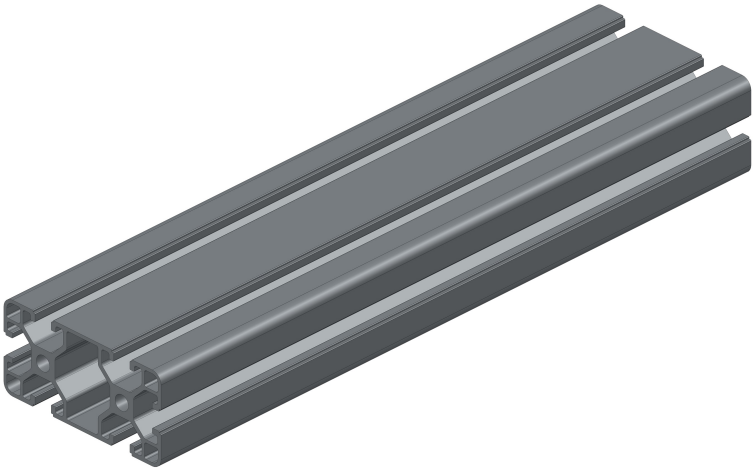




P7×2

7a

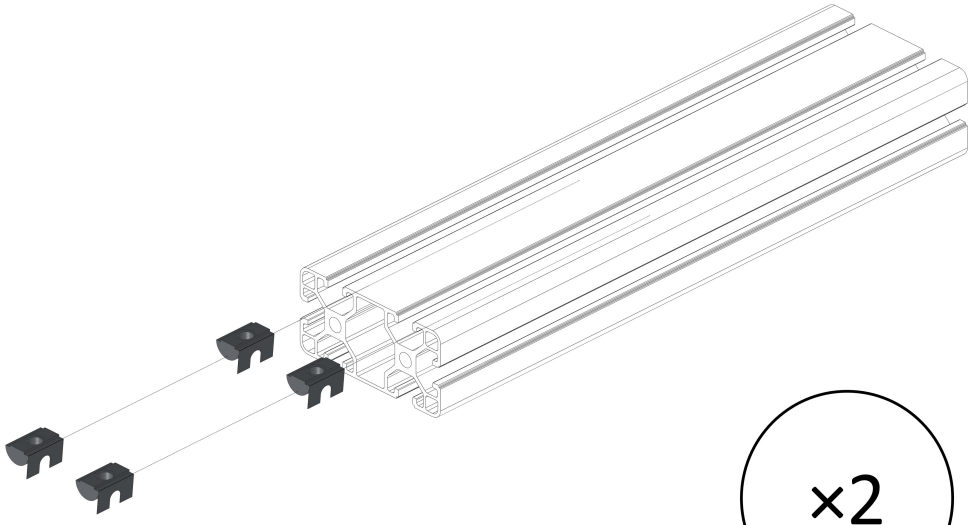



×2




N2×8

7b

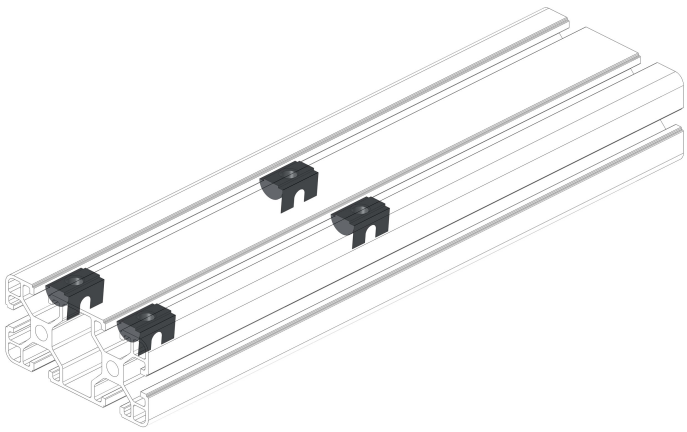


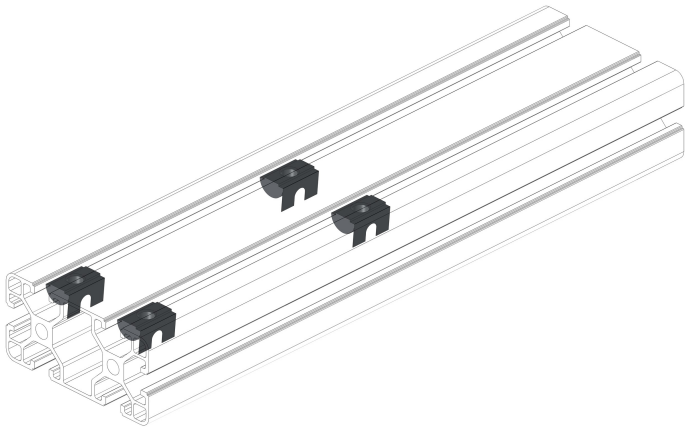


7c

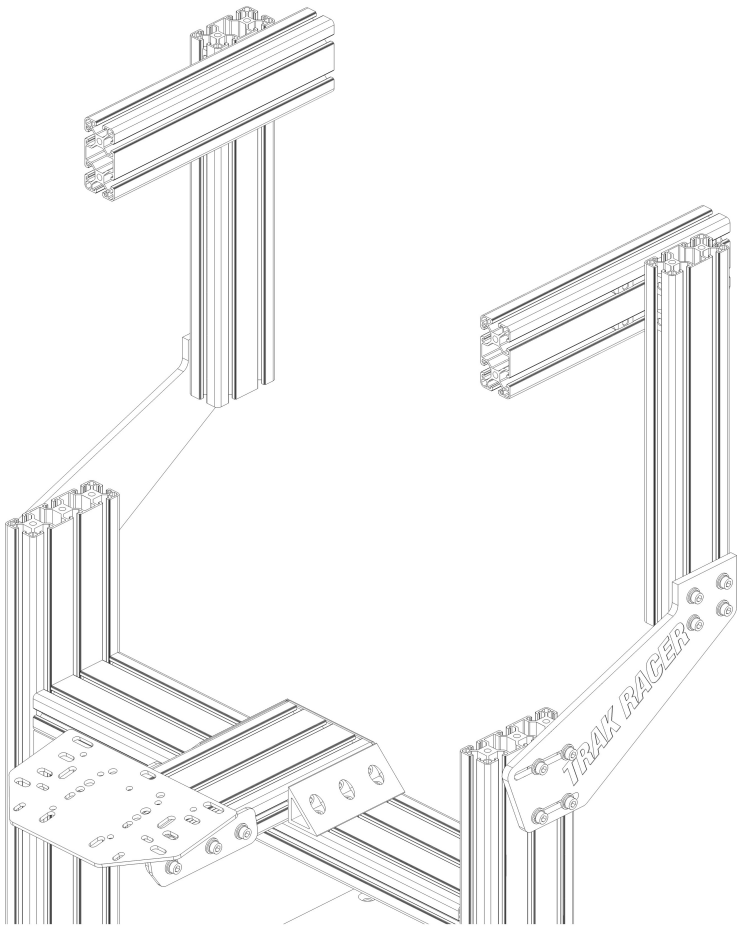


8

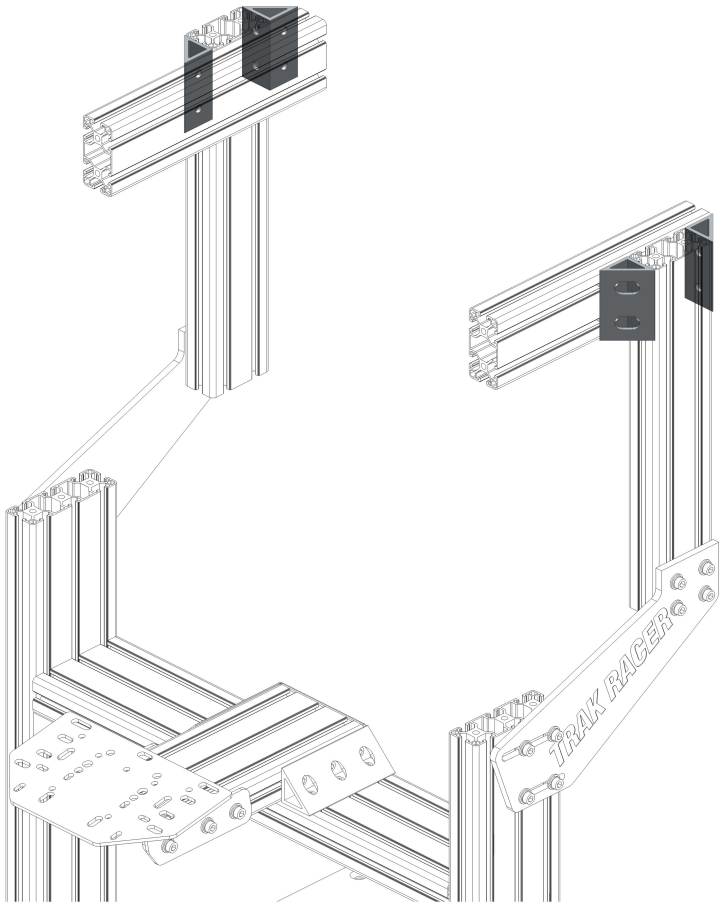





CB4×4

9

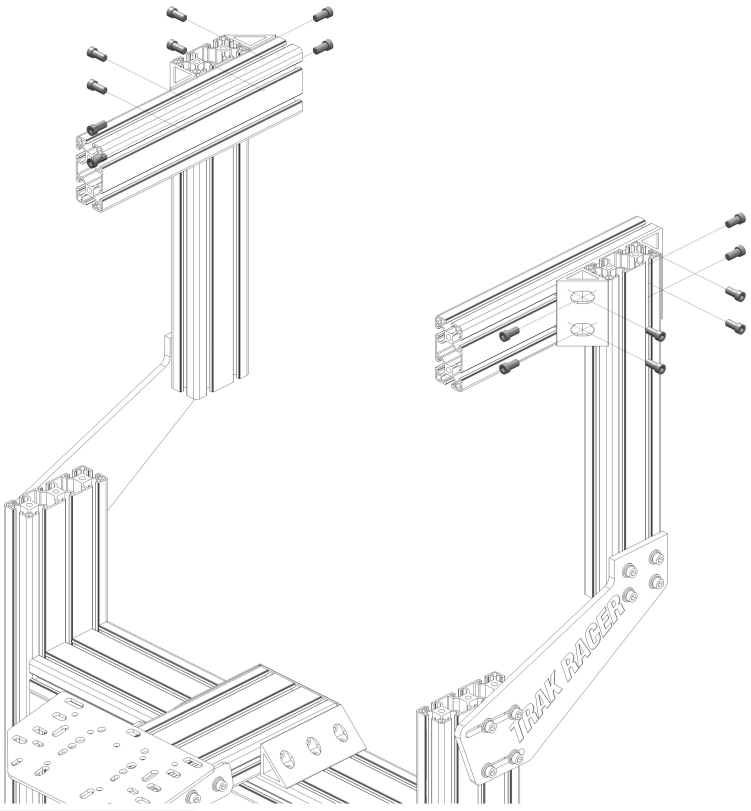




S2×16

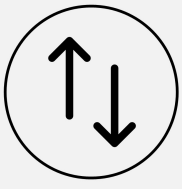




9a

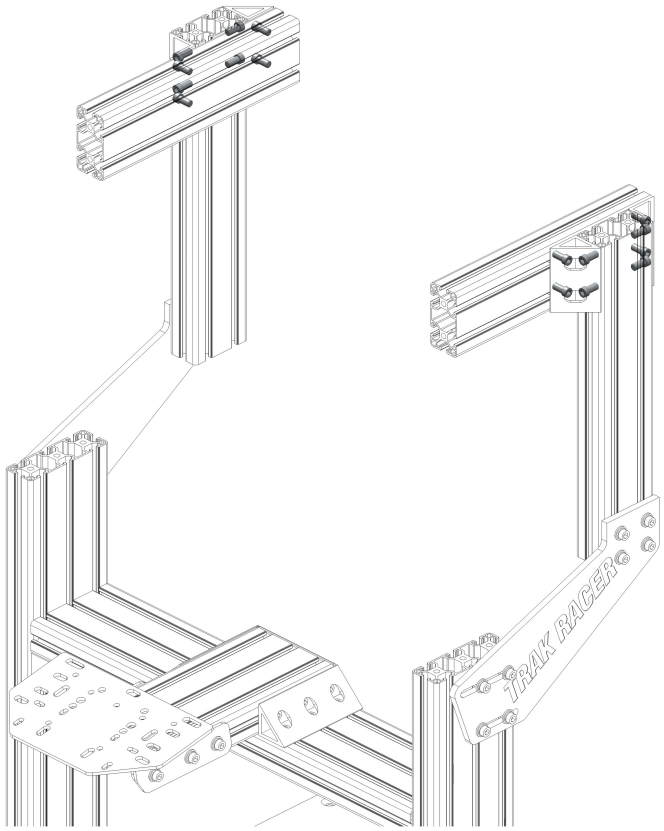

10

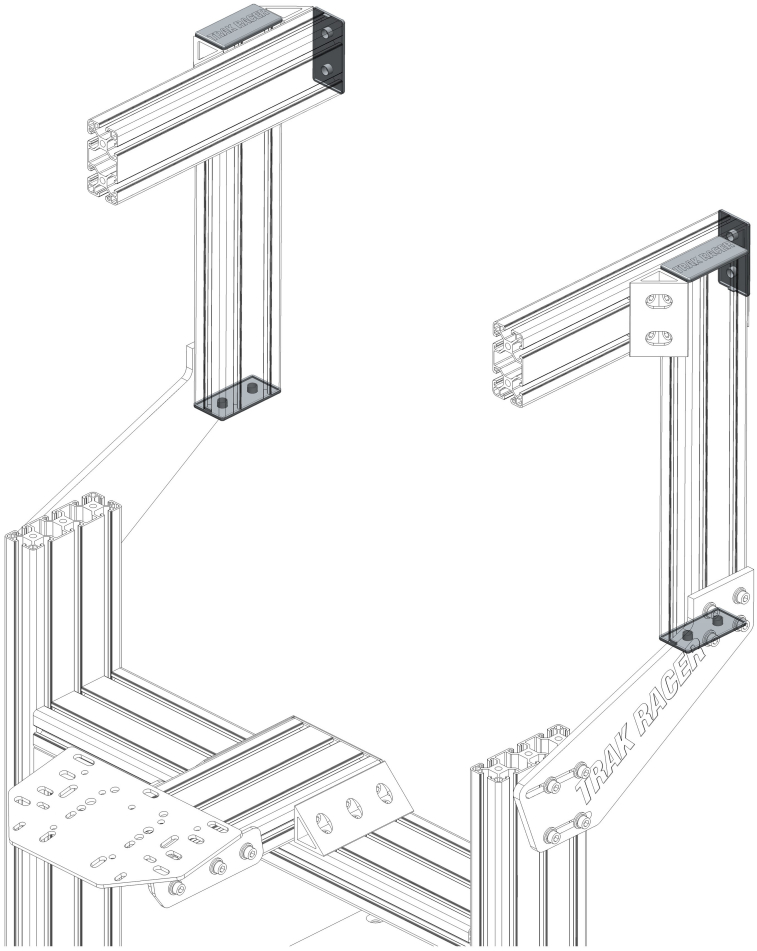



E3×6

FINISHED



Share your build online and tag us to be featured!

@trakracer @trakracer @trak_racer