

Go Power![®]

GP-PWM-30-DL Installation & Wiring




Install the controller

1) DETERMINE THE INSTALLATION LOCATION AND HEAT-DISSIPATION SPACE


Determination of installation location: The controller shall be installed in a place with sufficient air flow through the radiators of the controller and a minimum clearance of 150 mm from the upper and lower edges to ensure natural thermal convection.

2) DETERMINE THE SIZE OF INSTALLATION LOCATION (158*96MM)

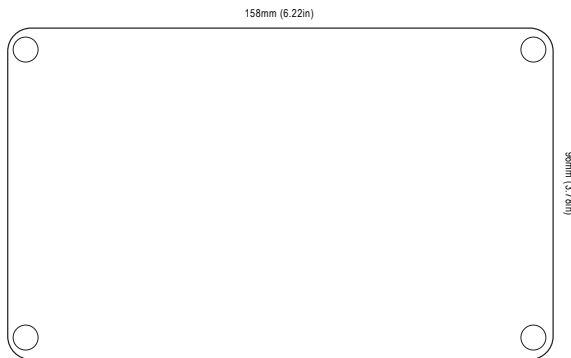


3) CUT OUT THE SIZE OF THE SECTION TO BE 158*96MM See the supplied cut-out template.


4) MARK AND DRILL HOLES $\phi 3.5\text{MM} \times 4$

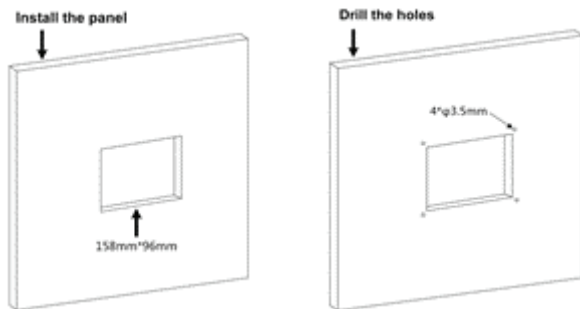

5) SECURE THE CONTROLLER

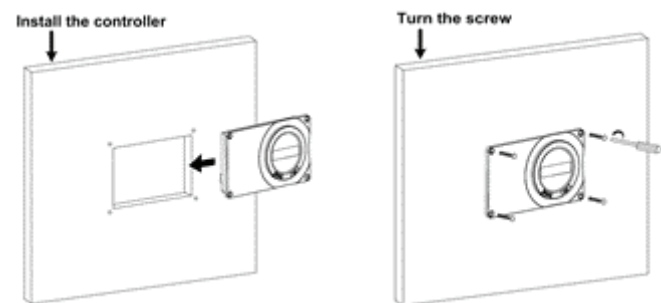

6) INSTALL THE CONTROL CASE

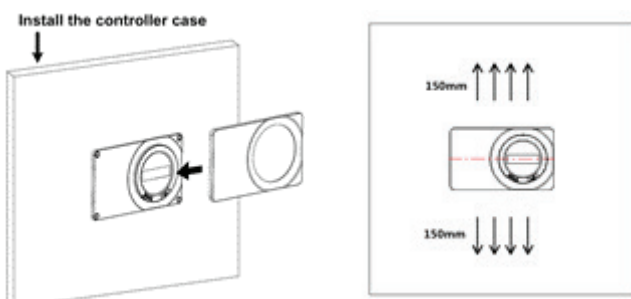

Go Power![®]

