


CABLE ASSEMBLY INSTRUCTIONS

SOLDER (SEMI-RIGID)

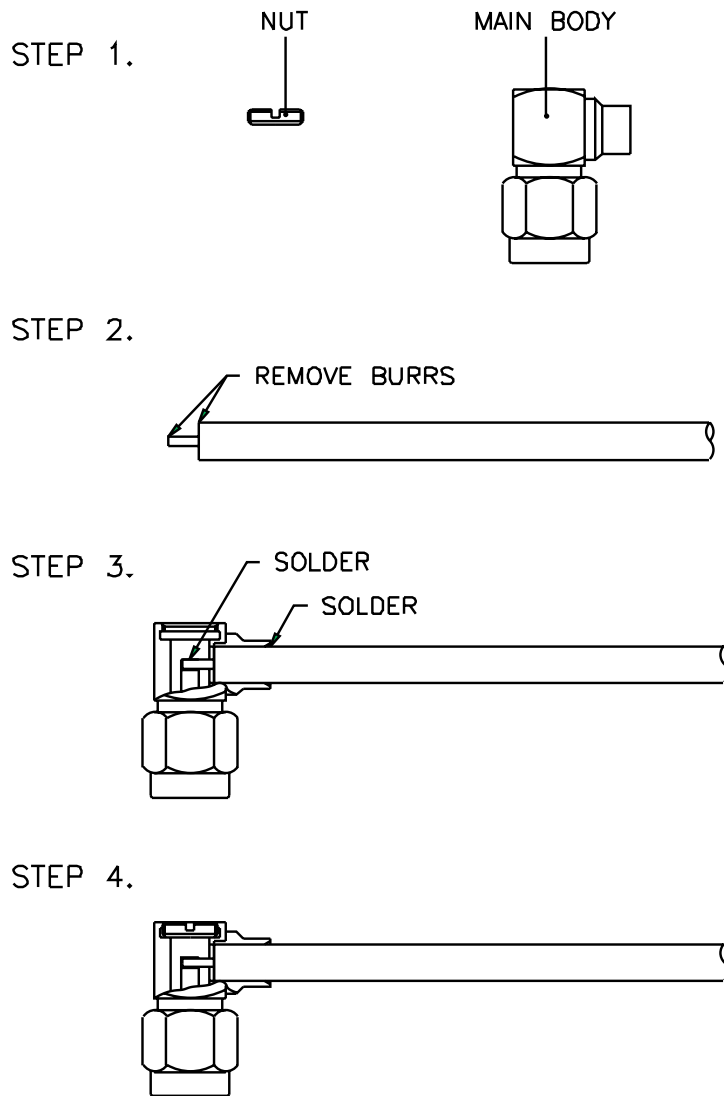

- STEP 1. All parts of the connector are shown.
- STEP 2. Strip the inner conductor, dielectric, and jacket as per "RECOMMENDED CABLE STRIPPING DIM'S" in catalog.
- STEP 3. Solder inner conductor to the contact pin of MAIN BODY, and solder cable jacket to the MAIN BODY as shown.
- STEP 4. Screw the NUT into the MAIN BODY until it stops.