



CABLE ASSEMBLY INSTRUCTIONS

SOLDER (SEMI-RIGID)


STEP 1.

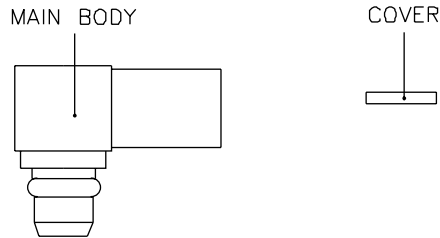


STEP 2.



STEP 3.

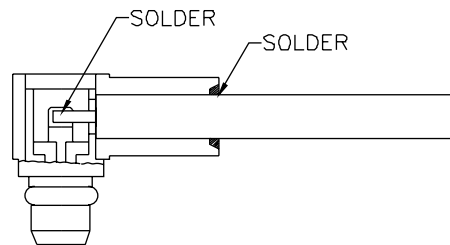

STEP 4.

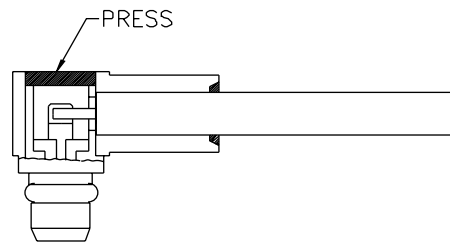

- STEP 1. All parts of the connector are shown.
- STEP 2. Strip the inner conductor, dielectric, and jacket as per "RECOMMENDED CABLE STRIPPING DIM'S" in catalog.
- STEP 3. Solder inner conductor to the contact pin of MAIN BODY, and solder cable jacket to the MAIN BODY as shown.
- STEP 4. Press the COVER into the MAIN BODY until it is flat with the MAIN BODY.