

# AURORALIGHT

## MICRO CASCADE INSTALL GUIDE


STW636103 / STW636203

### REQUIRED TOOLS:

3/32" Allen Key (Included)  
Wire Cutter / Stripper  
Philips Head Screwdriver  
3/4" Drill Bit

### INSTRUCTIONS:

1. To prevent electrical shock, disconnect transformer from electrical supply and make sure power supply is completely off before installation. Fixtures should always be installed by a licensed electrician.
2. Remove the **faceplate assembly** from the **back plate** by loosening the **set screws** on the sides (see figure).
3. Drill a 3/4" to 1" hole into the **mounting surface** in the desired mounting location.
4. Center the **back plate** on the hole and screw it down with the provided **screws** (use provided anchors if mounting in stone or tile).
5. Feed your **main supply cable** through the hole and the center of the **back plate** (see figure).
6. Connect the **main supply cable** to the **fixture lead wires** using the **wago wire connectors** (see figure).
7. Neatly place excess wire and connectors in the **back plate** then slide the **faceplate assembly** in until it stops.
8. Rotate the **faceplate assembly** until it is level then tighten down the **set screws** on the sides to hold it in place (see figure).

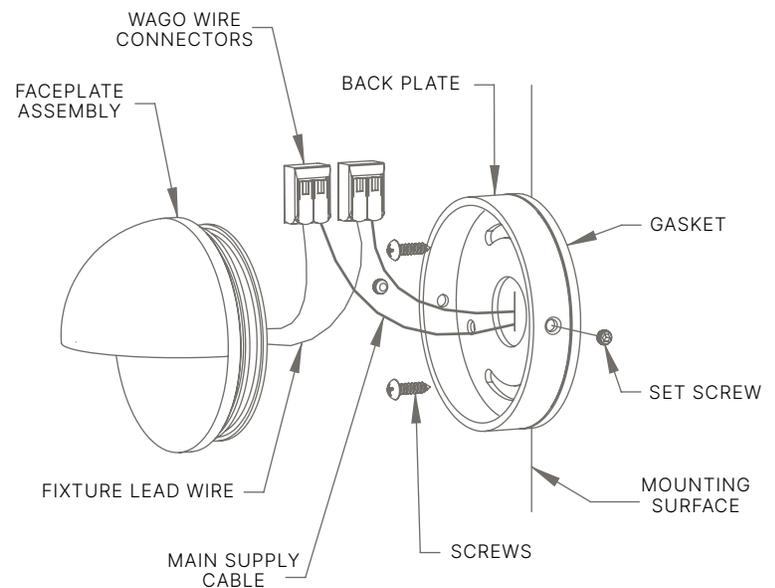

**TIP:** Small gauge cable is vulnerable to damage in the landscape; Protect by routing in close proximity to the luminaire or adjacent to concrete slab or similar structure. Do not over tighten.

P. 760.931.2910

E. techsupport@auroralight.com

O. 2742 Loker Ave. W Carlsbad CA 92010

W. www.auroralight.com

**WARNING:** Luminaire must be installed in accordance with local codes and the National Electrical Code (NEC). Failure to do so may result in serious injury and or damage to the luminaire.

**WARNING:** Risk of electric shock. Install per NEC Code 680.22(B (6), if listed low voltage luminaires are to be located near a pool, spa or fountain.