




**DO NOT RETURN PRODUCT OR CONTACT STORE!
FOR QUESTIONS OR CONCERNS**

1-800-458-9036 lyonssupport@lyonsindustries.com


542759 Triumph™ Wall (Txx542759)

Before installation, peel away protective film along edge of all panels to ensure correct color.

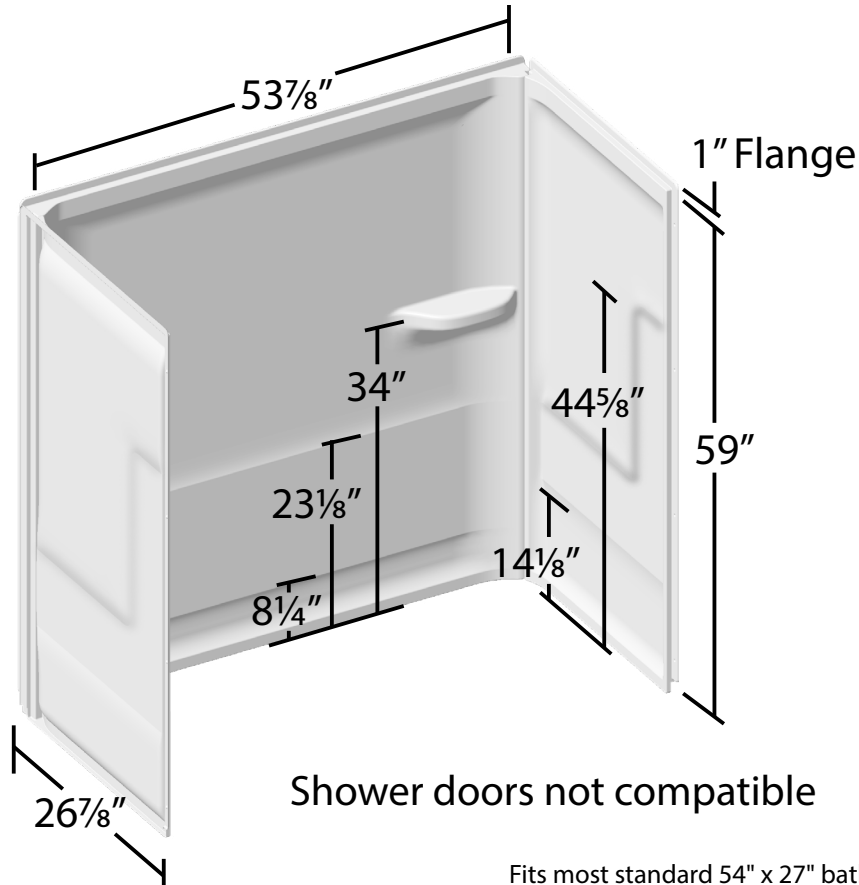

Fits most standard 54" x 27" bathtubs.

5427 Stud Layout

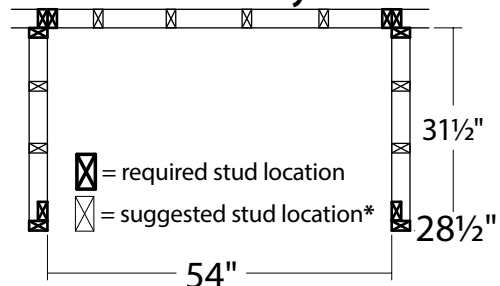

Maximum Grab Bar Sizes:

Back Panel: 36" Horizontal

Left and Right Panels: 24" Vertical, 16" Horizontal

*At least 1 suggested stud is required on the left and right side

*At least 2 suggested studs are required on the back side

ALL ACCESSORIES AND GRAB BARS SOLD SEPARATELY

IMPORTANT: Follow grab bar manufacturers' installation instructions.

Grab bars must be screwed direct to studs or secured with toggle bolts on raised areas .

Subject to manufacturing tolerance of [+] or [-] 1/8"

TOOLS YOU WILL NEED

Tape Measure	Caulk Gun
Level	4-5 Tubes of Construction Adhesive Compatible with Polystyrene
Square	Caulk (for Faucet Installation)
Drill	1-5/8" Stainless Steel Screws
Pencil	2" Masking Tape
Safety Glasses	Shims
Appropriate Hole or Saber Saw (for Faucet Installation)	100% Silicone for Faucet
	Wood for Cross Bracing (See Step 5-j)

IMPORTANT

- **Verify all panels are included before installing.** Panel location is marked on top flange.
Left panel = LH Right panel = RH
- **Allow panels to reach room temperature before installation**
- **Seal strips (included) are required for proper installation**
- **Read installation instructions carefully before starting project**
- **Keep instructions for warranty information**
- **When installing Lyons surrounds on a bathtub from another manufacturer caulk is required**
- **Follow grab bar manufacturers' installation.** Grab bar can be screwed direct to studs or secured with toggle bolts.

STEP 1. PREPARING ALCOVE

- a. Strip alcove to bare studs.
- b. Alcove should be constructed as shown on page 1. Studs must be plumb and square to sub-floor. Sub floor must be level. (Fig. 1)
- c. Check that there are no screws, nails or staples in the studs that will interfere with installation.
- d. *If installing over existing bathtub check that studs are plumb to the bathtub and bathtub is level. Go to step 3.*
- e. If desired add appropriate rated insulation between studs.

STEP 2. BATHTUB INSTALLATION

- a. Follow manufacturer's instructions for installing your bathtub.

IMPORTANT — Bathtub must be plumb and square to alcove for proper wall installation.

STEP 3. INSTALL SEAL STRIP

- a. Carefully separate (**NOTE: PULL APART - DO NOT CUT**) seal strip. (Fig. 2)
- b. Peel back protective film along all edges of back panel.
- c. Place seal strip along both sides of back panel removing protective paper as you apply. (Fig. 3)

IMPORTANT - DO NOT STRETCH SEAL STRIP!

- d. Apply pressure along the entire length of each seal strip to activate adhesive. Trim any excess.

NOTE: Failure to install seal strip will cause water damage and void warranty.

If seal strip is missing, please contact customer support before installing.

STEP 4. TRIAL FIT PANELS

- a. All panels must fully contact required studs as shown on page 1. (Fig. 4)
- b. Place back panel then fit side panels into place. (Fig. 5)
- c. Center wall on bathtub. Make sure panels rest on bathtub.
- d. If necessary, shim between panels and studs to provide a tight fit between the back and side panels. (Fig. 6)
- e. Align the front of the side walls to the front of the bathtub. This makes drywall installation easier.
- f. Mark height of wall on each stud to indicate where to apply adhesive on the stud. (Fig. 7)
- g. Measure and mark all control holes. After removing side panels, drill or saw necessary holes.

IMPORTANT — Drill or saw holes from front side. Cover area to be cut with masking tape to prevent chipping and scratching.

IMPORTANT — Use 100% silicone on faucet.

Peel back protective film from edges of all panels.

ALL ACCESSORIES AND
GRAB BARS SOLD SEPARATELY

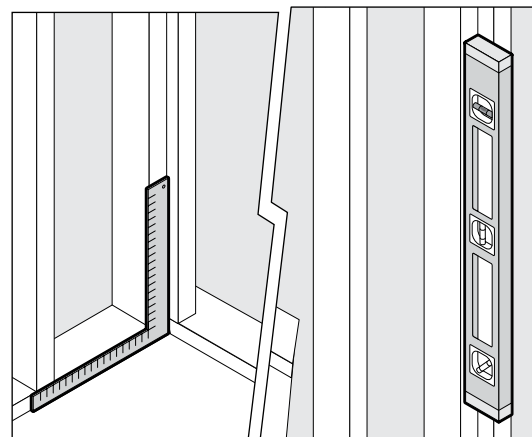


FIGURE 1. Check that studs are plumb with sub-floor/base.

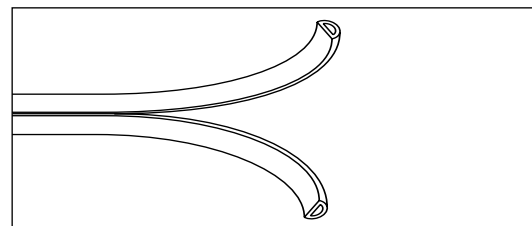


FIGURE 2. Carefully separate seal strip. **DO NOT CUT!**

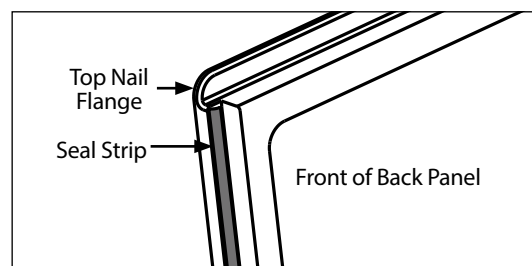


FIGURE 3. Place seal strip on both sides of back panel.

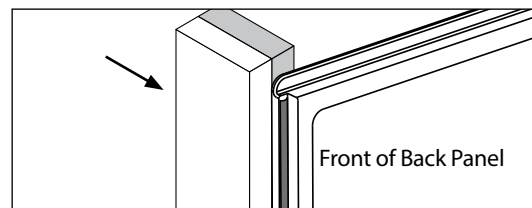


FIGURE 4. All panels must fully contact required studs.

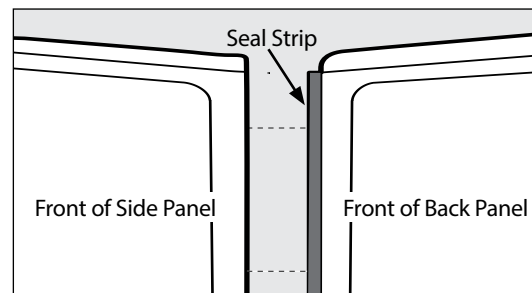


FIGURE 5. Fit side panels into place on back wall panel.

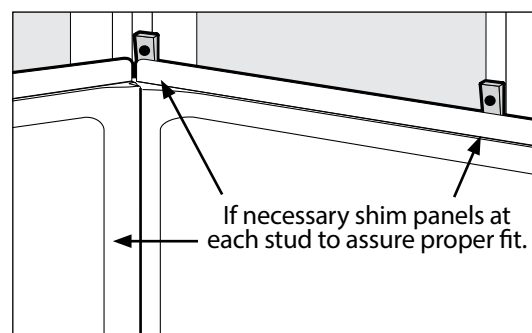


FIGURE 6. You can shim against the stud.

STEP 5. INSTALLING WALL SURROUND IN ALCOVE

- Apply a generous bead of construction adhesive below mark on each back wall stud only (follow adhesive manufacturer's recommended instructions).
- Place back panel and center on bathtub - apply pressure to panel
- Make sure panels are resting on bathtub.
- Apply adhesive to studs for side panel opposite the shower controls and place side panel.
- Apply adhesive to studs for faucet side panel and place side panel. (Fig. 8)
- Reposition shims if needed.
- Press back panel firmly into place and align the front of the side walls to the front of the bathtub and screw back panel nail flange to studs.
- Apply pressure to side panel, then screw vertical nail flange to stud. Repeat for opposite side panel.

IMPORTANT - A minimum of 2 studs on back panel and 1 stud on left & right panel. Composite material must fully adhere to studs. (Fig. 9) See page 1 for required stud layout.

- Screw top flange of side panels to studs.
- Panels must be held tight to studs during drying process. Apply pressure to panels in grab bar surface while adhesive dries with cross bracing. (Fig. 10)

IMPORTANT - Failure to adhere panels and screw all flanges to all studs will void warranty. Follow grab bar manufacturers' installation. Grab bar can be screwed direct to studs or secured with toggle bolts.

STEP 6. CAULKING

- When installed on any Lyons bathtub your Triumph™ wall is designed to function properly without seams being caulked.
- If you prefer the appearance of caulked seams, caulk all seams or leaks may occur.
- Caulk must be applied around holes for the faucet, diverter valve and shower head.
- If your Triumph™ wall is used on a bathtub other than a Lyons, it is required to caulk all seams.
- For best results always use a high-grade silicone caulk.

STEP 7. FINISHING

Green Board or Other Finishing Boards

- Shim studs with lattice strips or 1/4" luan so that finishing board will overlap nail flanges. (Fig. 11)

Tile

- Install finishing board up to (not over) nail flange.
- Install tile over finishing board and nail flange.

CLEANING

- Do not use any abrasive cleaners or metal scrapers.
- If drywall mud or plaster gets on a finished surface it may be carefully removed with a wooden scraper made from a piece of scrap wood.
- Adhesive may be removed with mineral spirits.
- Ideal cleaners are Soft Scrub Gel®, Comet Gel® or 409®.

WARNING: Some cleaning products are not suitable for use. Read all labels carefully. DO NOT USE if they say "not suitable for use with ABS, acrylic or polystyrene". Always rinse cleansers thoroughly within five minutes of application.

**ALL ACCESSORIES AND
GRAB BARS SOLD SEPARATELY**

COMPLIANCE CERTIFICATIONS:
CAN/ULC S102.2 FLAME-75
MOKE DEVELOPED-485 CODE

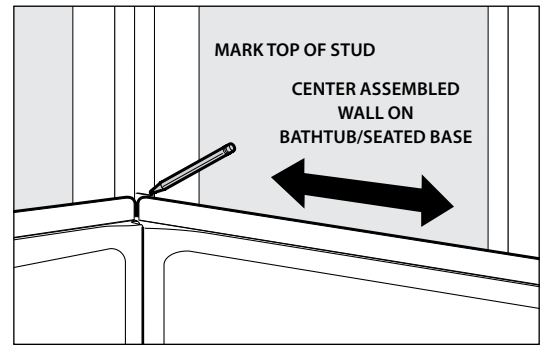


FIGURE 7. Mark studs.

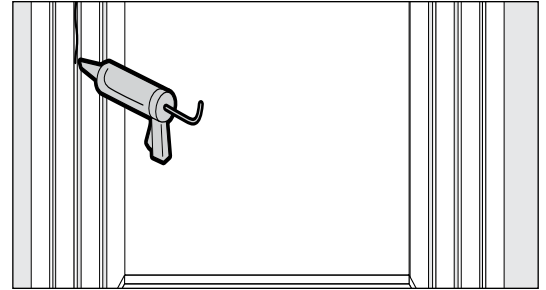


FIGURE 8. Apply adhesive. **composite material must be secured to studs**

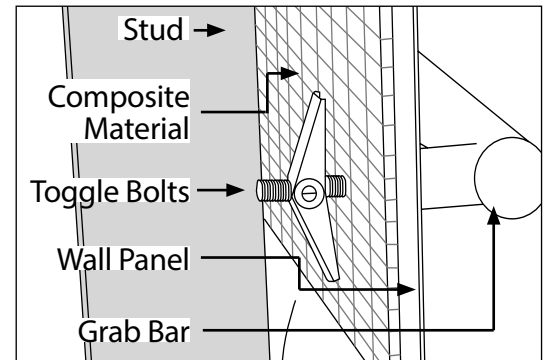


FIGURE 9. (Side View) **Studs must make contact with composite material**

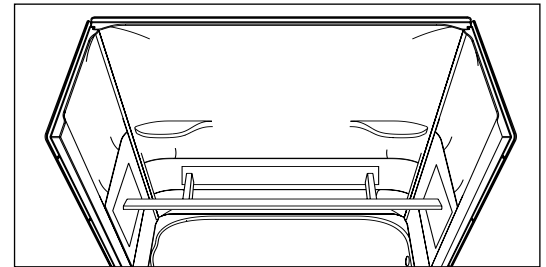


FIGURE 10. Apply pressure to all panels by cross bracing

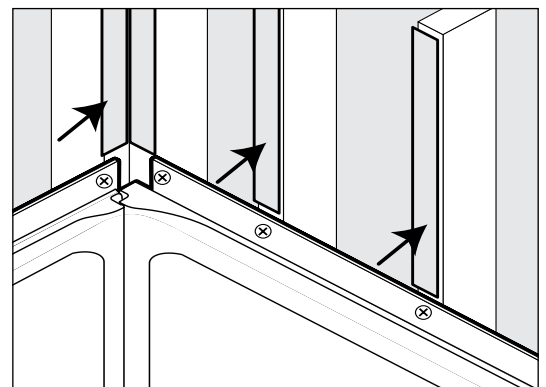


FIGURE 11. Shim studs.

**DO NOT RETURN PRODUCT OR CONTACT STORE!
FOR QUESTIONS OR CONCERNS**

please call or e-mail our customer support team

1-800-458-9036

lyonssupport@lyonsindustries.com

LYONS FIXTURE — LIMITED WARRANTY

5-YEAR CONSUMER, 2-YEAR COMMERCIAL

Lyons Industries, Inc. warrants to the original purchaser that this Lyons fixture will be free of manufacturing defects, which affect its performance as a bathing or showering fixture, under the following conditions and subject to the limitations contained in the "Remedies" and "Warranty Limitations" sections. The Limited Warranty applies for 5 years from the date of purchase if the fixture is used in a residential owner-occupied building for non-commercial purposes; or for 2 years from the date of purchase if it is used in any other building, including any building used for rental, commercial or business purposes. This Limited Warranty is void if the fixture is not installed in accordance with the installation instructions supplied by Lyons or local building codes and ordinances or if the care and cleaning instructions supplied by Lyons are not followed. This Limited Warranty is also void if the fixture is moved from the location of its initial installation or is subjected to accident, abuse or misuse. The Limited Warranty excludes normal wear and tear and does not cover damage that can be repaired by following the Scratch Removal Instructions. This Limited Warranty shall be void unless any failure or non-conformance is discovered before the expiration of this warranty and is reported to Lyons, in writing, accompanied by the original proof of purchase, within 30 days of discovery, to: Lyons Industries, Inc., 30000 M-62 West, Dowagiac, Michigan 49407

REMEDIES — The original purchaser's remedy under this Limited Warranty is limited to the repair, replacement or refund of the purchase price of the fixture, at Lyons' sole option, of any part of the fixture which has failed or does not conform to the manufacturer's specifications. In no event shall Lyons be liable for lost profits, loss of use, incidental, special or consequential damages including, but not limited to, damage to or loss of use of the building or its contents, arising out of any defect in the fixture; nor shall Lyons be liable for any amount in excess of the original purchase price of the fixture. Lyons reserves the right to require the return, at purchaser's expense, of the damaged fixture for repair or exchange before providing services under this Limited Warranty. If Lyons elects to replace the fixture, its obligation is limited to supplying a replacement unit or component part of comparable size and style, and does not include the cost of removal, installation, or transportation, which must be borne by the purchaser. Replacement parts provided under this Limited Warranty are warranted for the remainder of the original warranty period applicable to the fixture, as if such parts were original components of that fixture.

WARRANTY LIMITATIONS — THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF. IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSLY DISCLAIMED. LYONS DISCLAIMS ANY AND ALL LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. Some states do not allow limitations of incidental or consequential damages, so the above limitations and exclusions may not apply to you. In such states, Lyons' liability shall be limited to the extent permitted by state law. ANY IMPLIED WARRANTIES ARISING BY WAY OF STATE LAW, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR ANY IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION AND IN SCOPE OF COVERAGE TO THE TERMS OF THIS LIMITED WARRANTY, UNLESS A SHORTER PERIOD IS ALLOWED BY LAW.

SCRATCH REMOVAL INSTRUCTIONS

1. For effective scratch removal and polishing, you will need to purchase these items.

1 sheet 1000 grit 3M® wet-dry sandpaper

1 sheet 1500 grit 3M® wet-dry sandpaper

1 sheet 2000 grit 3M® wet-dry sandpaper

1 small container of 3M® rubbing compound

These items can be purchased at most auto supply stores that provide supplies to professional paint and body shops. Call before you go.

Not all auto supply stores will have these items.

2. Start sanding with 2000 grit paper. Use small squares of paper about 2"x 2" for all sanding and use lots of water. The water serves as both a lubricant and to prevent residue buildup on the paper. Residue buildup shortens the effective life of the paper and may scratch the surface you're trying to polish.

3. 2000 grit paper is the finest grit available (the higher the number, the finer the grit). If you can't remove all of the scratches with 2000 grit, switch to 1500 grit. Remember to wash the paper frequently with water as you sand.

4. If all of the scratches can't be removed with 1500 grit, switch to 1000 grit. This should remove most fine scratches. If you have deep scratches or a gouge, coarser paper may have to be used (see chart to right). Be careful! Using grit that is too coarse may actually put in more scratches than it removes.

5. Once you have removed all of the scratches, by sanding with the finest paper possible, repeat the sanding process using successively finer grits of paper until you've once again sanded with 2000 grit.

6. Now use 3M® rubbing compound on a soft, damp cloth. Polish using considerable pressure to produce a smooth, shiny finish.

SUPERFICIAL SCRATCH
2000 grit

LIGHT SCRATCH
1500 – 2000 grit

MEDIUM SCRATCH
1000 – 2000 grit

DEEP GOUGE
600 – 2000 grit

SCRATCH / SANDPAPER GUIDE

ALL ACCESSORIES AND GRAB BARS SOLD SEPARATELY

Lyons Industries, Inc.

30000 M-62 West, Dowagiac, MI 49047

phone (800) 458-9036 fax (269) 782-5159

e-mail lyonsind@lyonsindustries.com

08-2023