



MAMMOTH 16FT DISPLAY (NON-BACKLIT)

MAMMOTH MODULAR DISPLAY
PRODUCT CODE: MAM16X8FHC


SET UP INSTRUCTIONS

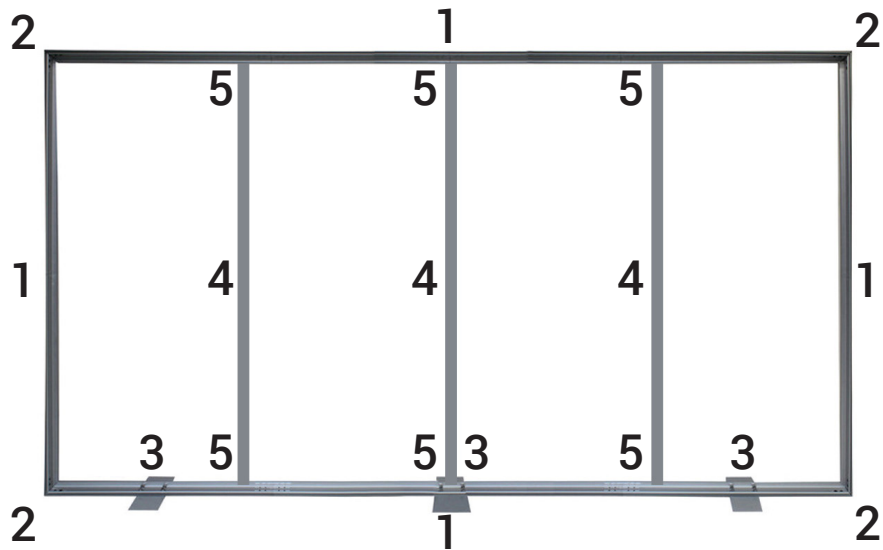


1. Attach Split Connectors to Side Extrusions:

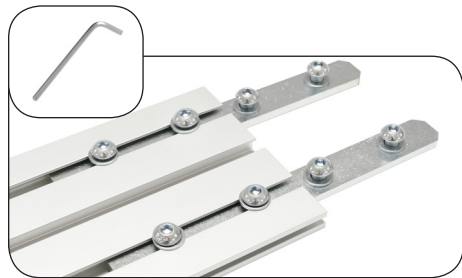

a. Slide the Split Connectors into the grooves of the frame and tighten

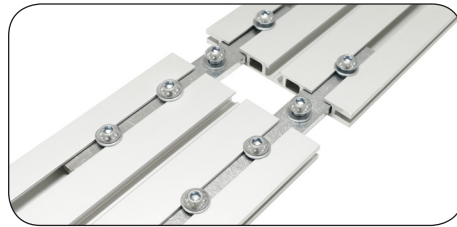


b. Attach other extrusion onto the Split Connector.

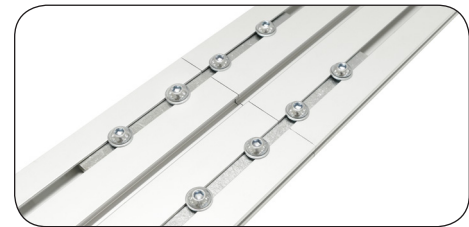

c. Tighten screws with included **5mm allen wrench**.

2. Attach Corner Connectors:

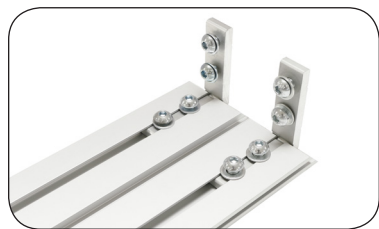

a. Insert the Corner Connector locks into the ends of the frame.



b. Then attach side extrusion onto the Corner Connector. Tighten screws with included **5mm allen wrench**.

3. Install Feet:



a. Line up the holes on feet with holes on the bottom horizontal frame piece.



b. Insert screws and washers into hole to secure feet to frame.

4. Make Support Strut:



a. Remove screws from Center Connector.



b. Insert Center Connector and align holes with holes on extrusion.




c. Repeat to connect other extrusion to make one long piece.

5. Attach Support Strut To Frame:



a. End Lock is already attached to opposite ends of Support Strut.

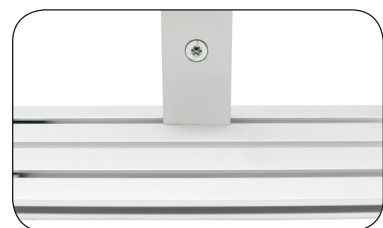

b. Insert End Lock into top and bottom grooves of frame. Tighten screws with **torx key** to secure connection.