



# MAMMOTH 8FT DISPLAY (NON-BACKLIT)

MAMMOTH MODULAR DISPLAY  
PRODUCT CODE: MAM8X8FHC


## SET UP INSTRUCTIONS

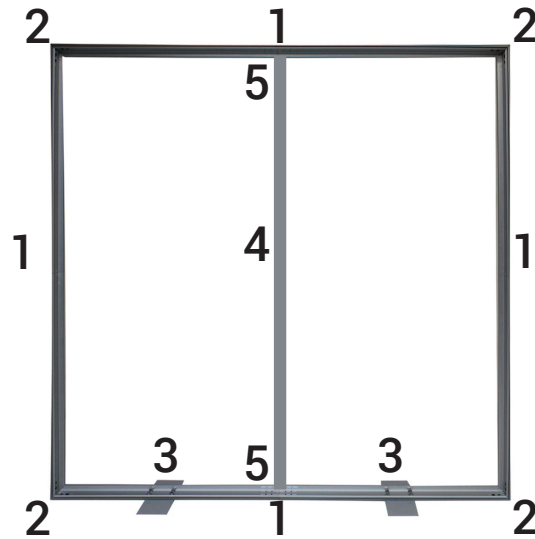


### 1. Attach Split Connectors to Top, Bottom, & Side Extrusions:

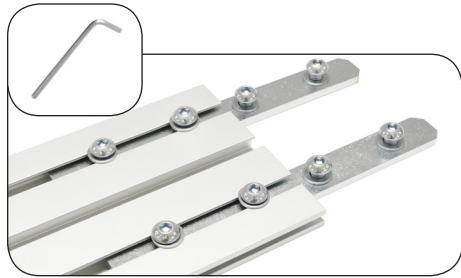

**a.** Slide the Split Connectors into the grooves of the frame and tighten

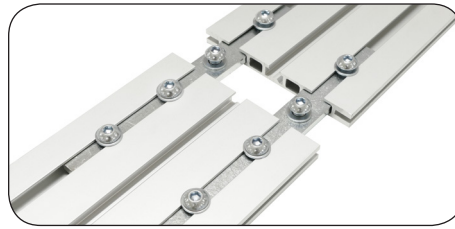


**b.** Attach other extrusion onto the Split Connector.

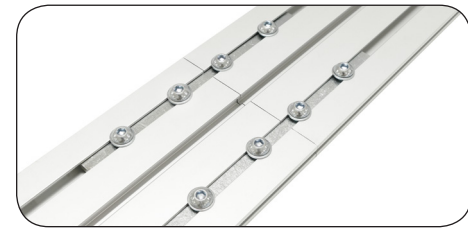

**c.** Tighten screws with included **5mm allen wrench**.

### 2. Attach Corner Connectors:

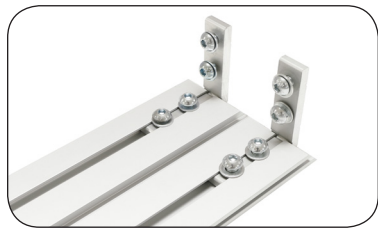


**a.** Insert the Corner Connector locks into the ends of the frame.



**b.** Then attach side extrusion onto the Corner Connector. Tighten screws with included **5mm allen wrench**.

### 3. Install Feet:

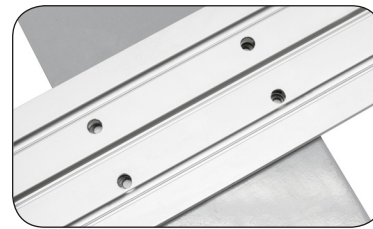


**a.** Line up the holes on feet with holes on the bottom horizontal frame piece.



**b.** Insert screws and washers into hole to secure feet to frame.


### 4. Make Support Strut:

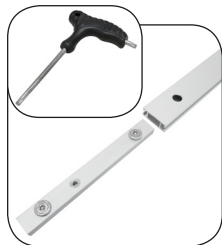

**a.** Remove screws from Center Connector.



**b.** Insert Center Connector and align holes with holes on extrusion.

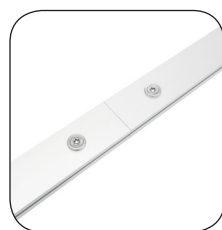

**c.** Repeat to connect other extrusion to make one long piece.

### 5. Attach Support Strut To Frame:



**a.** End Lock is already attached to opposite ends of Support Strut.



**b.** Insert End Lock into top and bottom grooves of frame. Tighten screws with **torx key** to secure connection.