


Assembly Instructions

BARUCH-C Counter Stool



PLEASE NOTE: Check that you have received all components and hardware before assembling. If you are missing any parts, contact your retailer.

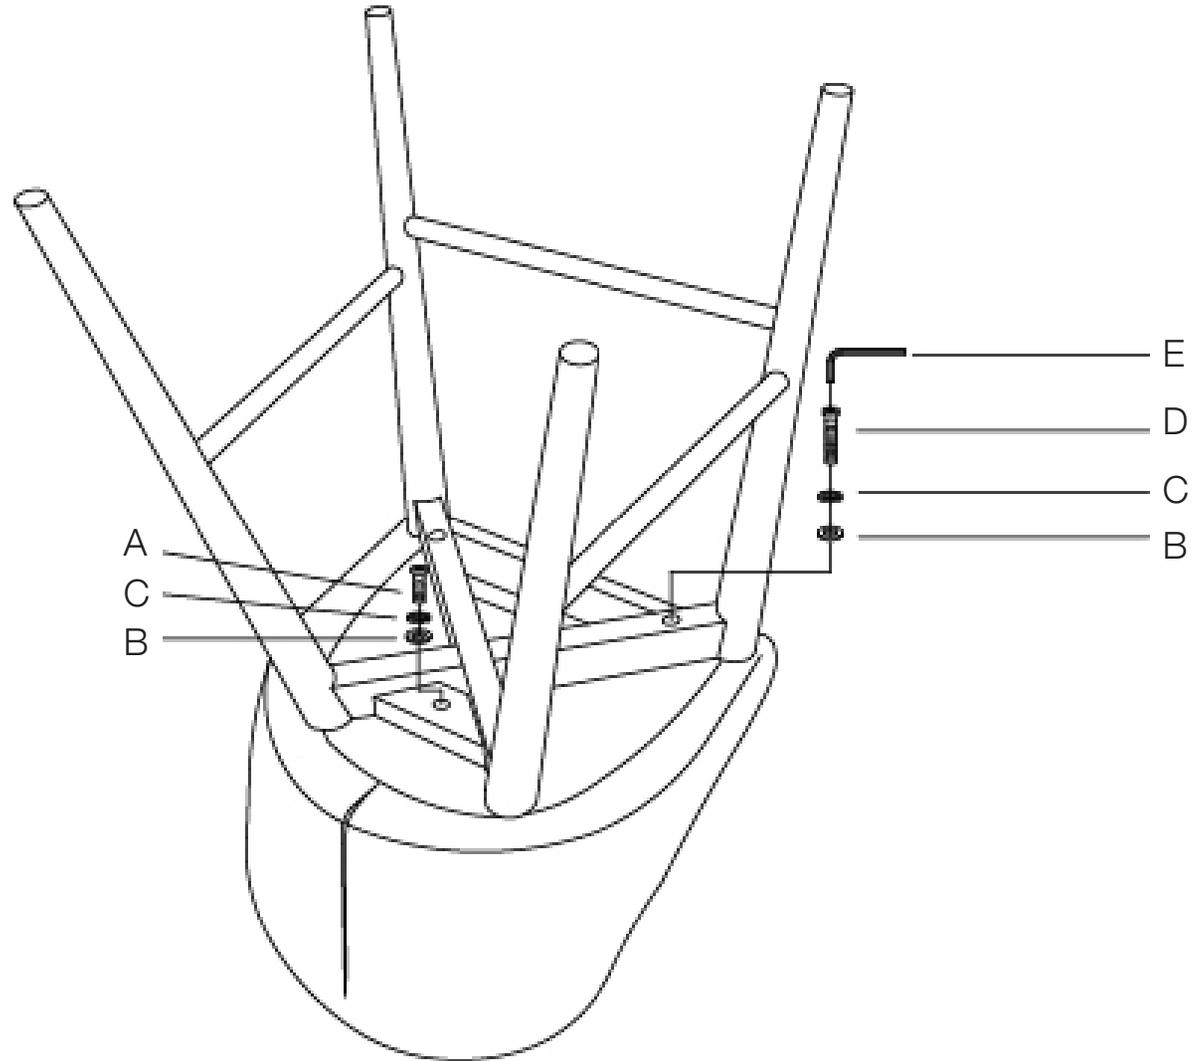

A (1 PC)
M6-1 X 45mm



B (3 PCS)



C (3 PCS)



D (2 PCS)
M6-1 X 65mm



E (1 PC)
4mm

During assembly, hand tighten screws only. When the screws are in place, tighten completely.