


TANDEM CENTER POST & DOME

5629

ASSEMBLY & PARTS

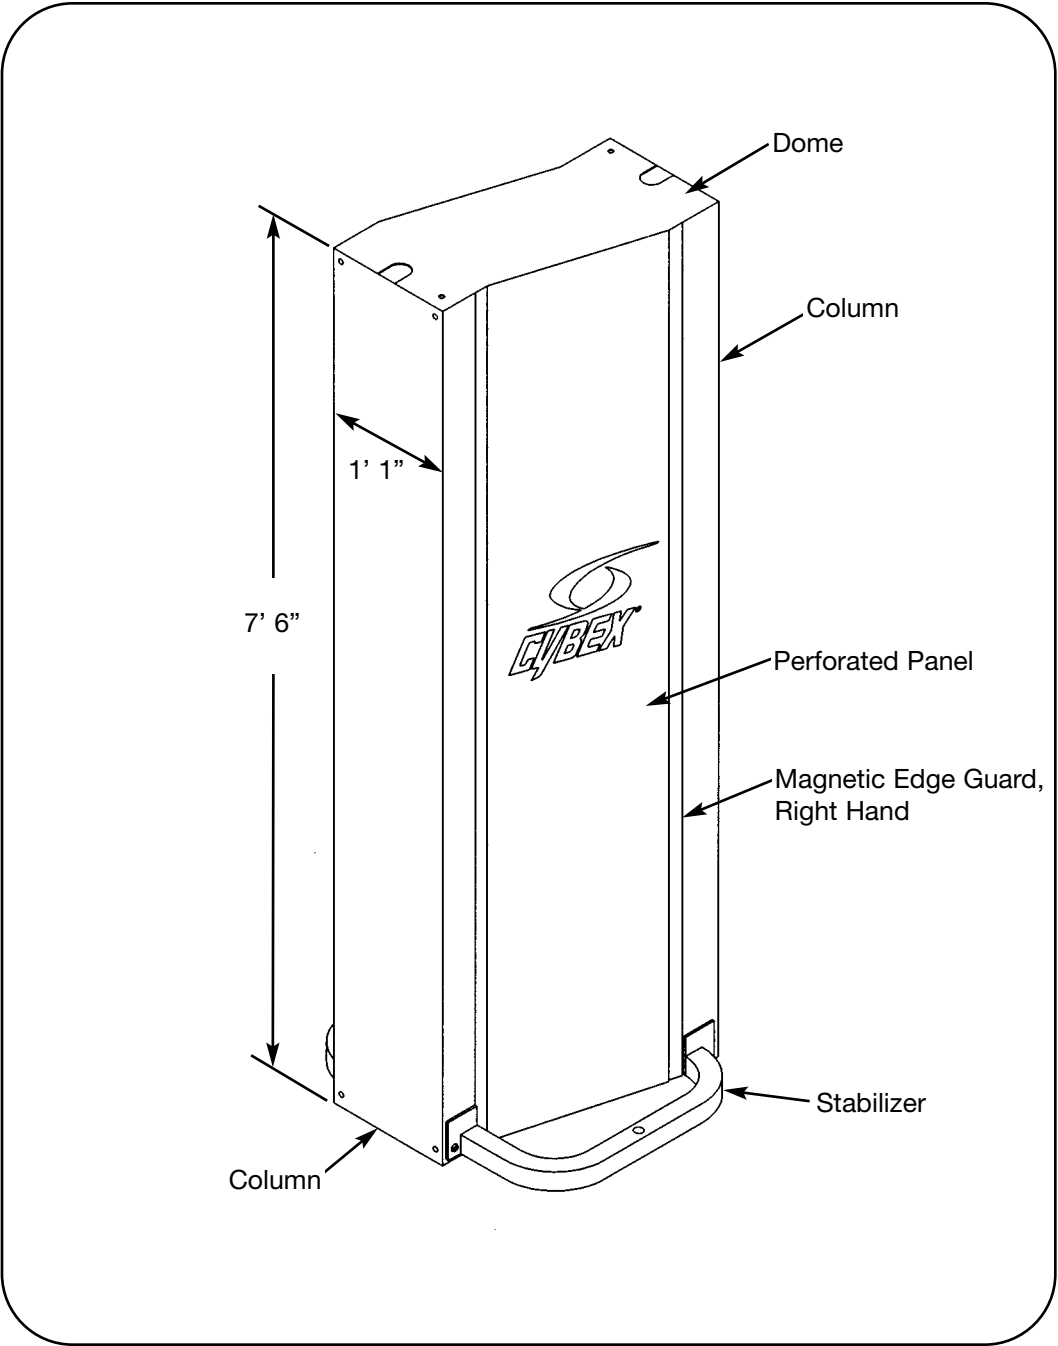

5629 - Tandem Center Post & Dome

ITEM	QTY	PART NO.	DESCRIPTION
1	1	01779	Frame
2	2	01778	Stabilizing Base
3	8	JC782834	SHCS .50-13 x 3.00
4	4	JC780417	BHSCS .50-13 x 1.00
5	14	JS388300	Split Lockwasher .50
6	14	HN784000	Hex Nut .50-13
7	2	02216	Right Hand Magnetic Edge Guard
8	2	02217	Left Hand Magnetic Edge Guard
9	21	HT552510	Self-Tapping Phillips Screw 6-20 x .375
10	1	01776	Dome
11	2	PP080202	Plastic Insert
12	6	HS387700	Washer .50

Assembly Notes


1. If ceiling is less than 10 feet then install weight stacks using the long guide rods supplied with column. Otherwise, if ceiling is greater than 10 feet then do not install weight stacks until step 5.

CAUTION: Columns will lean with weight stacks installed.

- 2. Attach both columns to frame.
- 3. Install lower assemblies and stabilizer (item 2) to each column.
- 4. Install upper assemblies to each column.
- 5. Install weight stacks utilizing short guide rods. Attach each cable to appropriate weight stack.
- 6. Route cables.
- 7. Attach right hand magnetic edge guard (item 7) and left hand magnetic guard (item 8) to perforated panels using five screws (item 9) for each magnetic strip. See PANEL ASSEMBLY TOP VIEW.
- 8. Install perforated panels. See INSTALLATION OF PANELS.
NOTE: The letters in the exploded-view diagram refer to the installation of perforated panels.
- 9. Install upholstery.

NOTE: Hardware pack includes additional hardware required for machines with lower pulley mount.

NOTE: This machine shipped with an Owner's Manual. Additional copies can be obtained by contacting your dealer or a Cybex Representative at 1-888-462-9239.

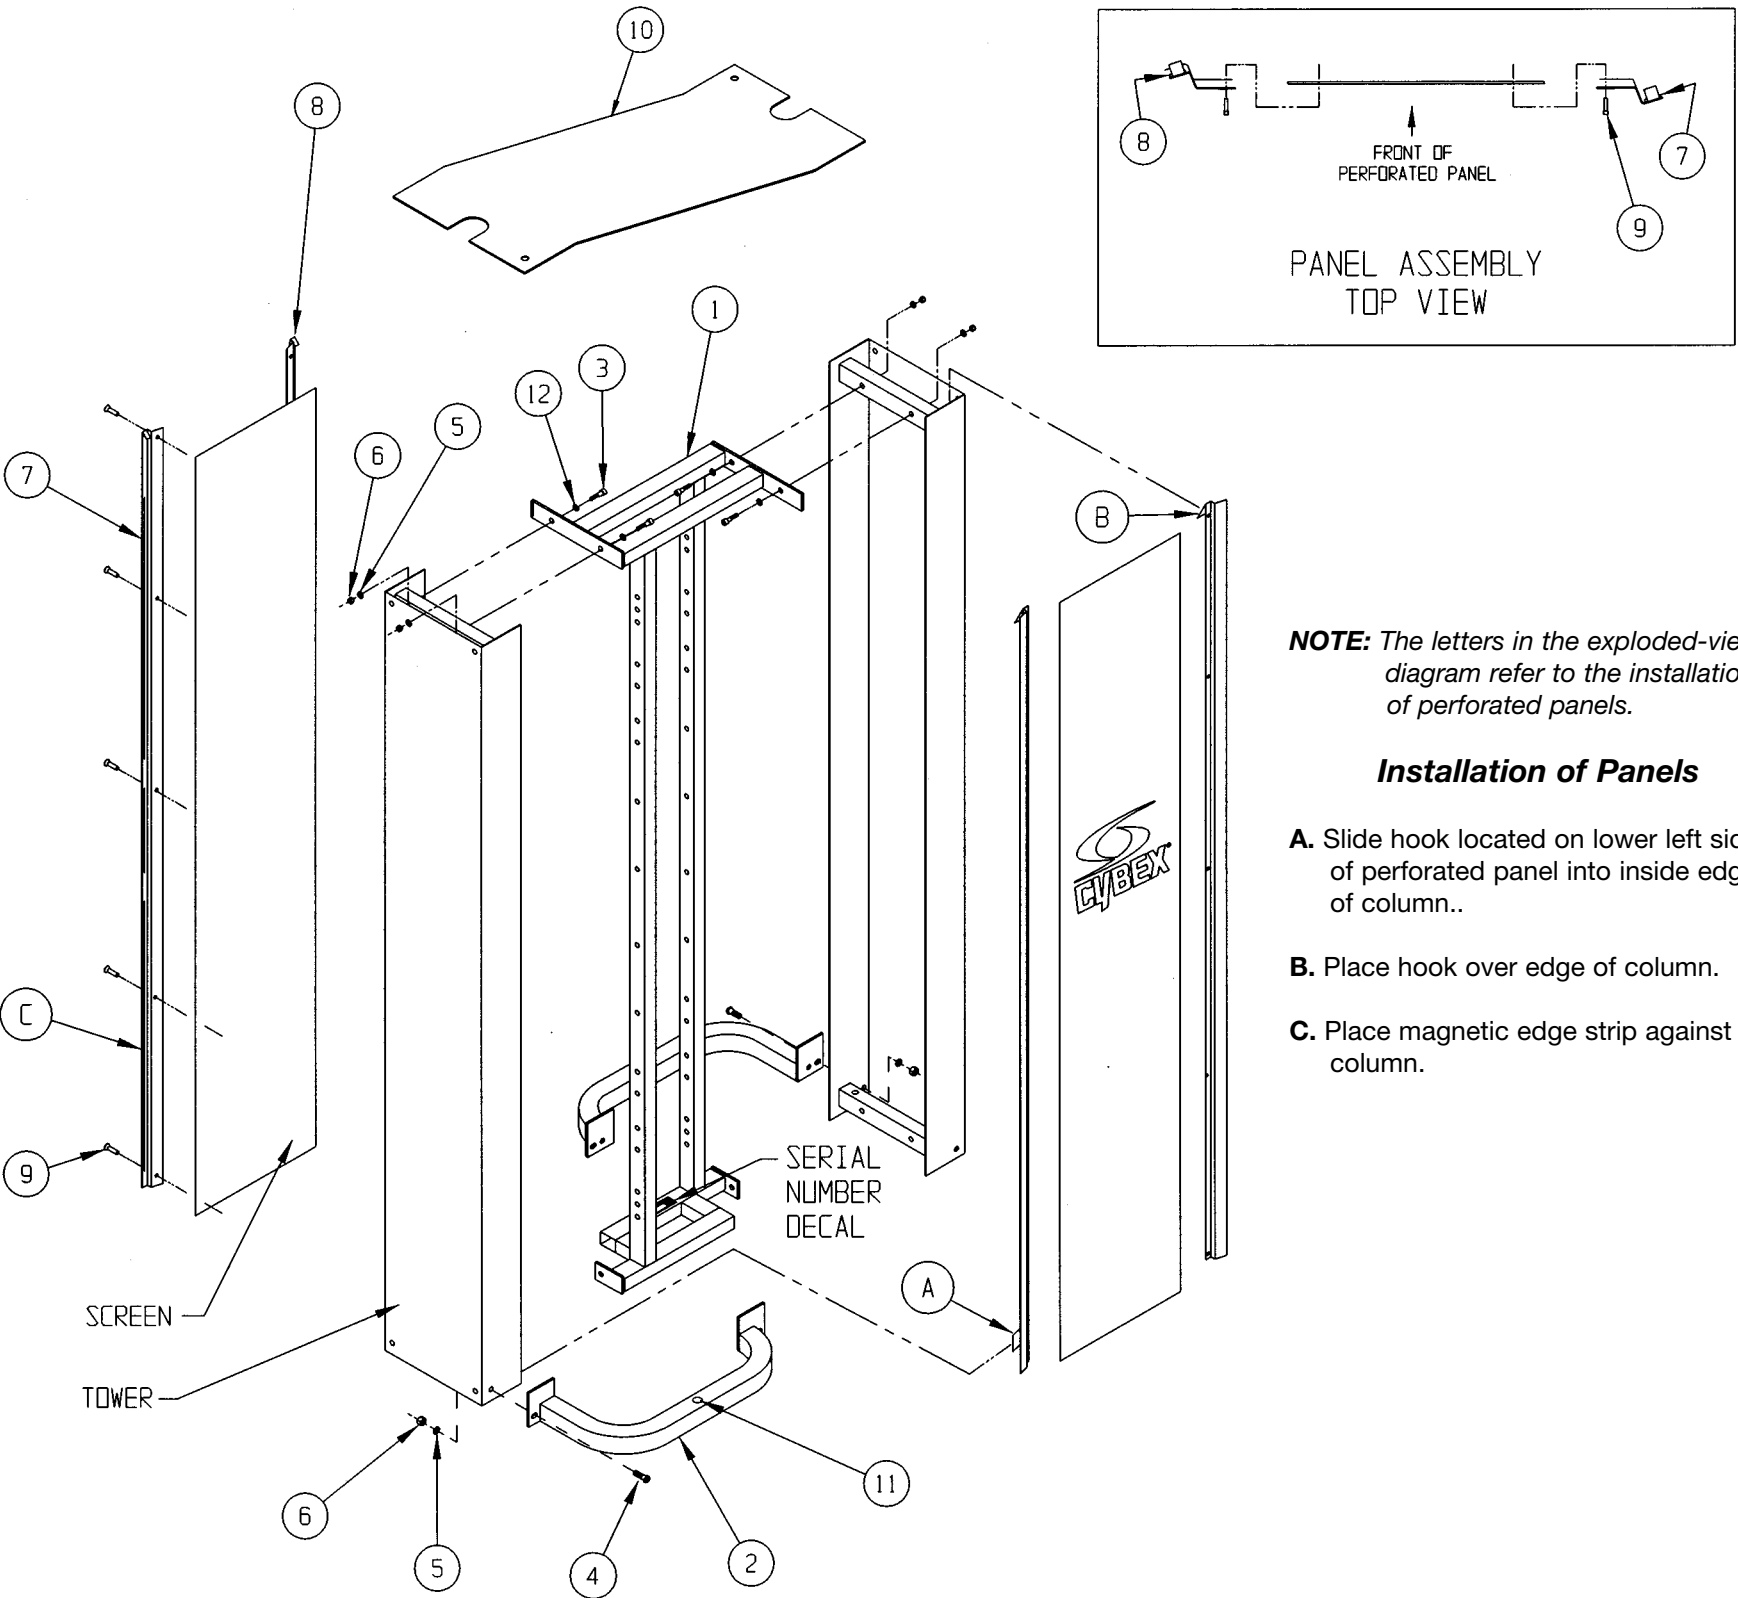

NOTE: The letters in the exploded-view diagram refer to the installation of perforated panels.

Installation of Panels

- A. Slide hook located on lower left side of perforated panel into inside edge of column..
- B. Place hook over edge of column.
- C. Place magnetic edge strip against column.