

PERRIN

Adjustable Hood Bumper Kit

2022-10-06

PSP-BDY-010

Thank you for purchasing this PERRIN product for your car! Installation of this product can be performed by anyone! Please read through all instructions before performing any portion of installation. If you have any questions, please contact our tech department prior to starting installation. We can be reached in any of the following methods:

Email Tech@PERRIN.com

Instant Chat off the main page of www.PERRIN.com

Or simply call our tech team at 503-693-1702



WARNING: This product can expose you to chemicals including Lead which is known to the State of California to cause cancer birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov

Parts Included with the PERRIN Hood Bumper Kit:


(2) Hood Bumper

X-PSP-BDY-010



Installation

1. Measure height of OEM Hood bumper from core support.
2. Unscrew OEM Hood Bumper and replace with PERRIN Hood Bumper.
3. Adjust PERRIN Hood bumper to match height of OEM part.
4. Close hood and check for alignment of hood with fenders.
5. If any adjustments are needed, open hood and raise or lower bumper until hood lines up with fenders.

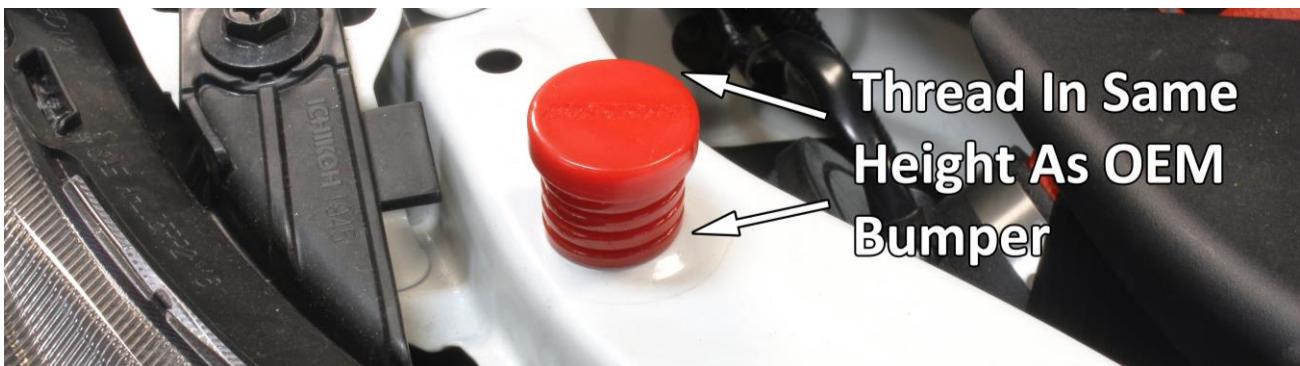

FOR QUESTIONS & COMMENTS PLEASE CONTACT

TECH@PERRIN.COM

503-693-1702

Live Chat with us on our website