

PERRIN

2017+ BRZ Wing Riser

2018-01-15

Thank you for purchasing this PERRIN product for your car! Installation of this product should only be performed by persons experienced with installation of aftermarket performance parts and proper operation of high performance vehicles. If vehicle needs to be raised off the ground for installation, the installer must use proper jacks, jack-stands and/or a professional vehicle hoist for safety of the installer and to protect property. If the vehicle is lifted improperly, serious injury or death may occur! Please read through all instructions before performing any portion of installation. If you have any questions, please contact our tech department prior to starting installation. We can be reached in any of the following methods:

Email Tech@PERRINperformance.com

Instant Chat off the main page of www.PERRINperformance.com

Or simply call our tech team at 503-693-1702

GENERAL MODIFICATION NOTE

Modifications to any vehicle can change the handling and performance. As with any vehicle extreme care must be used to prevent loss of control or roll-over during sharp turns or abrupt maneuvers. Always wear seat belts, and drive safely, recognizing that reduced speeds and specialized driving techniques may be required. Failure to drive a vehicle safely may result in serious injury or death. Do not drive a vehicle unless you are familiar with its unique handling characteristics and are confident of your ability to maintain control under all driving conditions. Some modifications (and combinations of modifications) are not recommended and may not be permitted in your state or country. Consult the owner's manual, service manual, instructions accompanying these products, and local laws before purchasing and installing these modifications. You are responsible for the legality and safety of the vehicle you modify using these components.

Parts Included with the PERRIN Wing Riser:

- (1) PERRIN Wing Riser Left and Right Set
- (4) M6x60mm Socket Cap Screws
- (4) M6 SS Washers
- (1) Blue Thread Locking Compound
- (1) M5 Hex Key


Installation of PERRIN Wing Riser Kit

1. Using extreme care, pry plastic caps from top of wing to expose 10mm headed bolts.



2. Remove bolts along with steel retaining clips from top of wing. **NOTE: Wing will be loose and could fall off car, take care not to bump wing while there are no bolts holding it to trunk.**
3. Remove wing from car and remove rubber bumper from bottom of wing. This will not be reinstalled with PERRIN Wing Riser Blocks.

Remove Rubber Bumper From Bottom Of Wing

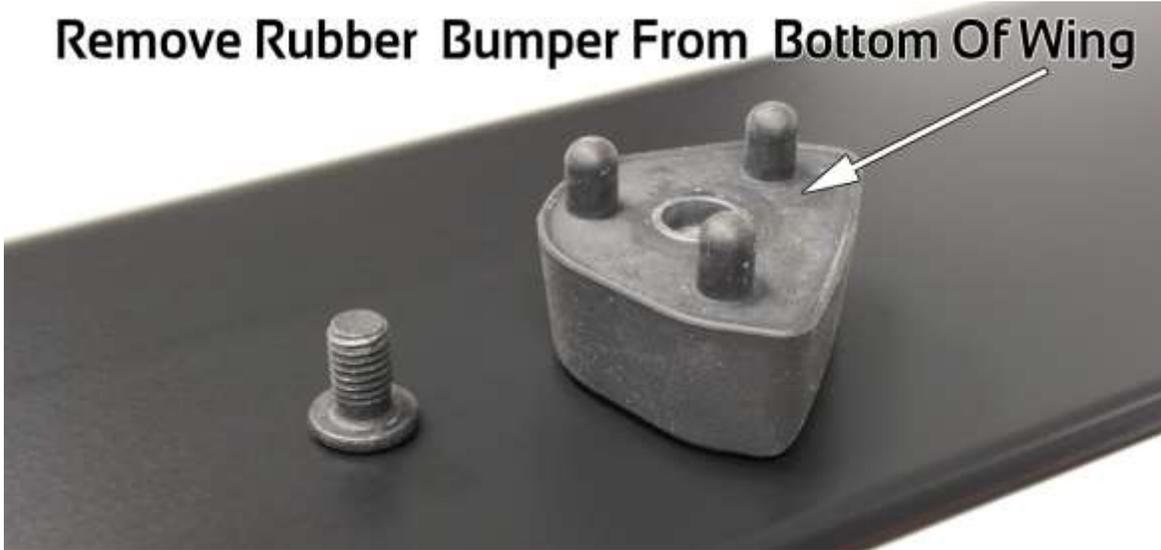

4. Install PERRIN Wing Risers Blocks to each side and carefully set wing on top of them.
5. Set steel retaining clips over holes and install (1) supplied M6 bolt with washer onto each side to secure wing for next step.
6. Apply supplied thread locking compound onto thread of both remaining bolts. Place bolts into remaining holes.
7. Remove bolts that were installed without thread locking compound and apply thread locking compound to these and reinstall.
8. Tighten bolts to secure wing to car making sure to line up PERRIN Wing Riser Block with base on car. Tighten bolts to 8ft-lbs.
9. Reinstall plastic caps onto top of wing.
10. Remove caps and check for tightness after 2 days of driving, then again after 2 weeks.



Questions, Comments and Suggestions Contact: Tech@PERRINperformance.com
Visit Our Website for Instant Chat Options at www.PERRINperformance.com
Call Our Tech Team at 503-693-1702