

PERRIN

Hella Horn Mount for 2015+ WRX/STI

2017-09-21

Thank you for purchasing this PERRIN product for your car! Installation of this product should only be performed by persons experienced with installation of aftermarket performance parts and proper operation of high performance vehicles. If vehicle needs to be raised off the ground for installation, the installer must use proper jacks, jack-stands and/or a professional vehicle hoist for safety of the installer and to protect property. If the vehicle is lifted improperly, serious injury or death may occur! Please read through all instructions before performing any portion of installation. If you have any questions, please contact our tech department prior to starting installation. We can be reached in any of the following methods:


Email Tech@PERRINperformance.com
Instant Chat off the main page of www.PERRINperformance.com
Or simply call our tech team at 503-693-1702

Parts Included with the PERRIN Hella Horn Mount:

- (1) PERRIN Horn Bracket
- (2) M8 SS Washers

Installation of PERRIN Hella Horn Mount:

- 1) Remove bumper from car. Follow factory service manual for more detailed instructions:
 - a. Locate and remove (6) black 10mm bolts and (2) plastic fasteners holding upper steel bracket to bumper.
 - b. Locate and remove (1) plastic push-in fastener on each side bumper meets fender in wheel well.
 - c. Locate and remove (9) plastic fasteners along bottom of bumper.
 - d. Pull bumper outward on edges near fender well and work your way across front of car.
 - e. Before pulling bumper completely off, unplug fog light connectors from chassis side harness.
- 2) Using below picture for reference, locate radiator support bracket and remove 12mm bolt and plastic fastener.

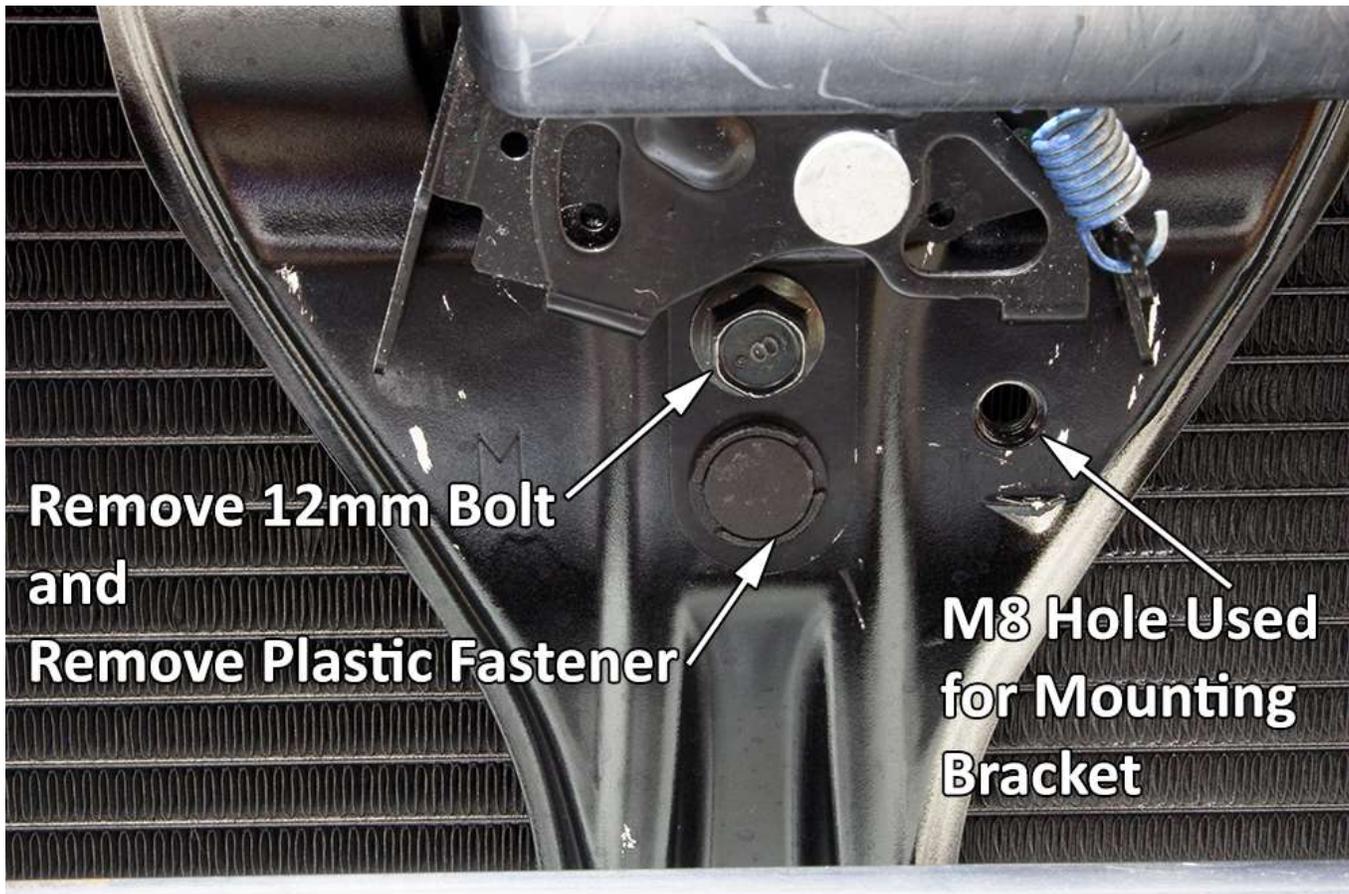

- 3) Locate and remove OEM horn on lower radiator core support. You will re-use 12mm bolt (not the nut) in future steps.



- 4) Consult Hella Horn instructions to determine how they need to be electrically installed. **Note: Do this step before mounting bracket to car as this will allow for easier way to connect both horns electrically. OEM horn wires can be used to trigger aftermarket horn relay but can't be used to drive horns directly.**
- 5) Remove flat brackets from Horns if they are already installed. The nuts on these are very tight and may require a vice to hold bracket while loosening.
- 6) Install horns to PERRIN Mount using supplied M8 washers behind nuts.
- 7) Install PERRIN Horn bracket and secure to car using 12mm bolts removed earlier.
- 8) Make any final adjustments to horn location and tighten 13mm nuts securing horns to bracket.
- 9) Connect horns electrically following diagrams supplied with horns.
- 10) Test to ensure horns function as desired.
- 11) Reinstall bumper making sure to plug in fog light connectors.



For questions & comments please contact TECH@PERRINPERFORMANCE.COM

503-693-1702

See Website For Instant Chat Options