

DISCLAIMER OF LIABILITY AND WARRANTY

This publication describes the author's opinions regarding the subject matter herein. The author and publisher are not rendering advice or services pertaining to specific individuals or situations. For specific advice, or if expert assistance is required, the services of a qualified professional should be obtained.

The author and publisher assume no responsibility whatsoever for the use of the information in this publication or for decisions made or actions taken based, in whole or in part, on the information in this publication. The author and publisher make no warranties, express or implied, regarding the information. Without limiting the foregoing, the author and publisher specifically disclaim and will not be responsible for any liability, loss, or risk incurred directly, indirectly or incidentally as a consequence of the use or misuse of any advice or information presented herein. Use this publication and information with good judgment and do the best you can in your particular situation.

You agree to indemnify and hold the author and publisher, and their respective officers, directors, agents, employees, contractors and suppliers, harmless from any claim or demand, including reasonable attorneys' fees, related to your use or misuse of this publication or the information contained therein. You further agree that you will cooperate fully in the defense of any such claims.

Notice: As the purchaser of this electronic document you are permitted to store it and print it for your own personal use only.

Otherwise, no part of this publication may be reproduced, stored in a retrieval system or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise without the prior written permission of the copyright owner and publisher. It is illegal to make a copy of all or part of this publication for someone else, even if you do not

charge for the copy. If you have purchased this book from anywhere other than theultimateenergizer.com, including eBay, please report it to michael@theultimateenergizer.com immediately.

COPYRIGHT

Those who have received or purchased the guide are neither authorized nor permitted to transmit copies of this guide to anyone without written permission. Giving away copies to people who haven't paid for them is illegal under international copyright laws and will submit you to possible legal action. Therefore, the utilization of this file is limited to personal use only.

TERMS AND DISCLAIMER

By using, viewing, and interacting with this guide or the theultimateenergizer.com website, you agree to all terms of engagement, thus assuming complete responsibility for your own actions.

The authors and publishers will not be held liable or claim accountability for any loss or injuries. Use, view, and interact with these resources at your own risk.

All products from theultimateenergizer.com and its related companies are strictly for informational purposes only. While all attempts have been made to verify the accuracy of information provided on our website and within the publications, neither the authors nor the publishers are responsible for assuming liability for possible inaccuracies.

The authors and publishers disclaim any responsibility for the inaccuracy of the content, including but not limited to errors or omissions. Loss of property, injury to self or others, and even death could occur as a direct or indirect consequence of the use and application of any content found herein.

Build Your Own Hydroelectric Generator

Micro-hydro Basics


Most machines that make electricity need some form of mechanical energy to get things started. Mechanical energy spins the generator to make the electricity. In the case of hydroelectricity, the mechanical energy comes from large volumes of falling water. For more than 100 years, the simplest way to produce the volumes of falling water needed to make electricity has been to build a dam. A dam stops the natural flow of a river, building up a deep reservoir behind it. However, large dams and reservoirs are not always appropriate, especially in the more ecologically sensitive areas of the planet.

For making small amounts of electricity without building a dam, the small-scale hydroelectric generator is often the best solution, especially where fast-flowing streams on steep slopes are close by. A small-scale hydro system



Canada and many other countries depend on large-scale hydro developments for electricity.


usually consists of an enclosed water wheel or turbine, which is made to spin by jets of high-velocity water. The water is taken from the stream and moved down slope to the turbine through a long pipe called a penstock. Water flowing through the penstock picks up speed, and is directed at the blades of the turbine by nozzles. The turbine spins continuously, as long as there is water to drive it. The turbine is connected to an electrical generator, and the electricity is then available for running appliances or charging batteries. The spent water is returned to the stream. This kind of system is called

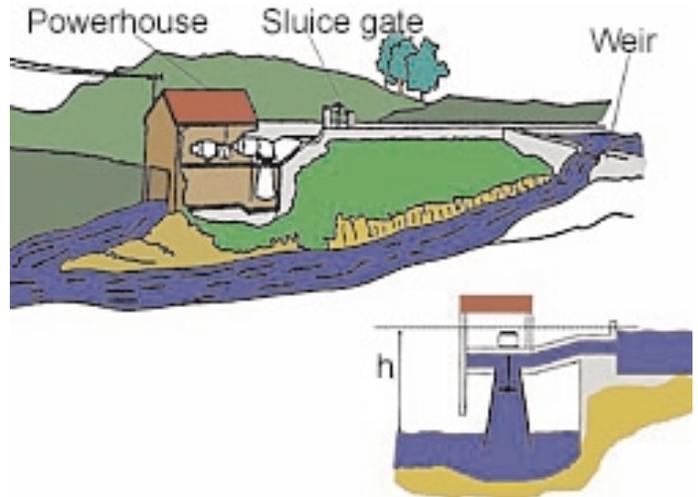

Micro-hydro systems can provide clean, environmentally friendly electricity in rural communities.

a “micro-hydro” system, “run-of-stream hydro” or “low-impact hydro.”

In this activity, you will use plastic spoons to build a model of a simple micro-hydro system. It generates surprising amounts of electricity, provided you have a supply of pressurized water, such as from a lab sink. This model closely resembles real micro-hydro designs, and can produce enough electricity to light a small light bulb.

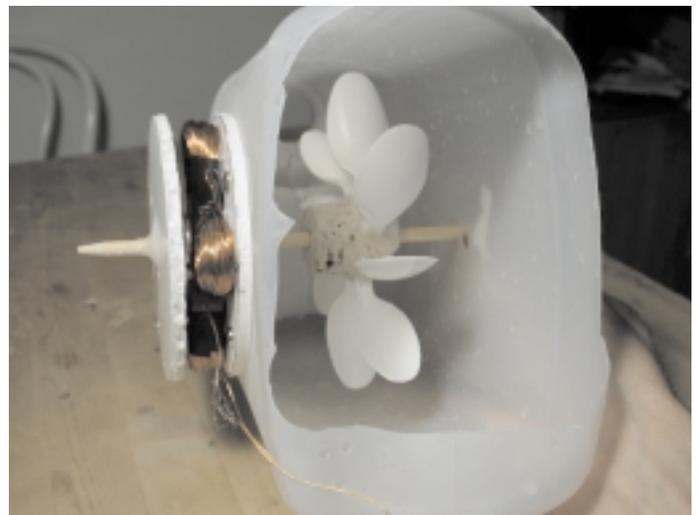

The completed micro-hydro turbine.

Tools

- Electric drill, with ¼” drill bit
- Scissors
- Electrical tape
- Ruler
- 10 cm (3.5 inch) nail or awl
- Hot glue gun, with 3 glue sticks
- White glue
- Utility knife
- Pencil sharpener
- Permanent felt tip marker
- Magnetic compass
- Wire cutters
- Gloves
- Safety glasses


Materials

- Paper Templates: Please download the following templates separately and print according to the printing instructions.
[Micro-hydro template \(74K\)](#)
- Important:** [Printing Instructions](#)
- 4L plastic jug (rectangular style, from vinegar, windshield washer fluid, or similar-see illustration)
- 10 plastic spoons
- 1 large cork (3.5 to 5 cm)
- Enameled magnet wire, 24 gage (approx. 100 m)
- Foamcore or heavyweight corrugated cardboard (approximately 22 cm by 30 cm)
- 6 mm (1/4 inch) wooden dowel (20 cm long)
- 4 ceramic or rare earth magnets (18mm or larger)
- clear vinyl tubing (6 cm long, ¼” inside diameter)
- 4 brass paper fasteners

A. Prepare the Disks


The generator we are building has two basic parts-the rotor and the stator. The stator is the part that remains stationary and has coils of wire to collect electricity. The rotor is the part that moves. It is equipped with powerful magnets that will induce current of electricity in the coils.


1. Glue the template sheet to the cardboard with white glue. Be sure to spread a thin layer of glue evenly over the entire back of the template.

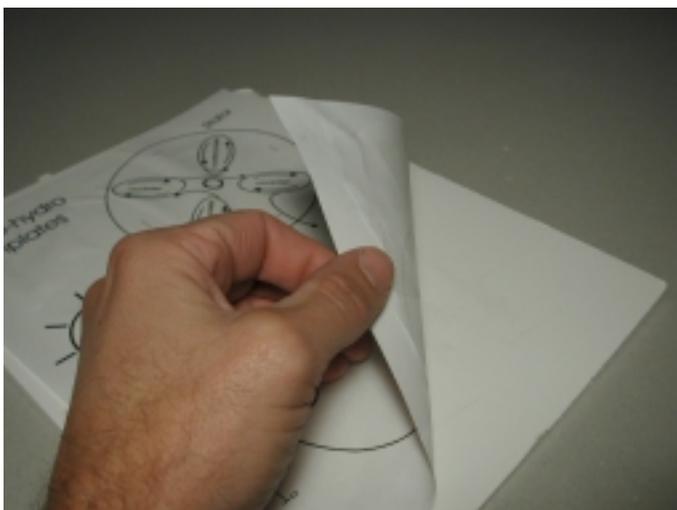

Cover the back of the template with a thin, even layer of glue.

2. When the glue has dried, use the utility knife to cut the rotor and stator disks from the cardboard sheet. Carefully trim the edges. Also, be careful not to damage the tabletop with the utility knife. Work on a piece of scrap wood or a cutting board.
3. Using an awl or sharp nail, punch a small hole through the rotor disk at its exact center, as shown. Using the utility knife, make a larger (1 cm) hole at the center of the stator disk.

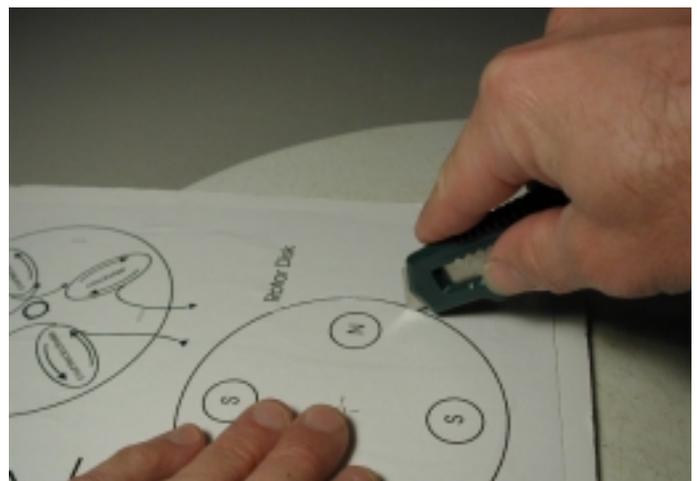

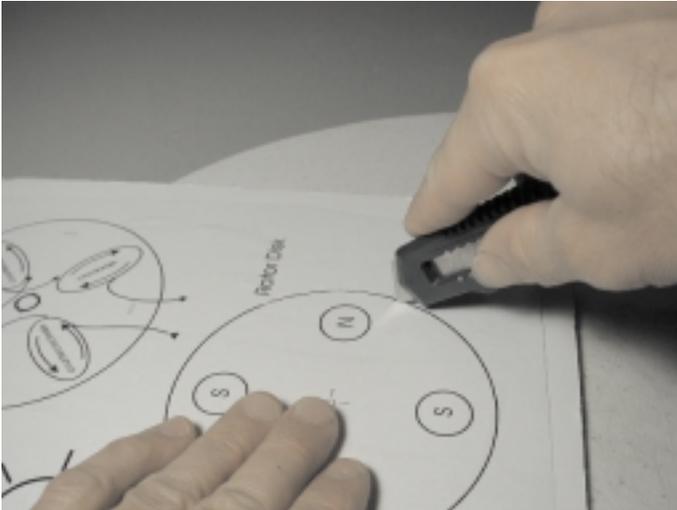

B. The Stator

1. Prepare a jig for winding your coils by cutting a 3 cm by 16cm piece of cardboard, folding it in half and securing with a small piece of electrical tape.
2. Cut 8 short (4 cm) strips of electrical tape and set these aside.
3. Leaving a lead of about 10 cm, start winding the first coil on the jig. Wrap the wire neatly onto the jig, forming a tight coil. Use 200 wraps or turns.



4. Carefully slip the coil off the jig and secure it using two pieces of the electrical tape you set aside in step 2 above.
5. Using a small patch of emery cloth or sand paper, remove the enamel insulation from the ends of each lead, exposing about 1 cm of bare wire. Be sure the wire is completely bare!
6. Repeat steps 1 through 5 to make three more coils.
7. Lay the coils loosely on the disk in the position shown by the template. Arrange the coils so their windings alternate between clockwise and counterclockwise, as shown on the template. **THIS IS VERY IMPORTANT!** Arrange and connect the coils so that an electron would follow the path shown by the arrows, starting with the counterclockwise coil on the left hand side.
8. When you are sure you have them arranged correctly, connect the coils by twisting the bared ends together, covering the connections with small pieces of electrical tape.
9. Check your connections: Set your multi-meter for measuring electrical resistance (ohms). If your connections are good, there should be little resistance

to the movement of electrons, and the meter should produce a reading of about 10 ohms or less. To check this, touch or connect the probes to the two free ends of the wires from the coils. If the coils are not properly connected, the reading will be a very large number, or infinity.



Check to make sure you have good connections between the coils.


10. Once you are confident the coils are properly positioned and connected, glue them to the stator disk. Lift each coil up a little and apply a large blob of glue to the template where the coil touches. Let the glue solidify before gluing the next coil.



11. With the utility knife, cut 4 slits through the cardboard between the magnets as shown on the template. These slits will be used to fasten the stator to the plastic container later.

C. The Rotor

1. Obtain 4 magnets. Using the magnetic compass, determine the polarity of each face, and mark the south pole of two magnets and the north pole of the remaining two using a felt pen.

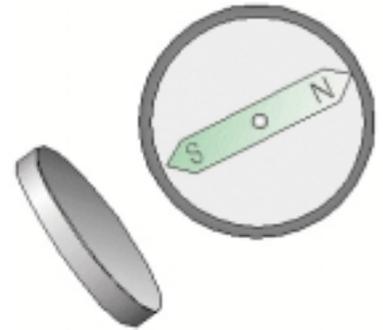



2. Warm up your hot glue gun, and prepare to attach the magnets to

Checking the polarity of one face of a magnet using a compass.

the rotor disk. The magnets must be arranged so that their polarity alternates (i.e. N-S-N-S). Their position and polarity are indicated on the template.

3. Squeeze a small (1cm) blob of hot glue on the spot where the first magnet will go. Quickly press a magnet with its washer onto the blob, as shown below. Allow the glue to solidify before moving onto the next magnet.

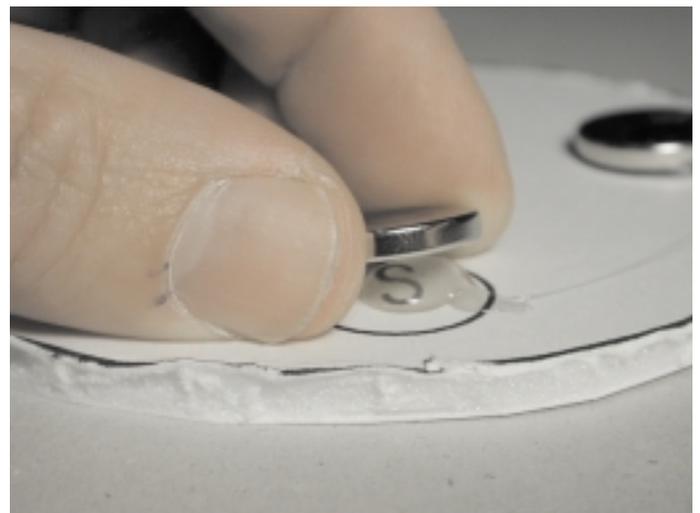

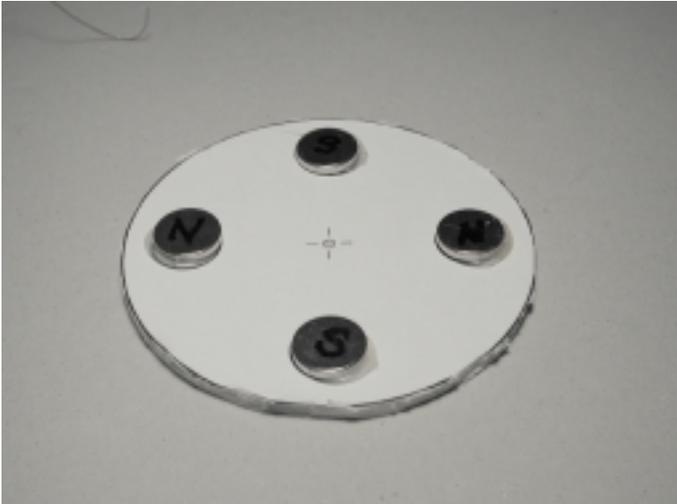


4. Repeat this for the remaining 3 magnets, making sure to alternate north and south poles as you go.

D. The Shaft


1. Cut the dowel down to 20cm in length.
2. Using a pencil sharpener put a point on each end of the wooden dowel (it is not necessary to make a sharp point-blunt will do).

E. The Turbine

1. Drill a $\frac{1}{4}$ " (6mm) hole through the CENTER of the large cork, or use a cork borer to make the hole.

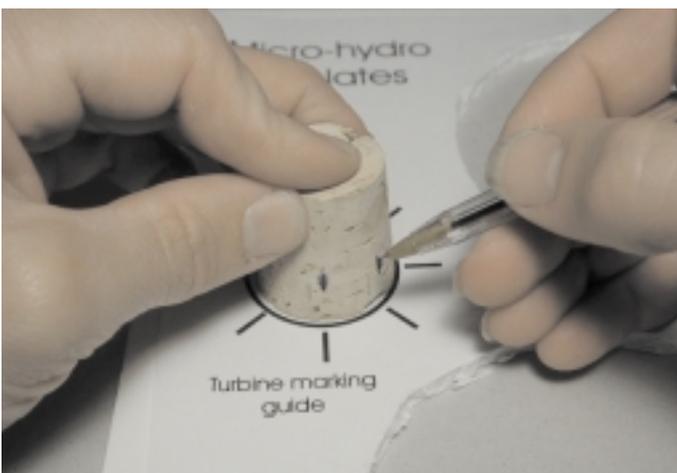


2. Center the wide end of the cork on the marking guide on the template page, and mark the cork with a pen or pencil.
3. Place the cork wide-end down on a cutting board. Use the utility knife to cut shallow slits into the cork where the spoons will be inserted. **USE CAUTION!**
4. Obtain 8 plastic spoons. Using the wire cutters, cut the spoon handles leaving a 1 cm stem on the bowl of the spoon.
5. Be sure the glue gun is warmed up and that you have a glue stick or two handy.
6. Insert the first spoon into the cork, using the turbine template as a guide. Push the stem of the spoon into the cork to a depth of about 1 cm.

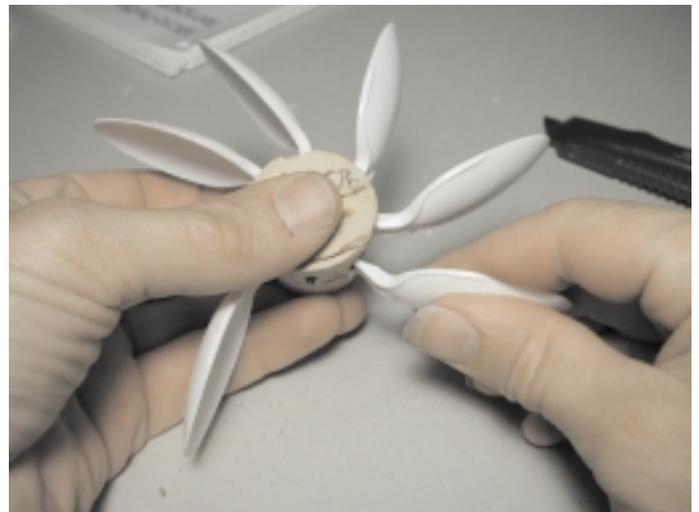

7. Repeat step 6 with the remaining 7 spoons. Adjust the angle and depth of the spoons so they are evenly spaced and all project from the cork at the same angle.
8. When you are satisfied with your turbine, add some hot glue to each spoon to secure it on the cork.

F. The Housing

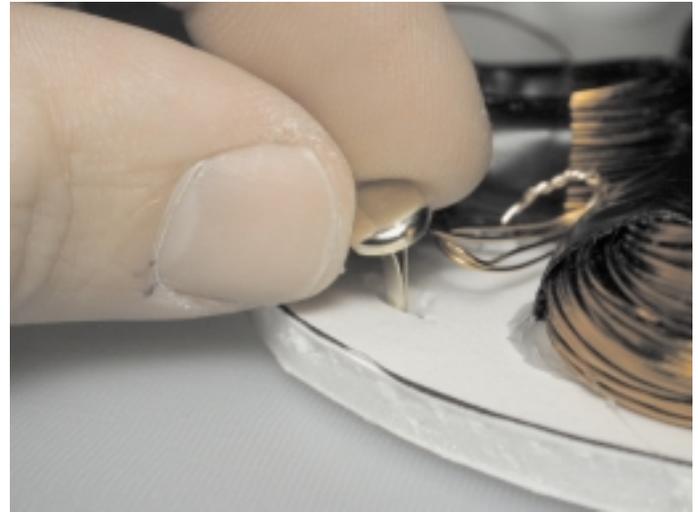

F. The Housing

1. Obtain the plastic container and tear off any labels that might be attached to the sides. Using scissors or a utility knife, cut part of the bottom off, as shown in the photo below.



2. Using a ruler, find the center of the side as accurately as you can. Mark this point with the permanent marker. Repeat for the other side.


3. At the mark on each side of the container, drill a 1/4" (6mm) hole through the plastic.

4. Lay the stator with its attached coils on the side of

the container so that its center hole is over the hole in the container. Push the nail (or awl) through each slit on the stator disk to mark the locations of these slits on the side of the plastic container.


5. Using the utility knife, make 4 small slits on the side of the container, corresponding with those on the stator disk.

6. Using the brass fold-over tabs, securely mount the stator disk to the side of the plastic container. Bend the tabs flat on the inside of the container, as shown.

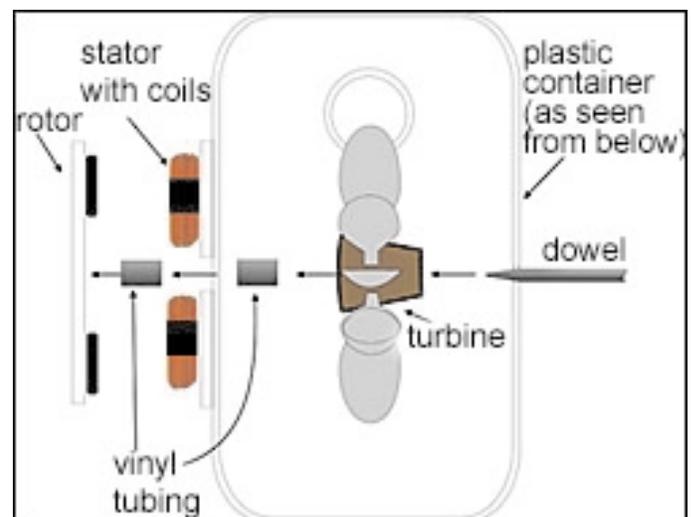

G. Final Assembly

1. With scissors, cut the vinyl tubing into two small lengths, each 1 cm long.
2. Slide the shaft into the plastic container through the hole in the stator. Inside the container, slide one piece of tubing onto the shaft.
3. Position the turbine inside the container so the spoons face the neck of the bottle.

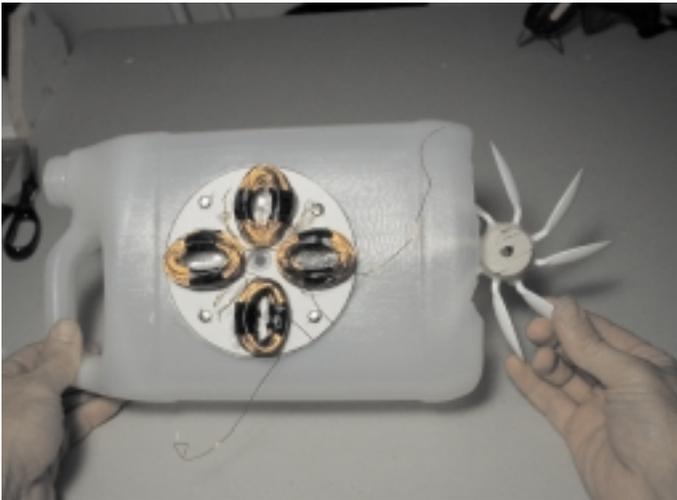

4. Push the shaft through the turbine's cork. Work the cork and the tubing down the shaft so the shaft comes out the other side of the container and projects by about 4 cm.
5. Adjust the position of the turbine so the spoons line up with the neck of the container.
6. Adjust the position of the tubing so that it comes close to but does not touch the inside of the container.
7. Slide the second section of tubing over the end of the shaft as shown. The two pieces of tubing will help to keep all parts of the turbine positioned correctly when it spins. Spin the shaft to be sure it turns without binding, and that the turbine does not strike the inside of the container as it spins.



The magnets should be close to, but not touching the coils as they turn.

8. Slide the rotor disk onto the shaft. Position it so that the magnets come to within 2 or 3 millimetres of the coils. Spin the shaft to be sure the magnets do not strike the coils.
9. Check the rotor disk to see that it spins true. Turn the shaft slowly and note any wobble. Adjust the angle of the disk on the shaft as necessary.
10. When the rotor disk spins without wobbling, fix it in position with hot glue applied to the point where the shaft passes through the reinforcing disks.



Reinforce the rotor disk with hot glue.