

time until the belt moves to the center.

4. IF THE BELT HAS SHIFTED TO THE RIGHT SIDE: Using the adjustment wrench, turn the left-hand bolt counterclockwise and the right-hand bolt clockwise. Turn the bolts 1/3 of a turn at a time until the belt moves to the center.


If the belt slips during operation, the tension on the belt may need adjustment. Simply turn both adjustment bolts clockwise until the belt no longer slips. Be careful to keep the belt centered.

## **PART LIST - MODEL NO. TL 5.2**

| Key No. | Reorder No. | Description            | Qty. | Key No. | Reorder No. | Description                 | Qty. |
|---------|-------------|------------------------|------|---------|-------------|-----------------------------|------|
| 1       | 004044      | Treadmill Frame        | 1    | 33      | 008051      | Speed Adj. Mounting Bracket | 2    |
| 2       | 041018      | Grip Tape              | 2    | 34      | 013209      | Mounting Bracket Bolts      | 4    |
| 3       | 008050      | L Belt Adj. Bracket    | 1    | 35      | 007020      | Left Handrail Post          | 1    |
| 3A      | 008058      | R Belt Adj. Bracket    | 1    | 36      | 013275      | Front Roller Adj. Bolt      | 1    |
| 4       | 013206      | Belt Adjustment Bolt   | 2    | 37      | 009046      | Motor Hood                  | 1    |
| 5       | 070084      | Rear Roller            | 1    | 37A     | 013162      | Hood Screw                  | 5    |
| 6       | 040020      | Rubber Cap             | 2    | 38      | 013302      | Bolt                        | 2    |
| 7       | 053007      | Low Friction Platform  | 1    | 38A     | 012037      | Locknut                     | 2    |
| 8       | 025014      | Walking Belt           | 1    | 39      | 070085      | Front Roller                | 1    |
| 9       | 049035      | Axle (Front Leg)       | 1    | 39A     | 019104      | Right Roller Bushing        | 1    |
| 10      | 043012      | Shock                  | 1    | 39B     | 019089      | Left Roller Bushing         | 1    |
| 11      | 012085      | Acorn Nut              | 2    | 40      | 070192      | Roller Lock                 | 2    |
| 12      | 052012      | Wheel                  | 2    | 41      | 013213      | Short Roller Screw          | 4    |
| 13      | 005011      | Front Chrome Leg       | 2    | 42      | 013211      | Motor Mount Bolt            | 4    |
| 14      | 012307      | Locknut                | 1    | 43      | 014041      | Motor Mount Washer          | 4    |
| 15      | 013207      | Carriage Bolt          | 2    | 44      | 013211      | Motor Mnt. Frame Bolt       | 2    |
| 16      | 016001      | Aluminum Clamp         | 2    | 44A     | 014001      | Washer                      | 2    |
| 17      | 017027      | Triangular Leg Knob    | 2    | 45      | 049012      | Motor Mnt. Slide Rail       | 2    |
| 17A     | 019045      | Spacer                 | 3    | 46      | 031013      | Motor Mount Plate           | 1    |
| 18      | 031033      | Electric Plug & Cord   | 1    | 47      | 013211      | Pulley Cover Bolt           | 2    |
| 19      | 017028      | Triangular Post Knob   | 2    | 48      | 033006      | Sensor Wire                 | 1    |
| 19A     | 019091      | Spacer                 | 1    | 49      | 010019      | Metal Pulley Cover          | 1    |
| 20      | 031005      | Elec. Connection Cover | 1    |         | 010042      | Plastic Pulley Cover        | 1    |
| 20A     | 013322      | Cover Screws           | 2    | 50      | 020016      | Variable Speed Pulley       | 1    |
| 21      | 031036      | Circuit Breaker        | 1    | 51      | 033001      | Sensor Magnet               | 1    |
| 22      | 013208      | Shock Bolt             | 1    | 52      | 014001      | Washer                      | 2    |
| 23      | 007019      | Right Handrail Post    | 1    | 53      | 020020      | Pulley                      | 1    |
| 24      | 031034      | Switch Cord            | 1    | 54      | 025018      | V-Belt                      | 1    |
| 25      | 013162      | Console Screw          | 4    | 55      | 013069      | Sensor Magnet Screw         | 2    |
| 26      | 003029      | Handrail               | 1    | 56      | 030005      | Motor                       | 1    |
| 27      | 041022      | Handrail Foam          | 1    | 57      | 045010      | Allen Wrench                | 1    |
| 28      | 013210      | Handrail Bolts         | 4    | 58      | 013213      | Screw                       | 2    |
| 29      | 031035      | On/Off Switch          | 1    | 59      | 010072      | Console Wiring Cover        | 1    |
| 30      | 033006      | Pulse Monitor          | 1    | 60      | 009052      | Console                     | 1    |
| 31      | 032017      | Electronics            | 1    |         | 046064      | Owner's Manual              | 1    |
| 32      | 017045      | Speed Adj. Knob        | 1    |         |             |                             |      |
| 32A     | 026018      | Speed Adj. Cable       | 1    |         |             |                             |      |

# EXPLODED DRAWING - MODEL NO. TL 5.2

TL170

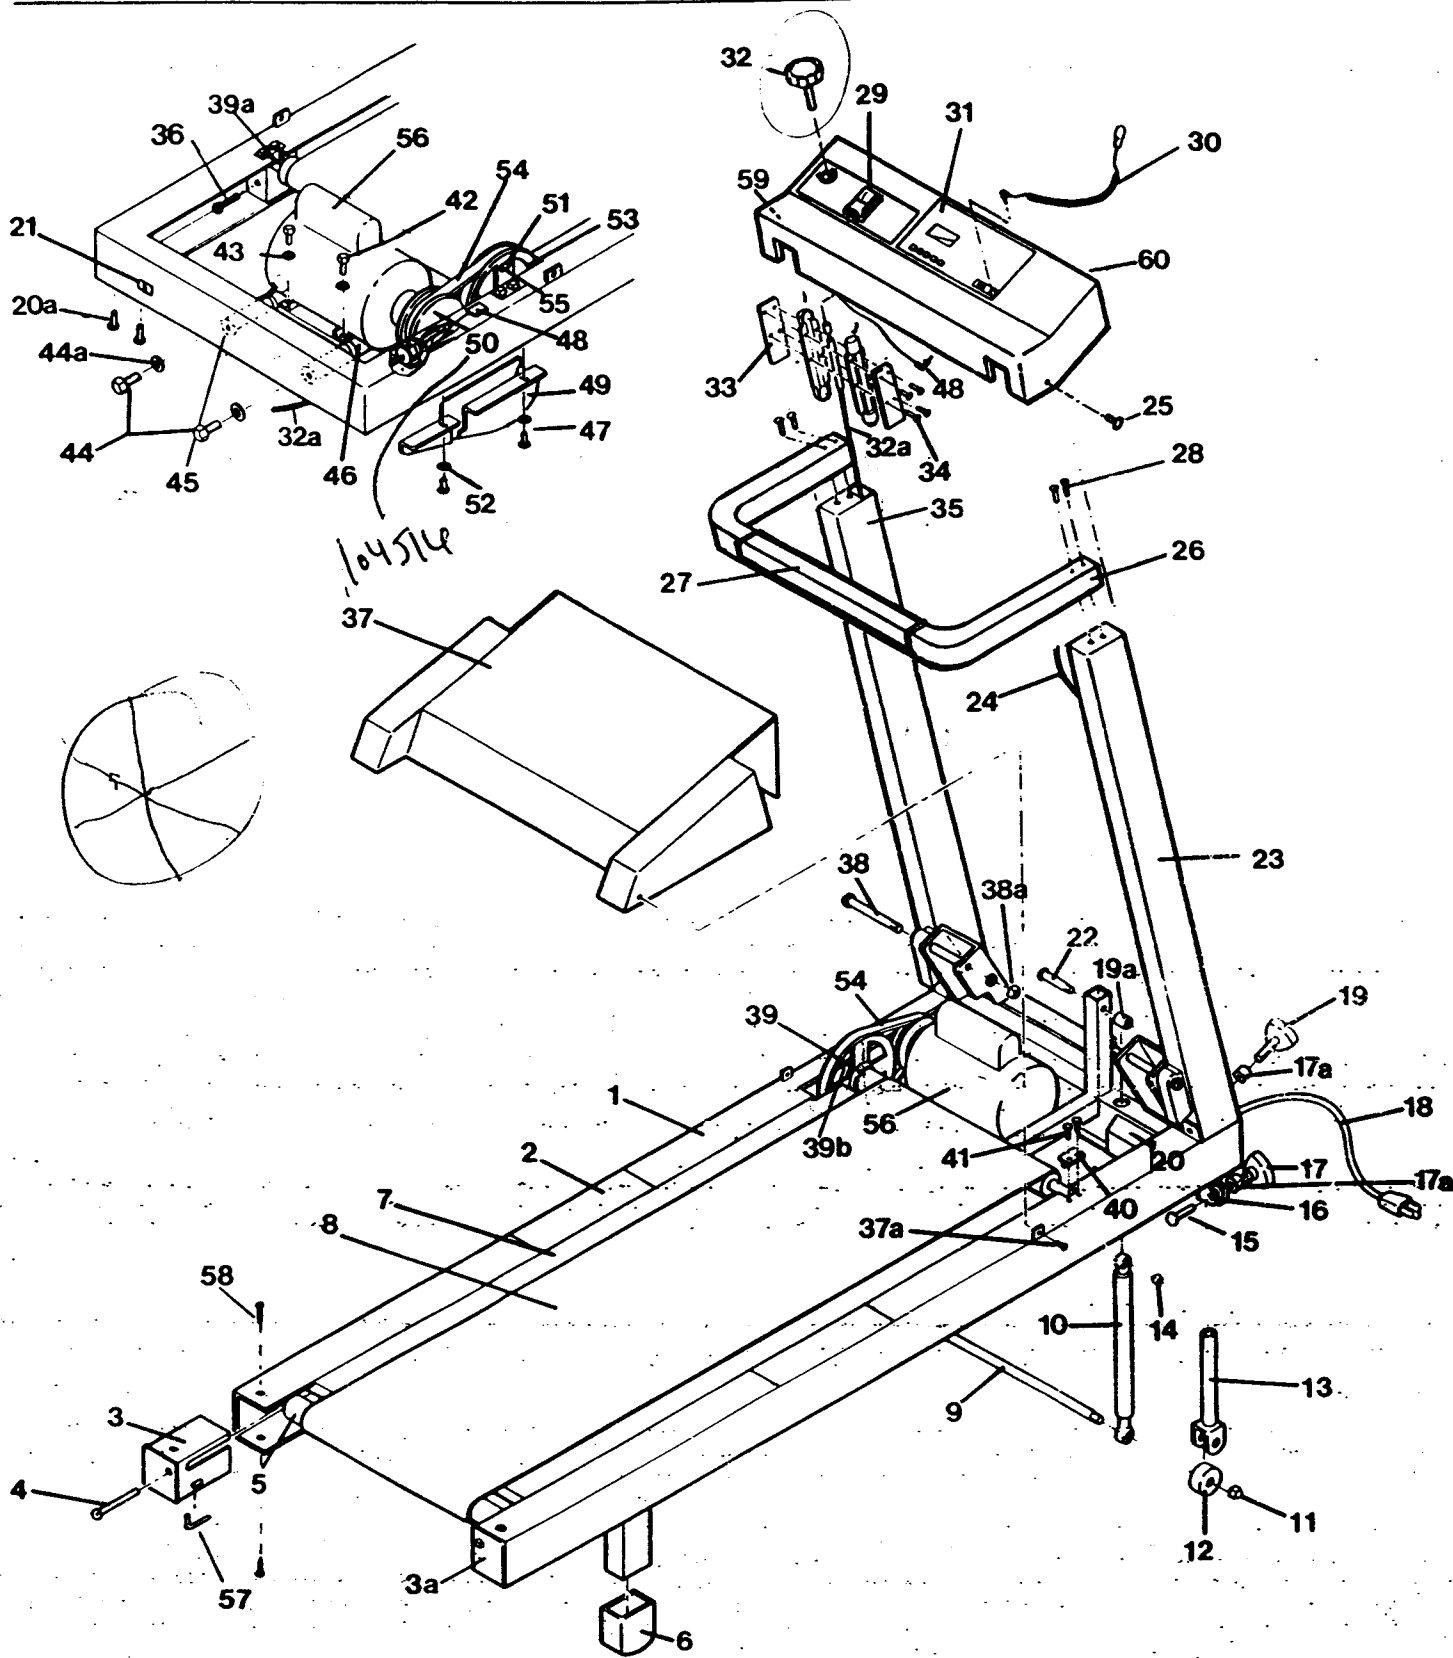

Replacement parts may be ordered by calling customer service toll-free at 1-800-824-3109 (in Canada, 1-800-824-8949) during regular business hours: 8 a.m. - 5 p.m., Mon.-Fri., Mountain Standard Time. When ordering parts please use the product name, model number, serial number, part description and reorder number.