


FREEMOTION® LEG PRESS

Model No. F804.0

Serial No. _____

Write the serial number in the space above for reference.

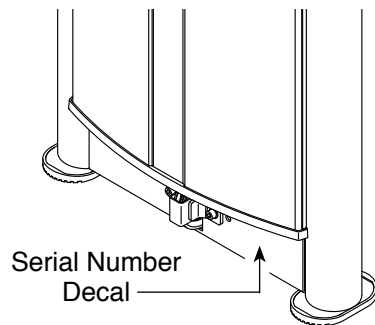


QUESTIONS?

If you have questions, or if parts are damaged or missing, please see **HOW TO CONTACT CUSTOMER CARE** on the back cover of this manual.

CAUTION

Read all precautions and instructions in this manual before using this equipment. Keep this manual for future reference.

OWNER'S MANUAL

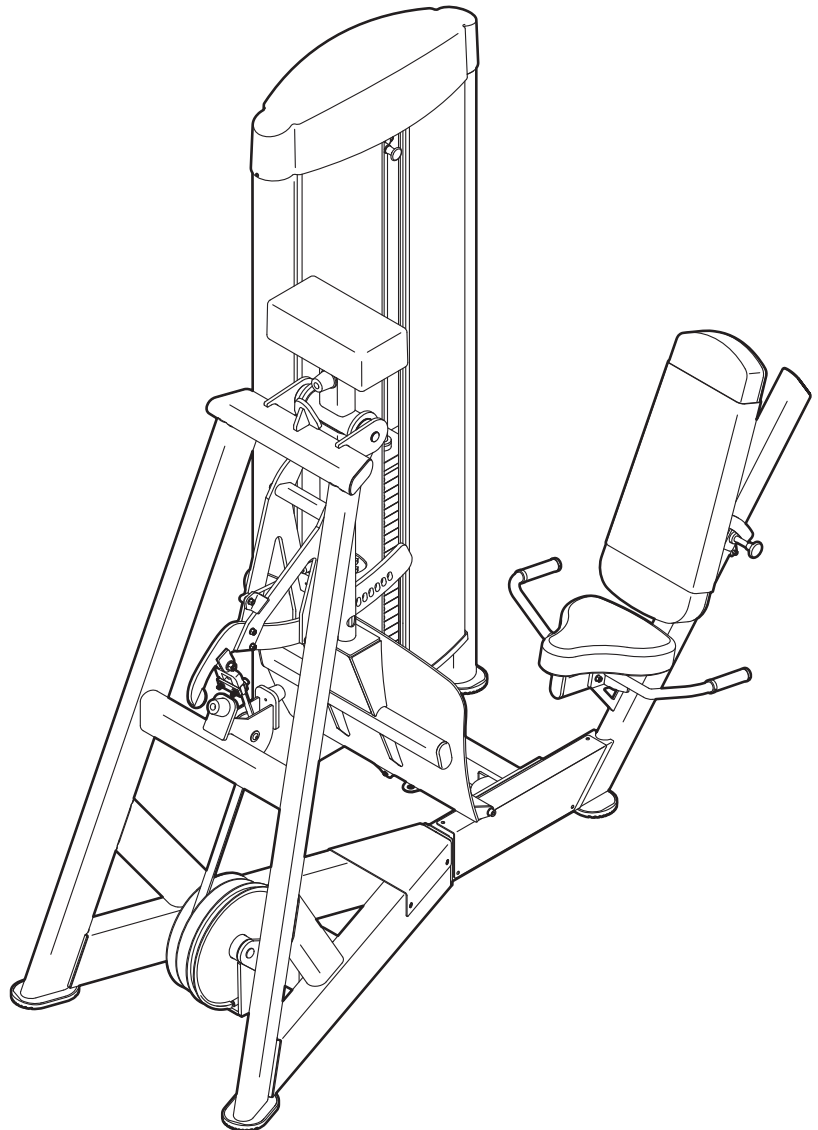

www.freemotionfitness.com

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS.....3

WARNING DECAL PLACEMENT4

BEFORE YOU BEGIN.....5

PART IDENTIFICATION CHART.....6

ASSEMBLY7

ADJUSTMENT17

MAINTENANCE AND TROUBLESHOOTING.....19

CABLE DIAGRAM.....21

PART LIST.....23

EXPLODED DRAWING.....25

HOW TO CONTACT CUSTOMER CARE..... Back Cover

LIMITED WARRANTY..... Back Cover


IMPORTANT PRECAUTIONS

⚠ WARNING: To reduce the risk of serious injury, read all important precautions and instructions in this manual and all warnings on your strength equipment before using your strength equipment. FreeMotion Fitness assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

1. It is the responsibility of the owner to ensure that all users of the strength equipment are adequately informed of all precautions, have read and understood all warning and caution labels, and are informed of how to use the strength equipment properly.
2. Before beginning any exercise program, consult your physician. This is especially important for persons over age 35 or persons with pre-existing health problems.
3. Use the strength equipment only as described in this manual.
4. It is the responsibility of the owner to ensure that there is enough space around the strength equipment for the intended exercise.
5. Use the strength equipment only on a level surface. Cover the floor beneath the strength equipment to protect the floor.
6. Anchor the strength equipment to the floor with the anchor strap where required or where possible to provide maximum stability.
7. All users of the strength equipment should be instructed to report any injury or strength equipment irregularity to facility staff immediately.
8. Keep children under age 12 and pets away from the strength equipment at all times.
9. The strength equipment is designed to support a maximum user weight of 350 lbs. (159 kg).
10. Always wear athletic shoes for foot protection while exercising.
11. Keep hands and feet away from moving parts. Do not lean on or rest your hands on the strength equipment while it is in use.
12. Make sure that the weight pin is completely inserted into one of the weight plates.
13. Make sure that the handles are attached securely before each use of the strength equipment.
14. Check each cable, cable connection, and pulley before each use of the strength equipment. Make sure that all parts are properly tightened. Replace any worn parts immediately.
15. Make sure that each cable remains on the pulleys at all times. If a cable binds while you are exercising, stop immediately and make sure that the cable is on the pulleys and that nothing is interfering with the cable or the pulleys.
16. Over exercising may result in serious injury or death. If you feel faint or if you experience pain while exercising, stop immediately and cool down.

WARNING DECAL PLACEMENT

This drawing shows the location(s) of the warning decal(s). If a decal is missing or illegible, see the back cover of this manual and request a free replacement decal. Apply the decal in the location shown. Note: The decal(s) may not be shown at actual size.

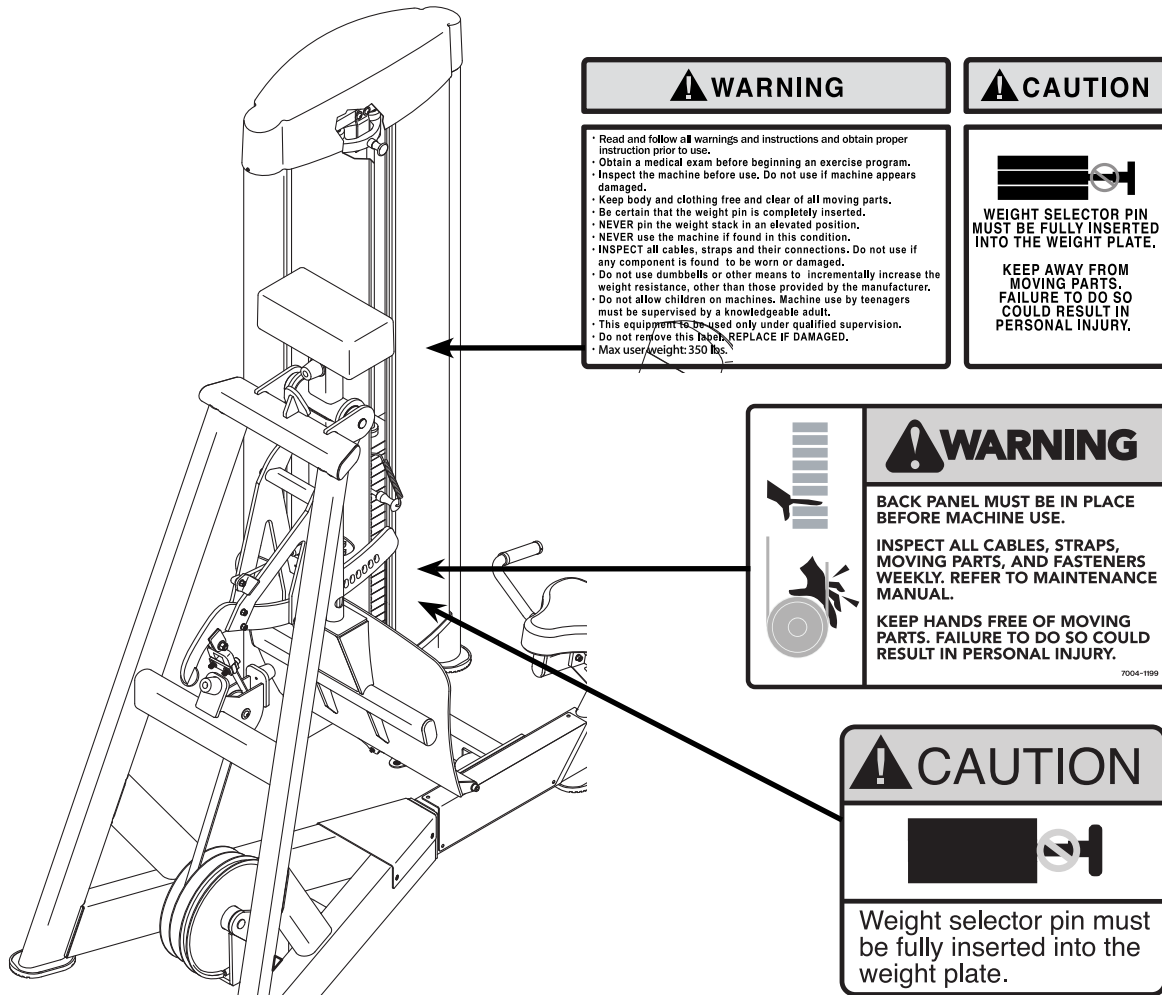


BEFORE YOU BEGIN

Thank you for selecting the FREEMOTION® LEG PRESS strength equipment. With unrestricted motion, you can work your body's muscle groups the way you do naturally, to train more effectively and efficiently.

For your benefit, read this manual carefully before using the strength equipment. If you have questions after reading this manual, please see the back cover











of this manual. To help us assist you, note the product model number and serial number before contacting us. The model number and the location of the serial number decal are shown on the front cover of this manual.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled.

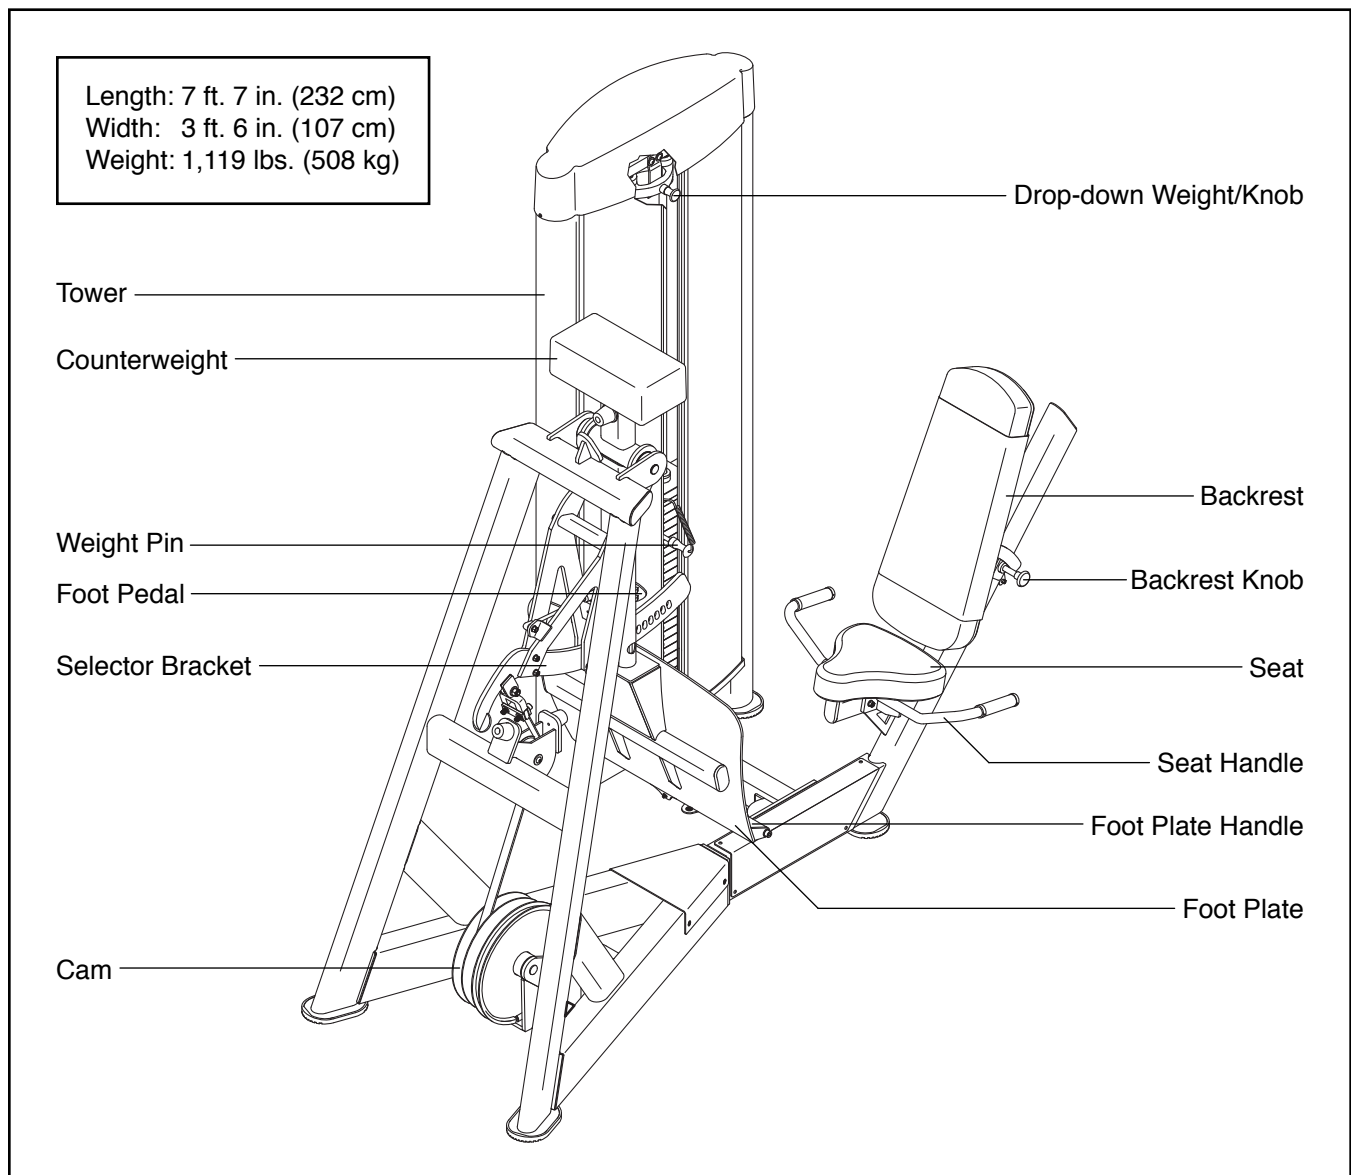

PART IDENTIFICATION CHART


Use the drawings below to identify small parts used for assembly. The number in parentheses by each drawing is the key number of the part, from the PART LIST near the end of this manual. The number following the parentheses is the quantity needed for assembly. **Note: If a part is not in the hardware kit, check to see if it has been preattached.**

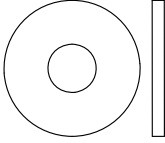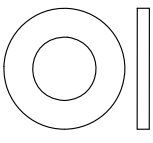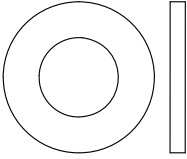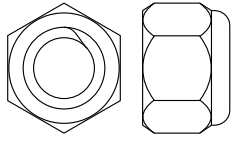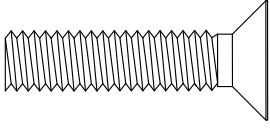			
M6 Washer (34)–4	M8 Washer (116)–4	M10 Washer (31)–12	M10 Locknut (32)–2
			
M4 x 13mm Self-tapping Screw (27)–2	M6 x 15mm Screw (35)–4	M8 x 30mm Socket Screw (94)–4	M8 x 35mm Screw (103)–2
			
M10 x 35mm Socket Screw (102)–8	M10 x 75mm Socket Bolt (87)–2		

ASSEMBLY

- Assembly requires two persons.
- Because of its weight and size, assemble the strength equipment in the location where it will be used. Make sure that there is enough clearance around the strength equipment.
- Place all parts in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed.
- For help identifying small parts, see page 6.

- The following tools (not included) are required for assembly:


one adjustable wrench	
one Phillips screwdriver	
a set of metric hex keys	
snap ring pliers	

Assembly may be more convenient if you have a set of wrenches. To avoid damaging parts, do not use power tools.

1. Remove all parts (31, 32, 41, 42, and 97) from the Connecting Frame (38).


Insert the Cable (40) through the Connecting Frame (38); **make sure that the threaded end of the Cable is extending from the small end of the Connecting Frame.**

Route the Cable (40) around the V-pulley (42). Attach the V-pulley and the Cable Trap (41) to the Connecting Frame (38) with the M10 x 70mm Socket Bolt (97), the two M10 Washers (31), and the M10 Locknut (32) that you just removed. **Make sure that the Cable is between the V-pulley and the Cable Trap and that the Cable Trap is oriented as shown.**

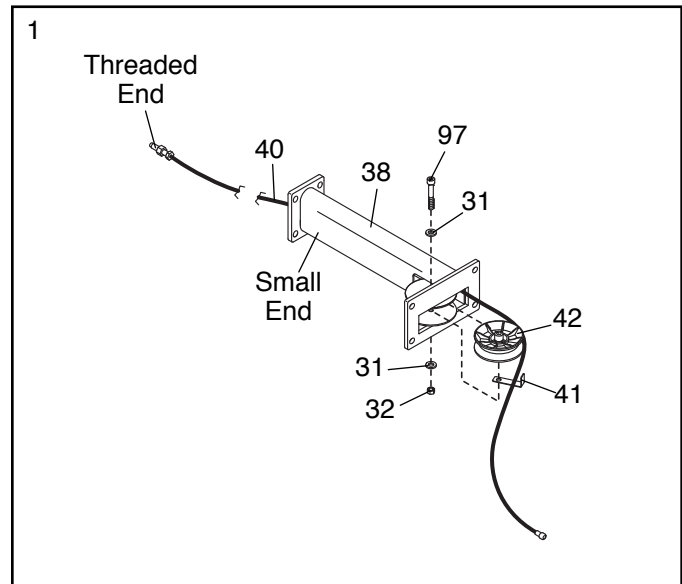


2. Set the Connecting Frame (38) near the indicated side of the Main Frame (68).

Route the Cable (40) into the Main Frame (68), out of the indicated slot, and through the indicated hole.

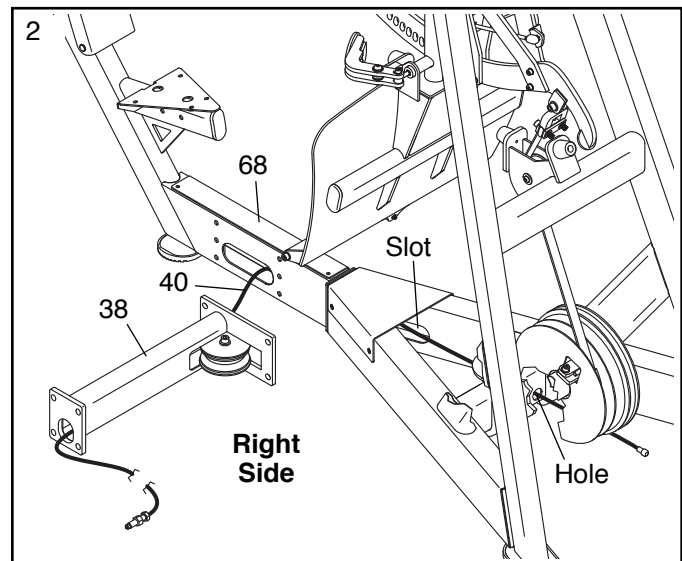


3. Attach the Connecting Frame (38) to the Main Frame (68) with four M10 x 35mm Socket Screws (102) and four M10 Washers (31). **Do not tighten the Socket Screws yet.**

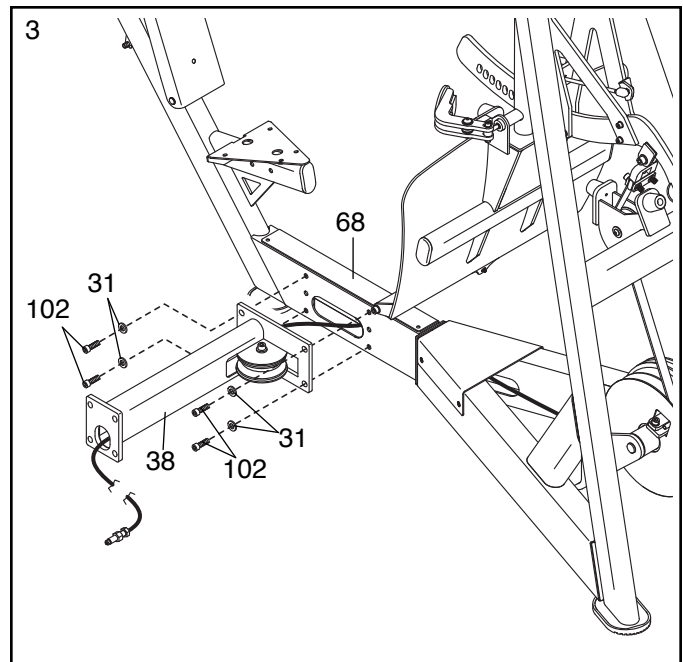


4. Remove all parts (24, 29, 31, 32, and 41) from the indicated bracket on the Main Frame (68).

Route the Cable (40) around the Large Pulley (24). Attach the Large Pulley and the Cable Trap (41) to the bracket on the Main Frame (68) with the M10 x 50mm Socket Bolt (29), the two M10 Washers (31), and the M10 Locknut (32) that you just removed. **Make sure that the Cable is between the Large Pulley and the Cable Trap and that the Cable Trap is oriented as shown.**

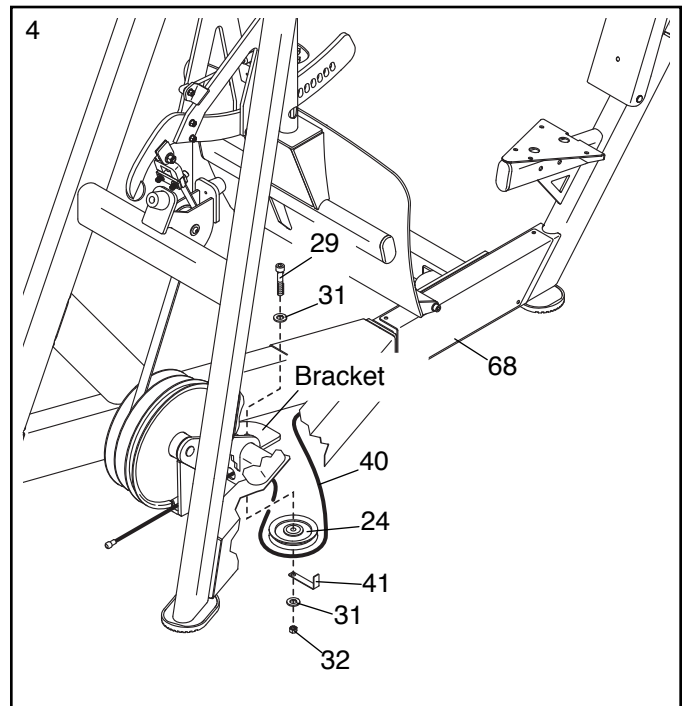


5. **See the inset drawing.** Insert the end of the Cable (40) between the Cam (45) and the cable trap on the Main Frame (68). Then, press the end of the Cable as far as possible into the socket on the Cam.

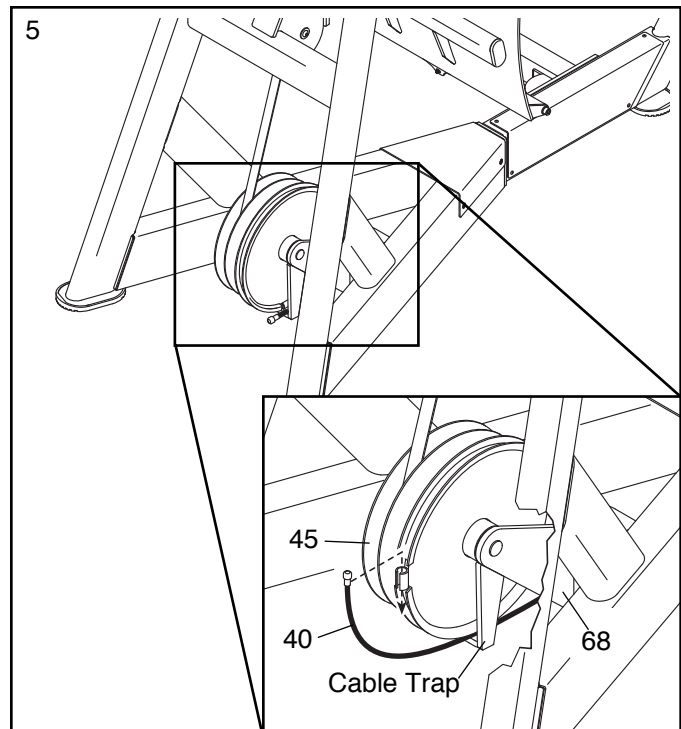

6. Orient the Tower Frame (1) as shown, and set it near the Connecting Frame (38). **Have a second person hold the Tower Frame to prevent it from falling until you complete step 7.**

Remove the two M10 x 30mm Socket Screws (30), the two M10 Washers (31), and the Pulley Bracket (6) from the back of the Tower Frame (1).


Next, remove the M10 Locknut (32), the M10 x 50mm Socket Bolt (29), the two M10 Washers (31), and the Large Pulley (24) from the Pulley Bracket (6).

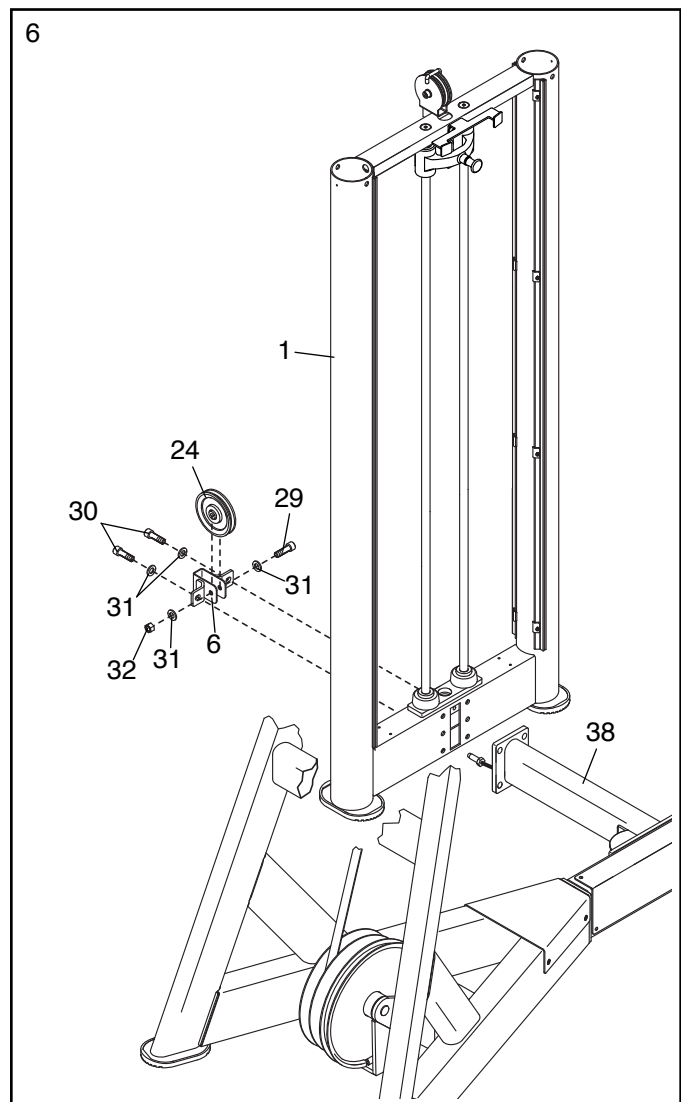

7. Insert the Cable (40) through the Tower Frame (1) as shown.


Attach the Connecting Frame (38) to the Tower Frame (1) with four M10 x 35mm Socket Screws (102) and four M10 Washers (31).

See step 3. Tighten the four M10 x 35mm Socket Screws (102).

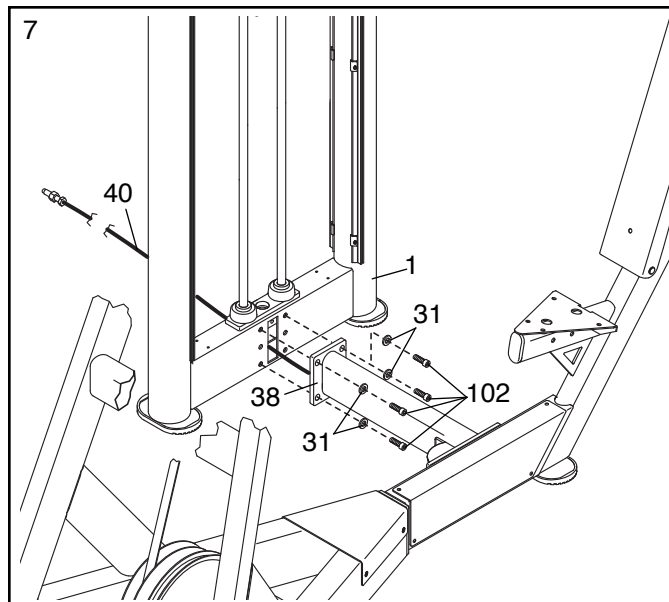

8. Route the Cable (40) upward through the Pulley Bracket (6). Attach the Large Pulley (24) inside the Pulley Bracket with the M10 x 50mm Socket Bolt (29), the two M10 Washers (31), and the M10 Locknut (32) that you removed in step 6.


Then, attach the Pulley Bracket (6) to the Tower Frame (1) with the two M10 x 30mm Socket Screws (30) and the two M10 Washers (31) that you removed in step 6.

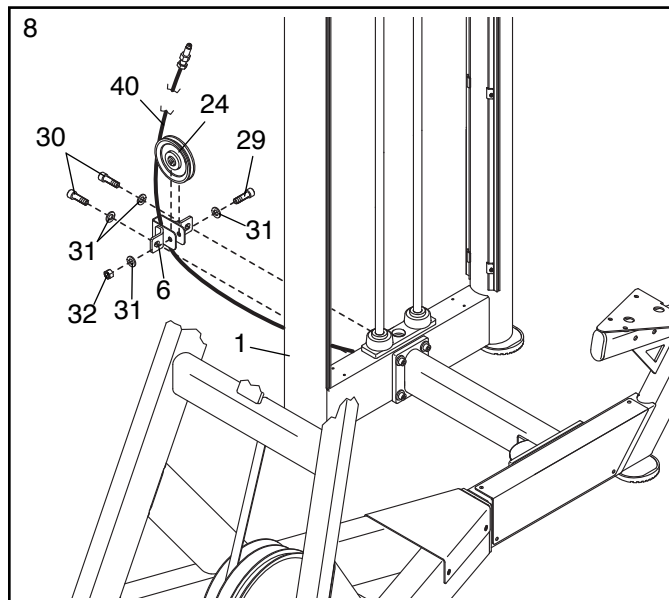

9. Identify the Rear Shroud Base (3), which has a hole in the center, and the Front Shroud Base (4). Orient the Shroud Bases as shown.

Insert the end of the Cable (40) upward through the Rear Shroud Base (3).

Attach the Shroud Bases (3, 4) to the Tower Frame (1) with four M6 x 15mm Screws (35) and four M6 Washers (34).

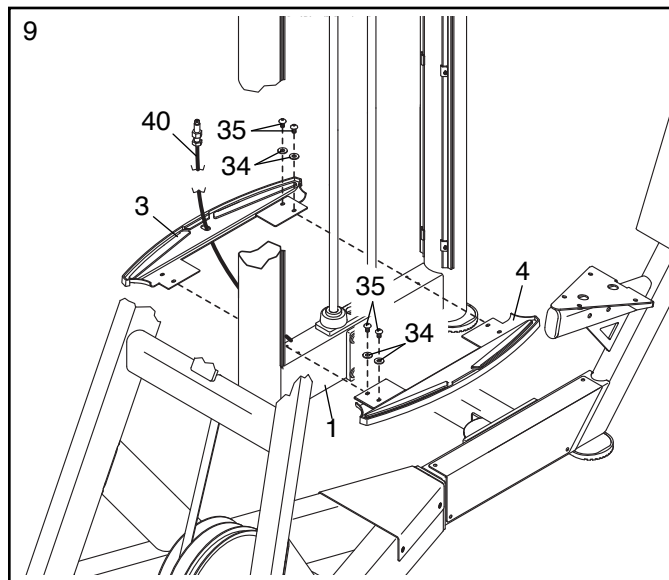


10. Pull the Drop-down Weight Knob (20) and slide the Drop-down Weight (10) downward on the Weight Guides (7).

Next, loosen the two M8 x 35mm Set Screws (19) a few complete turns; **it is not necessary to remove the Set Screws.**

Look under the top of the Tower Frame (1) and remove the two 25mm Snap Rings (39) from the two Weight Guide Bushings (18).


Have a second person hold the Weight Guides (7). Lift the Weight Guide Bushings (18) out of the Tower Frame (1).

Then, tip the upper ends of the Weight Guides (7) forward or backward, and slide the Drop-down Weight (10) and the Upper Weight Bumpers (16) upward off the Weight Guides.

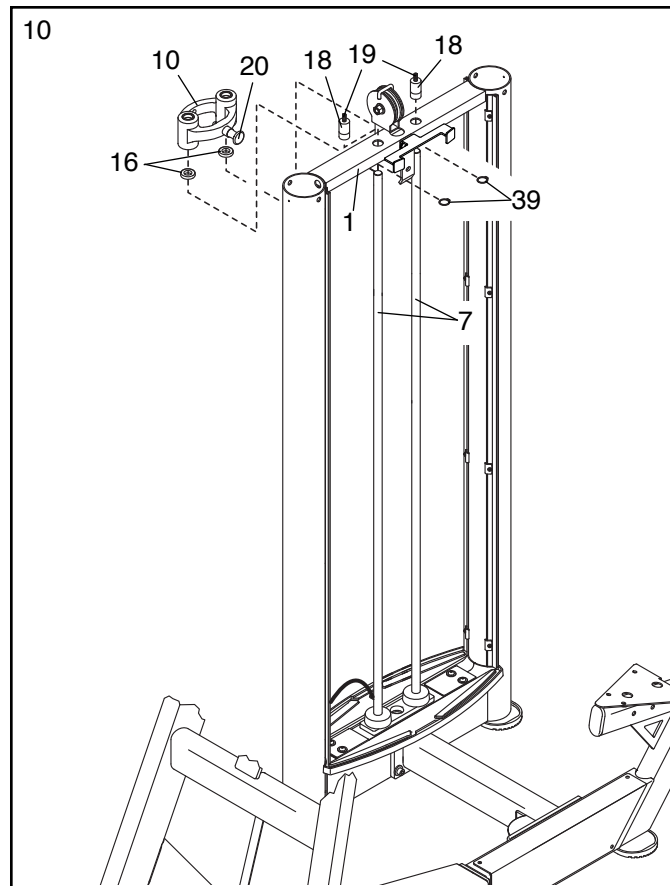

11. Look at the decals on the twenty-two Weights (8), and find the decal that has the **largest** number. Orient that Weight so that the decal is facing the Main Frame (68), and slide the Weight onto the Weight Guides (7).

Repeat this step until all twenty-two Weights are on the Weight Guides (7).

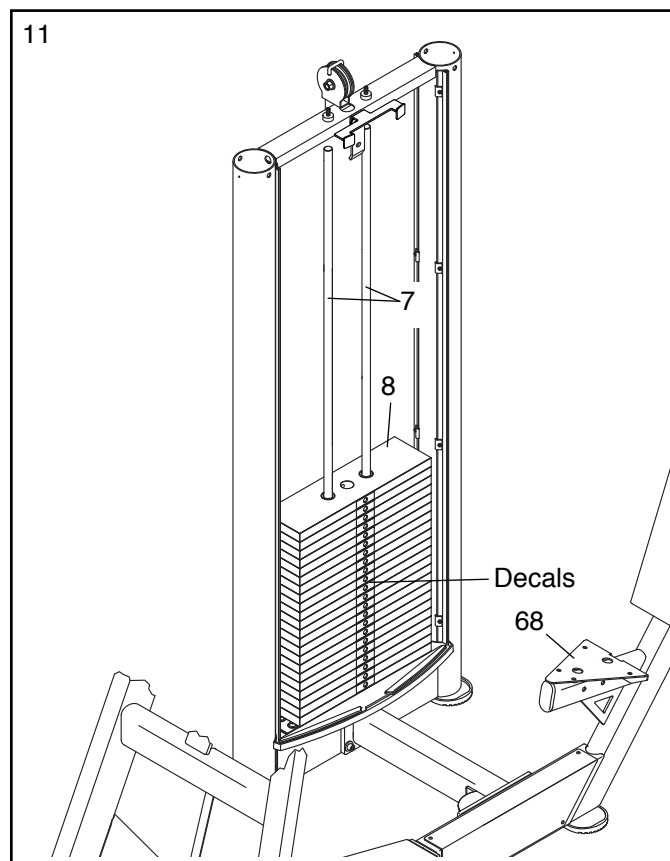


12. Orient the Top Weight (125) and the Drop-down Weight (10) as shown. Note: The Top Weight is attached to the Small Weight (9).

Slide the Top Weight (125), the two Upper Weight Bumpers (16), the Drop-down Weight (10), and the two 25mm Snap Rings (39) onto the Weight Guides (7).

Next, insert the two Weight Guide Bushings (18) into the Tower Frame (1), and slide them onto the upper ends of the Weight Guides (7).

Attach the two 25mm Snap Rings (39) to the Weight Guide Bushings (18).

Then, tighten the two M8 x 35mm Set Screws (19) into the Weight Guide Bushings (18).

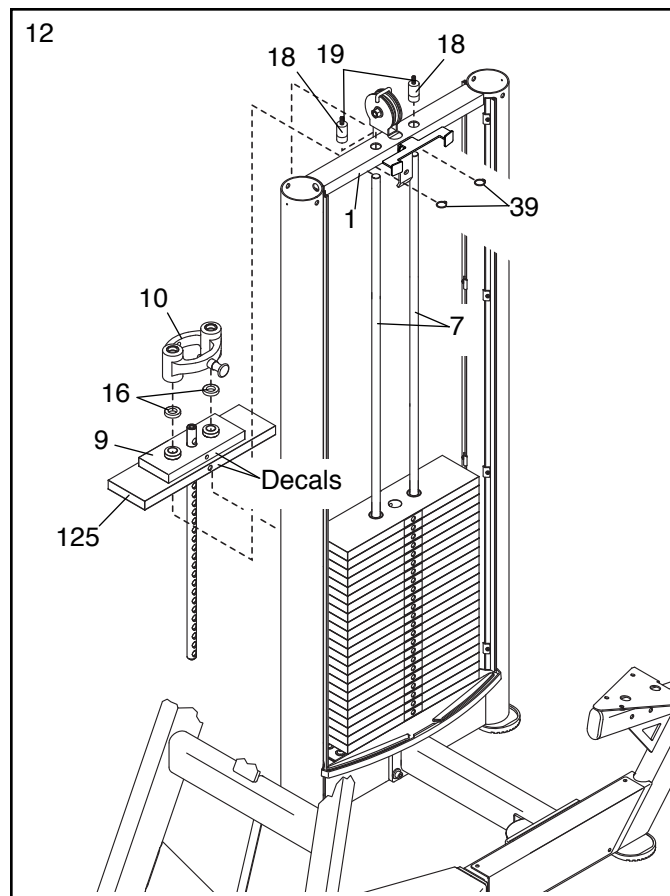


13. Remove all parts (23, 29, 31, and 32) from the pulley bracket on the Tower Frame (1).

Route the Cable (40) through the pulley bracket and downward through the hole in the center of the Tower Frame (1).

Attach the Small Pulley (23) inside the pulley bracket with the M10 x 50mm Socket Bolt (29), the two M10 Washers (31), and the M10 Locknut (32) that you just removed. **Make sure that the Cable (40) is between the Small Pulley and the rod on the pulley bracket.**


Next, slide the Drop-down Weight (10) upward until the Drop-down Weight Pin (22) snaps into the hole in the Latch Bracket (26). **Make sure that the Drop-down Weight Pin is engaged in the hole.**

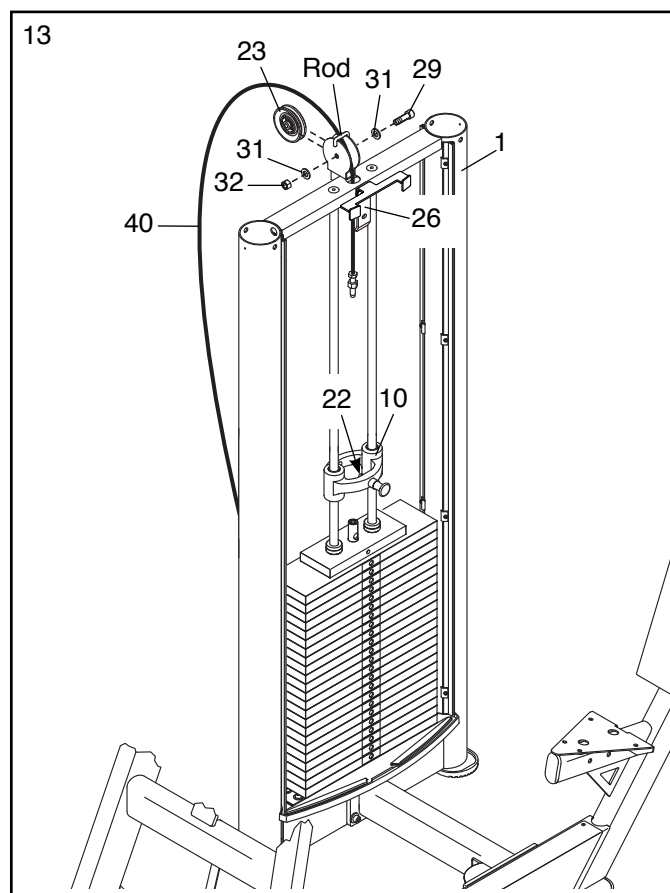

14. Remove the jam nut from the end of the Cable (40). Next, slide the tether on the Weight Pin (12) onto the end of the Cable. Then, finger tighten the jam nut onto the end of the Cable.

Tighten the end of the Cable (40) into the Weight Selector (11) until the Top Weight (125) is lifted off the Weights (8). Then, loosen the end of the Cable until the Top Weight just rests on the Weights.


Then, tighten the jam nut against the Weight Selector (11).

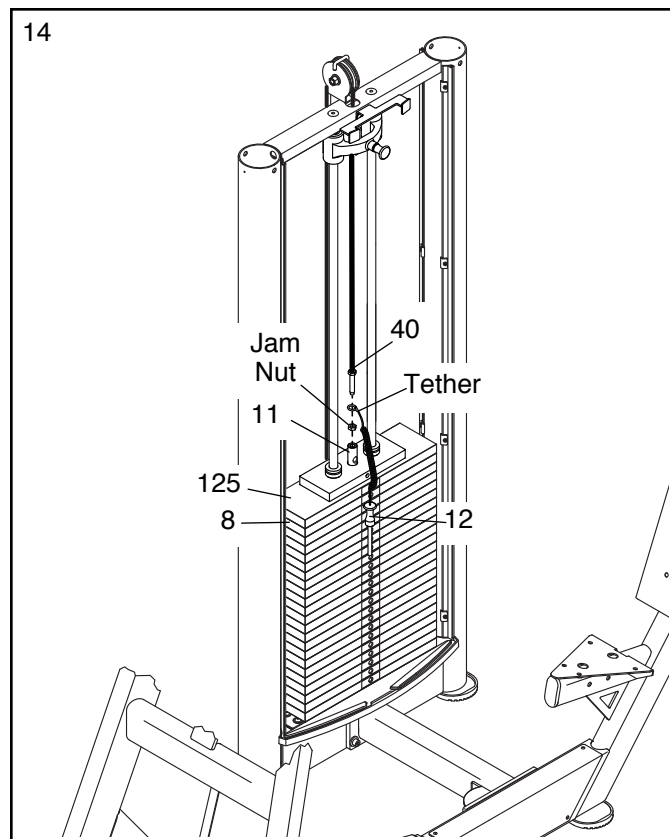


15. Note: The parts shown in this step may be preassembled.

Look at the four Shrouds (36), and find the two Shrouds that have strips of Inner Trim (37) and the two Shrouds that do not.


Slide the Shroud Panel (46) downward onto the two Shrouds (36) that do **not** have strips of Inner Trim (37).

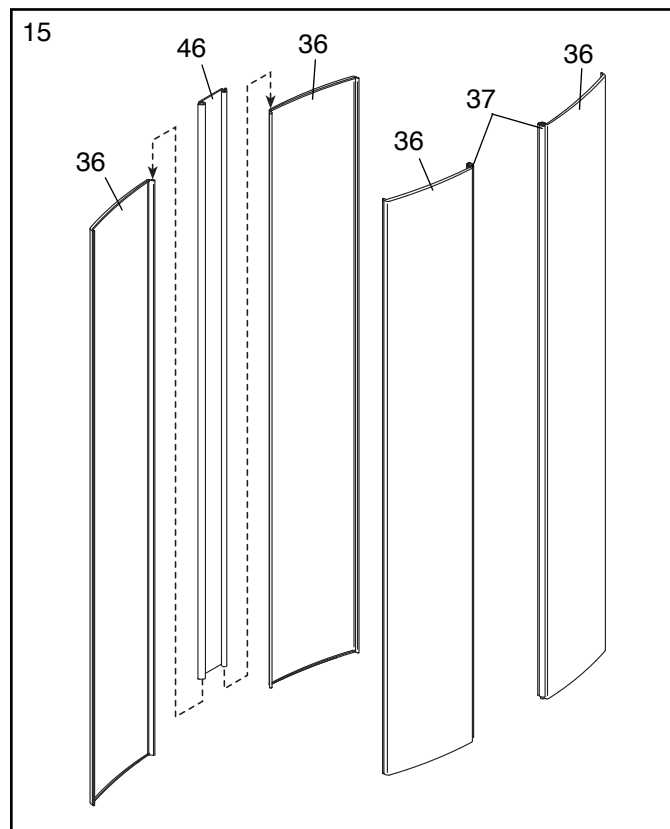


16. Slide the two Shrouds (36) with the Shroud Panel (46) downward into the two strips of Outer Trim (5) on the back of the Tower Frame (1).

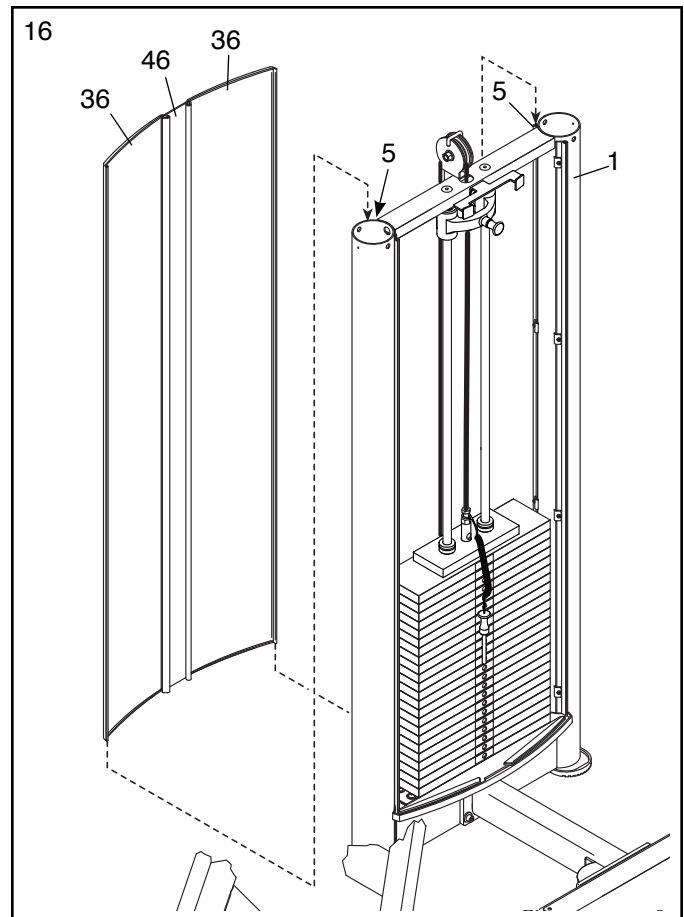


17. Slide the two remaining Shrouds (36) downward into the two strips of Outer Trim (5) on the front of the Tower Frame (1).

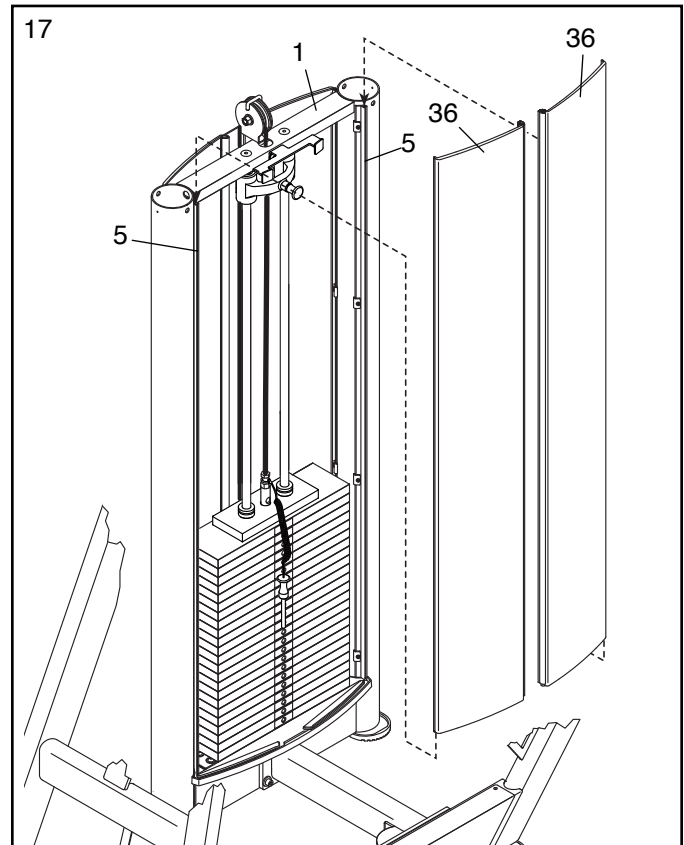

18. Slide the Tower Cap (2) downward onto the Tower Frame (1). Attach the Tower Cap with two M4 x 13mm Self-tapping Screws (27).

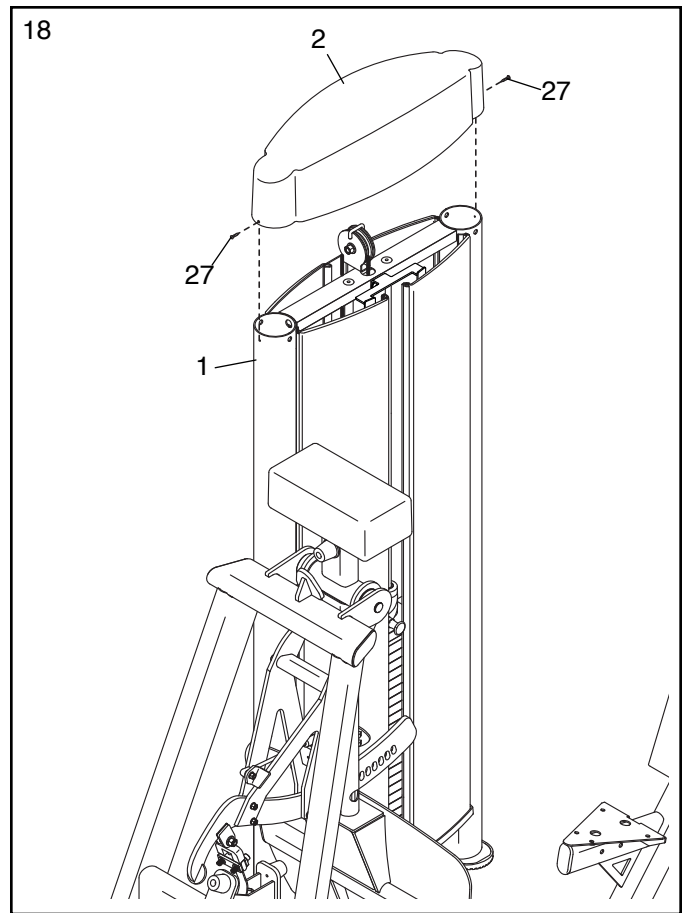


19. Attach the Seat (52) to the Main Frame (68) with four M8 x 30mm Socket Screws (94) and four M8 Washers (116).

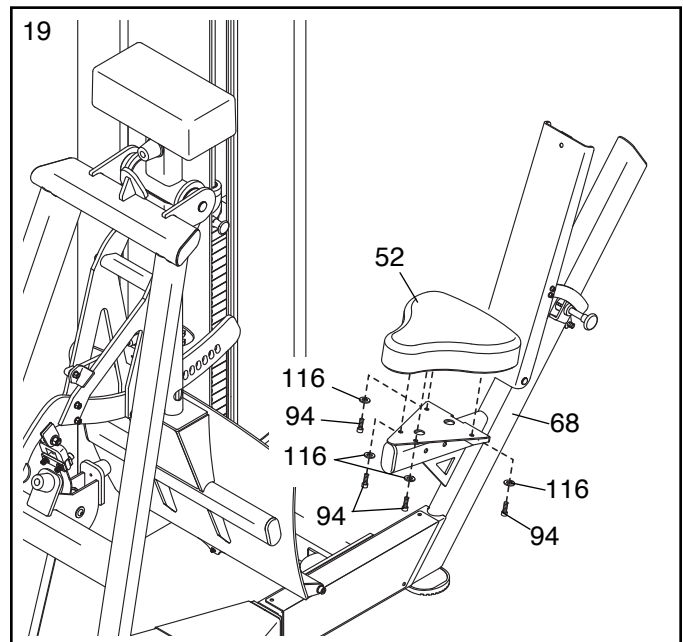


20. Orient the Right and Left Seat Handles (65, 66) as shown.

Attach the Seat Handles (65, 66) to the Main Frame (68) with two M10 x 75mm Socket Bolts (87), four M10 Washers (31), and two M10 Locknuts (32).

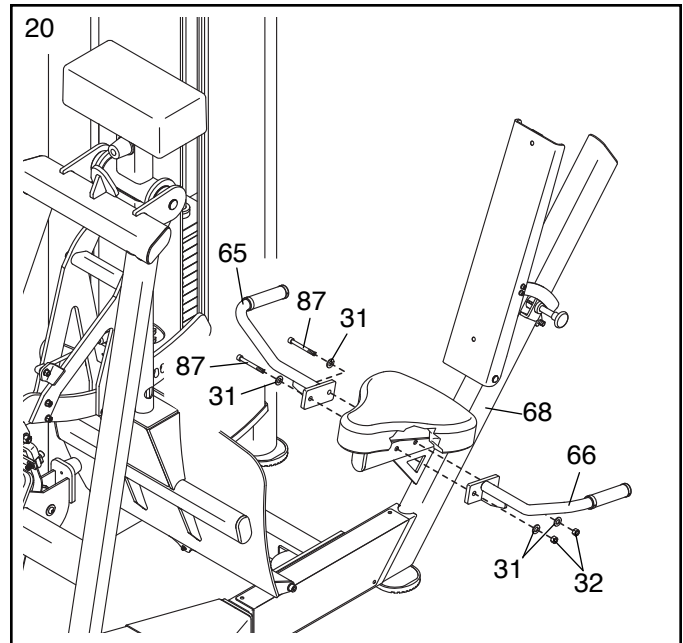

21. Attach the Backrest (109) to the Backrest Frame (64) with two M8 x 35mm Screws (103).

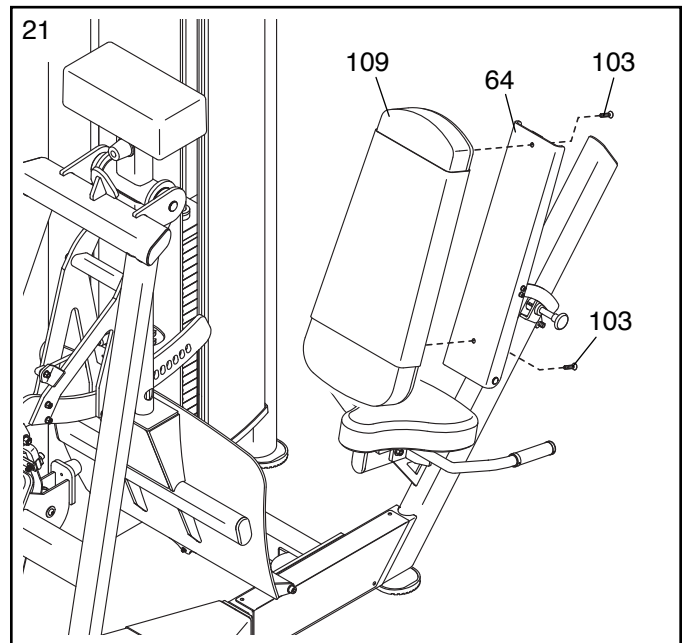

22. **Make sure that all parts of the strength equipment are properly tightened.** To protect the floor or carpet from damage, place a mat under the strength equipment.

ADJUSTMENT


This section explains how to adjust the strength equipment. Make sure that all parts are properly tightened each time the strength equipment is used. Replace any worn parts immediately.

ADJUSTING THE RESISTANCE

To change the amount of resistance, insert the weight pin into the desired weight. **Make sure that the weight pin is fully inserted.** Note: To use only the top weight, insert the weight pin into the hole in the weight selector (not shown) above the small weight.

To add 5 lbs. (2.25 kg) of resistance, pull the indicated knob and lower the drop-down weight onto the weight stack.

When you are not using the drop-down weight, slide it upward and engage the knob into the latch bracket. **Move the drop-down weight upward and downward slightly to make sure that the knob is engaged in the latch bracket.**

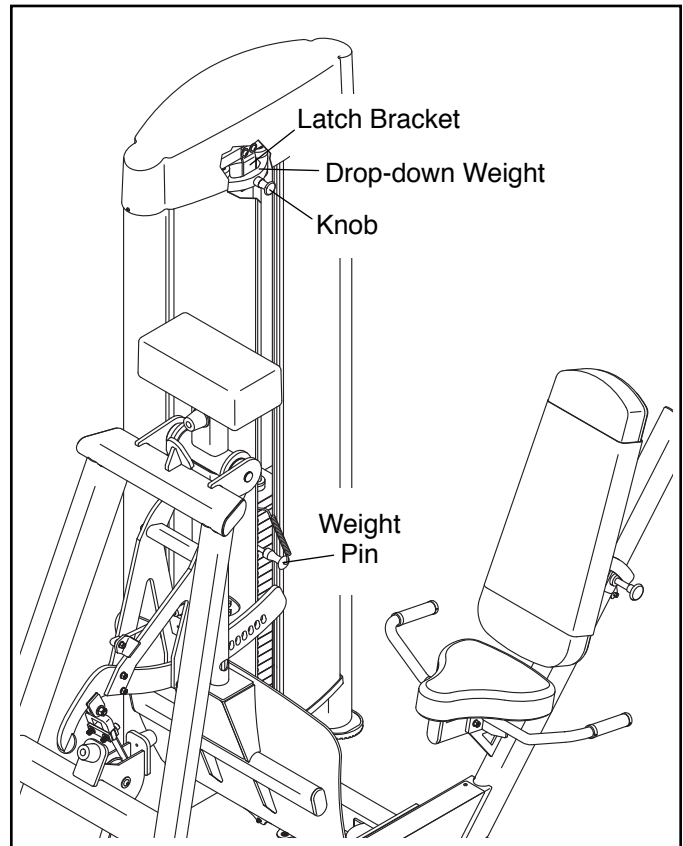


ADJUSTING THE FOOT PLATE

To move the starting position of the foot plate toward the seat, simply pull the handle on the bottom of the foot plate.


To move the starting position of the foot plate away from the seat, press the foot pedal, push the foot plate to the desired position, and then release the foot pedal.

⚠ WARNING: Make sure that the foot plate pin (not shown) is fully engaged in the selector bracket before you use the foot plate.

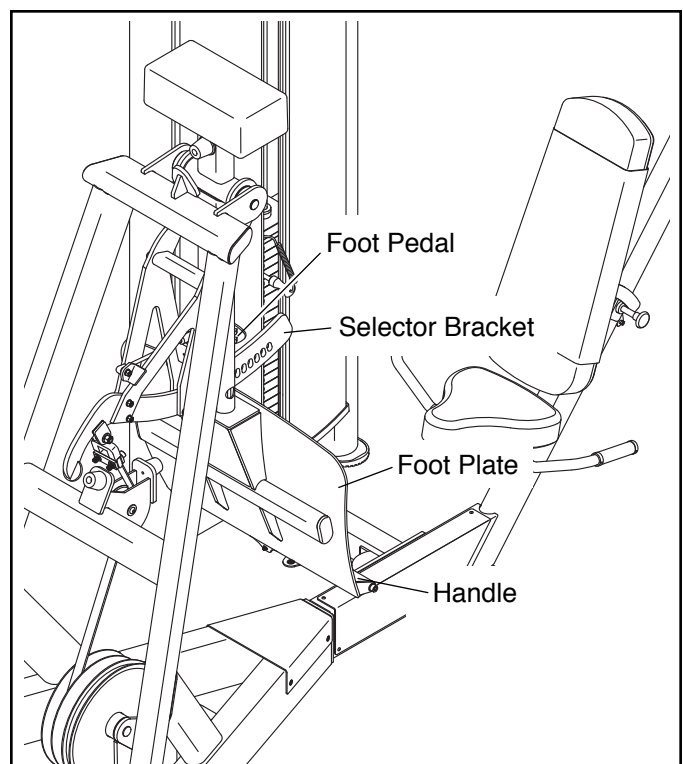

ADJUSTING THE BACKREST

To adjust the angle of the backrest, pull the backrest knob and pivot the top of the backrest to the desired position. Then, reengage the backrest knob. **Move the backrest forward and backward slightly to make sure that the knob is engaged in the backrest adjustment bracket (not shown).**

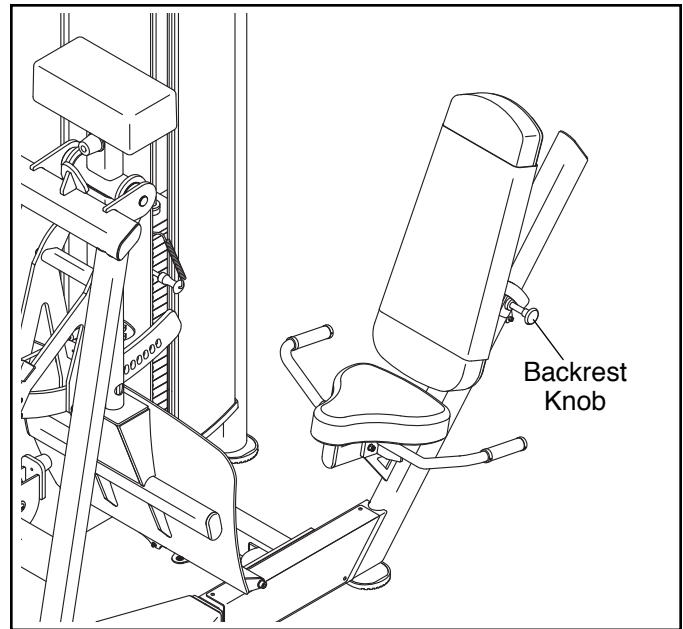

MAINTENANCE AND TROUBLESHOOTING

For optimal performance of the strength equipment and to reduce the chances of injury to users, you must perform preventive maintenance on a regular basis. Instruct all personnel to perform the procedures described in this section. Personnel must also record and report any accident. To maintain the strength equipment's warranty, use only FREEMOTION parts for repair or replacement. If there are any questions or concerns, see HOW TO CONTACT CUSTOMER CARE on the back cover of this manual.

DAILY MAINTENANCE

General Cleaning

Clean the strength equipment using a soft cloth dampened with mild soap and warm water. If necessary, use a soft bristle brush with the cleaning solution.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

Difficult Stains

Spray the stain with a non-abrasive household cleaner such as FORMULA 409®, SIMPLE GREEN®, or a similar product. Rub the stained area gently and then let the cleaning solution sit for a few minutes.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

If necessary, repeat these steps using a soft bristle brush.

Optional Method for Difficult Stains

Rub the stained area gently using a soft cloth dampened with rubbing alcohol.

Then, rinse the strength equipment using a soft cloth dampened with clean water, and thoroughly dry it.

CAUTION: Follow the directions and the safety precautions of the manufacturer of each cleaning product used. FreeMotion Fitness and its vendors cannot be held liable for injuries or damage resulting from the use or misuse of cleaning products. **IMPORTANT:** When using any cleaning product, try it first in an unnoticeable place to ensure that there is no damage to the material. Do not use abrasive cleaners; strong cleaners; or solvents such as lacquer thinner, kerosene, gasoline, or similar liquids. Such substances may scratch the strength equipment, damage plastic parts and decals, or cause other damage.

WEEKLY MAINTENANCE


Hardware

Check all nuts, bolts, and screws, and tighten them if necessary. **IMPORTANT:** All cushions have dense plywood supports with tee-nuts that are used to attach the cushions to the strength equipment. Because the tee-nuts are held by the plywood, they will not withstand the torque that standard nuts will. When tightening the bolts or screws securing a cushion, turn them only until they are snug and the cushion does not move or feel loose. Overtightening may strip the tee-nuts from the plywood and make it impossible to remove the cushion in the future. Note: Your strength equipment may not have cushions.

Cable Inspection

Check the entire length of each cable by slowly performing one repetition on the strength equipment. Inspect the cable on the exterior of the strength equipment and the cable on the interior. Run your fingers along the cable, paying close attention at the bends and attachment points. Watch for the following conditions, which may indicate a worn cable that should be replaced:

- A. a torn or split sheath that exposes the cable
- B. a kinked or severely bent cable
- C. a curled or twisted sheath
- D. a stretched sheath with a thinning cross-section

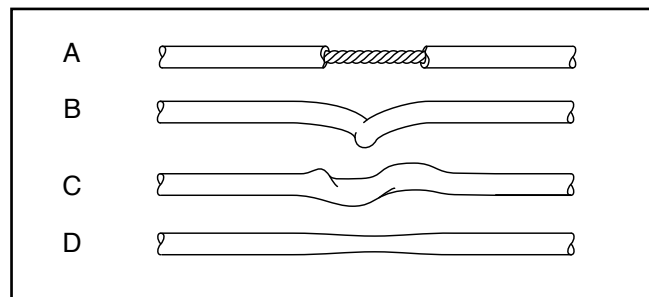


Cable Adjustment

To determine whether each cable is properly adjusted, slowly raise and lower the top weight by performing one repetition.

If the cable is loose, the top weight will not be lifted immediately when you begin the repetition.


If the cable is too tight, the top weight will not rest on the weight beneath it when you complete the repetition. It may also be difficult to insert the weight pin into the weights.

If the cable is too loose or too tight, loosen the jam nut on the end of the cable attached to the weight selector. Next, tighten the end of the cable into the weight selector until the top weight is lifted off the weight beneath it. Next, loosen the end of the cable until the top weight just rests on the weight beneath it. Then, tighten the jam nut against the weight selector.

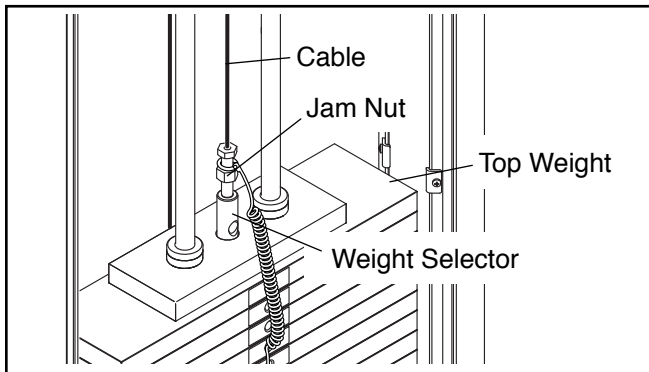

Cable Trap Inspection


Check the cable traps to ensure that they are not rubbing against the cables and that they are holding the cables in the grooves of the pulleys. If a cable trap is not correctly aligned, loosen the nut, readjust the cable trap as necessary, and retighten the nut.

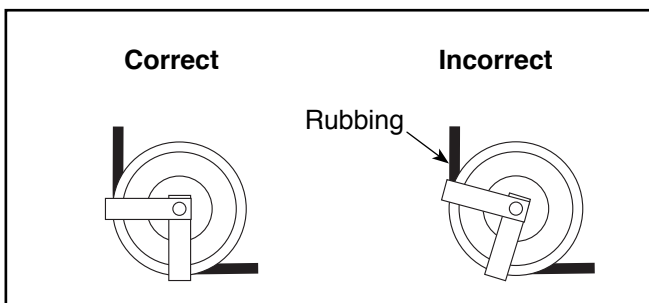

Belt Inspection

Run your fingers along the belt, paying close attention at the bends and attachment points. Watch for the following conditions, which may indicate a worn belt in need of replacement:

- A. peeling surface
- B. stretched areas, showing a thinning cross-section
- C. waves
- D. cracks or splits
- E. strands hanging out or significant fraying

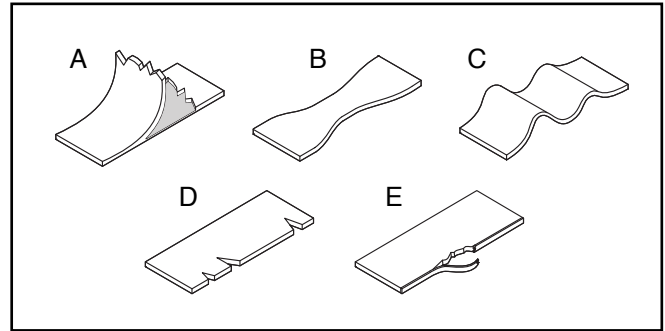

MONTHLY MAINTENANCE

Grips

Check the grips and replace them if needed.


Note: Your strength equipment may not have grips.

Weight Guide Lubrication

Clean and lubricate each weight guide by wiping it with a soft cloth containing 10W-40 or 10W-30 lightweight motor oil. Apply only a light coating over the entire length of the weight guide. **Do not use TEFLON®-based lubricants.**


BELT REPLACEMENT

If it becomes necessary to replace the belt, torque the indicated socket bolts to 40 ft-lbs. (54.2 N-m).

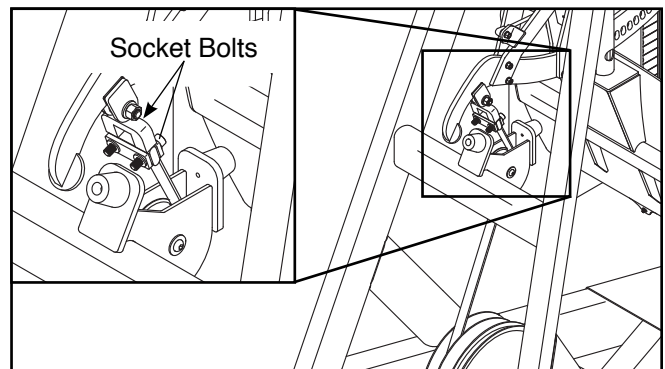

CABLE DIAGRAM

The diagram at the right shows the correct route of each cable. The numbers in each drawing show the correct route of that cable. Use the diagram to make sure that each cable is correctly routed. **If a cable is not correctly routed, the strength equipment will not function properly and damage may occur. If the strength equipment has one or more cable traps, make sure that no cable trap is touching or binding a cable.**

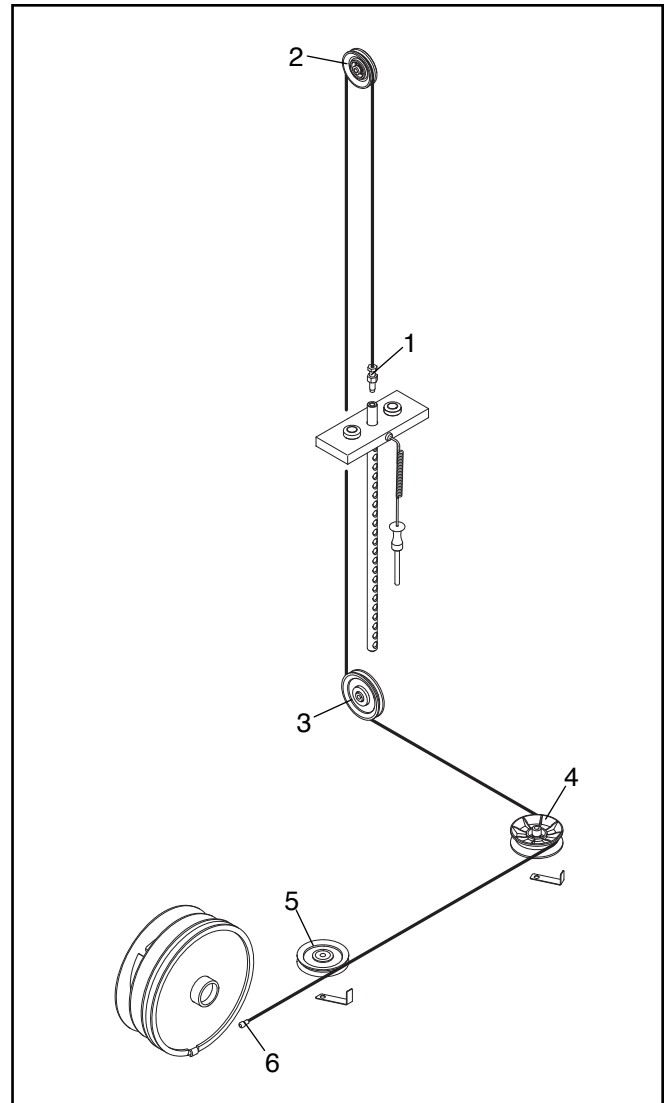

NOTES

PART LIST

Model No. F804.0 R1013A


Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Tower Frame	52	1	Seat
2	1	Tower Cap	53	1	Backrest Knob
3	1	Rear Shroud Base	54	2	Foot Bracket Bushing
4	1	Front Shroud Base	55	4	63mm Snap Ring
5	4	Outer Trim	56	1	Foot Bracket Joint Bearing
6	1	Pulley Bracket	57	1	Belt
7	2	Weight Guide	58	4	Large Bumper
8	22	Weight	59	1	Small Bumper
9	1	Small Weight	60	1	Gas Spring
10	1	Drop-down Weight	61	4	Large Bearing
11	1	Weight Selector	62	1	Selector Bracket
12	1	Weight Pin	63	1	Brace Tube
13	2	Lower Weight Bumper	64	1	Backrest Frame
14	2	Weight Guide Cap	65	1	Right Seat Handle
15	1	Large Roll Pin	66	1	Left Seat Handle
16	2	Upper Weight Bumper	67	1	Foot Bracket Adjustment Pin
17	4	Copper Bushing	68	1	Main Frame
18	2	Weight Guide Bushing	69	1	Indicator
19	2	M8 x 35mm Set Screw	70	1	Foot Bracket Axle
20	1	Drop-down Weight Knob	71	1	Backrest Adjustment Bracket
21	1	Small Spring	72	1	Counterweight
22	1	Drop-down Weight Pin	73	1	Right Brace
23	1	Small Pulley	74	1	Belt Pulley
24	2	Large Pulley	75	1	Wear Cover
25	5	Foot	76	2	Small Roll Pin
26	1	Latch Bracket	77	1	Pulley Bushing
27	2	M4 x 13mm Self-tapping Screw	78	1	Pulley Axle
28	16	M4 x 10mm Screw	79	2	Small Belt Clamp
29	3	M10 x 50mm Socket Bolt	80	1	Belt Pin
30	12	M10 x 30mm Socket Screw	81	1	Belt Clamp Joint Bearing
31	38	M10 Washer	82	1	M12 Hex Nut
32	8	M10 Locknut	83	3	Oval Cap
33	2	M6 x 20mm Screw	84	1	Large Belt Clamp
34	6	M6 Washer	85	1	Foot Plate Handle
35	4	M6 x 15mm Screw	86	2	17mm Snap Ring
36	4	Shroud	87	2	M10 x 75mm Socket Bolt
37	2	Inner Trim	88	2	M8 x 35mm Socket Bolt
38	1	Connecting Frame	89	2	M6 x 20mm Socket Bolt
39	6	25mm Snap Ring	90	1	M8 x 45mm Socket Bolt
40	1	Cable	91	4	M8 x 40mm Socket Bolt
41	2	Cable Trap	92	5	M6 x 30mm Socket Screw
42	1	V-pulley	93	1	M8 x 20mm Socket Screw
43	1	Anchor Strap	94	4	M8 x 30mm Socket Screw
44	1	Foot Plate	95	1	Foot Plate Axle
45	1	Cam	96	2	M10 x 45mm Socket Bolt
46	1	Shroud Panel	97	1	M10 x 70mm Socket Bolt
47	1	Left Brace	98	1	Backrest Axle
48	1	Large Spring	99	6	M10 x 20mm Socket Screw
49	2	Handle Collar	100	1	M12 x 45mm Socket Bolt
50	2	Handle Cap	101	4	M8 x 15mm Screw
51	2	Nylon Bushing	102	8	M10 x 35mm Socket Screw

Key No.	Qty.	Description	Key No.	Qty.	Description
103	2	M8 x 35mm Screw	116	20	M8 Washer
104	1	M6 x 65mm Bolt	117	10	M6 Small Washer
105	1	Backrest Adjustment Pin	118	1	Belt Bracket
106	1	Foot Pedal	119	1	M12 Locknut
107	8	M4 x 3mm Set Screw	120	1	Cam Axle
108	1	Handle Spacer	121	9	M8 Locknut
109	1	Backrest	122	3	M6 Locknut
110	2	Handgrip	123	4	Plastic Washer
111	6	M6 x 15mm Screw	124	1	Foot Pedal Plate
112	2	M12 Washer	125	1	Top Weight
113	1	Backrest Frame Bumper	126	1	Shroud Bracket
114	1	Backrest Cover	127	1	Medium Spring
115	4	M8 Large Washer	*	—	Owner's Manual

Note: Specifications are subject to change without notice. For information about ordering replacement parts, see the back cover of this manual. *These parts are not illustrated.


EXPLODED DRAWING A

Model No. F804.0 R1013A

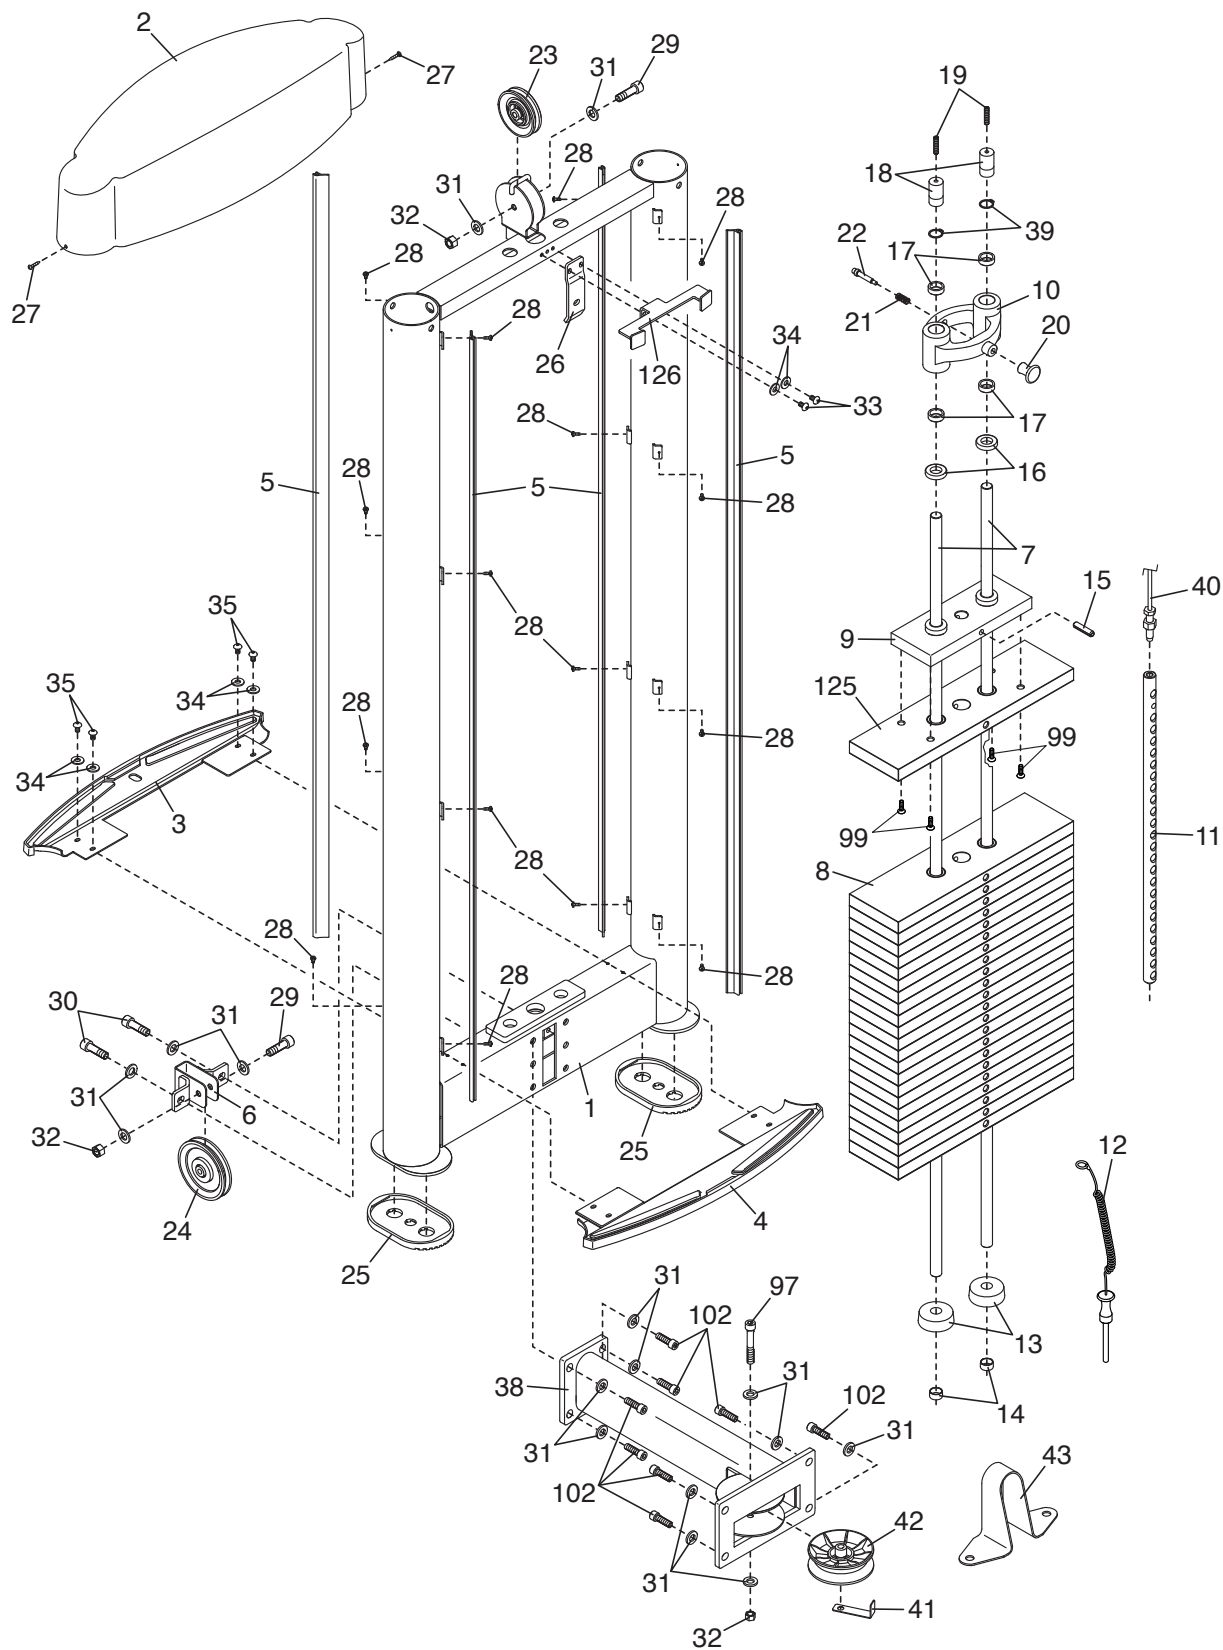


EXPLODED DRAWING B

Model No. F804.0 R1013A

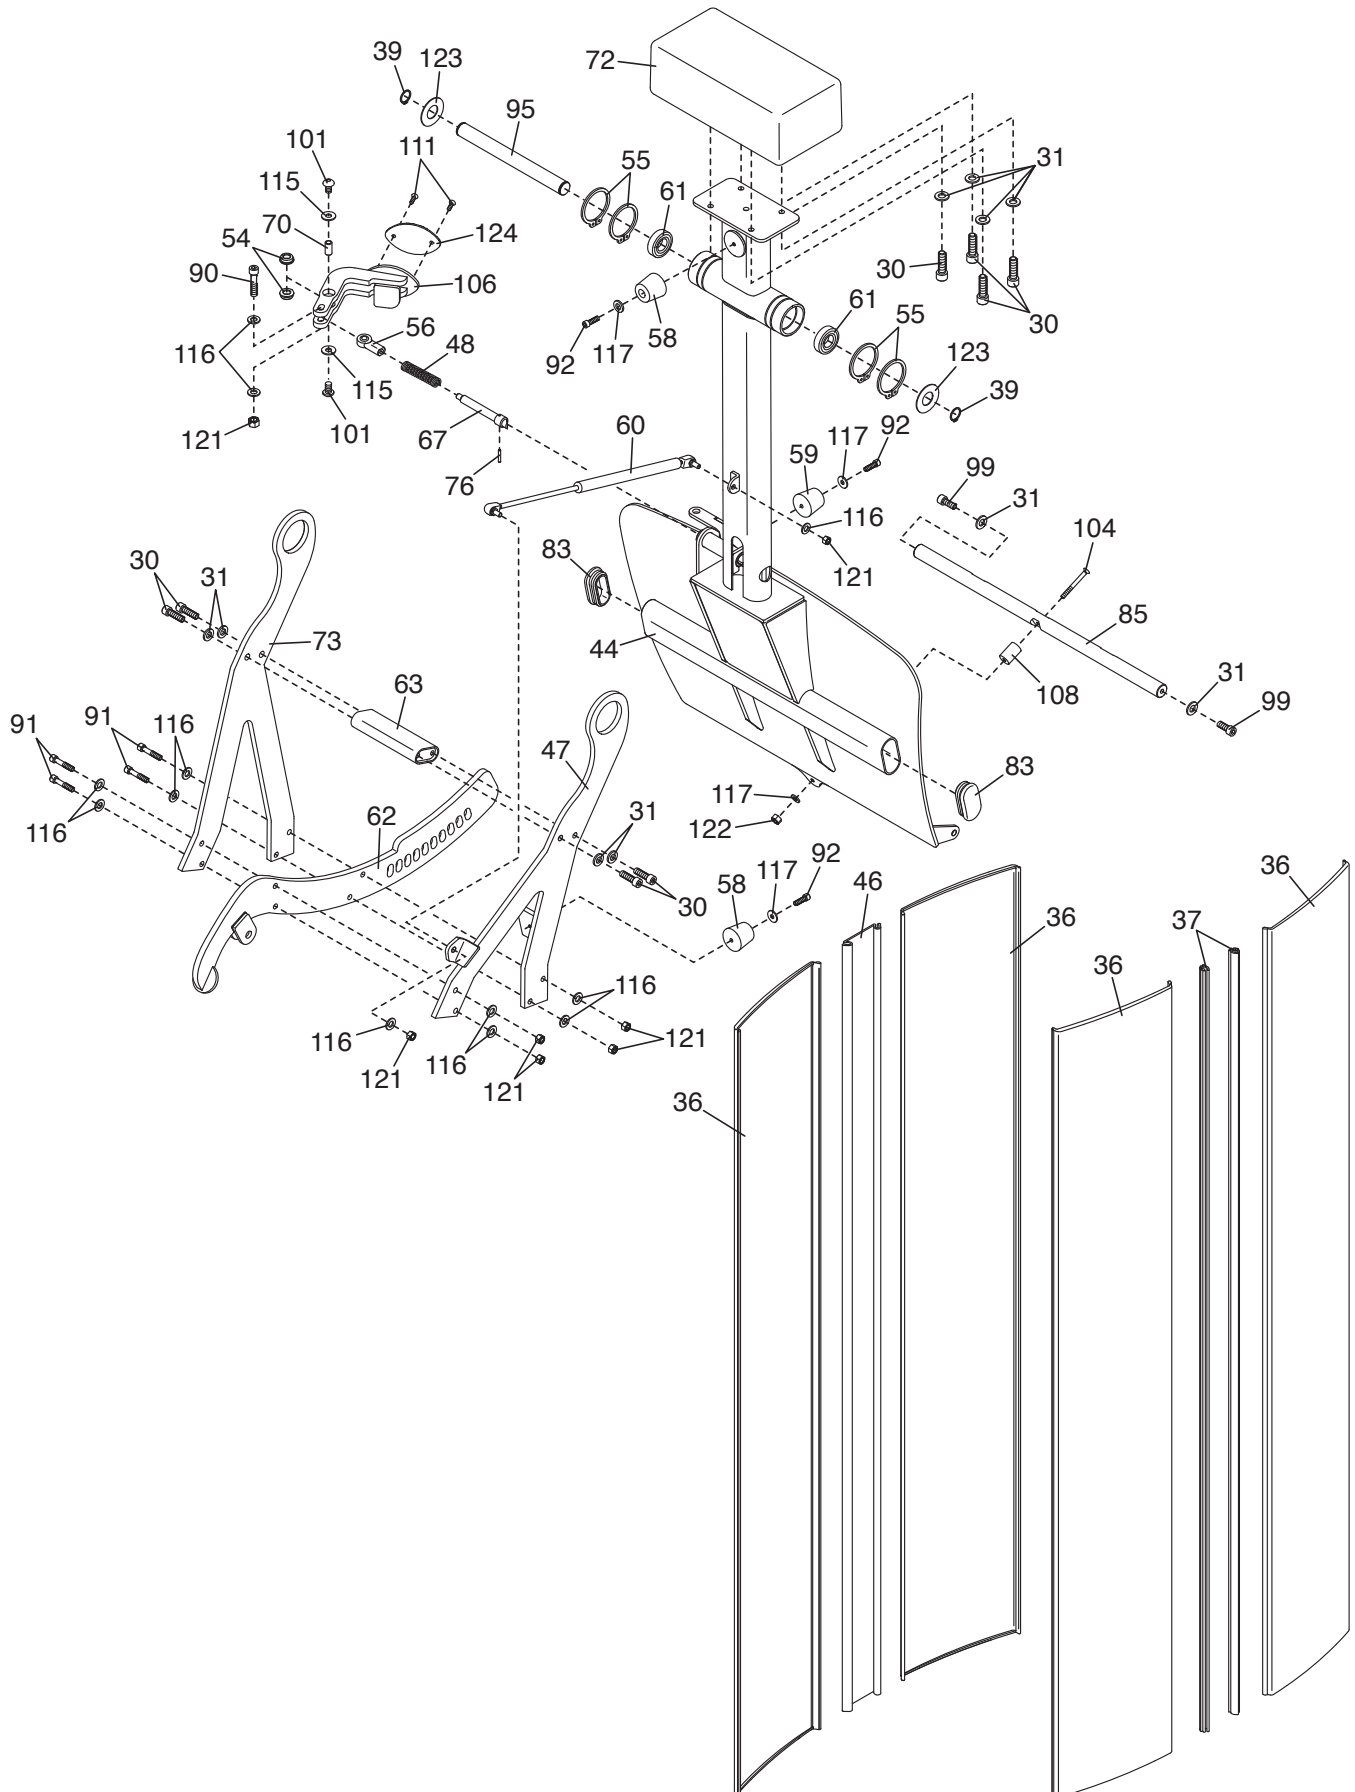

EXPLODED DRAWING C

Model No. F804.0 R1013A

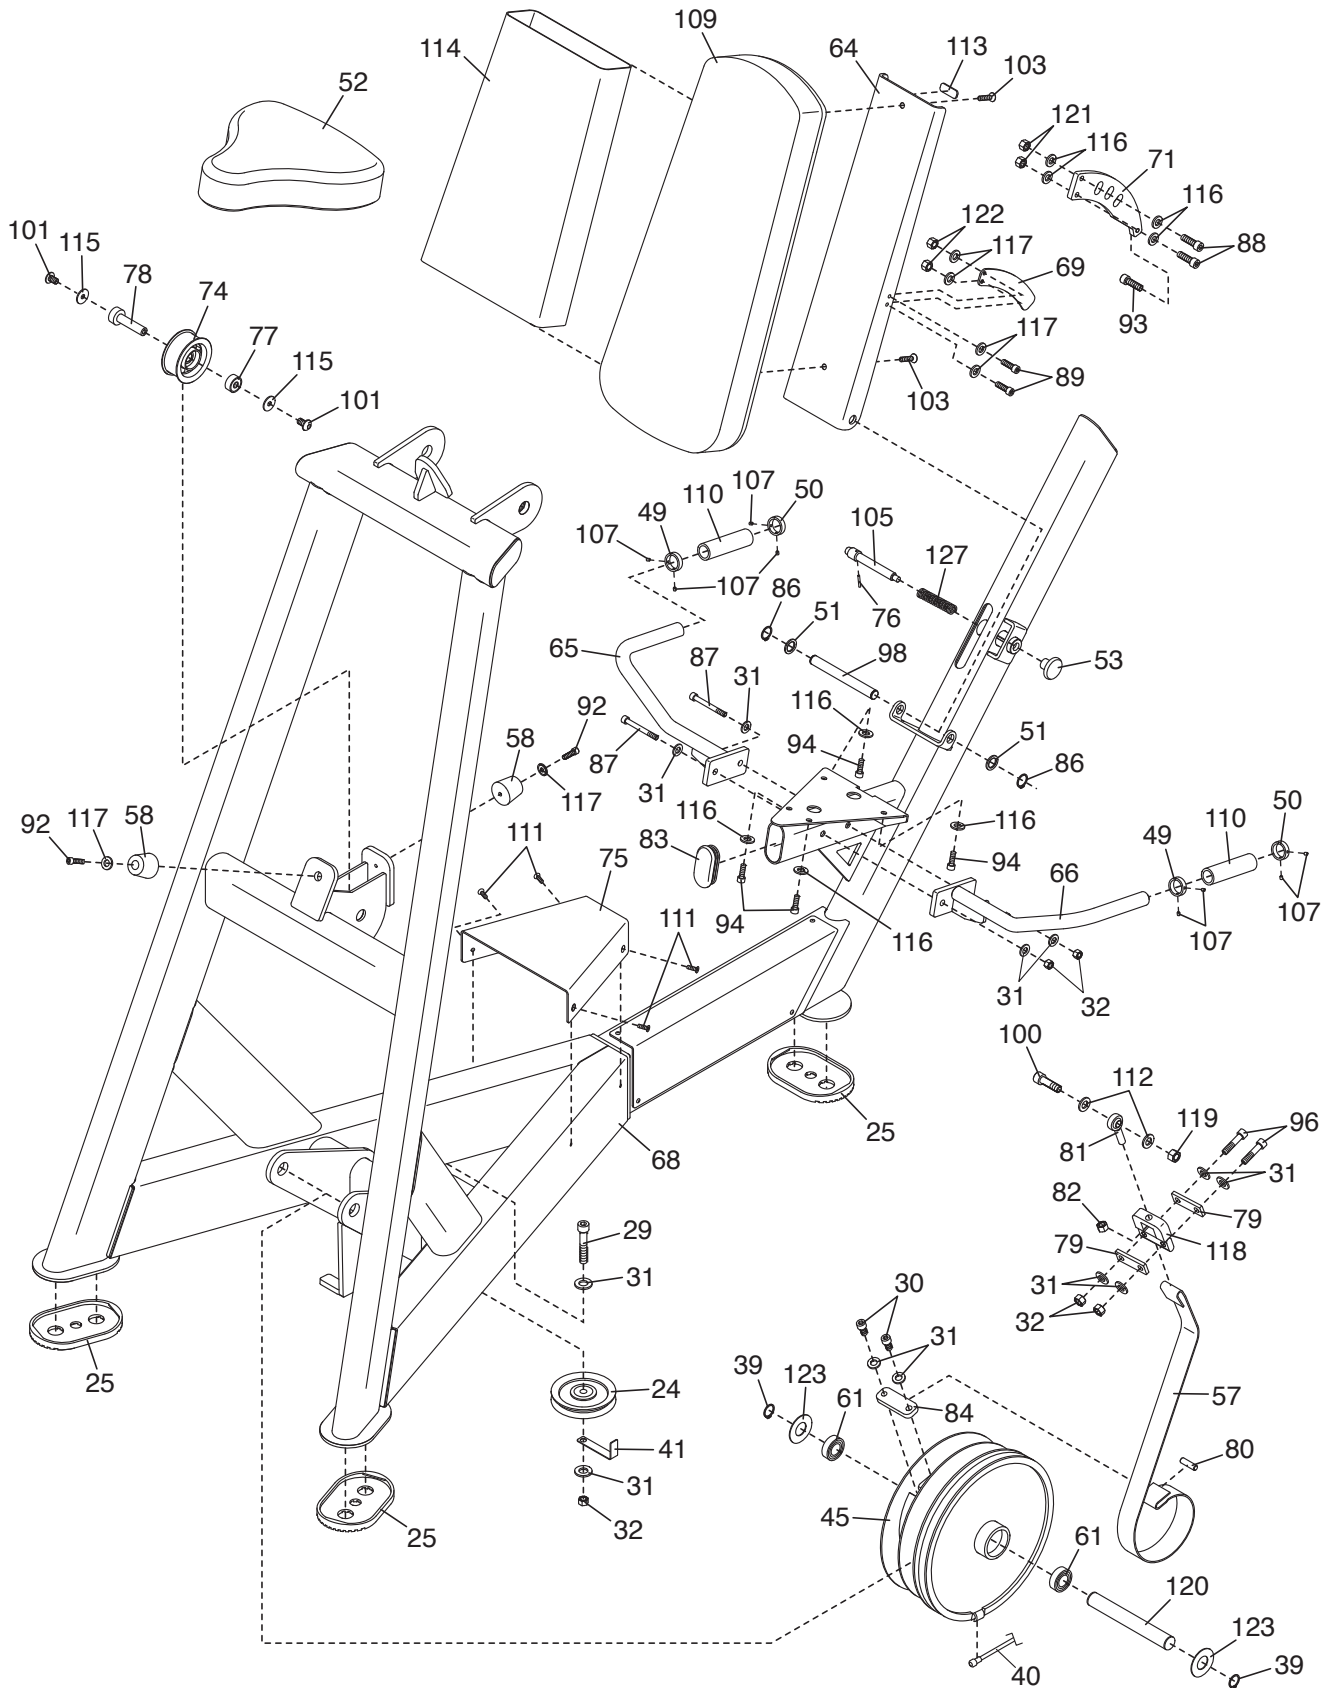

HOW TO CONTACT CUSTOMER CARE

If you have questions after reading this manual, or if parts are damaged or missing, please contact Customer Care at one of the phone numbers or addresses listed below. **Please note the model number, serial number, and name of the product (see the front cover of this manual) before contacting Customer Care. If you are ordering replacement parts, please also note the key number and description of each part (see the PART LIST and the EXPLODED DRAWING near the end of this manual).**

In the United States

Call: 1-800-201-2109, Mon.–Fri. 7 a.m.–6 p.m. MT

Email: customercare@freemotionfitness.com

Write:

FreeMotion Fitness
1500 South 1000 West
Logan, UT 84321-9813
United States

Outside the United States

Call: 001-800-527-5417 or 001-435-786-3521,

Mon.–Fri. 6 a.m.–6 p.m. USA Mountain Time

Email: intlcustomercare@freemotionfitness.com

LIMITED WARRANTY

WARRANTY PERIODS AND COVERAGE

FreeMotion Fitness warrants this product to be free from defects in workmanship and material under normal use and service conditions. Parts and labor are warranted for one (1) year, unless otherwise specified on the invoice.

The warranty period commences on the invoice date of purchase. Any parts repaired or replaced during this warranty period will be warranted for the remainder of the original warranty period.

CONDITIONS AND LIMITATIONS

The following will void the warranty on this product:

1. This warranty applies only to the original owner and is non-transferable.
2. The labor warranty applies only to products sold in the US and Canada. Contact your authorized FreeMotion Fitness dealer for details on labor coverage in your country.
3. Any misuse, abuse, or improper service.
4. Users in excess of the maximum user weight listed in this manual. Note: This product may not have a maximum user weight.
5. Damage caused by moving the product or improper storage including moving or storing the product on its side.
6. Use or storage of the product outdoors or in high-humidity environments including spa and pool areas.
7. Damage caused by improper wiring or insufficient electrical current. Note: This product may not have wiring.

This warranty shall not apply to the following:

1. Cosmetic items including grips, decals, and labels.

2. Pick-up and delivery or freight charges involved with a repair.
3. Any problem as a result of improper assembly or delivery.

WHAT TO DO IF SERVICE IS REQUIRED

FreeMotion Fitness warranty service may be obtained by contacting the authorized dealer from which you purchased this product. Make sure to retain your original invoice and serial number information. If this product experiences a failure under the warranty terms set forth, FreeMotion Fitness shall provide at their option either repair, replacement, or refund of the purchase price. FreeMotion Fitness compensates service providers for warranty trips within their service area. You may be charged additionally for service calls beyond this service area.

FreeMotion Fitness is not responsible or liable for indirect, special, or consequential damages arising out of or in connection with the use or performance of the product; damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, or cost of removal or installation; or other consequential damages. Some regions do not allow the exclusion or limitation of consequential damages. Accordingly, the above limitation may not apply to you. This warranty gives you specific rights, and you may have other rights that vary from region to region.

TO CONTACT FREEMOTION FITNESS

See HOW TO CONTACT CUSTOMER CARE above.