

FORGE

Model No. FDSS13040

Serial No. _____

Locate the serial number decal on the inside of one of the cabinet doors. Write the serial number in the space above for reference.

QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if there are missing or damaged parts, we will guarantee complete satisfaction through direct assistance from our factory.


TO AVOID DELAYS, PLEASE CALL DIRECT TO OUR TOLL-FREE CUSTOMER HOT LINE. The trained technicians on our customer hot line will provide immediate assistance, free of charge.

CUSTOMER HOT LINE:

1-877-660-1666

Mon.–Fri., 6 a.m.–6 p.m. MST

USER'S MANUAL

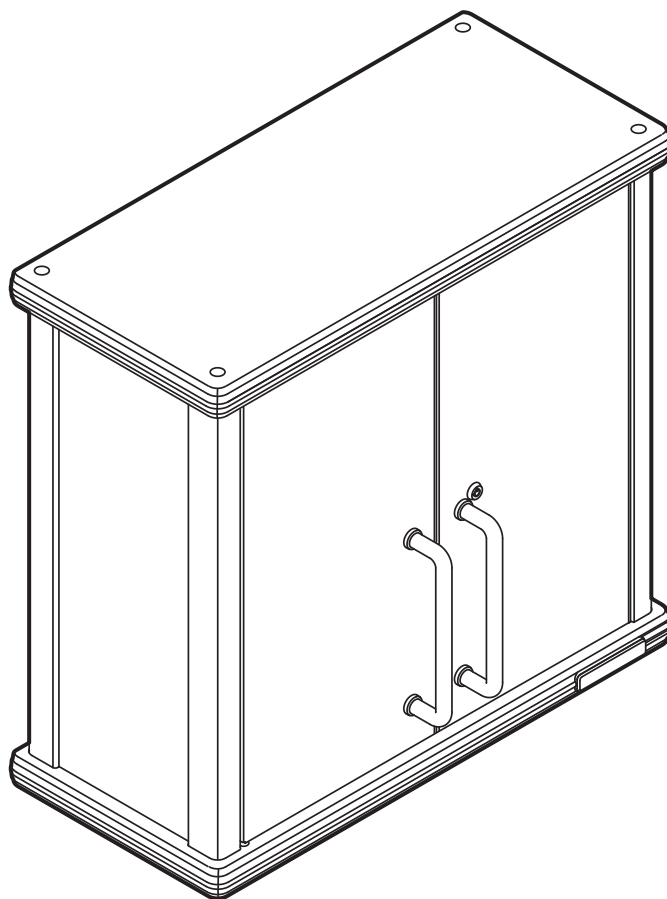

CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS	2
BEFORE YOU BEGIN	3
ASSEMBLY	3
PART IDENTIFICATION CHART	6
PART LIST	6
EXPLODED DRAWING	7
ORDERING REPLACEMENT PARTS	Back Cover
LIMITED WARRANTY	Back Cover

IMPORTANT PRECAUTIONS

⚠ WARNING: To reduce the risk of serious injury, read the following important precautions before using the wall cabinet.

- | | |
|--|---|
| 1. Read all instructions in this manual before using the wall cabinet. | 4. Regularly inspect and tighten all parts of the wall cabinet. |
| 2. Use the wall cabinet only as described in this manual. | 5. The wall cabinet is designed to support a maximum weight of 100 pounds. The shelf is designed to support a maximum of 50 pounds. |
| 3. It is the responsibility of the owner to make sure that all users of the wall cabinet are adequately informed of all precautions. | 6. Load the wall cabinet with the heaviest objects at the bottom. Remove heavy objects from the shelf before unloading the bottom. |

⚠ WARNING: Read all instructions before using the wall cabinet. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

BEFORE YOU BEGIN

Thank you for selecting the versatile FORGE wall cabinet. The FORGE wall cabinet offers a selection of features designed to organize and enhance your workspace.

For your benefit, read this manual carefully before using the wall cabinet. If you have questions after reading this manual, please call our Customer Service

Department toll-free at 1-877-660-1666, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please mention the product model number and serial number when calling. The model number is FDSS13040. The serial number can be found on a decal attached to the wall cabinet (see the front cover of this manual for the location of the decal).

ASSEMBLY


Assembly requires two persons. Place all parts of the wall cabinet in a cleared area and remove the packing materials. Do not dispose of the packing materials until assembly is completed.

Assembly requires the included hex keys and a Phillips screwdriver .


1. **For easy part identification, see the PART IDENTIFICATION CHART on page 6.**

Identify the Front Left Post (6) and the Front Right Post (7); each of these Posts has a lip on one side and is labeled with a sticker.

Orient the Cabinet Base (1) with the door stop to the front as shown. Attach the Front Left Post (6) to the Cabinet Base with a 5/16" x 2 1/4" Button Head Bolt (19) and a Spacer Insert (17). **Attach the Front Right Post (7) and the two Rear Posts (5) to the Cabinet Base in the same manner.**

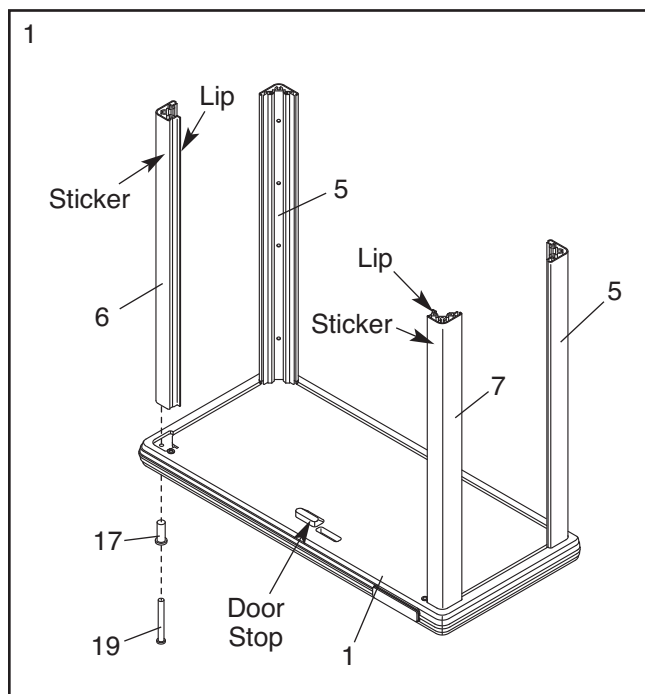


2. Insert a Shelf Bracket (16) into the indicated slot in the Front Left Post (6). Secure the Shelf Bracket at the desired height with a 1/4" x 1 1/2" Cap Screw (23). Insert the remaining Shelf Brackets into the Front Right Post (7) and the two Rear Posts (5). Secure each Shelf Bracket with a 1/4" x 1 1/2" Cap Screw. **Make sure all four Shelf Brackets are at the same height.**

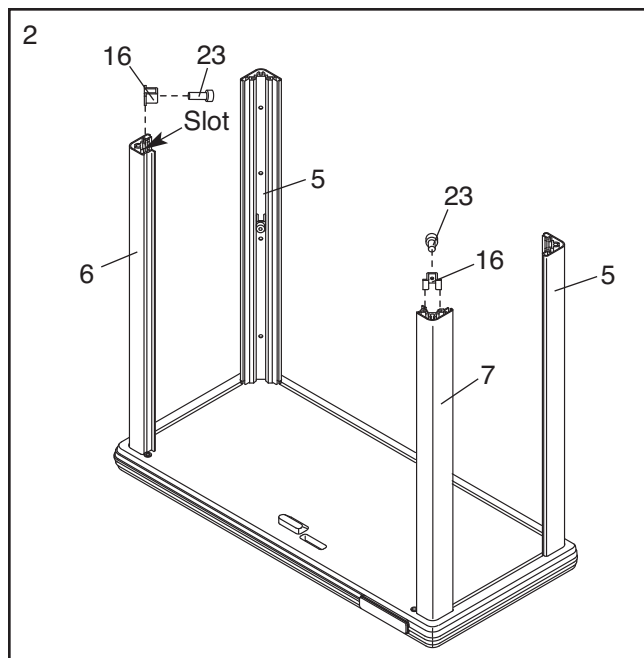


3. Set the Shelf (10) on the four Shelf Brackets (16).

Slide a Side Panel (4) into the indicated slots in the Front Left Post (6) and the left Rear Post (5). **Make sure the Side Panel is in the indicated slot in the Cabinet Base (1). Repeat with the other Side Panel and the Rear Panel (3).**

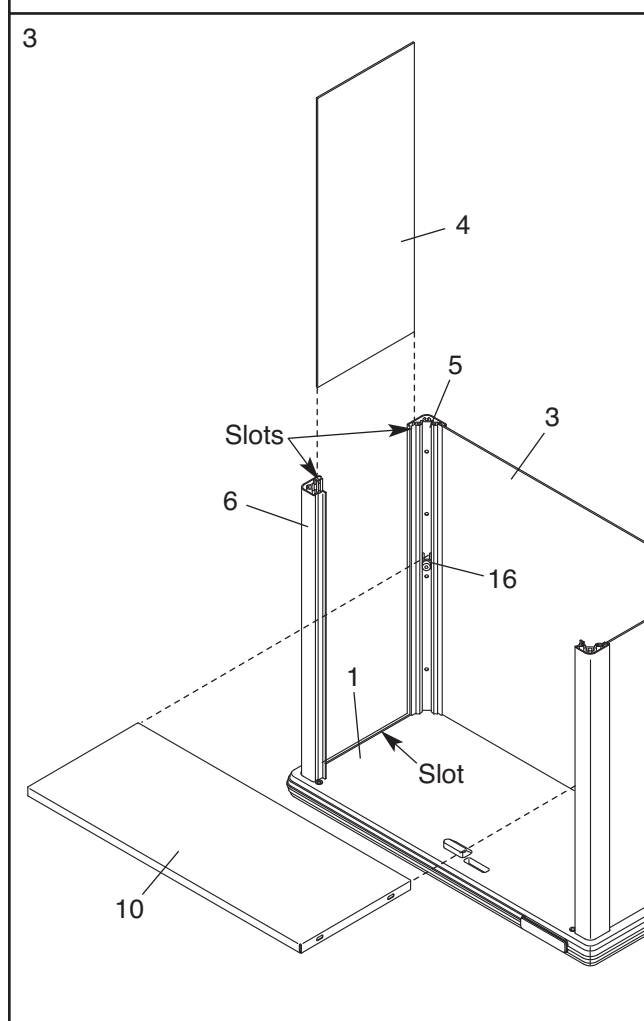


4. See the inset drawing. Attach a Handle (11) to the Left Cabinet Door (8) with two 1/4" x 5/8" Button Head Screws (20), two 1/4" Washers (24), and two Handle Trims (18) as shown. Attach a Handle to the Right Cabinet Door (9) in the same manner.

Insert the Left Cabinet Door (8) into the left hinge rod hole in the Cabinet Base (1). Insert the Right Cabinet Door (9) into the right hinge rod hole in the Cabinet Base (not shown). Have a second person hold both Cabinet Doors in place.

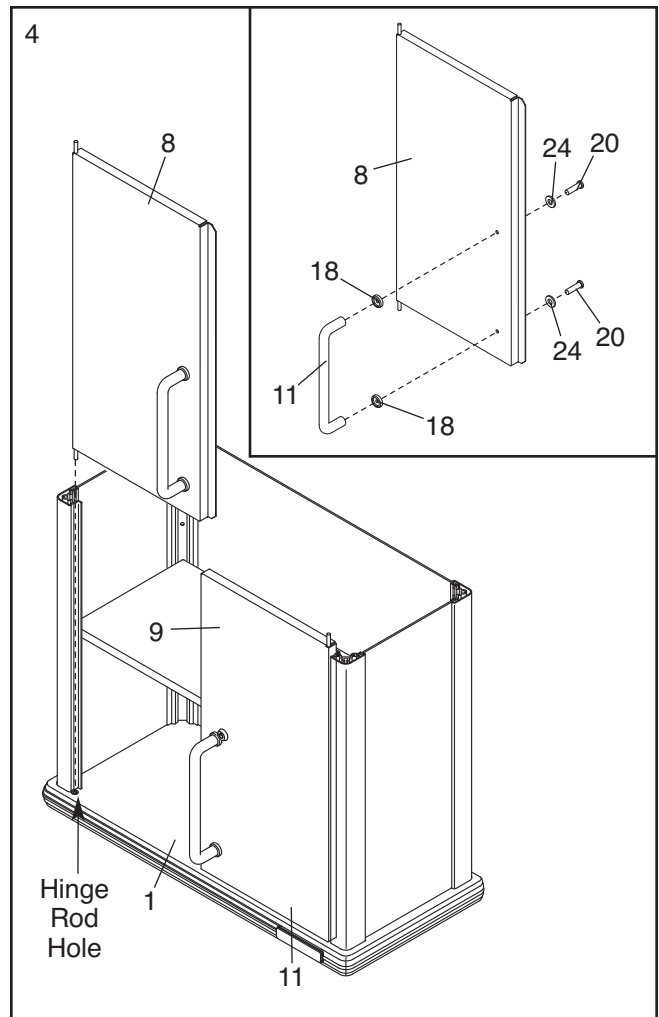


5. Attach the Cabinet Top (2) to the four Posts (5, 6, and 7) with four 5/16" x 2 1/4" Button Head Bolts (19) and four Spacer Inserts (17).

Instructions for mounting the wall cabinet are found on the included template. The remaining hardware and parts will be used during the mounting procedure.

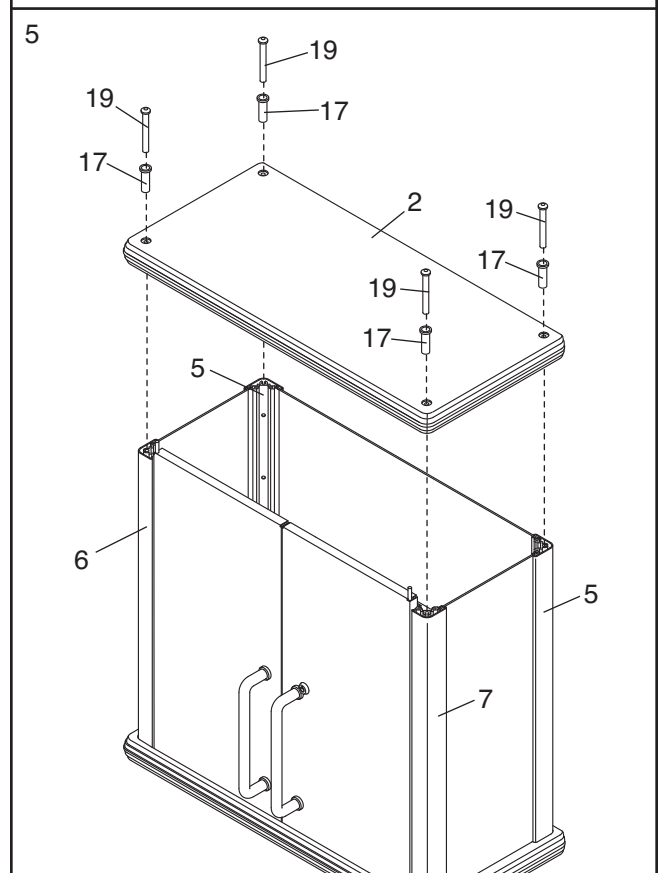

PART IDENTIFICATION CHART—Model No. FDSS13040

R1103A

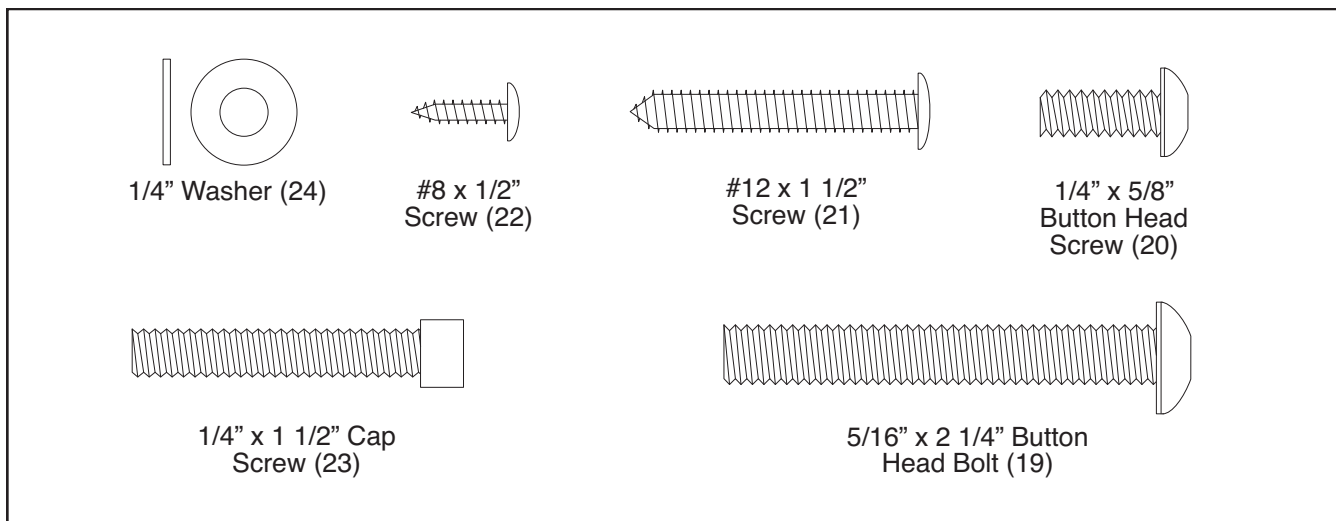

PART LIST—Model No. FDSS13040


R01103A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	1	Cabinet Base	16	4	Shelf Bracket
2	1	Cabinet Top	17	8	Spacer Insert
3	1	Rear Panel	18	4	Handle Trim
4	2	Side Panel	19	8	5/16" x 2 1/4" Button Head Bolt
5	2	Rear Post	20	4	1/4" x 5/8" Button Head Screw
6	1	Front Left Post	21	4	#12 x 1 1/2" Screw
7	1	Front Right Post	22	2	#8 x 1/2" Screw
8	1	Left Cabinet Door	23	4	1/4" x 1 1/2" Cap Screw
9	1	Right Cabinet Door	24	4	1/4" Washer
10	1	Shelf	25	4	Pushnut
11	2	Handle	26	4	Nylon Bushing
12	2	Hinge Rod	#	1	User's Manual
13	1	Cabinet Cam	#	1	Mounting Template
14	1	Lock Assembly	#	1	5/32" Hex Key
15	2	Mounting Bracket	#	1	3/16"–5/32" Hex Key

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice. See the back cover of this manual for information about ordering replacement parts.

EXPLODED DRAWING—Model No. FDSS13040

R1103A

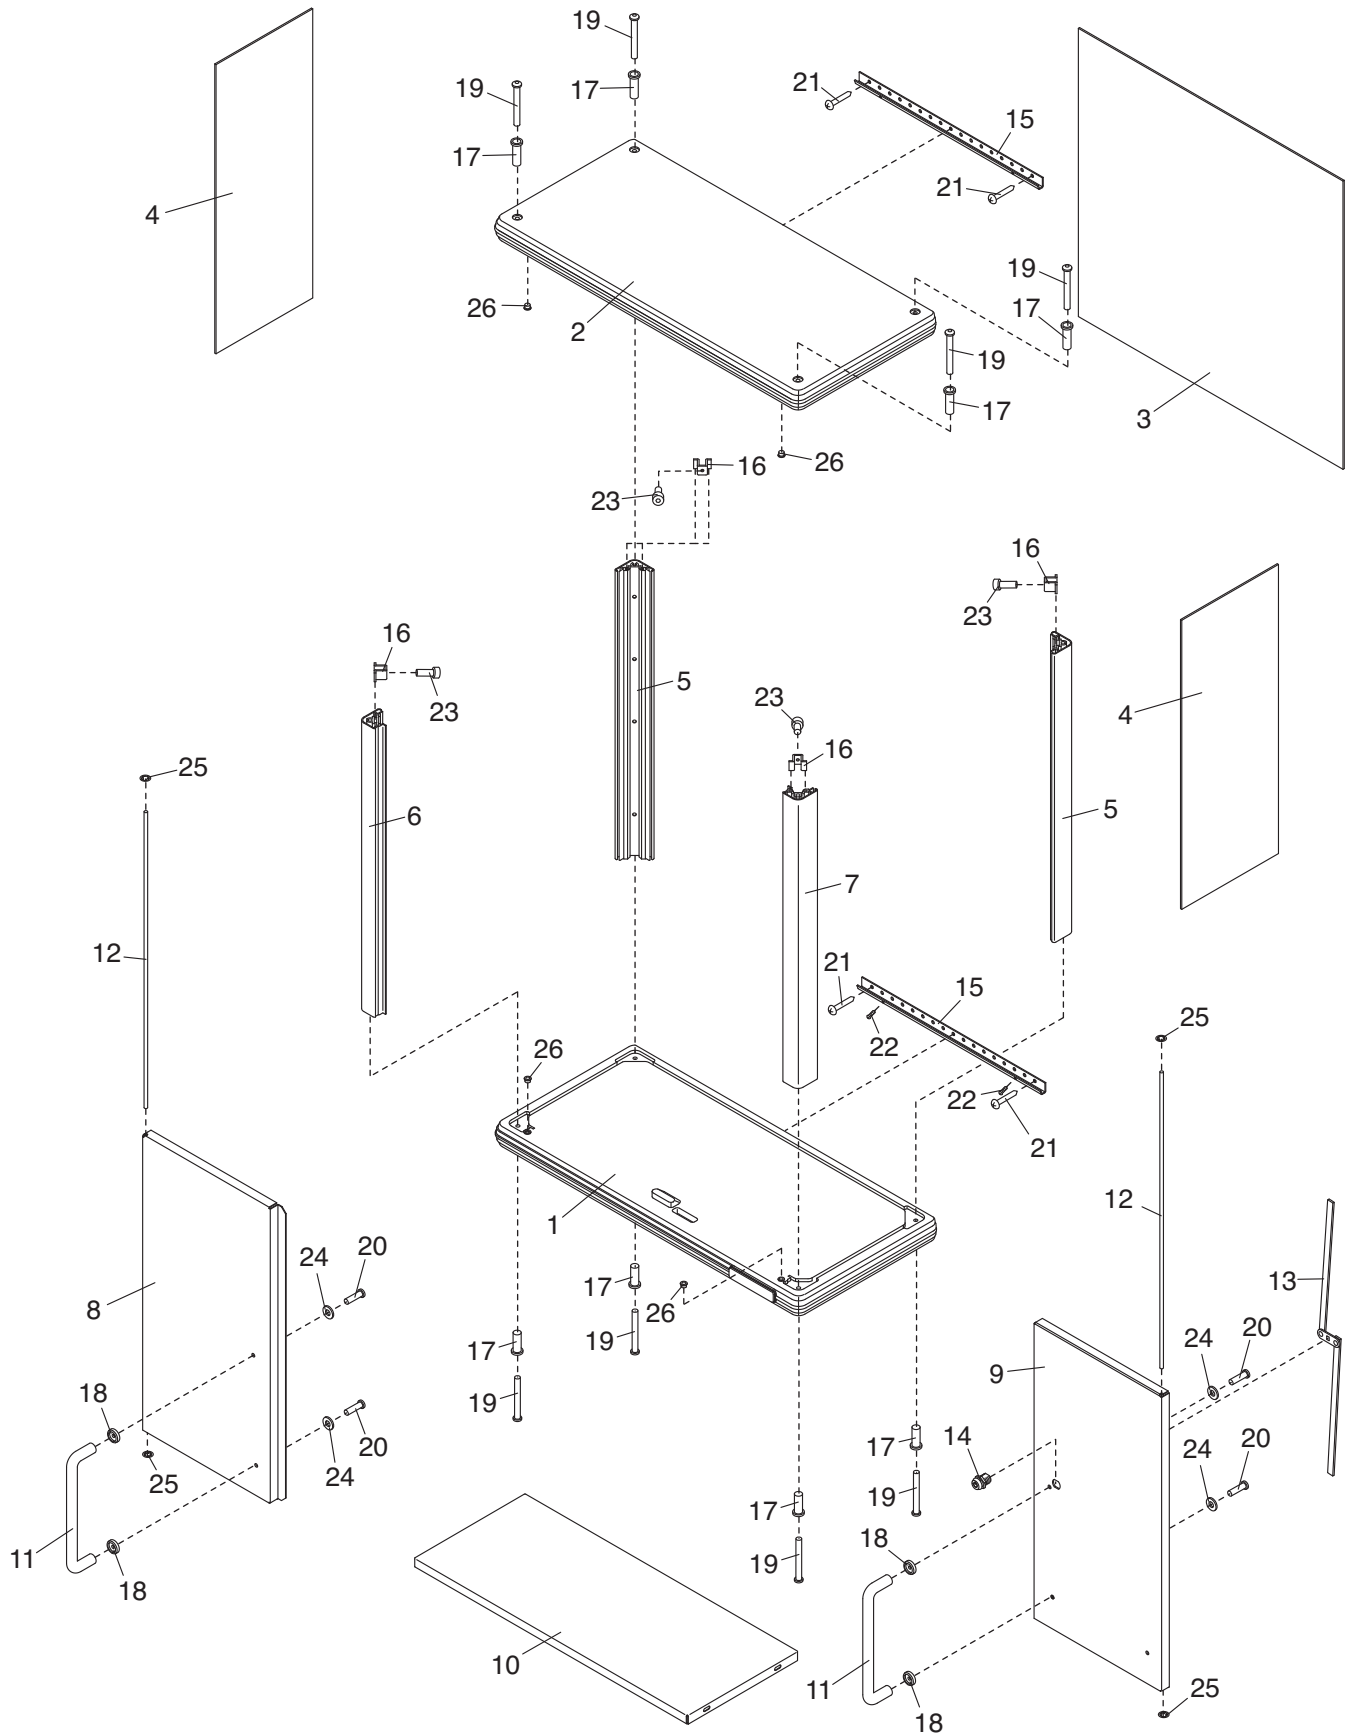

ORDERING REPLACEMENT PARTS

To order replacement parts, call our Customer Service Department toll-free at 1-877-660-1666, Monday through Friday, 6 a.m. until 6 p.m. MST (excluding holidays). Please be prepared to give the following information:

- The MODEL NUMBER of the product (FDSS13040)
- The NAME of the product (FORGE wall cabinet)
- The SERIAL NUMBER of the product (see the front cover of this manual)
- The KEY NUMBER and DESCRIPTION of each part (see the PART LIST and EXPLODED DRAWING on pages 6 and 7)

LIMITED WARRANTY

ICON Health & Fitness, Inc. (ICON), warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to replacing or repairing, at ICON's option, the product through one of its authorized service centers. All repairs for which warranty claims are made must be pre-authorized by ICON. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an ICON authorized service center; products used for commercial or rental purposes; or products used as store display models. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal or installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

ICON HEALTH & FITNESS, INC., 1500 S. 1000 W., LOGAN, UT 84321-9813