

Model No. WEMC06740

Serial No. _____

Write the serial number in the space above for future reference.

QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or if there are missing or damaged parts, we will guarantee complete satisfaction through direct assistance from our factory.

TO AVOID DELAYS, PLEASE CALL DIRECT TO OUR TOLL-FREE CUSTOMER HOT LINE. The trained technicians on our customer hot line will provide immediate assistance, free of charge.

CUSTOMER HOT LINE:

1-877-992-5999

Mon.–Fri., 6 a.m.–6 p.m. MST

⚠ CAUTION

Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

WEIDER® **POWERPAK**

USER'S MANUAL



Visit our website at

www.weiderfitness.com

new products, prizes,
fitness tips, and much more!

⚠ WARNING: To reduce the risk of serious injury, read the following important precautions before using the resistance system.

1. Read all instructions in this manual and in the literature accompanying the resistance system before using the resistance system. Use the resistance system only as described in the literature.
2. It is the responsibility of the owner to ensure that all users of the resistance system are adequately informed of all precautions.
3. Keep hands and feet away from moving parts.
4. Use only the resistance included with a POWER PAK. Do not use other types of weight with the resistance system.
5. Make sure that all parts are properly tightened each time the resistance system is used. Replace any worn parts immediately.
6. If you feel pain or dizziness at any time while exercising, stop immediately and begin cooling down.

BEFORE YOU BEGIN


Thank you for selecting the WEIDER® resistance system POWER PAK. The POWER PAK is designed to increase the amount of resistance available on the PLATINUM PLUS BY WEIDER resistance system.

For your benefit, read this manual carefully before using the POWER PAK and the resistance system. If you have questions after reading this manual, please

call our Customer Service Department toll-free at 1-877-992-5999, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please note the product model number and serial number before calling. The model number is WEMC06740. The serial number can be found on the product packaging. Record the serial number on the front cover of this manual.


ASSEMBLY

1. Remove the Side Mech Cover (A) from the Mech Covers (B, C).

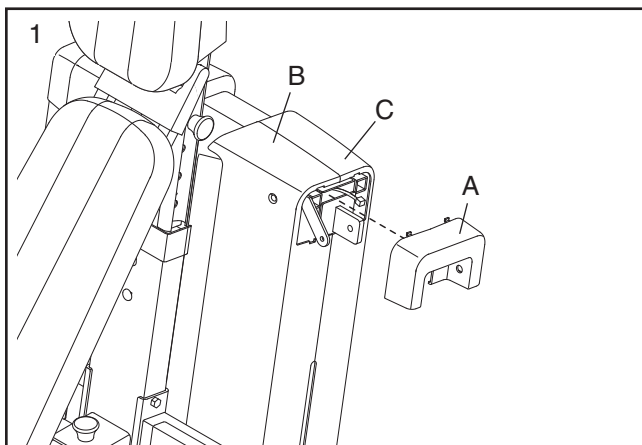


2. **See drawing A.** Remove the Cover Plate (D) from the Side Mech Cover (A).

See drawing B. Snap the Sensor Plate (11) into the Side Mech Cover (A).

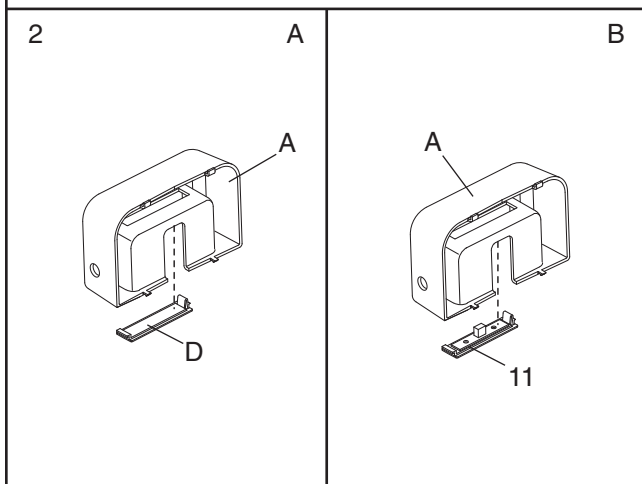

3. Locate the Sensor Wire (E) (see the inset drawing). Connect the Sensor Wire to the Sensor Plate (11).
4. Replace the Side Mech Cover (A) onto the Mech Covers (B, C) (see drawing 1).
5. **Make sure that all parts are properly secured. The use of the remaining parts will be explained in the ADJUSTMENT section.**

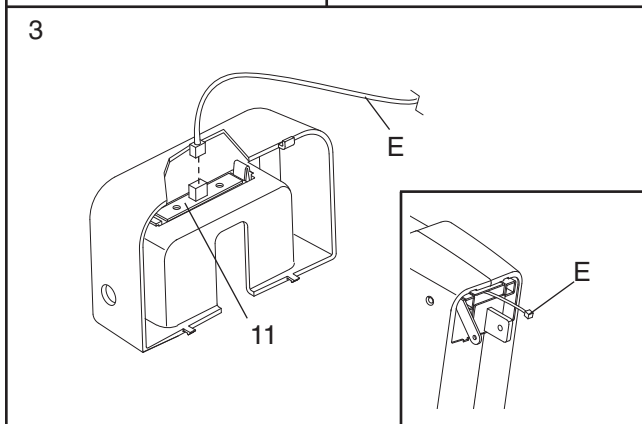


ADJUSTMENT

ATTACHING THE POWER PAK

Set the Threaded Spacer (8) onto the Power Pack Frame (D). Insert the Pin (10) through the Side Mech Cover (A), the Top Endcaps (3, 4), and the Mech Frame (E).

Attaching the POWER PAK to your resistance system will increase your minimum and maximum resistance levels. The resistance system can be used at a lower resistance level again by removing the POWER PAK.

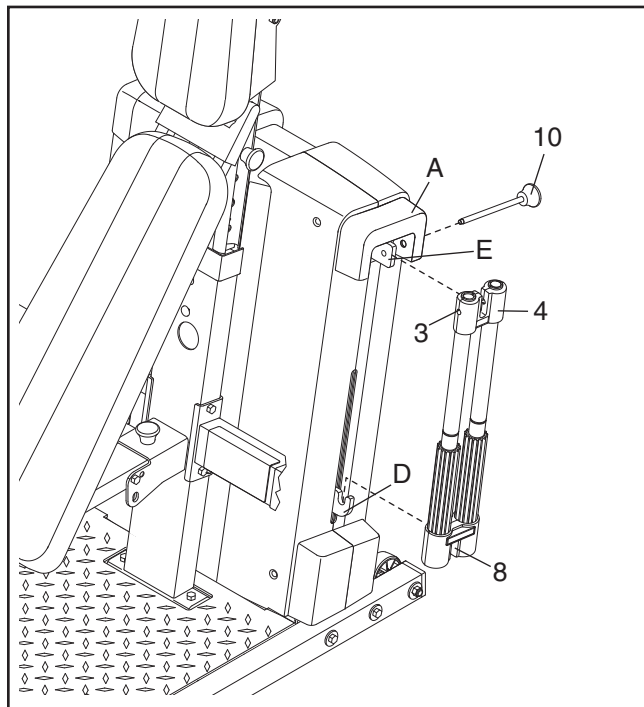


PART LIST/EXPLODED DRAWING—Model No. WEMC06740

R1204A

Key No.	Qty.	Description
1	2	Gas Spring
2	2	Shank
3	1	Rear Top Endcap
4	1	Front Top Endcap
5	1	Front Bottom Endcap
6	1	Rear Bottom Endcap
7	4	Gas Spring End
8	1	Threaded Spacer
9	2	Button Bolt
10	1	Pin
11	1	Sensor Plate
#	1	User's Manual

Note: “#” indicates a non-illustrated part.
Specifications are subject to change without notice.

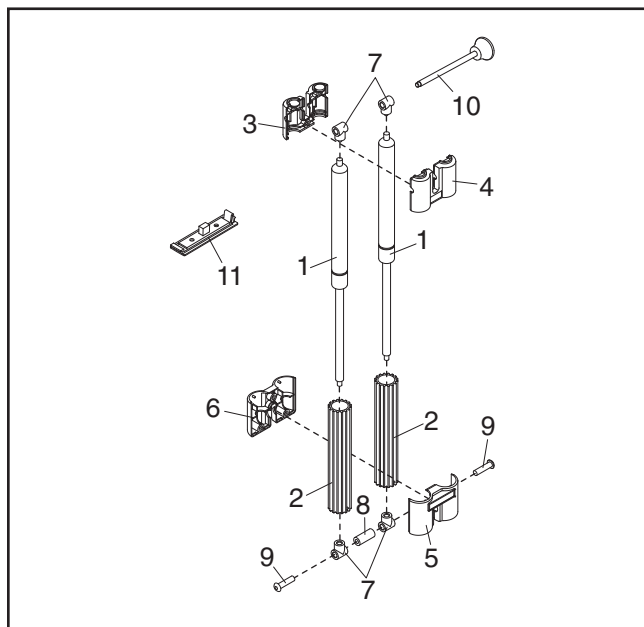

ORDERING REPLACEMENT PARTS

To order replacement parts, simply call our Customer Service Department toll-free at 1-877-992-5999, Monday through Friday, 6 a.m. until 6 p.m. Mountain Time (excluding holidays). To help us assist you, please be prepared to give the following information:

- The MODEL NUMBER of the product (WEMC06740)
- The NAME of the product (WEIDER resistance system POWER PAK)
- The SERIAL NUMBER of the product (see the front cover of this manual)
- The KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST/EXPLODED DRAWING)

LIMITED WARRANTY

ICON Health & Fitness, Inc. (ICON), warrants this product to be free from defects in workmanship and material, under normal use and service conditions, for a period of ninety (90) days from the date of purchase. This warranty extends only to the original purchaser. ICON's obligation under this warranty is limited to replacing or repairing, at ICON's option, the product through one of its authorized service centers. All repairs for which warranty claims are made must be pre-authorized by ICON. This warranty does not extend to any product or damage to a product caused by or attributable to freight damage, abuse, misuse, improper or abnormal usage or repairs not provided by an ICON authorized service center; products used for commercial or rental purposes; or products used as store display models. No other warranty beyond that specifically set forth above is authorized by ICON.

ICON is not responsible or liable for indirect, special or consequential damages arising out of or in connection with the use or performance of the product or damages with respect to any economic loss, loss of property, loss of revenues or profits, loss of enjoyment or use, costs of removal or installation or other consequential damages of whatsoever nature. Some states do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, the above limitation may not apply to you.

The warranty extended hereunder is in lieu of any and all other warranties and any implied warranties of merchantability or fitness for a particular purpose is limited in its scope and duration to the terms set forth herein. Some states do not allow limitations on how long an implied warranty lasts. Accordingly, the above limitation may not apply to you.

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

ICON HEALTH & FITNESS, INC., 1500 S. 1000 W., LOGAN, UT 84321-9813

WEIDER is a registered trademark of ICON IP, Inc.