


MODULAR LAT PULLDOWN

5601

ASSEMBLY & PARTS

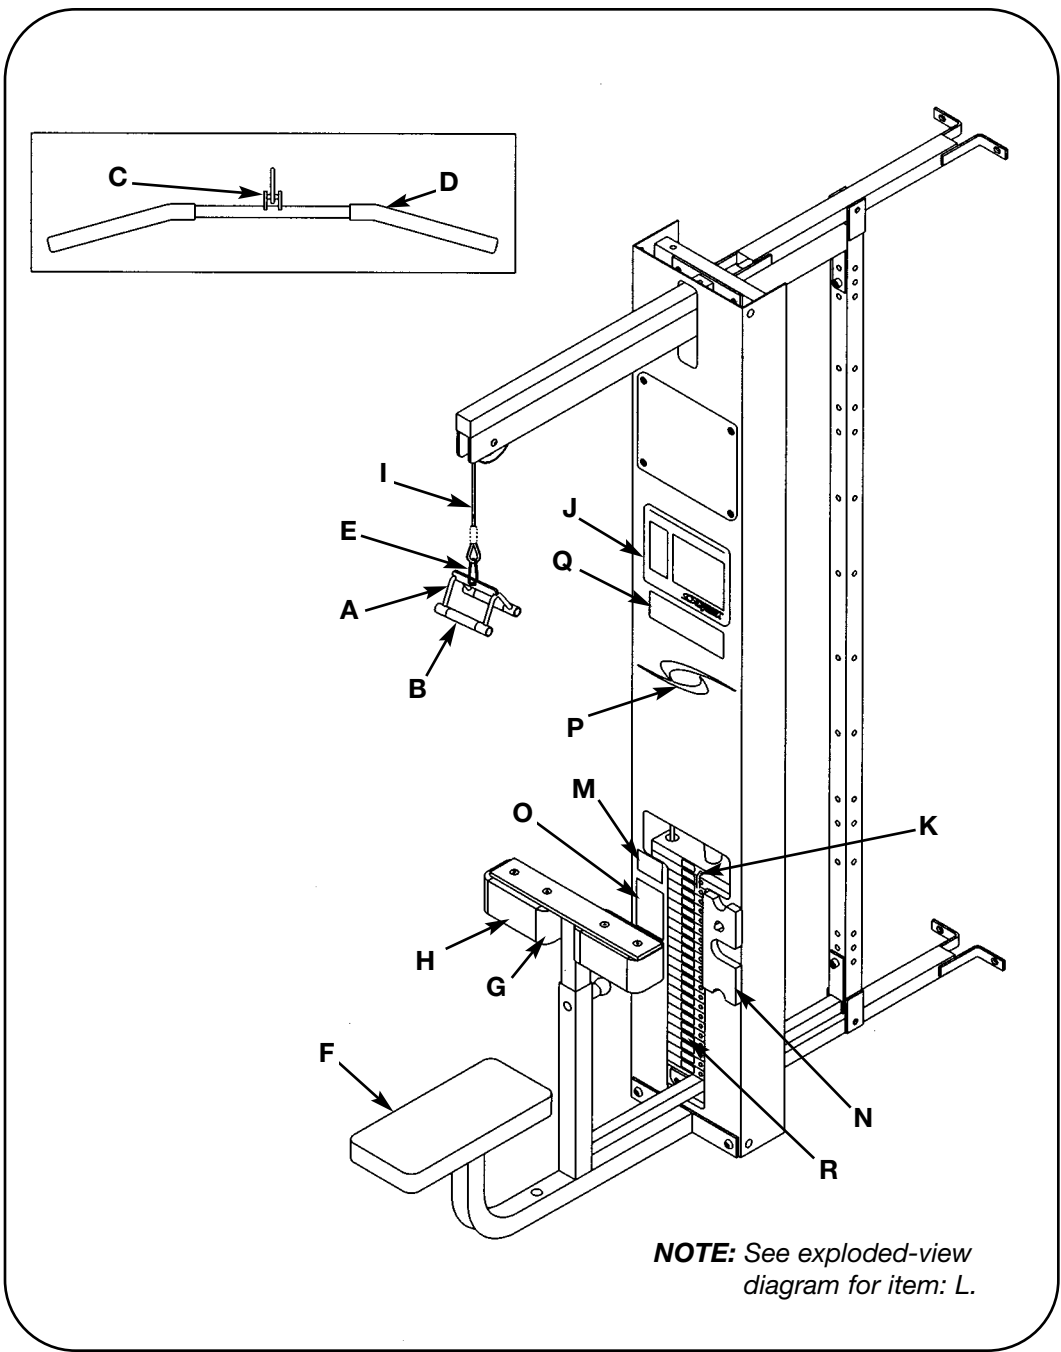

DESCRIPTION	PART NO.	DESCRIPTION	PART NO.
A. Handle Subassembly.....	01255	I. Cable Subassembly.....	01063
B. Foam Grip.....	5310M042	J. Placard Decal.....	01065
C. Pulldown Bar.....	4005-105	K. Weight Selector Pin	5310P044
D. Foam Grip.....	PR400201	L. Serial Number Decal	
E. Snap Link.....	GQ000206	M. Caution Decal	4000Y316
F. Seat Cushion	4800-024	N. Half Weight	C-ZA000200
G. Thigh Cushion and Wear		O. Warning Decal.....	02521
Cover (item H).....	4800-071	P. Vortex Decal.....	3900-426
H. Wear Cover	4800-101	Q. General Warning Decal.....	4800-381
		R. Weight Plate Decal	4800-515

UPHOLSTERY HARDWARE PACK....4005S088

5601 - Lat Pulldown

ITEM	QTY	PART NO.	DESCRIPTION
1	1	01048	Seat Support
2	1	01069	Adjusting Post
3	2	JC780422	BHSCS .50-13 x 1.50
4	6	JS388300	Split Lockwasher .50
5	4	HN784000	Hex Nut .50-13
6	1	4000M218	Detent Pin
7	1	PP080202	Plastic Insert
8	1	01054	Pulley Mount
9	4	GP000004	Pulley Spacer
10	2	GP000203	Pulley Center
11	2	GP000000	Pulley Assembly
12	4	HC700414	BHCS .375-16 x .62
13	1	JC782838	SHCS .50-13 x 3.50
14	1	01720	Plastic Insert
15	1	01055	Scuff Plate
16	4	01066	Plastic Fastener
17	2	01755	Guide Rod Collet
18	2	5310M035	Weight Stack Guide Rod
19	2	PR060005	Weight Bumper
20	2	JC782830	SHCS .50-13 x 2.50
21	2	PP080204	Plastic Cap .625 ID x .68 OD
22	2	01239	Spacer
23	4	PN660201	Hole Plug
24	1	4700M005	Rubber Cap
25	1	4700-010	Top Weight Assembly
• 26			Removed
• 27	19	4005C062	Stack Weight 4 x 12
28	1	HP286819	Spiral Pin
29	2	JC700917	FHSCS .375-16 x 1.00
30	4	JC700922	FHSCS .375-16 x 1.50
• 31	2	4700-019	Flange Bearing
• 32	2	BR030206	Retaining Ring
33	1	JC782834	SHCS .50-13 x 3.00
34			Removed
35	1	02106	Half Weight Peg
36	1	HS308300	Split Lockwasher .25
37	1	JC620415	BHSCS .25-20 x .75
38	1	4800-024	Seat Cushion
39	2	4800-071	Thigh Cushion
40	1	01065	Placard Decal
41	1	4000Y316	Caution Decal
42	1	02521	Warning Decal
43			Removed
44	1	4800-381	General Warning Decal
45	1	01063	Cable Subassembly
46	1	5310P044	Weight Selector Pin
47	1	C-ZA000200	Half Weight
48	1	02224	Modular Screen (not shown)

- FOR UNITS MANUFACTURED PRIOR TO JUNE 1993, CALL 1-888-462-9239.


Assembly Notes

1. Keep all shipping packages near area of installation. Standard items include:
 - Lat Column Assembly - 5601-98
 - Lat Pulldown Package - 5601-50
 - Lat Pulldown Cushion Box Assembly - 4005A070-0

- Top Weight Package - 4700-010 (black)
 - Weight Pack 1 - 4700S040 (black)
 - Weight Pack 2 - 4700S043 (black)
- NOTE:** x denotes specific color
2. When installing seat support, tip 90 degrees and insert through column slot. **NOTE:** Remove lower cross braces (if installed) before installing seat support. Use hardware supplied with the Center Post to secure seat support to lower cross braces.


3. Securely tighten seat support before installing weight stack.

4. Follow the assembly guidelines listed on either the 5600 Modular Center Post Assembly & Parts instruction sheet or the 5629 Tandem Center Post Assembly & Parts instruction sheet.

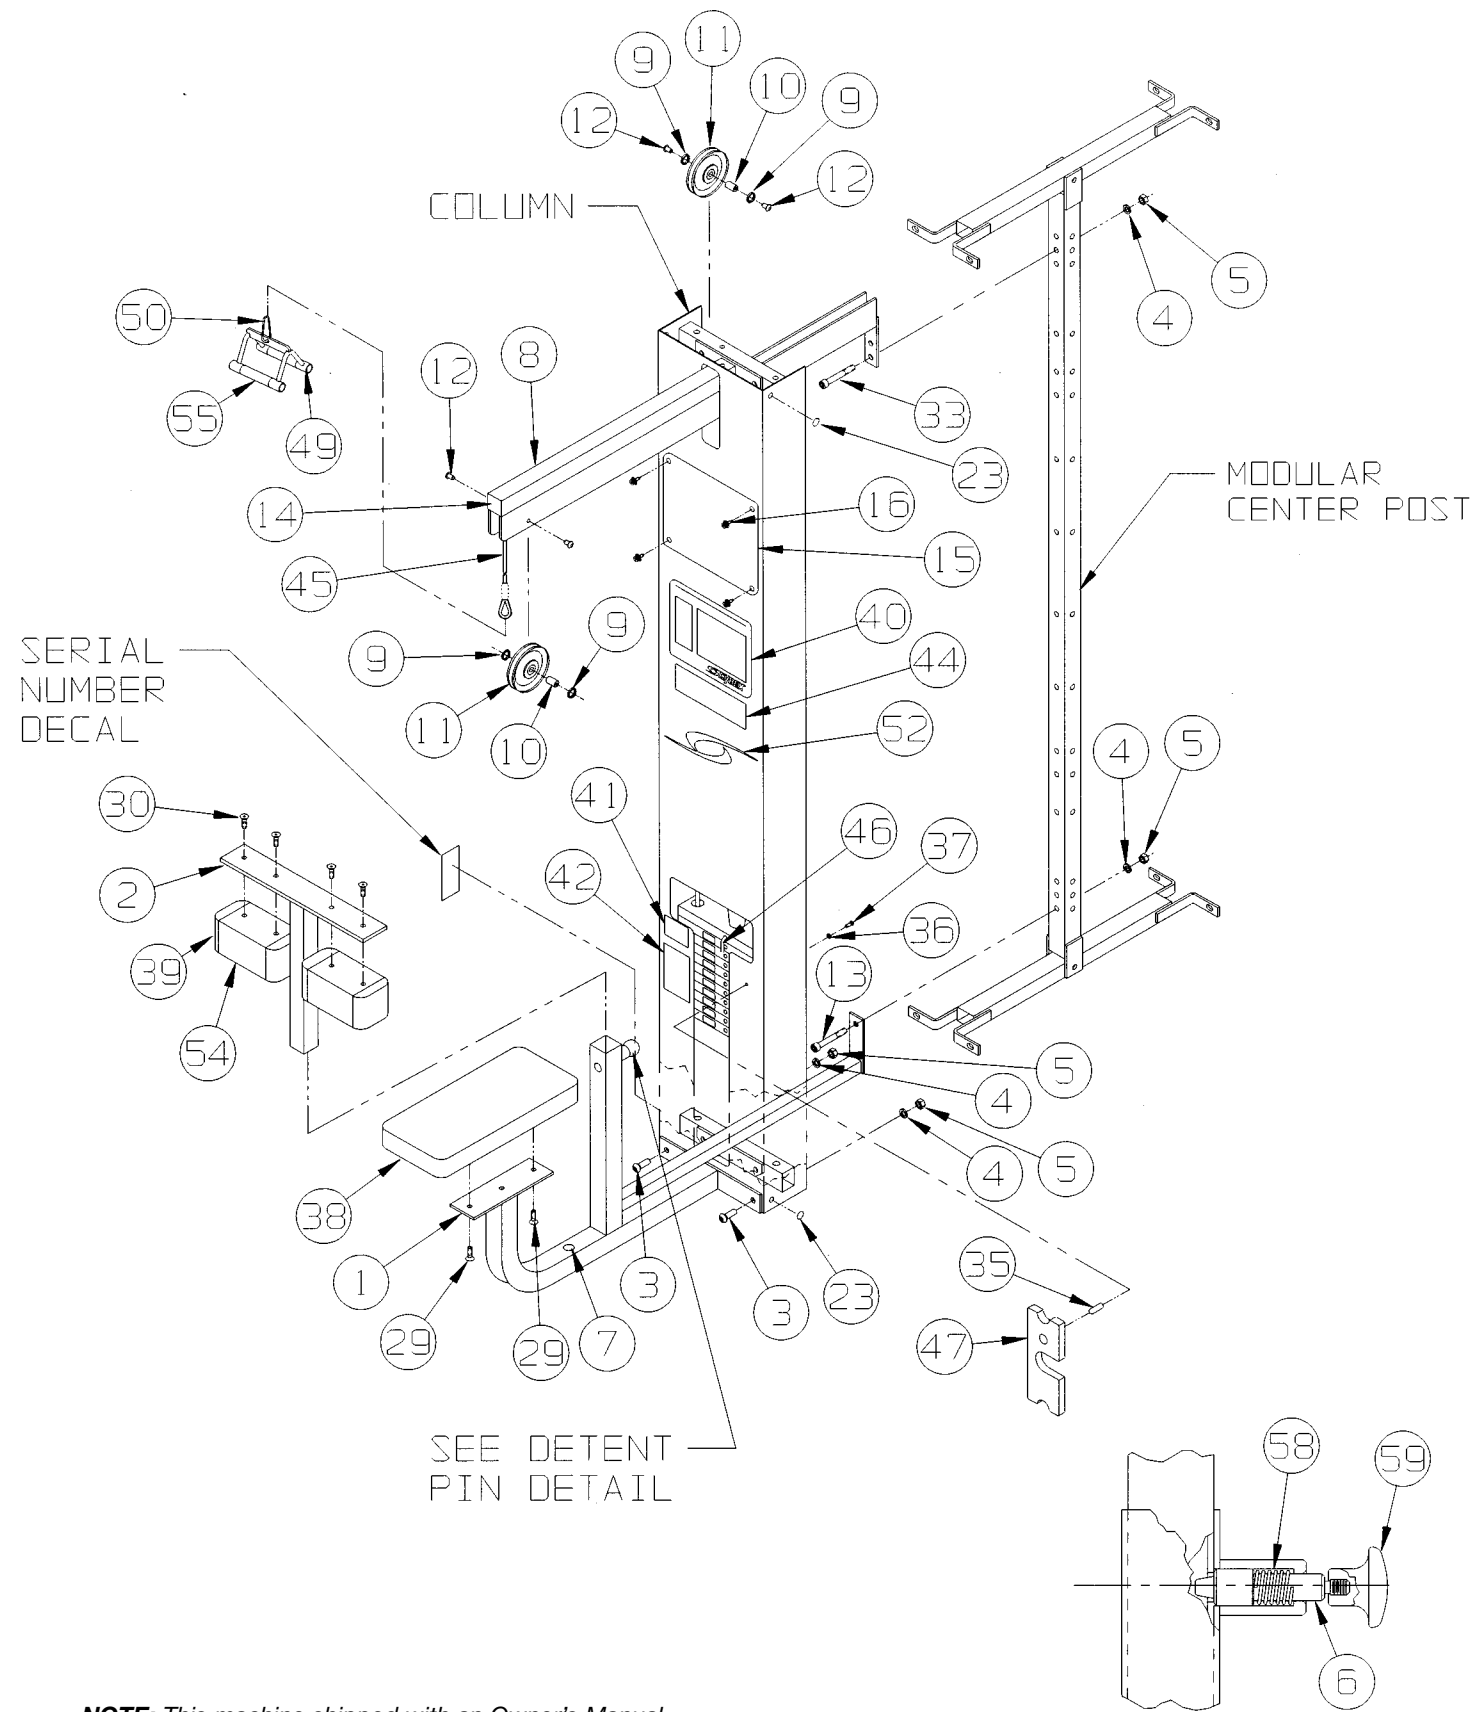

NOTE: This machine shipped with an Owner's Manual.
Additional copies can be obtained by contacting your dealer
or a Cybex Representative at 1-888-462-9239.

DETENT PIN DETAIL

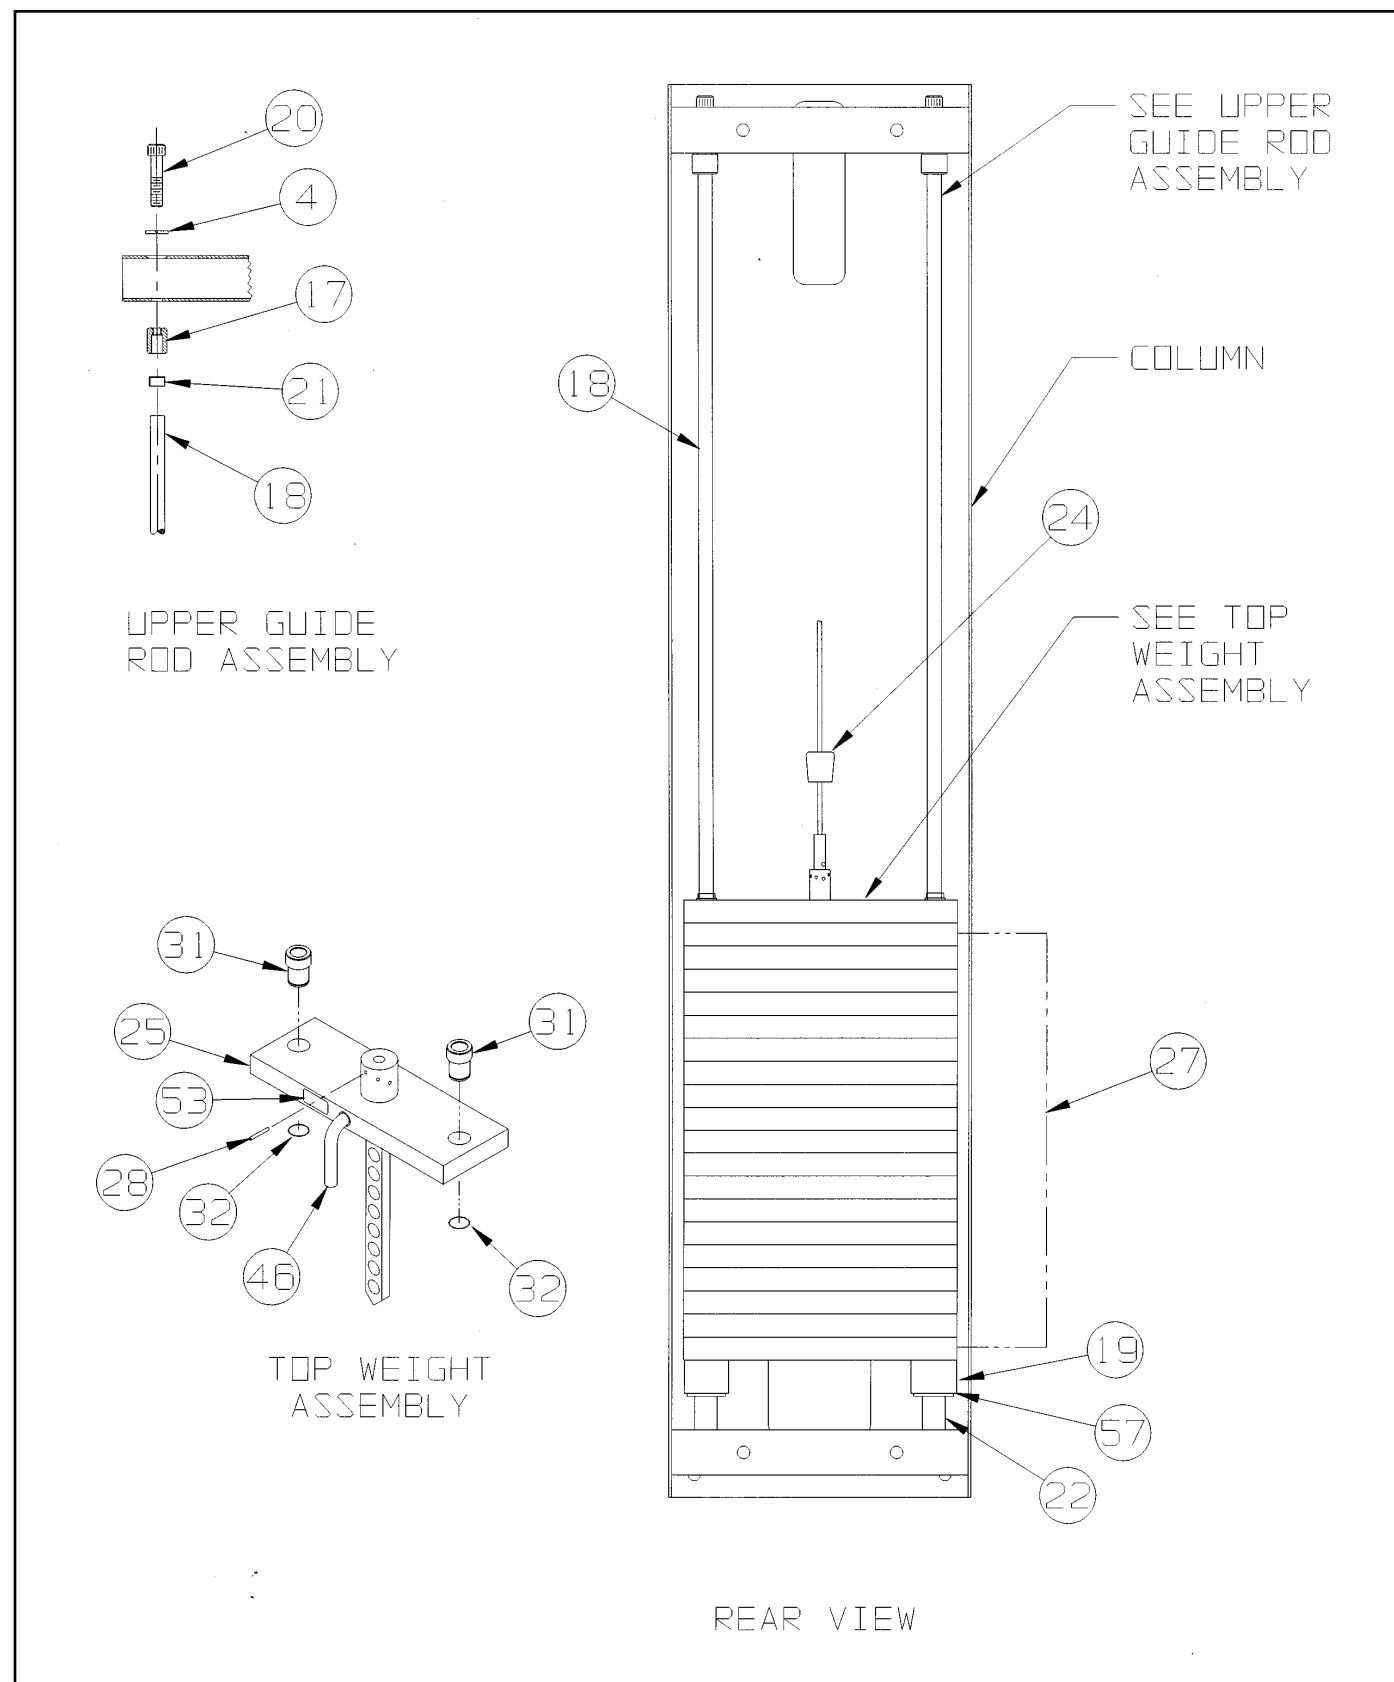

CYBEX[®] International
Defining Fitness