


MODULAR HANDLE RACK

5631

ASSEMBLY & PARTS

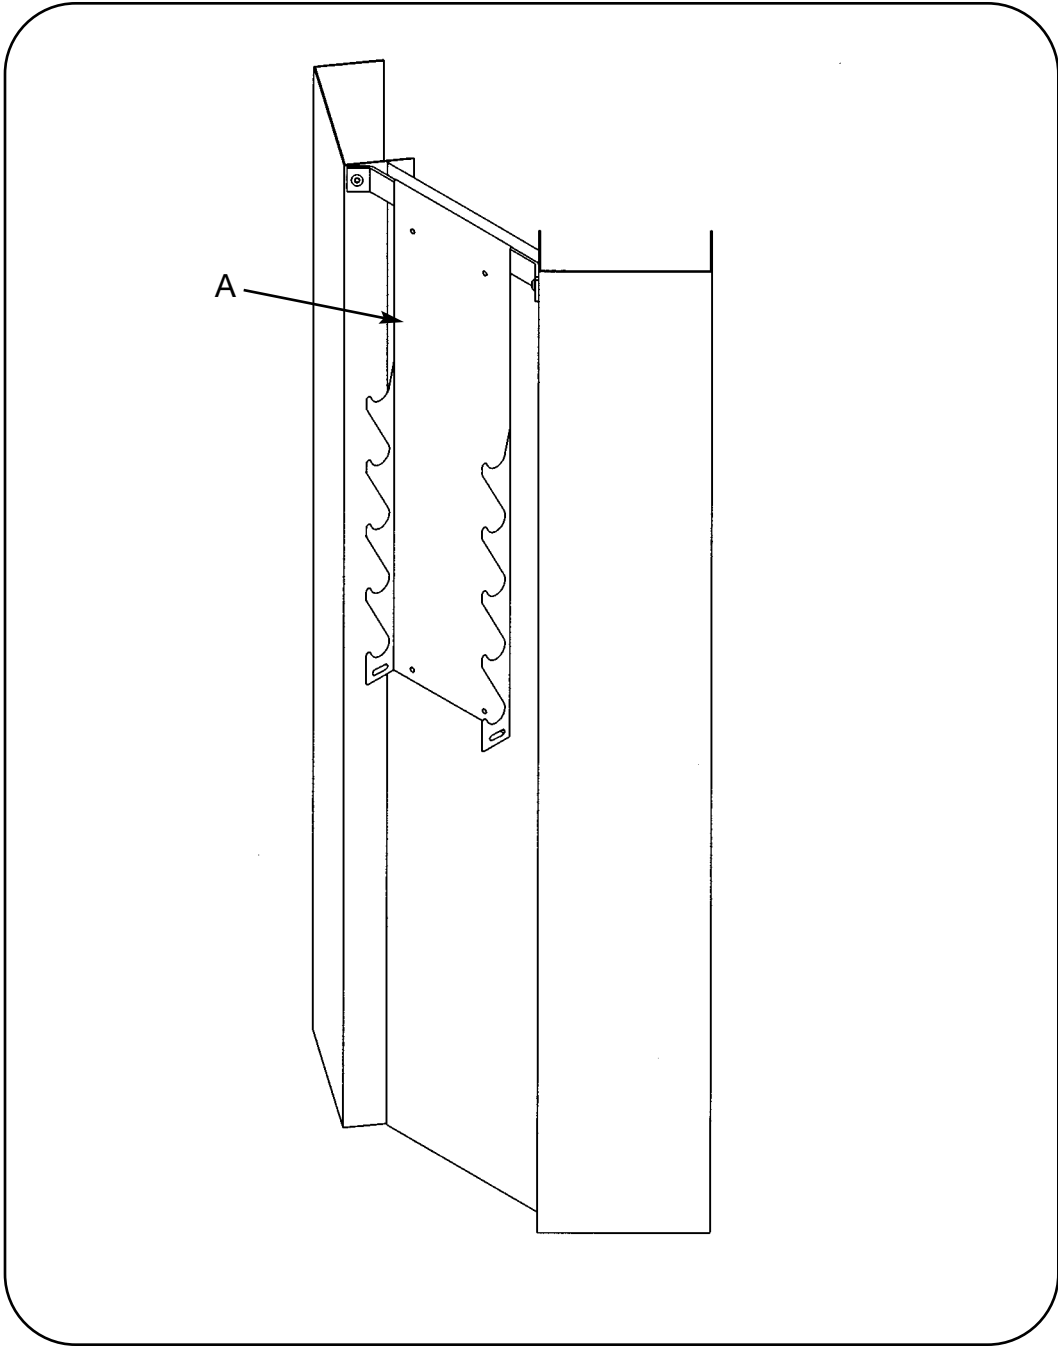

DESCRIPTION	PART NO.
A. Handle Rack.....	5631

5631 - Handle Rack

ITEM	QTY	PART NO.	DESCRIPTION
1	1	01930	Handle Rack
2	4	PU060205	Rubber Bumper .88" T
3	2	JC780417	BHSCS .50-13 x 1.00
4	2	HN784000	Hex Nut .50-13
5	2	JS388300	Lockwasher .50
6	1	01937	Mounting Plate

TOOLS REQUIRED

- 5/16" Allen wrench
- 3/4" Wrench

MOUNTING HANDLE RACK ON MODULAR UNITS

1. Install mounting plate (item 6) between towers with BHSCS (item 3), hex nut (item 4), and lockwasher (item 5).
2. Remove paper backing from one of the pieces of tape that is located on backside of Handle Rack (item 1). Place a rubber bumper (item 2) on the tape. Repeat this step until all four bumpers have been placed on the Handle Rack.
3. Hang handle rack (item 1) over top edge of mounting plate (item 6).
NOTE: Be sure that the rubber bumpers rest against the perforated panel.

MOUNTING HANDLE RACK ON ANY UNITS WITH A BACK COVER

1. Remove paper backing from the four pieces of tape located on backside of Handle Rack (item 1).
2. Secure Handle Rack to back cover of unit.

MOUNTING HANDLE RACK TO A WALL

1. Remove paper backing from one of the pieces of tape that is located on backside of Handle Rack (item 1). Place a rubber bumper (item 2) on the tape. Repeat this step until all four bumpers have been placed on the Handle Rack.
2. Position handle rack against the wall (or mounting surface). Mark holes on the wall through the four mounting holes in the Handle Rack.
3. Secure Handle Rack to the wall using the proper tools and hardware.

NOTE: This machine shipped with an Owner's Manual. Additional copies can be obtained by contacting your dealer or a Cybex Representative at 1-888-462-9239.

