


Model No. WESY50200

Serial No. _____

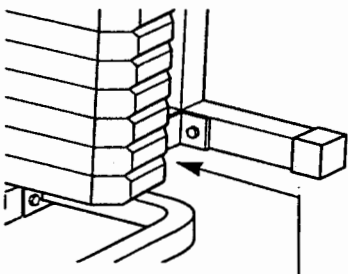

Serial Number Decal

QUESTIONS?

As a manufacturer, we are committed to providing complete customer satisfaction. If you have questions, or find that there are missing or damaged parts, we will guarantee you complete satisfaction through our Customer Service Department.

Please CALL:
0345-089009

Or WRITE:
ICON Fitness Lifestyle Ltd.
Greenwich House
223 North Street
Sheepscar
Leeds LS7 2AA

CAUTION


Read all precautions and instructions in this manual before using this equipment. Save this manual for future reference.

132907

WEIDER

Cobra

1 0 0 0

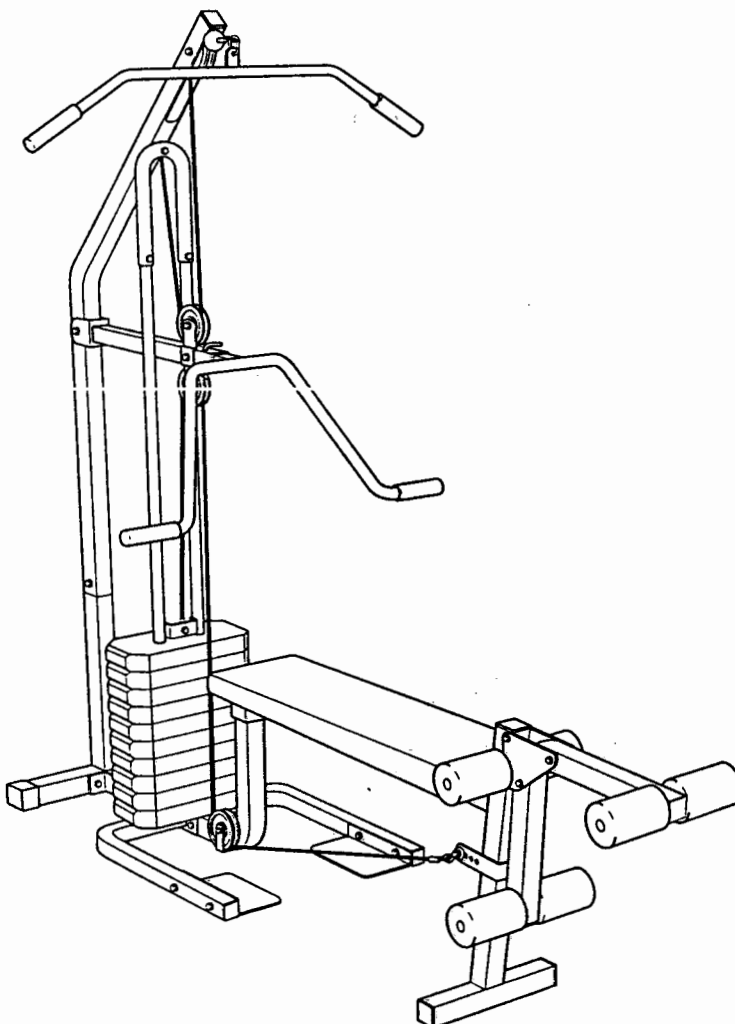

USER'S MANUAL

TABLE OF CONTENTS

IMPORTANT PRECAUTIONS	2
BEFORE YOU BEGIN	3
ASSEMBLY	4
ADJUSTMENT	10
TROUBLE-SHOOTING AND MAINTENANCE	13
PART LIST	14
EXPLODED DRAWING	15
ORDERING REPLACEMENT PARTS	Back Cover

Note: A PART IDENTIFICATION CHART is attached to the centre of this manual. Remove the PART IDENTIFICATION CHART before beginning assembly.

IMPORTANT PRECAUTIONS

WARNING: To reduce the risk of serious injury, read the following important precautions before using the home gym system.

1. Read all Instructions in this manual and in the accompanying literature before using the home gym system.
2. It is the responsibility of the owner to ensure that all users of the home gym system are adequately informed of all precautions.
3. If you feel pain or dizziness at any time whilst exercising, stop immediately and begin cooling down.
4. Use the home gym system only on a level surface. Place a mat beneath the home gym system to protect the floor or carpet.
5. Inspect and tighten all parts often. Replace any worn parts immediately.
6. The home gym system is designed to be used by only one person at a time.
7. Keep small children and pets away from the home gym system at all times.
8. Always wear athletic shoes for foot protection when exercising.
9. Keep hands and feet away from moving parts.
10. Always stand on one of the foot plates when performing an exercise that could cause the home gym system to tip.
11. Never release the press arm, leg lever, lat bar, or nylon strap whilst weights are raised. The weights will fall with great force.
12. Make sure that the cables remain on the pulleys at all times. If the cables bind whilst you are exercising, stop immediately and make sure that the cables are on all of the pulleys.
13. Always secure the leg lever with the long locking pin when the leg lever is not in use.
14. Always disconnect the lat bar from the home gym system when performing an exercise that does not use the lat bar.

WARNING: Before beginning this or any exercise program, consult your physician. This is especially important for persons over the age of 35 or persons with pre-existing health problems. Read all instructions before using. ICON assumes no responsibility for personal injury or property damage sustained by or through the use of this product.

BEFORE YOU BEGIN

Thank you for selecting the versatile WEIDER® COBRA 1000 HOME GYM SYSTEM. The COBRA 1000 offers a selection of weight stations designed to develop every major muscle group of the body. Whether your goal is to tone your body, build dramatic muscle size and strength, or improve your cardiovascular system, the COBRA 1000 will help you to achieve the specific results you want.

For your benefit, read this manual carefully before using the COBRA 1000. If you have additional ques-


tions, please call our Customer Service Department at 0345-089009. To help us assist you, please note the product model and serial number before calling. The model number is WESY50200. The serial number can be found on a decal attached to the COBRA 1000 (see the front cover of this manual).

Before reading further, please review the drawing below and familiarise yourself with the parts that are labelled.

ASSEMBLED DIMENSIONS:

Height: 78 inches

Base: 35 inches x 86 inches

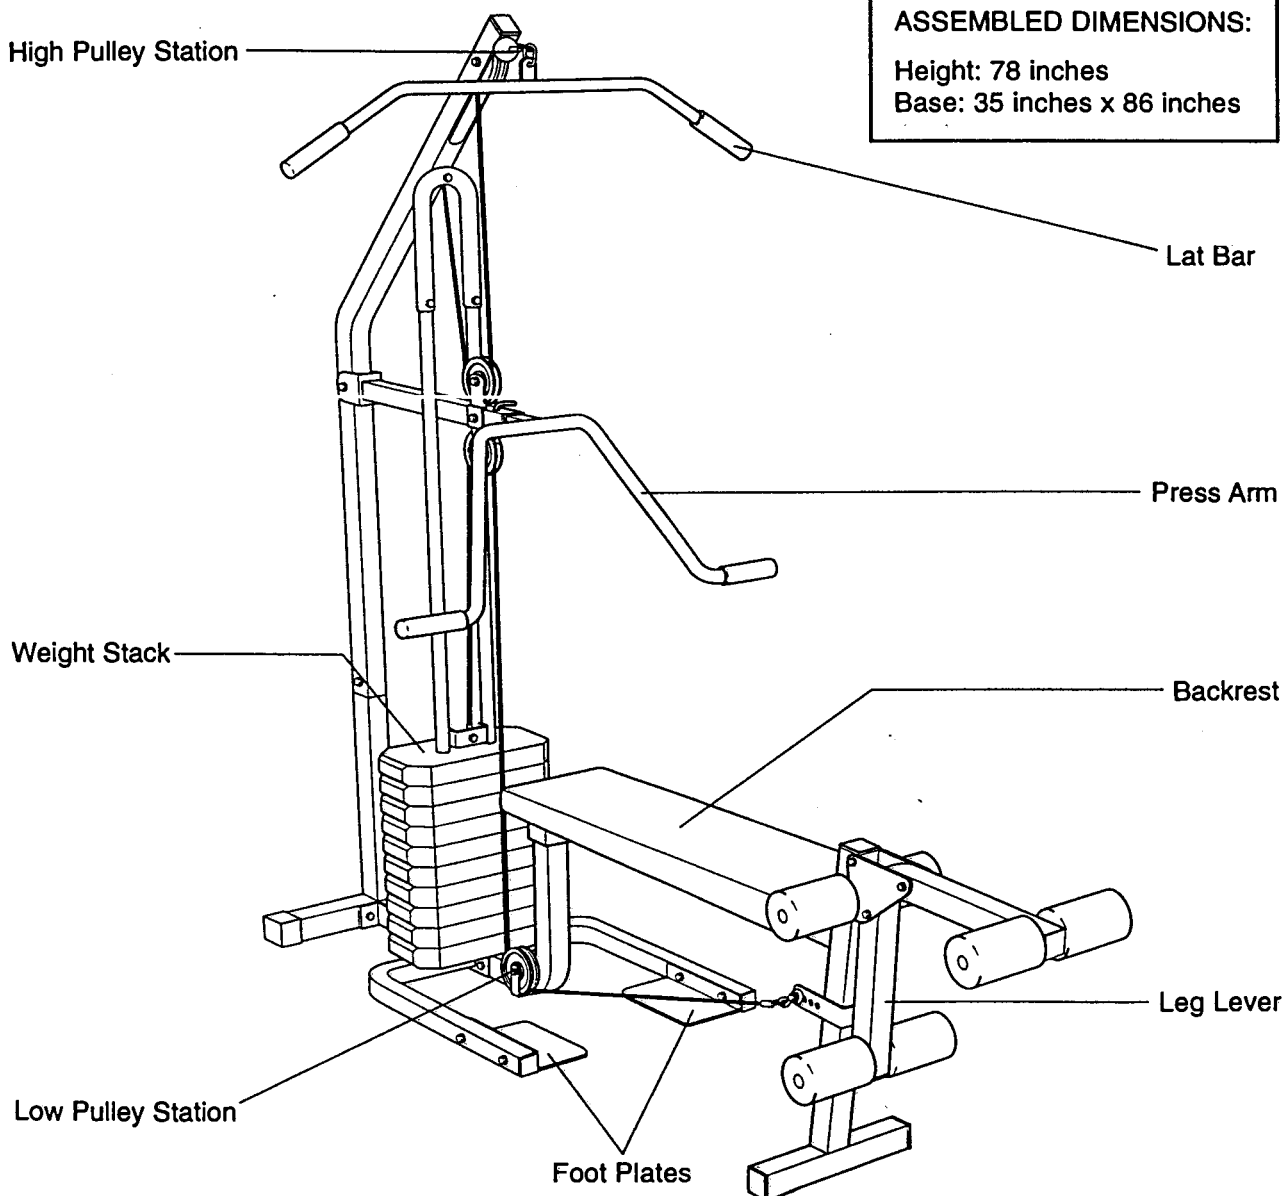



ASSEMBLY

Before beginning assembly, carefully read the following information and instructions:

- Place all parts of the COBRA 1000 in a cleared area and remove the packing materials; do not dispose of the packing materials until assembly is completed.
- For help identifying the small parts used in assembly, use the **PART IDENTIFICATION CHART** located in the centre of this manual. Note: Some small parts may have been pre-attached for shipping. If a part is not in the parts bag, check to see if it has been pre-attached.
- As you assemble the COBRA 1000, be sure that all parts are oriented as shown in the drawings.

- Tighten all parts as you assemble them, unless instructed to do otherwise.

THE FOLLOWING TOOLS (NOT INCLUDED) ARE REQUIRED FOR ASSEMBLY:

- Two (2) adjustable wrenches 
- One (1) phillips screwdriver 
- One (1) rubber mallet 
- Lubricant, such as grease or petroleum jelly, and soapy water will also be needed.


Assembly will be more convenient if you have the following tools: A socket set, a set of open-end or closed-end wrenches, or a set of ratchet wrenches.

1. Press a 2" Square Outer Cap (44) onto each side of the Base Stabiliser (52).

Attach the Base (45) to the Base Stabiliser (52) with two 5/16" x 2 3/4" Bolts (29), two 5/16" Washers (20), and two 5/16" Nylon Locknuts (1).

Attach the Top Frame (42) to the Base Stabiliser (52) with a 5/16" x 2 1/2" Bolt (41), two 5/16" Washers (20), and a 5/16" Nylon Locknut (1).

Insert a 2" Square Inner Cap (36) into the Top Frame (42).

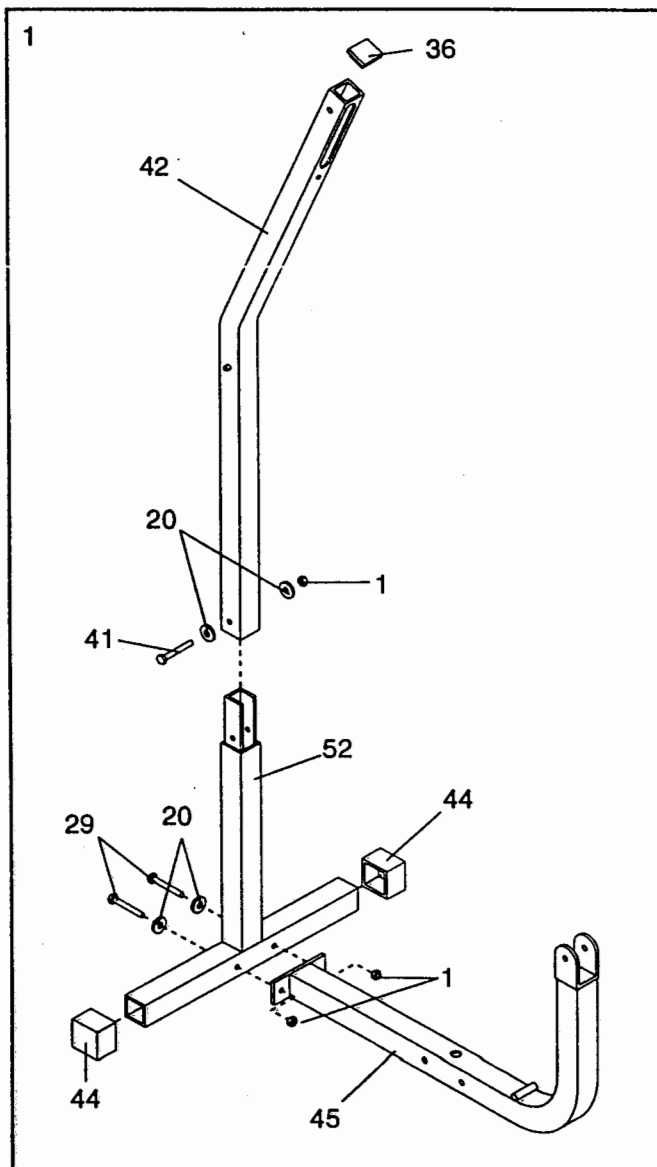

2. Press a 1 1/2" Square Inner Cap (50) into the Right Stabiliser (47). Attach a Foot Plate (49) to the Right Stabiliser with two 5/16" x 2" Bolts (48), two 5/16" Washers (20), and two 5/16" Nylon Jam Nuts (5). Note: The large holes of both Stabilisers must be on top.

Assemble the Left Stabiliser (46) in the same manner.

Attach the Left and Right Stabilisers (46, 47) to the Base (45) with two 5/16" x 2 3/4" Bolts (29) and two 5/16" Nylon Locknuts (1).

3. Insert the Weight Guides (38) into the indicated holes in the Left and Right Stabilisers (46, 47). **Be sure that the ends of the Weight Guides with two sets of drilled holes are at the top, as shown.**




Attach the Weight Guides (38) to the Left and Right Stabilisers (46, 47) with 5/16" x 2" Bolts (48) and 5/16" Nylon Locknuts (1) as shown.

Slide a Weight Guide Sleeve (57), a 1" Washer (43) and a Weight Bumper (56) onto each Weight Guide (38). Slide nine Weights (51) onto the Weight Guides. **Be sure that the Weights are turned so that the pin grooves are facing the Top Frame (42).**

Press the Weight Tube Endcap (59) into the indicated end of the Weight Tube (54). Slide the Weight Tube into the stack of Weights (51). The pin on the Weight Tube must be in the pin groove in the top Weight.


Slide the remaining Weight (51) onto the Weight Guides (38) and the Weight Tube (54). **Be sure that the Weight is turned so that the pin groove is facing the Top Frame (42).**

4. Attach the Weight Tube Guide (55) and the indicated end of the Long Cable (18) to the Weight Tube (54) with a 5/16" x 1 1/2" Bolt (21) and a 5/16" Nylon Locknut (1).

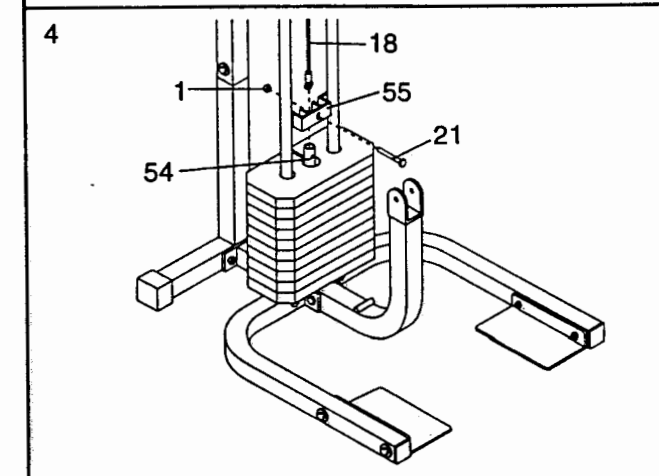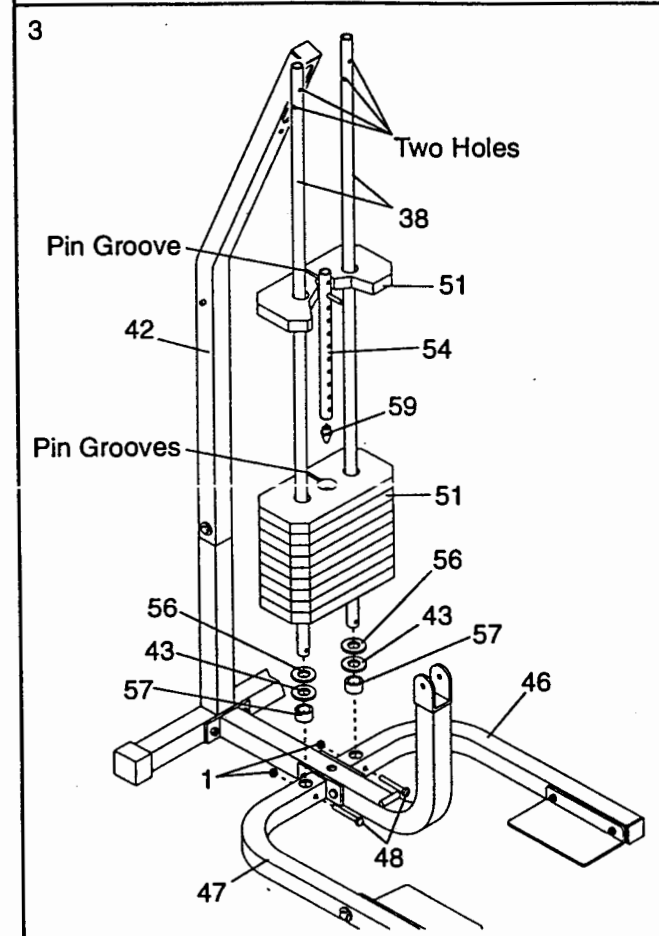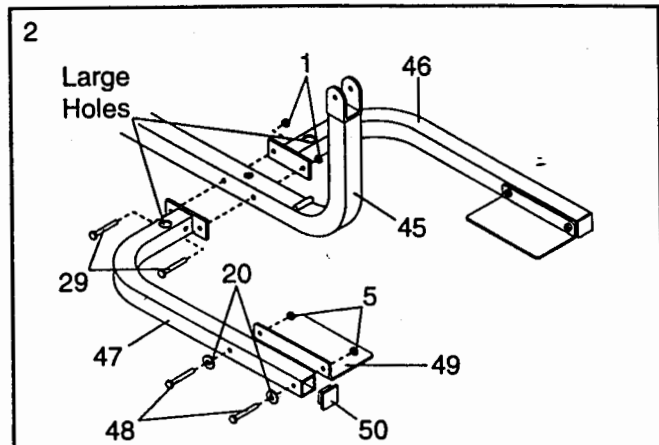


5. Attach the Weight Guide Top (53) to the Weight Guides (38) with two 1/4" x 1 1/2" Bolts (61) and two 1/4" Nylon Locknuts (60).

Attach the Medium Cable (68) and the Weight Guide Top (53) to the Top Frame (42) with a 5/16" x 3 3/4" Bolt (62), a 5/16" Washer (20), and a 5/16" Nylon Locknut (1).

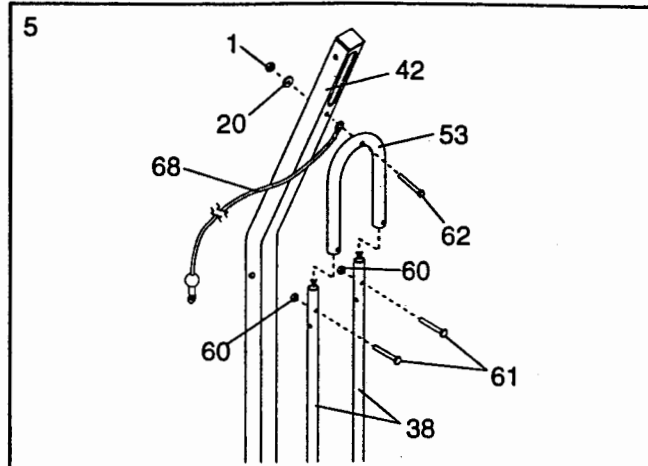


6. Wrap the Medium Cable (68) around a 3 1/2" Pulley (4). **Note: The ball on the Cable must be on the indicated side of the Pulley.** Attach the Pulley to the Top Frame (42) with the 3/8" x 2 3/4" Bolt (12), two 3/8" Washers (3), two 17/32" Long Spacers (13), and a 3/8" Nylon Locknut (2).

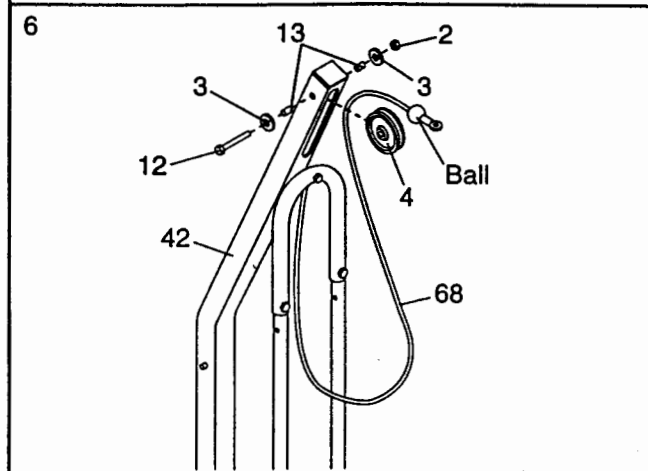

7. Attach the Press Arm Lever (8) to the Top Frame (42) with a 5/16" x 3" Bolt (69) and a 5/16" Nylon Jam Nut (5).

Attach the two Pulley Brackets (9) to the Press Arm Lever (8) with a 5/16" x 2 1/4" Bolt (23) and a 5/16" Nylon Locknut (1). **Note: The short ends of the Pulley Brackets must be on top.**


Wrap the Medium Cable (68) around a 3 1/2" Pulley (4). Attach the Pulley to the Pulley Brackets (9) with a 3/8" x 1 3/4" Bolt (22) and a 3/8" Nylon Locknut (2).

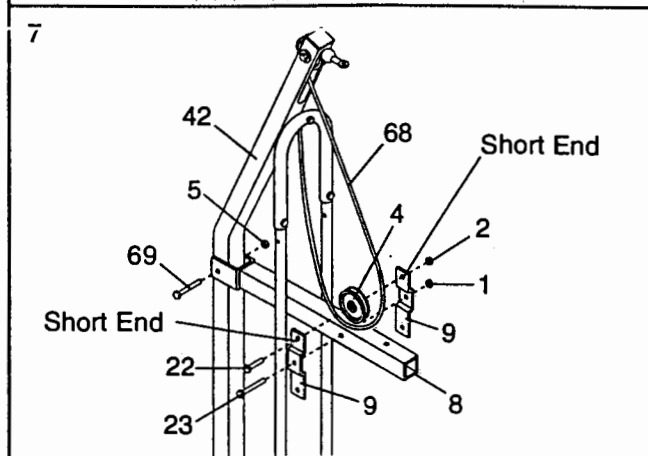


8. Press the 1 1/2" Square Bushing (10) into the indicated end of the Press Arm Lever (8).

Insert the Press Arm (7) into the Press Arm Lever (8). Align the holes in the Press Arm with the holes in the Press Arm Lever. Insert the Short "L"-Pin (14) into the Press Arm Lever and the Press Arm.


Wet the handles on the Press Arm (7) with soapy water. Slide a Handgrip (6) onto each handle.

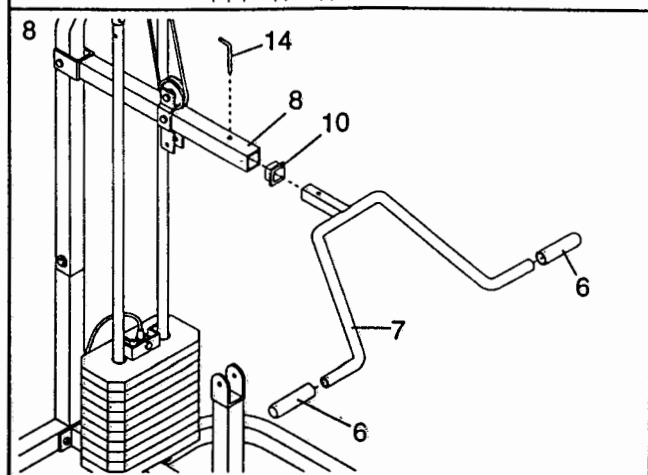

9. Wrap the Long Cable (18) around the 4 1/2" Pulley (15). Attach the Pulley to the Pulley Brackets (9) with a 3/8" x 1 3/4" Bolt (22) and a 3/8" Nylon Locknut (2).

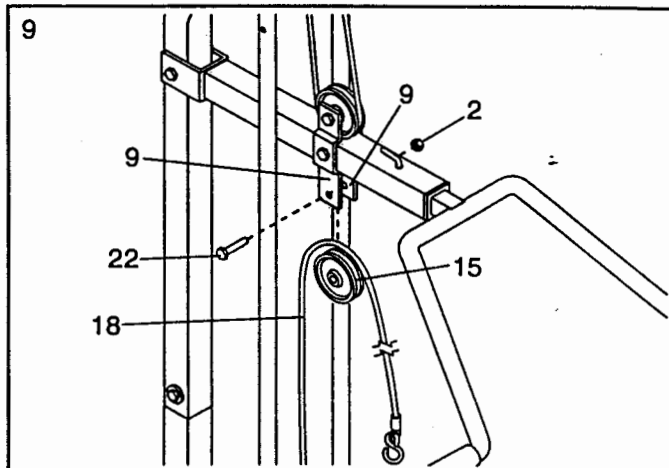


10. Wrap the Long Cable (18) around a 3 1/2" Pulley (4). Attach the Pulley and the Cable Trap (16) to the welded tube on the Base (45) with a 3/8" x 4" Bolt (17) and a 3/8" Nylon Locknut (2). **The Cable Trap must be turned to the position shown in the inset drawing.**

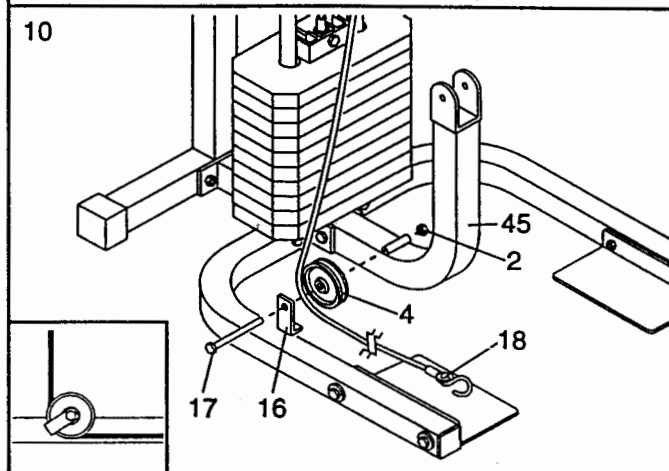

11. Press three 2" Square Inner Caps (36) into the ends of the Front Leg (31).


Attach the Backrest Frame (28) to the Front Leg (31) with two 5/16" x 2 1/2" Bolts (41), two 5/16" Washers (20), and two 5/16" Nylon Jam Nuts (5). See the inset drawing for proper orientation of the Front Leg and Backrest Frame.

Press a 2" Square Inner Cap (36) into the end of the Backrest Frame (28).

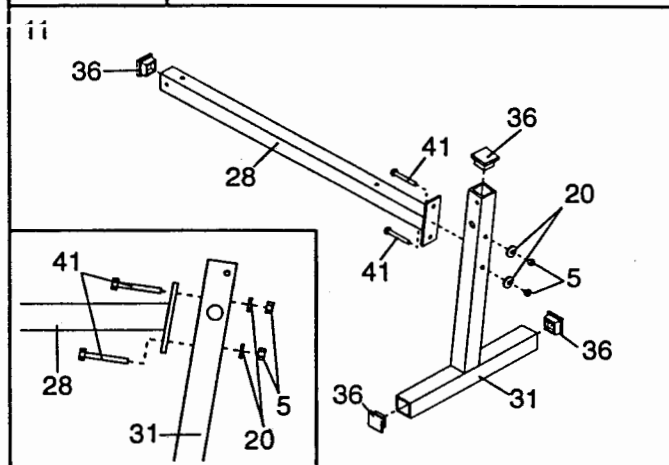


12. Attach the Backrest Frame (28) to the Base (45) with the Short Lock Pin (67). **Be sure that the Short Lock Pin is turned so that the clip on the Short Lock Pin locks onto the Base.**

Press a 3/4" Round Inner Cap (35) into each end of a Long Pad Tube (40). Insert the Long Pad Tube into the hole in the Front Leg (31). Slide a 7" Foam Pad (32) onto each side of the Long Pad Tube.

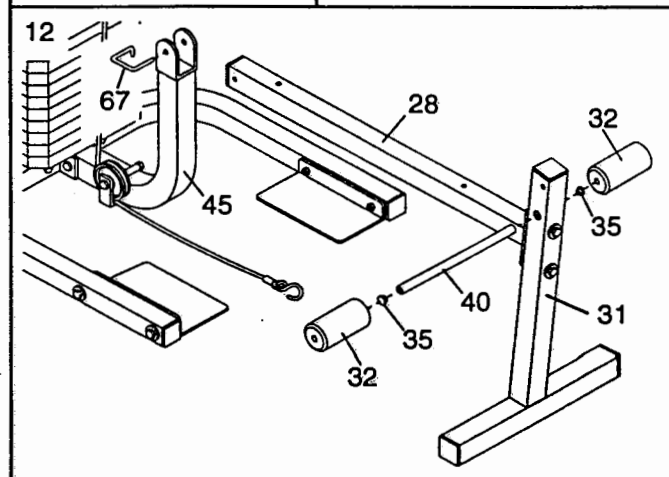


13. Press a 2" Square Inner Cap (36) into the front of the Leg Lever (37). Attach both Leg Lever Brackets (30) to the Leg Lever with two 5/16" x 2 3/4" Bolts (29), four 5/16" Washers (20), and two 5/16" Nylon Locknuts (1).

Attach the Leg Lever Bumper (65) to the Leg Lever (37) with the #8 x 3/4" Self-tapping Screw (66).

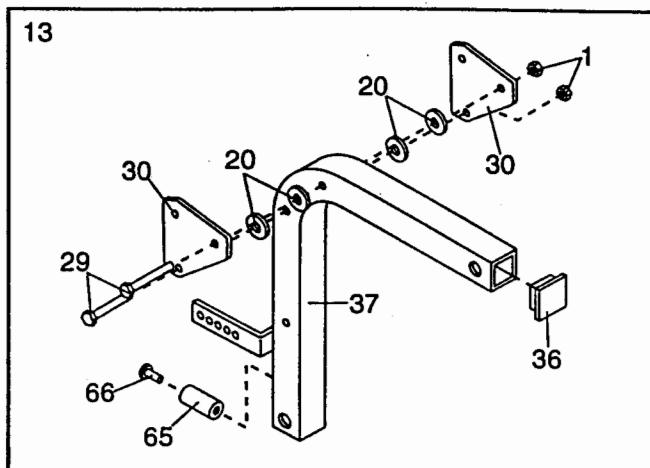


14. Attach the Leg Lever Brackets (30) to the Front Leg (31) with a 5/16" x 3" Bolt (69) and a 5/16" Nylon Locknut (1).

Press 3/4" Round Inner Caps (35) into the ends of both Short Pad Tubes (34). Insert both Short Pad Tubes into the holes in the Leg Lever (37). Slide 5 3/4" Foam Pads (33) onto the ends of the Short Pad Tubes.

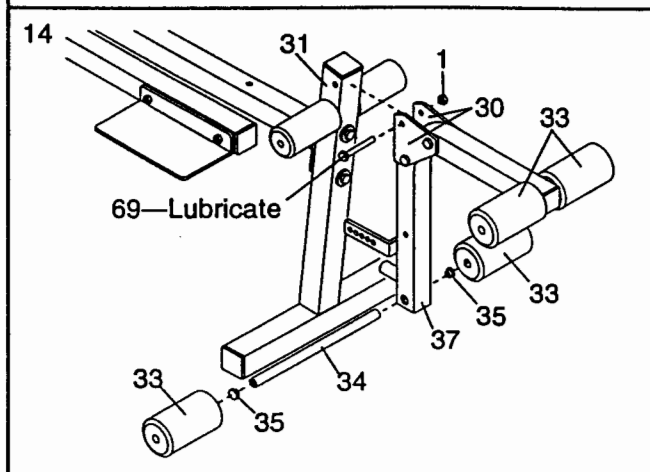

15. Attach a 5/16" Washer (20) and the 3/4" Spacer (19) to the bracket on the Leg Lever (37) with a 5/16" x 1 1/2" Bolt (21) and a 5/16" Nylon Locknut (1). Note: The Bolt must be inserted through the indicated side of the bracket on the Leg Lever. The Bolt should also be inserted through the indicated hole in the bracket.


Attach the end of the Long Cable (18) with the s-hook to the 3/4" Spacer (19).

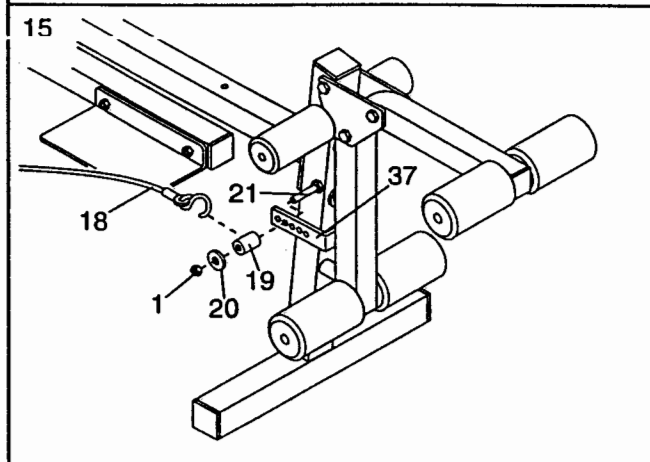


16. See the inset drawing. Insert a 1/4" x 2 1/2" Carriage Bolt (39) through the centre hole of a Backrest Bracket (26). Attach the Backrest Bracket to the Backrest (27) with two 1/4" x 1/2" Screws (25).

Attach the other Backrest Bracket (26) to the Backrest (27) in the same manner.

Attach the Backrest (27) to the Backrest Frame (28) by inserting the 1/4" x 2 1/2" Carriage Bolts (39) through the holes in the Backrest Frame. The long end of the Backrest must be on the side shown. Tighten a 1/4" Nylon Locknut (60) with a 1/4" Fender Washer (64) onto each Carriage Bolt.

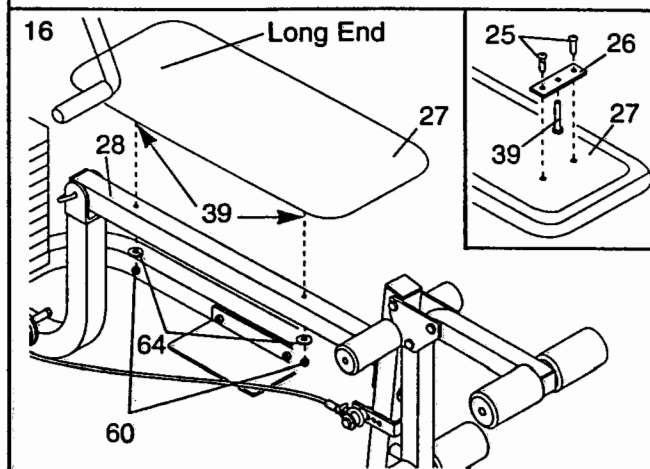


17. Wet the ends of the Lat Bar (24) with soapy water. Slide a Handgrip (6) onto each end of the Lat Bar.

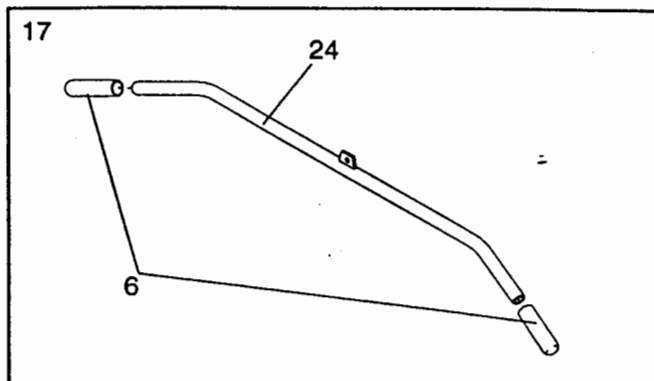

18. Make sure that all parts are properly tightened. The use of all remaining parts will be explained in ADJUSTMENT, beginning on page 10 of this manual.
19. The decals shown below have been placed on your home gym system. If one of the decals is missing, or if it is not legible, please call our Customer Service Department to order a free replacement decal (see ORDERING REPLACEMENT PARTS on the back cover of this manual). Apply the decal in the location shown.

19

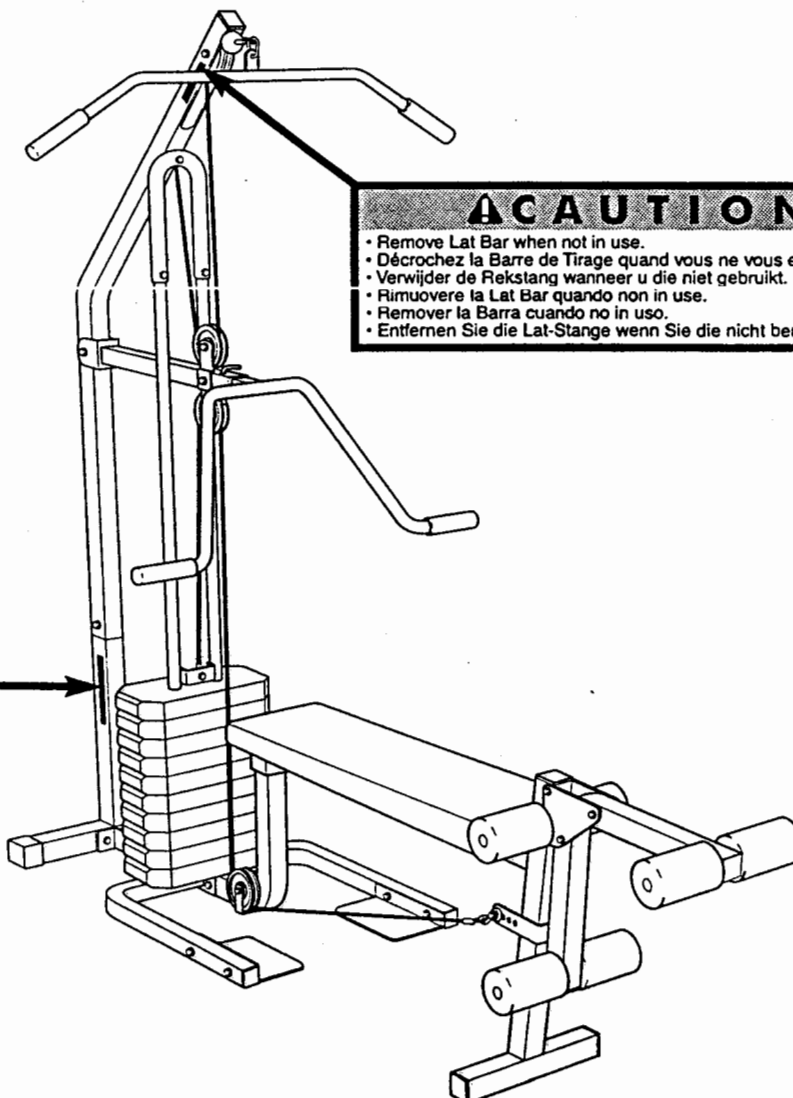

WARNING!

WARNING
Always insert the locking pin when using the bench press arm.

ATTENTION
Enfoncez toujours la goupille de verrouillage quand vous vous servez du bras de presse.

WAARSCHUWING
Steek altijd de sluitpen in wanneer u de druk-arm gebruikt.

AVISO
Siempre inserte los pernos de seguro cuando use el brazo de presión del banco.

ACHTUNG
Führen Sie immer den Verschlussstift durch, wenn der Andruckbügel gebraucht wird.

AVVERTENZA
Inserire sempre le perne di sicurezza durante l'uso della panca pesi.

CAUTION


- Remove Lat Bar when not in use.
- Débranchez la Barre de Tirage quand vous ne vous en servez pas.
- Verwijder de Rekstang wanneer u die niet gebruikt.
- Rimuovere la Lat Bar quando non in use.
- Remover la Barra cuando no in uso.
- Entfernen Sie die Lat-Stange wenn Sie die nicht benutzen.

ADJUSTMENT

The instructions below describe how each part of the home gym system can be adjusted. **IMPORTANT:** When attaching the lat bar or nylon strap, make sure that the attachments are in the correct starting position for the exercise to be performed. If there is any slack in the cable or chain as an exercise is performed, the effectiveness of the exercise will be reduced.


CHANGING THE WEIGHT SETTING

To change the weight setting, insert the Weight Pin (63) under one of the Weights (51). Be sure to insert the Weight Pin until the bent end of the Weight Pin is touching the Weights, and turn the bent end downward. The weight setting can be changed from 12.5 pounds to 125 pounds, in increments of 12.5 pounds. **Note:** Due to the cables and pulleys, the actual amount of resistance at each exercise station will vary from the weight setting.

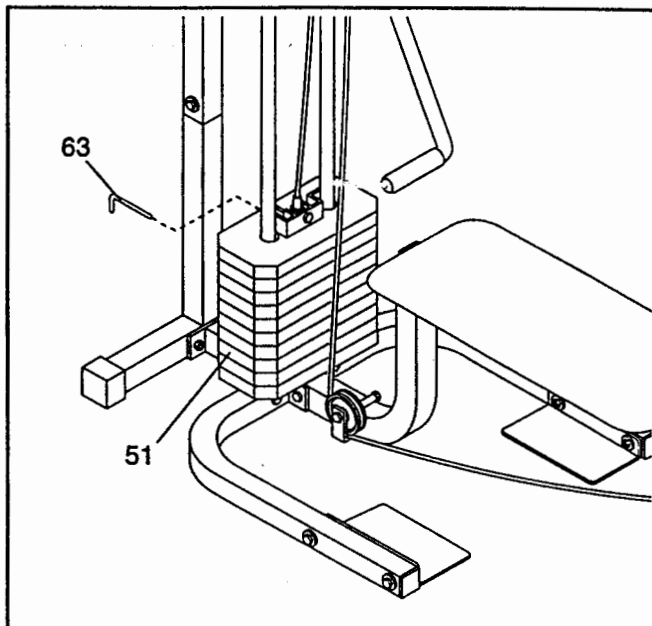

ADJUSTING THE PRESS ARM

To adjust the Press Arm (7), remove the Short "L"-Pin (14). Slide the Press Arm out of the Press Arm Lever (8). Rotate the Press Arm so that the handles are pointed up or down, as needed for the exercise to be performed. Align the sets of holes in the Press Arm and the Press Arm Lever. Re-insert the Short Lock Pin.

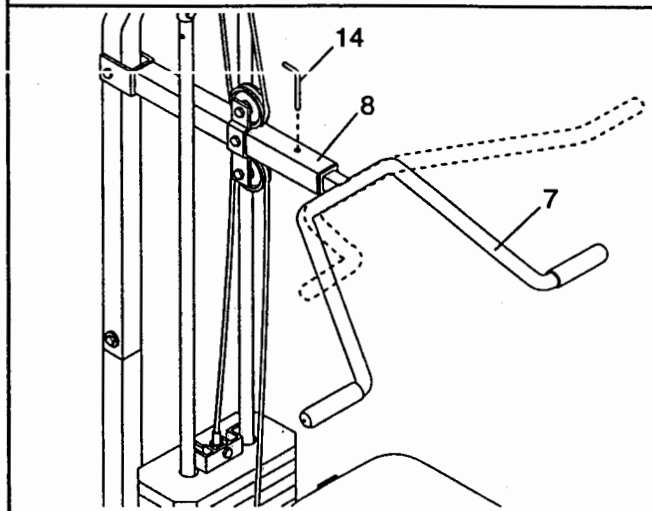


For some exercises, you will need to remove the Press Arm (7). Remove the Short "L"-Pin (14). Slide the Press Arm out of the Press Arm Lever (8). Re-insert the Short Lock Pin into the holes in the Press Arm for safekeeping.

ATTACHING AND REMOVING THE BACKREST

Set the end of the Backrest Frame (28) onto the indicated bracket on the Base (45). Align the holes in the Backrest Frame with the holes in the bracket on the Base. Insert the Lock Pin (67) and turn the Pin so that it locks in place on the Base.


For some exercises, the Backrest Frame (28) must be removed. First, disconnect the s-hook on the Long Cable (18) from the Leg Lever (37). Next, remove the Lock Pin (67) from the Backrest Frame (28) and Base (45). Lift the Backrest Frame off the Base.

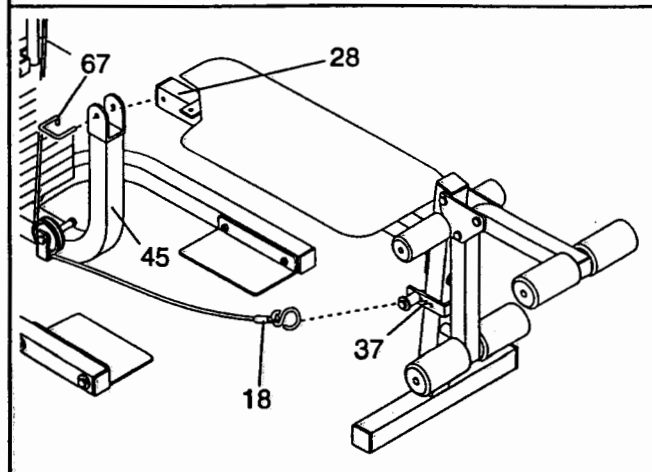

ATTACHING THE LAT BAR OR NYLON STRAP TO THE HIGH PULLEY STATION

Attach the Lat Bar (24) to the Medium Cable (68) with a Cable Clip (72).


The Nylon Strap (70) can be attached in the same manner.

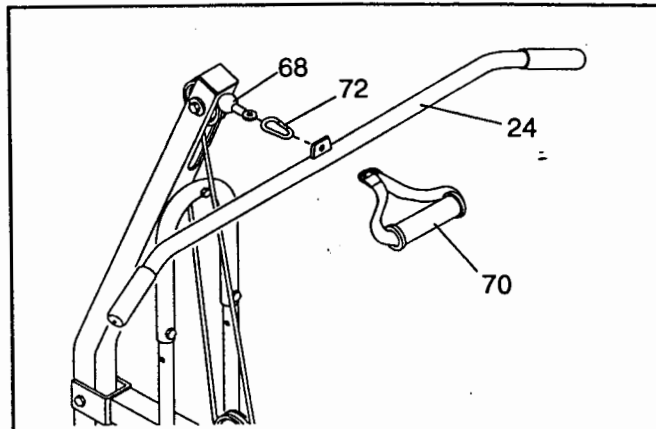

LOCKING THE PRESS ARM LEVER

Disconnect the cable and s-hook from the leg lever. Remove the Press Arm (SEE ADJUSTING THE PRESS ARM on page 10).

Lift the Press Arm Lever (8) until it is above the indicated holes in the Weight Guides (38). Insert the Long "L"-Pin (58) through the holes in the Weight Guides. Rest the Press Arm Lever on the Long "L"-Pin.

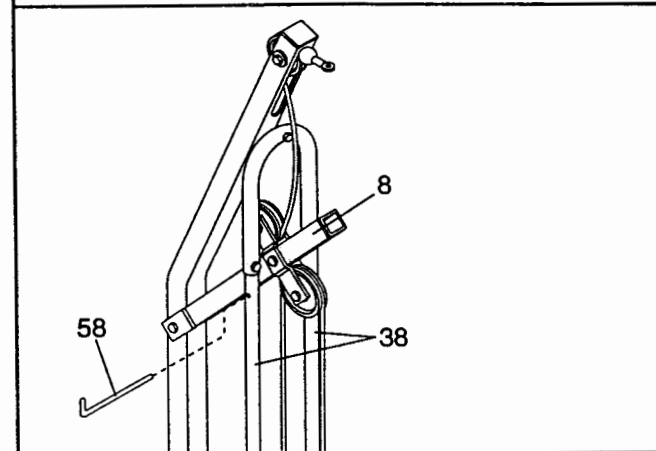


USING THE LOW PULLEY STATION

To perform low pulley exercises, the press arm lever must be locked in place (see LOCKING THE PRESS ARM LEVER above). Remove the backrest (see ATTACHING AND REMOVING THE BACKREST on page 10).

Attach the Lat Bar (24) to the Short Cable (71) with a Cable Clip (72). Attach the other end of the Short Cable to the end of the Long Cable (18) with the s-hook.


The Nylon Strap (70) can be attached in the same manner.

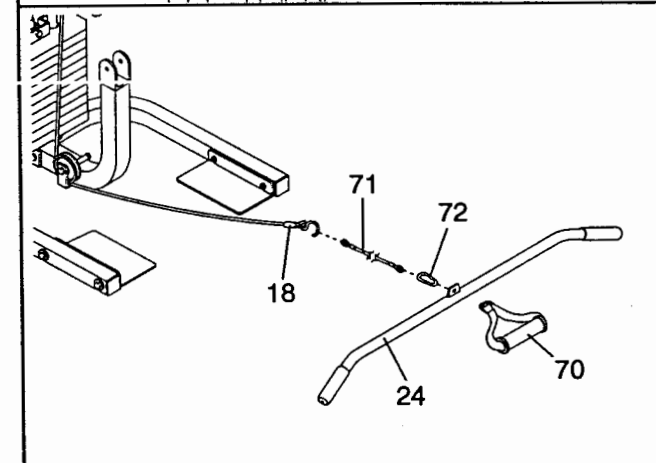

LOCKING THE LEG LEVER

To lock the Leg Lever (37), hold the Leg Lever against the Front Leg (31). Insert the Long Lock Pin (11) into the Leg Lever. The clip on the Long Lock Pin should be turned so that it locks onto the Front Leg.


Note: The leg lever should be locked whenever it is not being used.

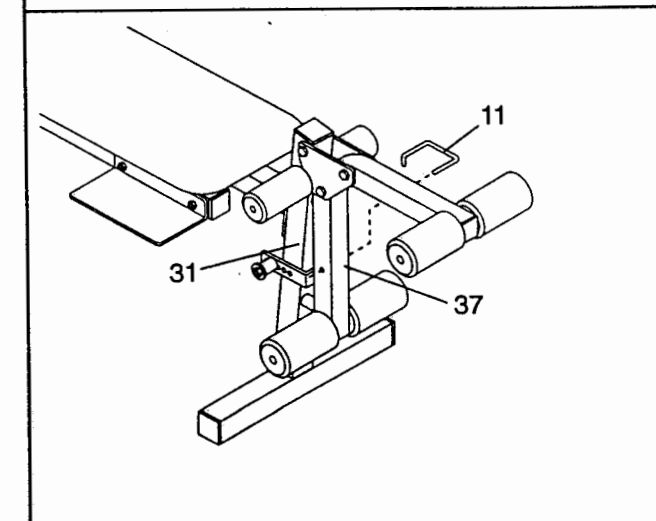

FOLDING THE BACKREST FOR STORAGE

First, lock the Press Arm Lever (8) in place at the top of the Weight Guides (see LOCKING THE PRESS ARM LEVER on page 11).

Lift the Backrest (27) up and lean it against the Weight Guides (38). Wrap the Short Cable (71) around the Backrest Frame (28) and one of the Weight Guides. Secure the Cable with the Cable Clip (72).

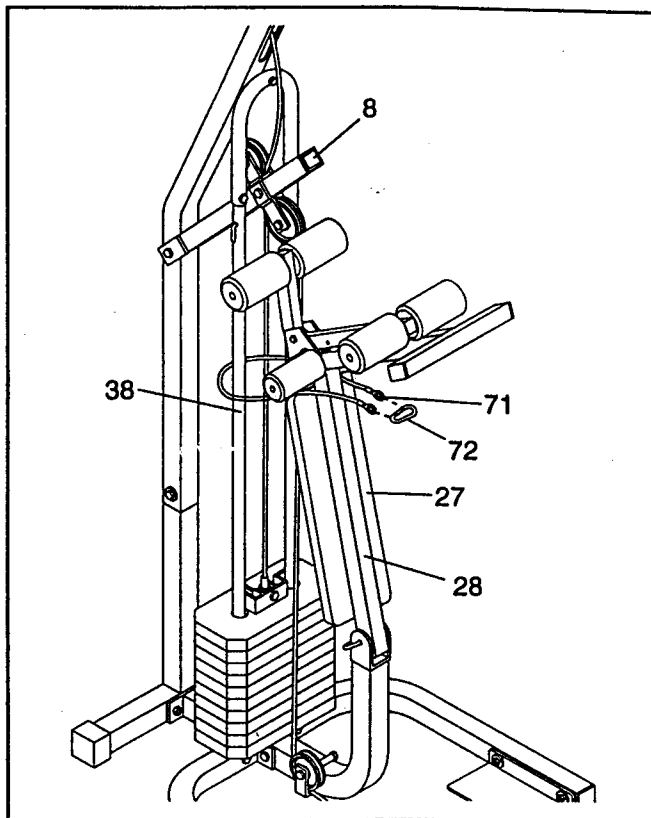

TROUBLE-SHOOTING AND MAINTENANCE


Inspect and tighten all parts each time you use the home gym system. Replace any worn parts immediately. The home gym system can be cleaned using a damp cloth and mild non-abrasive detergent. Do not use solvents.

HOW TO TIGHTEN THE CABLES

Woven cable, the type of cable used on the home gym system, can stretch slightly when it is first used. If there is slack in the cables before resistance is felt, the cables should be tightened.

To tighten the cables, remove the Long Cable (18) and s-hook from the 5/16" x 1 1/2" Bolt (21). Remove the 5/16" Nylon Locknut (1), the 5/16" Washer (20), the 3/4" Spacer (19), and the 5/16" x 1 1/2" Bolt from the bracket on the Leg Lever (37). Move the Bolt to the next hole in the bracket. Replace the Washer, the Spacer, and the Nylon Locknut. Re-attach the Long Cable with the s-hook.

Adjust the position of the 5/16" x 1 1/2" Bolt (21) as needed to tighten the cables. Be sure that the cables are not too tight, or the top weight will be lifted off the weight stack.

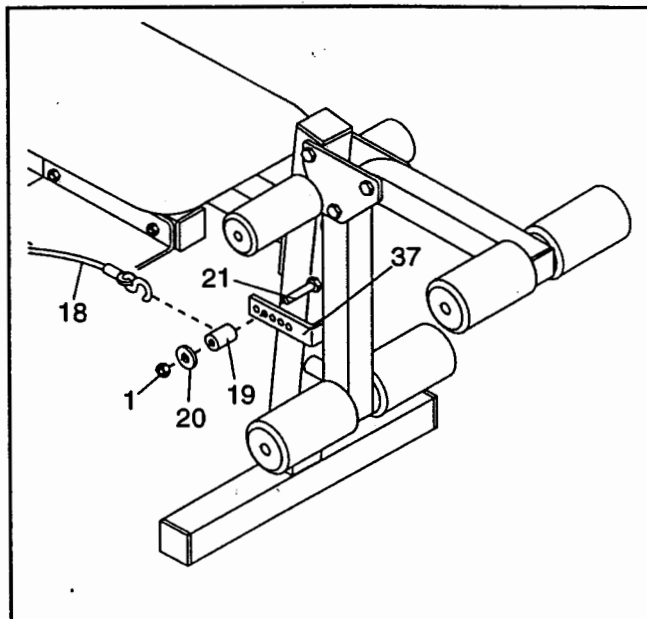

If the cables need to be replaced, see ORDERING REPLACEMENT PARTS on the back cover of this manual.

PART LIST—Model No. WESY50200


R0896A

Key No.	Qty.	Description	Key No.	Qty.	Description
1	14	5/16" Nylon Locknut	38	2	Weight Guide
2	4	3/8" Nylon Locknut	39	2	1/4" x 2 1/2" Carriage Bolt
3	2	3/8" Washer	40	1	Long Pad Tube
4	3	3 1/2" Pulley	41	3	5/16" x 2 1/2" Bolt
5	7	5/16" Nylon Jam Nut	42	1	Top Frame
6	4	Handgrip	43	2	1" Washer
7	1	Press Arm	44	2	2" Square Outer Cap
8	1	Press Arm Lever	45	1	Base
9	2	Pulley Bracket	46	1	Left Stabiliser
10	1	1 1/2" Square Bushing	47	1	Right Stabiliser
11	1	Long Lock Pin	48	6	5/16" x 2" Bolt
12	1	3/8" x 2 3/4" Bolt	49	2	Foot Plate
13	2	17/32" Long Spacer	50	2	1 1/2" Square Inner Cap
14	1	Short "L"-Pin	51	10	Weight
15	1	4 1/2" Pulley	52	1	Base Stabiliser
16	1	Cable Trap	53	1	Weight Guide Top
17	1	3/8" x 4" Bolt	54	1	Weight Tube
18	1	Long Cable	55	1	Weight Tube Guide
19	1	3/4" Spacer	56	2	Weight Bumper
20	16	5/16" Washer	57	2	Weight Guide Sleeve
21	2	5/16" x 1 1/2" Bolt	58	1	Long "L"-Pin
22	2	3/8" x 1 3/4" Bolt	59	1	Weight Tube Endcap
23	1	5/16" x 2 1/4" Bolt	60	4	1/4" Nylon Locknut
24	1	Lat Bar	61	2	1/4" x 1 1/2" Bolt
25	4	1/4" x 1/2" Screw	62	1	5/16" x 3 3/4" Bolt
26	2	Backrest Bracket	63	1	Weight Pin
27	1	Backrest	64	2	1/4" Fender Washer
28	1	Backrest Frame	65	1	Leg Lever Bumper
29	6	5/16" x 2 3/4" Bolt	66	1	#8 x 3/4" Self-tapping Screw
30	2	Leg Lever Bracket	67	1	Short Lock Pin
31	1	Front Leg	68	1	Medium Cable
32	2	7" Foam Pad	69	2	5/16" x 3" Bolt
33	4	5 3/4" Foam Pad	70	1	Ankle Strap
34	2	Pad Tube	71	1	Short Cable
35	6	3/4" Round Inner Cap	72	1	Cable Clip
36	6	2" Square Inner Cap	#	1	User's Manual
37	1	Leg Lever			

Note: "#" indicates a non-illustrated part. Specifications are subject to change without notice.

EXPLODED DRAWING—Model No. WESY50200

R0896A

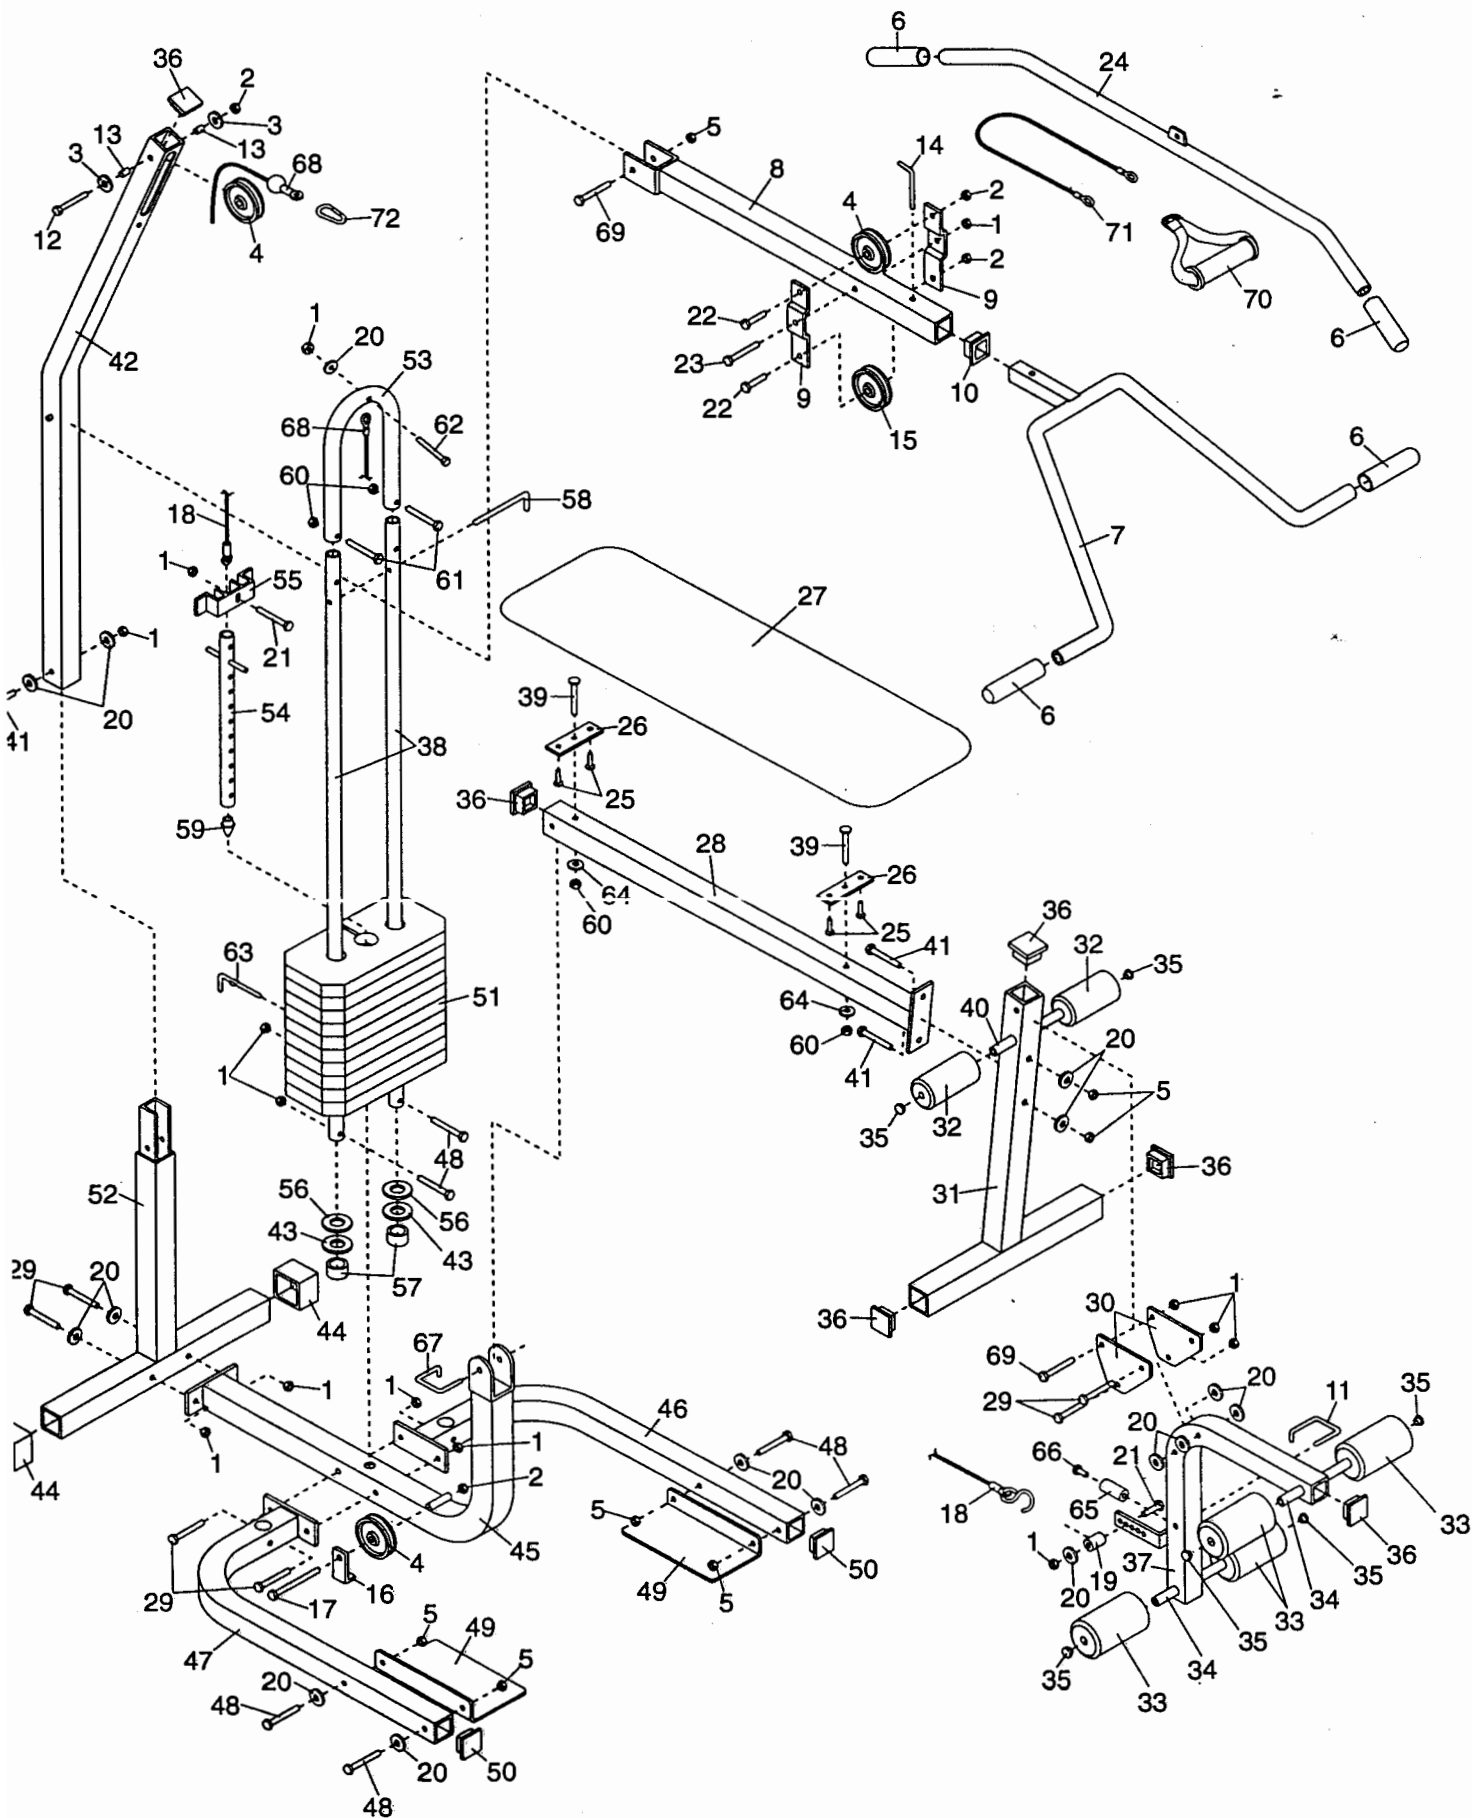

ORDERING REPLACEMENT PARTS

To order replacement parts, contact your retailer for the nearest ICON Health and Fitness office, or write:

ICON Fitness Lifestyle Ltd.
Greenwich House
223 North Street
Sheepscar
Leeds LS7 2AA

Tel: Country Code: 0345-089009


Fax: 01789-440-798

To help us assist you, please be prepared to give the following information:

- The MODEL of the product (WESY50200).
- The NAME of the product (WEIDER® COBRA 1000 HOME GYM SYSTEM).
- The SERIAL NUMBER of the product (see the front cover of this manual).
- The KEY NUMBER and DESCRIPTION of the part(s) (see the PART LIST on page 14 of this manual).

REMOVE THIS PART IDENTIFICATION CHART FROM THE MANUAL

This chart is provided to help you identify the small parts used in assembly. **Important: Some parts may have been pre-assembled for shipping purposes. If you cannot find a part in the parts bags, check to see if it has been pre-assembled.** The number in parenthesis below each part refers to the key number of the part. The second number refers to the quantity needed for assembly.

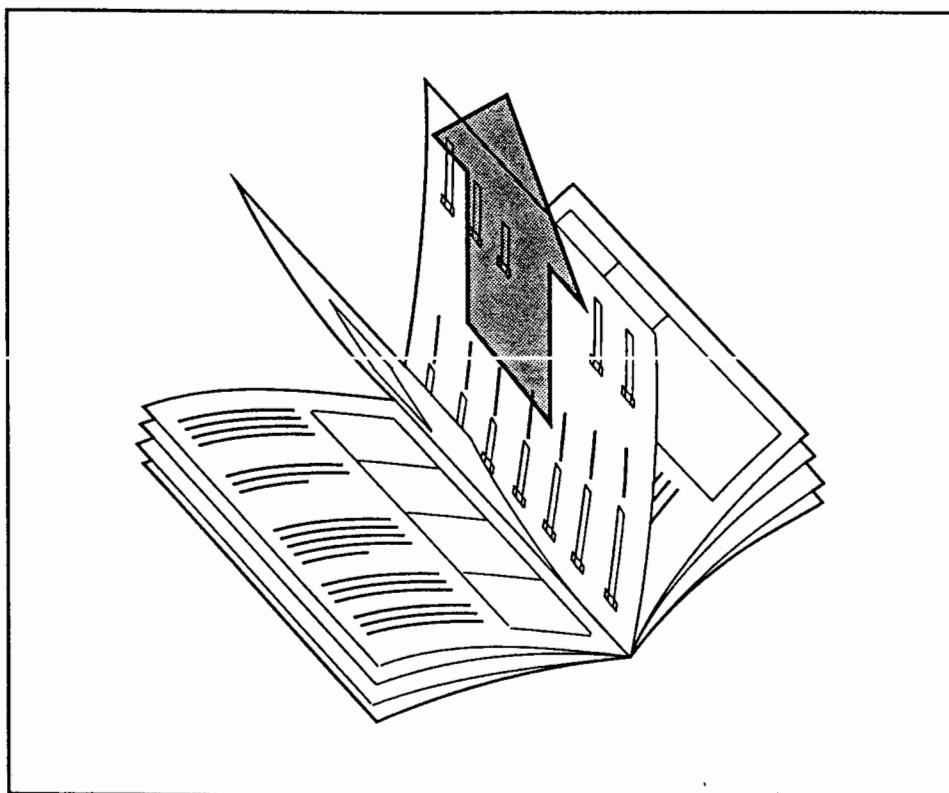



1/4" Nylon Locknut (60)-4




5/16" Nylon Locknut (1)-14




3/8" Nylon Locknut (2)-4




5/16" Nylon Jam Nut (5)-7

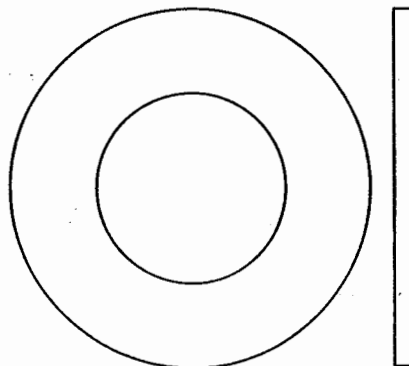


1" Washer (43)-2

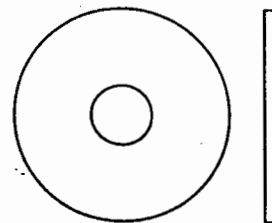

1/4" Fender Washer (64)-2

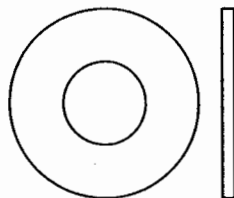


3/8" Washer (3)-2

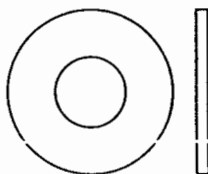


5/16" Washer (20)-16




#8 x 3/4" Self-tapping Screw (66)-1




1/4" x 1/2" Screw (25)-4




1/4" x 1 1/2" Bolt (61)-2




1/4" x 2 1/2" Carriage Bolt (39)-2




5/16" x 1 1/2" Bolt (21)-2




5/16" x 2 1/4" Bolt (23)-1




3/8" x 1 3/4" Bolt (22)-2




5/16" x 2 1/2" Bolt (41)-3




5/16" x 2" Bolt (48)-6




3/8" x 2 3/4" Bolt (12)-1



5/16" x 2 3/4" Bolt (29)-6




3/4" Spacer (19)-1




5/16" x 3" Bolt (69)-2




17/32" Long Spacer (13)-2




5/16" x 3 3/4" Bolt (62)-1

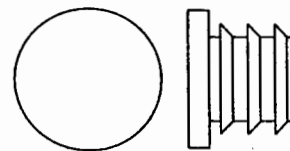


3/4" Round Inner Cap (35)-6




3/8" x 4" Bolt (17)-1

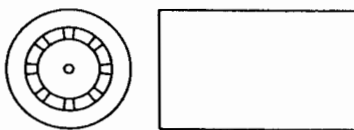


Leg Bumper (65)-1

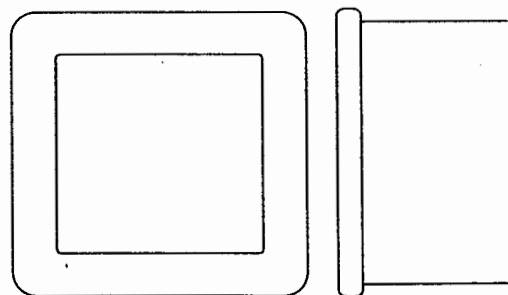


1 1/2" Square Bushing (10)-1

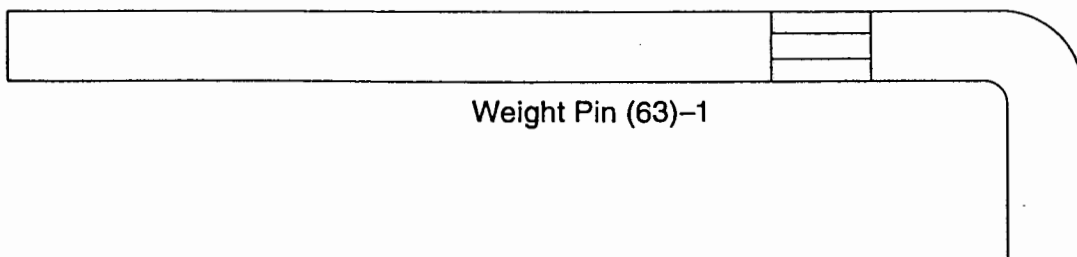


Weight Pin (63)-1

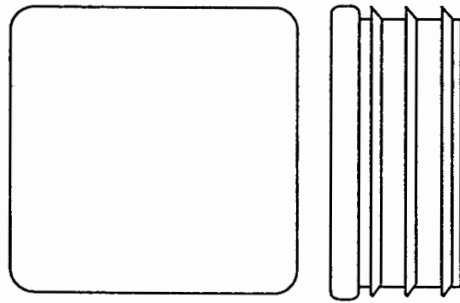

1 1/2" Square Inner Cap (50)-2

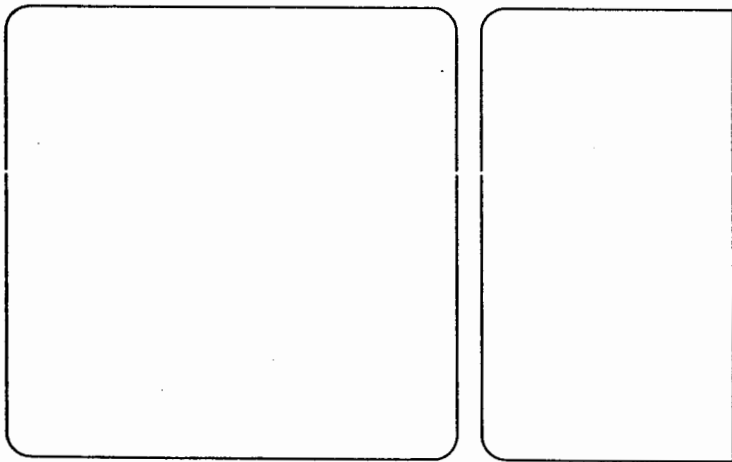

2" Square Outer Cap (44)-2

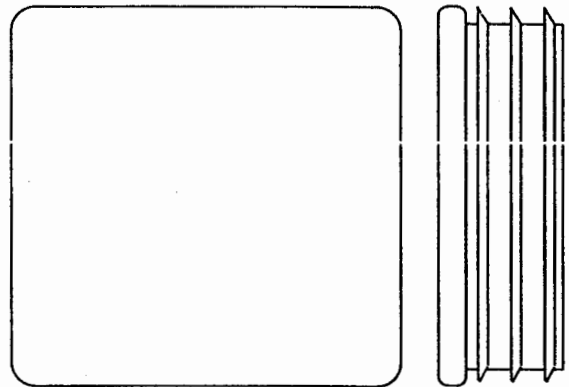

2" Square Inner Cap (36)-6